



nedis

## WEST401WT / WEST402WT

Weather station

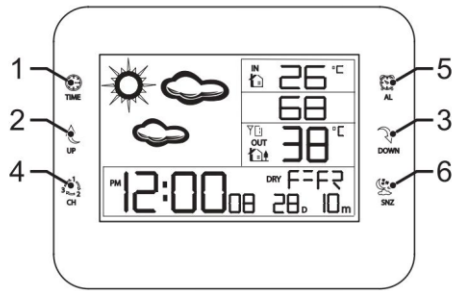

WEST402WT

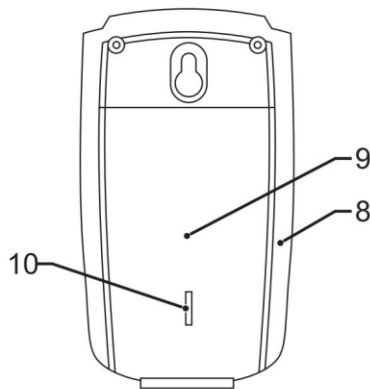

### English - Description

1. Time/date button	<ul style="list-style-type: none"> <li>Repeatedly press and hold the button for 3 seconds to change the settings of the time display format (12H/24H), hours, minutes, year, month, day and language. Press the up/down button to adjust the setting. Press the button to confirm the setting.</li> </ul>
2. Up button	<ul style="list-style-type: none"> <li>Press the button to switch between the alarm settings "AL1" (alarm 1) on / "AL2" (alarm 2) on / "AL1" + "AL2" on / alarm off.</li> <li>Press the button to increase the value.</li> </ul>
3. Down button	<ul style="list-style-type: none"> <li>Press the button to set the temperature display format ("C"/"F").</li> <li>Press the button to decrease the value.</li> </ul>
4. Channel button	<ul style="list-style-type: none"> <li>Press the button to switch between channels: "CH1" / "CH2" / "CH3".</li> <li>Press and hold the button for 3 seconds to search for and mate the external sensor to the main unit. If the external sensor is mated to the main unit, the display shows the outside temperature.</li> </ul>
5. Alarm button	<ul style="list-style-type: none"> <li>Press the button to adjust the settings for "AL1". Press the button again to adjust settings for "AL2".</li> <li>Press and hold the button for 3 seconds to set the alarm. Press the up/down buttons to adjust the settings. Press the button to confirm.</li> </ul>
6. Snooze button	<ul style="list-style-type: none"> <li>If the alarm sounds, press the button to activate the snooze function for 5 minutes. Press any other button to stop the snooze function.</li> </ul>
• Display light	<ul style="list-style-type: none"> <li>If the device is battery powered, press any button to switch on the display light. The display light switches off after 5 seconds.</li> </ul>
7. Battery compartment (main unit)	<ul style="list-style-type: none"> <li>Open the battery compartment.</li> <li>Insert the batteries (3x AAA) into the battery compartment.</li> <li>Close the battery compartment.</li> </ul> <p>Note: After inserting the batteries, the device will detect the indoor temperature and humidity (barometer value) and subsequently the outdoor temperature and humidity for 3 minutes.</p>
8. External sensor	
9. Battery compartment (external sensor)	<ul style="list-style-type: none"> <li>Open the battery compartment.</li> <li>Insert the batteries (2x AAA) into the battery compartment.</li> <li>Close the battery compartment.</li> </ul>
10. Data transmission channel tuner	<ul style="list-style-type: none"> <li>Open the battery compartment.</li> <li>Remove the batteries.</li> <li>Set the data reception channel to the corresponding channel on the main unit.</li> <li>Insert the batteries.</li> <li>Close the battery compartment.</li> </ul>

### Safety

#### General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.

#### Battery safety

- Use only the batteries mentioned in the manual.
- Do not use old and new batteries together.
- Do not use batteries of different types or brands.
- Do not install batteries in reverse polarity.
- Do not short-circuit or disassemble the batteries.
- Do not expose the batteries to water.
- Do not expose the batteries to fire or excessive heat.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, remove the batteries when leaving the product unattended for longer periods of time.
- If liquid from the batteries comes into contact with skin or clothing, immediately rinse with fresh water.

### Cleaning and maintenance

#### Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Do not immerse the device in water or other liquids.
- Clean the outside of the device using a soft, damp cloth.

### Support

If you need further help or have comments or suggestions please visit [www.nedis.com/support](http://www.nedis.com/support)