

nedis

WEST403BK

Weather station



English - Description

1. Mode button	<ul style="list-style-type: none"> Press the button to set the mode: normal / time / date/ alarm mode. Repeatedly press and hold the button to switch between hour format (12H/24H), hours, minutes, year, month, date and temperature format (°C/°F). Press the up/down buttons to adjust the settings. Press the button to confirm.
2. Alarm button	<ul style="list-style-type: none"> Press the button to switch the alarm on or off. Alarm mode: Press and hold the button to switch between hours and minutes. Press the up/down buttons to adjust the settings. Press the button to confirm.
3. Up button	<ul style="list-style-type: none"> Press the buttons to increase the value. Press and hold the button to clear the temperature memory.
4. Down button	<ul style="list-style-type: none"> Press the button to decrease the value.
5. Max/min button	<ul style="list-style-type: none"> Press the buttons to view the temperature and humidity (maximum and minimum values). Press and hold the buttons to clear the maximum and minimum values.
6. Light button Snooze button	<ul style="list-style-type: none"> Normal mode: Press the button to set the display brightness: AC adapter: Press the up/down buttons to set the display brightness to high level, medium level or off. Battery: Press the up/down buttons to set the display brightness to high level or medium level. If the alarm sounds, press the button to activate the snooze function for 5 minutes. Press any other button to stop the alarm.
7. Battery compartment	<ul style="list-style-type: none"> Open the battery compartment. Insert the batteries (2x AAA) into the battery compartment. Close the battery compartment. <p>Note: After inserting the batteries, the device will detect the indoor temperature and humidity (barometer value) and subsequently the outdoor temperature and humidity for 3 minutes.</p>

Safety

General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.

Battery safety

- Use only the batteries mentioned in the manual.
- Do not use old and new batteries together.
- Do not use batteries of different types or brands.
- Do not install batteries in reverse polarity.
- Do not short-circuit or disassemble the batteries.
- Do not expose the batteries to water.
- Do not expose the batteries to fire or excessive heat.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, remove the batteries when leaving the product unattended for longer periods of time.
- If liquid from the batteries comes into contact with skin or clothing, immediately rinse with fresh water.

Cleaning and maintenance

Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Do not immerse the device in water or other liquids.
- Clean the outside of the device using a soft, damp cloth.

Support

If you need further help or have comments or suggestions please visit www.nedis.com/support

