




KONIG

SAS-DVRWW20

Watch camera

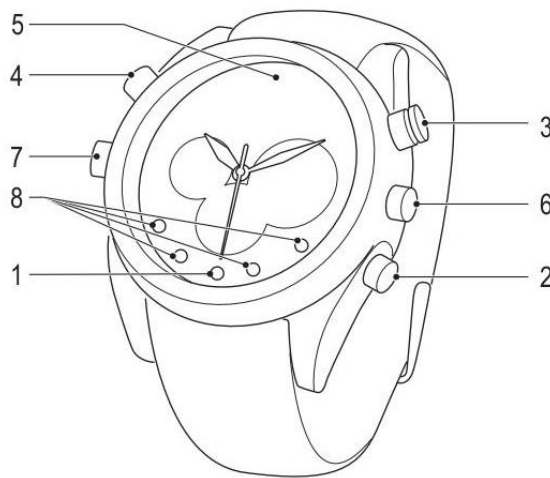

Description

English

1. Camera	
2. Microphone	
3. On/off button (camera) Video button Photo button Audio button	<ul style="list-style-type: none"> • Press and hold the button for 2 seconds to switch on the device and immediately start recording video. • Video mode: Press the button 2 times to stop recording video and enter into standby mode. Press the button again to start recording video again. • Photo mode: Press the button to take a photo. • Audio mode: Press the button to start recording audio. The blue and red LED indicators flash alternately. Press the button again to stop recording audio and enter into standby mode.
4. Mode button On/off button (infrared LEDs)	<ul style="list-style-type: none"> • Repeatedly press the button to select the mode: Video mode: The blue LED indicator is on. Photo mode: The red LED indicator is on. Audio mode: The purple LED indicator is on. • While recording video, press and hold the button for 2 seconds to switch on the infrared LEDs. Press the button again to switch off the infrared LEDs.
	<ul style="list-style-type: none"> • Simultaneously press the two buttons to reset the camera.
5. LED indicators (blue, red and purple)	<ul style="list-style-type: none"> • No memory space: The blue and red LED indicators flash simultaneously for 5 seconds. • Low battery: The blue and red LED indicators flash alternately for 5 seconds.
6. Time setting button	<ul style="list-style-type: none"> • Pull out the button and turn it to set the time.
7. USB port	<ul style="list-style-type: none"> • Turn the button to expose the USB port. • Connect the included USB cable to the USB ports of the device and the computer (charging / data transfer).
8. Infrared LEDs	

Use

Setting the time

- Create a text file on the computer with the name "time.txt".
- In the file, enter the date and time in the format YYYY-MM-DD hh:mm:ss.
- Connect the device to the computer using the USB cable.
- Save the file into the root directory of the internal memory.
- Disconnect the device from the computer.
- Switch on the device. The time is saved in the device.

Technical data

Power supply	5 V DC
Power consumption	170 mA
Battery type	Li-Po battery 402530
Battery capacity	250 mAh
Camera sensor	Galaxycore 1024
Photo file format	JPEG
Video resolution	1920*1080
Video file format	AVI
Frame rate	30 fps
USB version	USB 2.0
Operating temperature	0 °C ~ 40 °C
Relative humidity	20% ~ 80%

Safety

- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.

Cleaning and maintenance

Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.