


nedis

CLAR006BK

Wireless charging alarm clock speaker

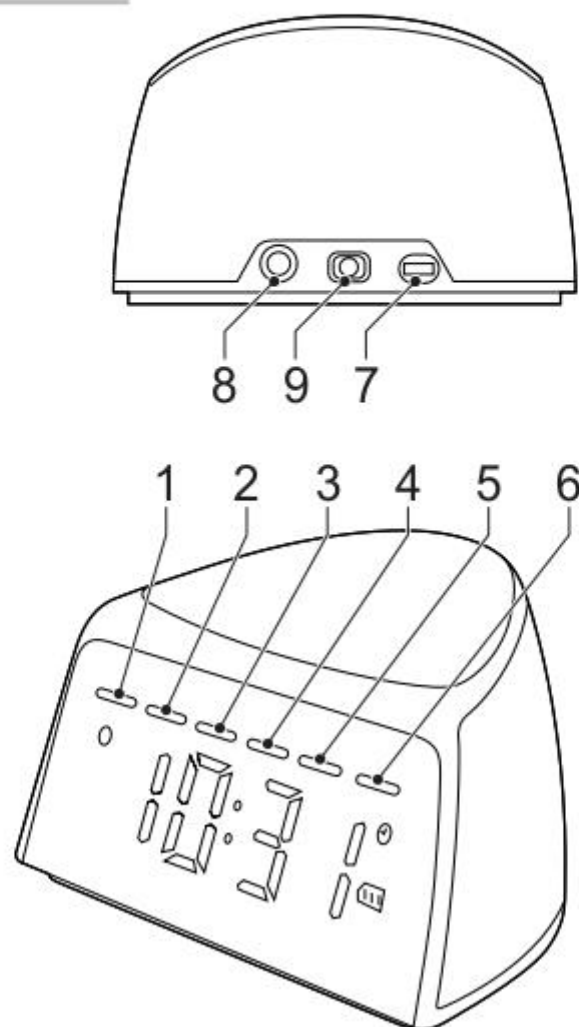

English - Description

1. On/off button	<ul style="list-style-type: none">• Use the button to switch on or off the device.• If the device is disrupted by a strong electric magnetic field, put the device in another location.
2. Clock/alarm button	<ul style="list-style-type: none">• Press the button to set the time or the alarm function. Set the hour by pressing the previous button or the next button. Press the button again to set the minutes, set the hour of the alarm, set the minutes of the alarm or switch on or off the alarm function.
3. Hands-free button	<ul style="list-style-type: none">• Select Bluetooth mode with the mode button.• Press the button to answer or end incoming calls.• To refuse an incoming call, press the button two times.• Press the button twice to call the number of the most recent incoming call.

4. Mode button	<ul style="list-style-type: none"> • Use the button to select FM radio mode or Bluetooth mode. • For FM mode, insert the USB cable to use it as an antenna. • To use the Bluetooth function, set the mobile device in Bluetooth mode and connect the mobile device to the device.
5. Previous/ volume- button 6. Next/volume+ button	<ul style="list-style-type: none"> • Press the volume- button and the volume+ button to increase or decrease the volume. It is recommended to set the volume to 90 % maximum, to avoid distortion. • Press the previous button and the next button to switch between radio stations.
7. Pause/play button	<ul style="list-style-type: none"> • Press the pause/play button. The device will automatically search and store the detected radio frequencies.
8. USB port	<ul style="list-style-type: none"> • Make sure that the device is fully charged before use. • Charge the device with the USB cable for 2 hours.
9. AUX inlet (3,5mm)	<ul style="list-style-type: none"> • Connect the AUX cable to the device and the mobile device. The device automatically starts the AUX function. If the device is fully charged, you can play music for 4 hours maximum.
10. Wireless charging module	<ul style="list-style-type: none"> • Put the phone on the module correctly on the charging surface. The charging time is the same as the general charging time of the phone. The charging process can be blocked by the phone case.

Safety

General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not use the device in locations with high humidity, such as bathrooms and swimming pools.
- Do not use the device near bathtubs, showers, basins or other vessels containing water.
- Do not use a timer or a separate remote-control system that switches on the device automatically.
- Do not cover the device.
- Place the device on a stable, flat surface.
- Keep the device away from flammable objects.

Electrical safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
- Do not immerse the device, the mains cable or the mains plug in water or other liquids.
- Do not leave the device unattended while the mains plug is connected to the mains supply.
- Do not use an extension cable.