


nedis

KABT510Exx

Toaster

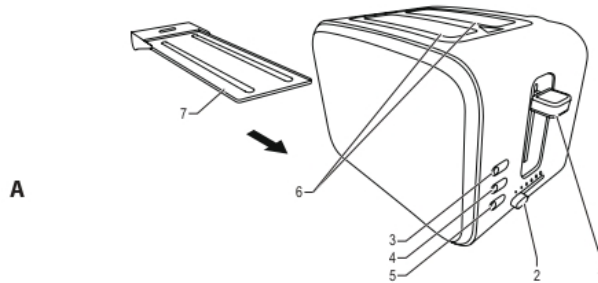

English - Description (fig. A)

The toaster is a device used for toasting bread. The device can toast two slices of bread at the same time.

1. Bread carriage lever
2. Browning control button
3. Reheat button / Reheat indicator
4. Defrost button / Defrost indicator
5. Cancel button / On/off indicator
6. Bread slot
7. Crumb tray

Safety

General safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- The device can be used by children from 8 years and above and by persons with a physical, sensory, mental or motorial disability, or lack of experience and knowledge if they are supervised or instructed on how to use the device in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised. Keep the device and the mains cable out of the reach of children younger than 8 years. Children shall not play with the device.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not use the device near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the device in water or other liquids. If the device is immersed in water or other liquids, do not remove the device with your hands. Immediately remove the mains plug from the wall socket. If the device is immersed in water or other liquids, do not use the device again.
- Place the device on a stable, flat surface.
- Place the device on a heat-resistant and splash-proof surface.
- Do not place the device on a hob.
- Do not cover the device.
- Make sure that there is sufficient space around the device to allow heat to escape and provide sufficient ventilation.
- Make sure that the device does not come into contact with flammable material.
- Keep the device away from flammable materials (curtains, table cloth), because the bread can burn.
- Keep the device away from heat sources. Do not place the device on hot surfaces or near open flames.
- Beware of hot parts. The surfaces marked with a caution symbol for hot surfaces are liable to become hot during use. The accessible surfaces can become hot when the device is operating. The outer surface can become hot when the device is operating.
- Be careful when touching the device. Use oven gloves if you need to touch the device during or shortly after use.
- Make sure that your hands are dry before touching the device.
- Do not leave the device unattended during use.
- Do not move the device while it is switched on or is still hot. Remove the mains plug from the wall socket and allow the device to cool down completely.

Electrical safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Connect the device to an earthed wall socket. If necessary, use an earthed extension cable of a suitable diameter.
- Always fully unwind the mains cable and the extension cable.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom his electricity. This RCD must have a rated residual operating current no higher than 30mA. Ask your installer for advice.
- The device is not intended to be operated by means of an external timer or separate remote-control system.
- Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
- Do not immerse the device, the mains cable or the mains plug in water or other liquids.
- Do not leave the device unattended while the mains plug is connected to the mains supply.

Use

Initial use

- Clean the device and the accessories. Refer to the section "Cleaning and maintenance".
- Insert the mains plug into the wall socket.
- Move the browning control button to the maximum browning setting.
- To switch on the device, lower the bread carriage lever until it clicks into place. The device starts heating.
- Remove the mains plug from the wall socket.
- Allow the device to cool down completely.

Note: If you switch on the device for the first time, the device may emit a little smoke and a characteristic smell for a short period. This is normal operation.

Hints for use

Warning!

- Do not use the device for toasting food containing sugar. Do not use the device for toasting food containing jam or preserves.
- Do not use the device without the crumb tray. Do not allow breadcrumbs to accumulate in the bottom of the device.
- Do not attempt to remove jammed bread or other items from the device with sharp objects or kitchen utensils.

- Insert the crumb tray into the crumb tray slot.
- Insert the mains plug into the wall socket.
- Insert the bread into the bread slots.
- Turn the browning control button to the required browning setting.

Note: Experiment with the required browning setting to achieve the best results.

- To switch on the device, lower the bread carriage lever until it clicks into place. The device starts toasting the bread.
- To reheat toasted bread, press the reheat button. The reheat indicator goes on.
- To toast frozen bread, press the defrost button. The defrost indicator goes on.
- To interrupt the process, press the cancel button. The on/off indicator goes off.
- If the process is completed, the device will switch off automatically and raise the toasted bread from the bread slots.

Cleaning and maintenance

Warning!

- Before cleaning or maintenance, switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.

- Do not immerse the device in water or other liquids.
- Do not clean the device or the accessories in the dishwasher.
- Do not use cleaning solvents or abrasives.
- Do not use sharp objects.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.

- Clean the inside of the device after each use:
 - Remove the crumb tray from the device.
 - Hold the device upside down and shake the device to remove crumbs.
 - Clean the crumb tray in soapy water. Rinse the crumb tray under running water. Thoroughly dry the crumb tray with a clean, dry cloth.
 - Insert the crumb tray into the device.
- Clean the outside of the device using a soft, damp cloth. Thoroughly dry the outside of the device with a clean, dry cloth.

Support

If you need further help or have comments or suggestions please visit www.nedis.com/support