


nedis


KAEP100EWT1 / KAEP150EWT1 / KAEP200EWT2 / KAEP250EWT2

Electric hot plate

KAEP100EWT1
KAEP150EWT1

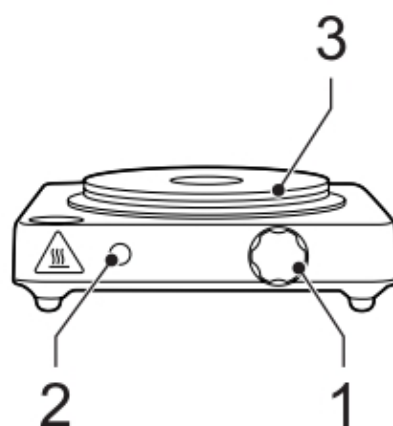

KAEP200EWT1
KAEP250EWT1

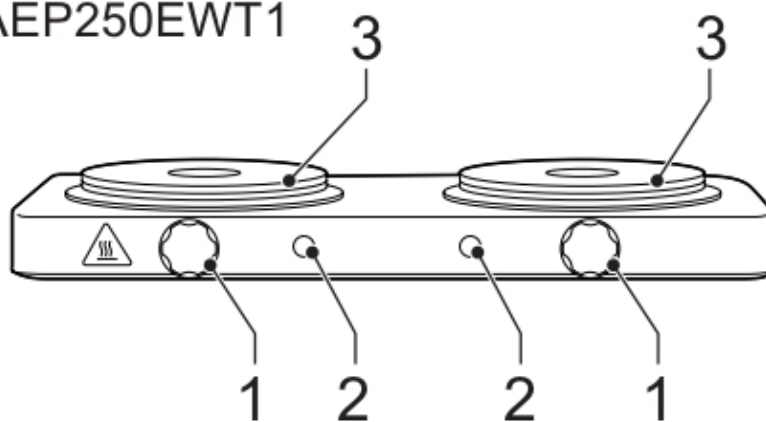

English - Description

1. Temperature dial
2. Temperature indicator
3. Cooking zone

Suitable cookware

Warning!

- Do not use cookware other than mentioned in the manual.
- The device is suitable for flat-bottom cookware with a solid, even bottom and a bottom diameter identical to the diameter of the cooking zone. Do not use cookware with convex, concave or uneven bottoms.

Initial use

Warning!

- If you switch on the device for the first time, the device may emit a little smoke and a characteristic smell for a short period. This is normal operation.

- Insert the mains plug in the wall socket.
- Make sure that there is no cookware on the cooking zone.
- Turn the temperature dial clockwise to position "3". The temperature indicator comes on.
- Allow the device to heat up for 5 minutes to condition the protective coating.
- While the device is switched on, the temperature indicator will come on and go off as the thermostat switches on and off to maintain the required temperature.
- To switch off the device, turn the temperature dial fully counterclockwise to position "0".
- Remove the mains plug from the wall socket.
- Allow the device to cool down completely.

Use

- Insert the mains plug into the wall socket.
- Place the cookware in the centre of the cooking zone.
- To switch on the device, turn the temperature dial clockwise to the required position.
- While the device is switched on, the temperature indicator will come on and go off as the thermostat switches on and off to maintain the required temperature.
- To switch off the device, turn the temperature dial fully counterclockwise to position "0".
- Remove the mains plug from the wall socket.
- Allow the device to cool down completely.

Safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- The device is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the device by a person that is responsible for their safety.
- The device shall not be used by children. Keep the device and the mains cable out of the reach of children. Children shall not play with the device.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not use the device near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the device in water or other liquids. If the device is immersed in water or other liquids, do not remove the device with your hands. Immediately remove the mains plug from the wall socket. If the device is immersed in water or other liquids, do not use the device again.
- Keep the device away from heat sources. Do not place the device on hot surfaces or near open flames.
- Beware of hot parts. Wait until the device has cooled down before touching the device. The device becomes hot during use.
- Do not cover the device.
- Place the device on a flat, level surface. The clearance around the device must be at least 10 cm.

Electrical safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
- Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
- Connect the device to an earthed wall socket. If necessary, use an earthed extension cable of a suitable diameter.
- Always fully unwind the mains cable and the extension cable.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom his electricity. This RCD must have a rated residual operating current no higher than 30mA. Ask your installer for advice.
- The device is not intended to be operated by means of an external timer or separate remote-control system.
- Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
- Do not immerse the device, the mains cable or the mains plug in water or other liquids.
- Do not leave the device unattended while the mains plug is connected to the mains supply.

Cleaning and maintenance

Warning!

- Before cleaning or maintenance, switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
- Do not use cleaning solvents or abrasives.
- Do not immerse the device in water or other liquids.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth. If necessary, use a little neutral detergent. Thoroughly dry the outside of the device with a clean, dry cloth.
- Clean the ventilation openings using a soft brush.

Support

If you need further help or have comments or suggestions please visit www.nedis.com/support