

# R&S® Scope Rider RTH

## Handheld Digital Oscilloscope

### User Manual



1326.1578.02 – 09

This manual describes the following R&S®RTH models with firmware version 1.60:

- R&S®RTH1004 (1317.5000K04)
- R&S®RTH1002 (1317.5000K02)

In addition to the base unit, the following options are described:

- R&S®RTH-K1 I2C/SPI triggering and decoding (1325.9969.02)
- R&S®RTH-K2 UART/RS232 triggering and decoding (1325.9975.02)
- R&S®RTH-K3 CAN/LIN triggering & decoding (1333.0550.02)
- R&S®RTH-K9 CAN FD triggering & decoding (1326.3829.02)
- R&S®RTH-K10 SENT triggering & decoding (1326.3835.02)
- R&S®RTH-K15 History and segmented memory (1326.1803.02)
- R&S®RTH-K18 Spectrum analysis (1333.0680.02)
- R&S®RTH-K19 Advanced trigger (1326.0642.02)
- R&S®RTH-B1 Mixed signal option (1325.9981.02)
- R&S®RTH-K33 Frequency counter (1333.0696.02)
- R&S®RTH-K34 Harmonic analysis (1333.0673.02)

© 2017 Rohde & Schwarz GmbH & Co. KG

Mühlhofstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of their owners.

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g. R&S®Scope Rider RTH is indicated as R&S RTH.

# Basic Safety Instructions

## Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.







Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any purpose other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and, in some cases, a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.








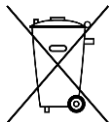

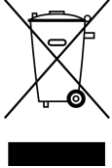

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories. For product-specific information, see the data sheet and the product documentation.

## Safety labels on products

The following safety labels are used on products to warn against risks and dangers.

Symbol	Meaning	Symbol	Meaning
	Notice, general danger location Observe product documentation		ON/OFF Power
	Caution when handling heavy equipment		Standby indication
	Danger of electric shock		Direct current (DC)

## Basic Safety Instructions

Symbol	Meaning	Symbol	Meaning
	Caution ! Hot surface		Alternating current (AC)
	Protective conductor terminal To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth		Direct/alternating current (DC/AC)
	Earth (Ground)		Class II Equipment to identify equipment meeting the safety requirements specified for Class II equipment (device protected by double or reinforced insulation)
	Frame or chassis Ground terminal		EU labeling for batteries and accumulators For additional information, see section "Waste disposal/Environmental protection", item 1.
	Be careful when handling electrostatic sensitive devices		EU labeling for separate collection of electrical and electronic devices For additional information, see section "Waste disposal/Environmental protection", item 2.
	Warning! Laser radiation For additional information, see section "Operation", item 7.		

### Signal words and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.



Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Indicates information considered important, but not hazard-related, e.g. messages relating to property damage.

In the product documentation, the word ATTENTION is used synonymously.

These signal words are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the signal words described here are always used only in connection with the related product documentation and the related product. The use of signal words in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

## Basic Safety Instructions

### Operating states and operating positions

*The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.*

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of  $\pm 10\%$  shall apply to the nominal voltage and  $\pm 5\%$  to the nominal frequency, overvoltage category 2, pollution degree 2.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or even death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or even death.

### Electrical safety

*If the information on electrical safety is not observed either at all or to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.*

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the mains-supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with a protective conductor contact and protective conductor.
3. Intentionally breaking the protective conductor either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If there is no power switch for disconnecting the product from the mains, or if the power switch is not suitable for this purpose, use the plug of the connecting cable to disconnect the product from the mains. In such cases, always ensure that the power plug is easily reachable and accessible at all times. For example, if the power plug is the disconnecting device, the length of the connecting cable must not exceed 3 m. Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, the disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cables on a regular basis to ensure that they are in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, ensure that the cable cannot be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.

## Basic Safety Instructions

6. The product may be operated only from TN/TT supply networks fuse-protected with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket provided for this purpose. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages  $V_{rms} > 30$  V, suitable measures (e.g. appropriate measuring equipment, fuse protection, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC 60950-1 / EN 60950-1 or IEC 61010-1 / EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the protective conductor terminal on site and the product's protective conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fuse-protected in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.
14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1). Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

## Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.

## Basic Safety Instructions

2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal/Environmental protection", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. Laser products are given warning labels that are standardized according to their laser class. Lasers can cause biological harm due to the properties of their radiation and due to their extremely concentrated electromagnetic power. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).
8. EMC classes (in line with EN 55011/CISPR 11, and analogously with EN 55022/CISPR 22, EN 55032/CISPR 32)
  - Class A equipment:  
Equipment suitable for use in all environments except residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings  
Note: Class A equipment is intended for use in an industrial environment. This equipment may cause radio disturbances in residential environments, due to possible conducted as well as radiated disturbances. In this case, the operator may be required to take appropriate measures to eliminate these disturbances.
  - Class B equipment:  
Equipment suitable for use in residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings

### Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.

## Basic Safety Instructions

- Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, protective conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

### Batteries and rechargeable batteries/cells

*If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.*

- Cells must not be taken apart or crushed.
- Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
- Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
- Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
- If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
- Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
- Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.
- Follow the transport stipulations of the carrier (IATA-DGR, IMDG-Code, ADR, RID) when returning lithium batteries to Rohde & Schwarz subsidiaries.

### Transport

- The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.
- Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.



## Instrucciones de seguridad elementales

3. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

### **Waste disposal/Environmental protection**

1. Specially marked equipment has a battery or accumulator that must not be disposed of with unsorted municipal waste, but must be collected separately. It may only be disposed of at a suitable collection point or via a Rohde & Schwarz customer service center.
2. Waste electrical and electronic equipment must not be disposed of with unsorted municipal waste, but must be collected separately.  
Rohde & Schwarz GmbH & Co. KG has developed a disposal concept and takes full responsibility for take-back obligations and disposal obligations for manufacturers within the EU. Contact your Rohde & Schwarz customer service center for environmentally responsible disposal of the product.
3. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
4. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

For additional information about environmental protection, visit the Rohde & Schwarz website.

# Safety instructions for rechargeable lithium ion batteries

## **WARNING**

### **Risk of serious personal injury or even death.**

You must fully observe the following instructions in order to avoid serious personal injury – or even death – due to an explosion and/or fire.

1. Do not dismantle, open or crush the batteries or drop them from a great height. If mechanical damage occurs, there is a risk that chemicals may be released. Gases that are released can cause breathing difficulties. Immediately ventilate the area and in serious cases consult a doctor.  
Irritation can occur if the chemicals that are released come in contact with the skin or eyes. If this happens, immediately and thoroughly rinse the skin or eyes with water and consult a doctor.
2. Do not expose cells or batteries to heat or fire. Do not store them in direct sunlight. If overheating occurs, there is the risk of an explosion or a fire, which can lead to serious personal injuries.
3. Keep the batteries clean and dry. If the terminals become soiled, clean them with a dry, clean cloth.
4. Charge the batteries prior to using them.  
Only use the appropriate Rohde & Schwarz charger to charge the batteries. See the device manual or data sheet for the exact designation of the charger.  
If the batteries are improperly charged, there is a risk of explosion, which can cause serious personal injury.
5. The charging temperature must be between 0 °C and 45 °C (see manual for information on possible restrictions).
6. Discharging may take place only at temperatures between 0 °C and 50 °C (see manual for information on possible restrictions).
7. Only charge batteries until they are fully charged. Frequent overcharging can reduce the battery lifetime.
8. Remove the battery from the device when the battery is not being used. Following a longer period of storage, it may be necessary to charge and discharge the battery several times in order to obtain the full capacity.
9. Only use the battery with designated Rohde & Schwarz devices. See the device manual for details.
10. Do not dispose of the batteries with unsorted municipal waste. The batteries must be collected separately. After the end of their life, dispose of the batteries at a suitable collection point or via a Rohde & Schwarz customer service center.



EU labeling for batteries and secondary cells

11. Follow the transport stipulations of the carrier (IATA-DGR, IMDG-Code, ADR, RID) when returning lithium batteries to Rohde & Schwarz subsidiaries.
12. Keep this safety information for future reference.

# Customer Support

## Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

## Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

### Europe, Africa, Middle East

Phone +49 89 4129 12345  
[customersupport@rohde-schwarz.com](mailto:customersupport@rohde-schwarz.com)

### North America

Phone 1-888-TEST-RSA (1-888-837-8772)  
[customer.support@rsa.rohde-schwarz.com](mailto:customer.support@rsa.rohde-schwarz.com)

### Latin America

Phone +1-410-910-7988  
[customersupport.la@rohde-schwarz.com](mailto:customersupport.la@rohde-schwarz.com)

### Asia/Pacific

Phone +65 65 13 04 88  
[customersupport.asia@rohde-schwarz.com](mailto:customersupport.asia@rohde-schwarz.com)

### China

Phone +86-800-810-8228 /  
+86-400-650-5896  
[customersupport.china@rohde-schwarz.com](mailto:customersupport.china@rohde-schwarz.com)



# Contents

<b>1</b>	<b>Getting Started</b> .....	<b>7</b>
1.1	Preface.....	7
1.2	Preparing for Use.....	10
1.3	Instrument Tour.....	16
1.4	Operating Basics.....	22
1.5	Maintenance.....	35
<b>2</b>	<b>Waveform Setup</b> .....	<b>37</b>
2.1	Connecting Probes.....	37
2.2	Vertical Setup.....	38
2.3	Horizontal Setup.....	42
2.4	Acquisition Control.....	44
2.5	Trigger.....	46
<b>3</b>	<b>Waveform Analysis</b> .....	<b>74</b>
3.1	Zoom.....	74
3.2	Automatic Measurements.....	76
3.3	Cursor Measurements.....	82
3.4	Mathematics.....	86
3.5	Reference Waveforms.....	88
3.6	XY-Diagram.....	92
3.7	History (Option R&S RTH-K15).....	93
<b>4</b>	<b>Mask Testing</b> .....	<b>99</b>
4.1	Accessing the Mask Mode.....	99
4.2	Mask Test Results.....	99
4.3	Running Mask Tests.....	100
4.4	Mask Settings.....	101
<b>5</b>	<b>Spectrum Analysis</b> .....	<b>104</b>
5.1	FFT Mode.....	104
5.2	Spectrum Mode (Option R&S RTH-K18).....	109
5.3	Harmonics Measurement (Option R&S RTH-K34).....	126
<b>6</b>	<b>Multimeter Measurements</b> .....	<b>138</b>

6.1	Digital Multimeter (R&S RTH1002).....	138
6.2	Voltmeter (R&S RTH1004).....	143
<b>7</b>	<b>Data Logging.....</b>	<b>149</b>
7.1	Accessing the Logger Mode.....	149
7.2	Logger Display.....	149
7.3	Using the Logger.....	150
7.4	Logger Settings.....	153
7.5	Analyzing Logged Data.....	155
7.6	Export of Logger Records.....	160
<b>8</b>	<b>Protocol Analysis.....</b>	<b>165</b>
8.1	Basics of Protocol Analysis.....	165
8.2	I2C (Option R&S RTH-K1).....	171
8.3	SPI (Option R&S RTH-K1).....	179
8.4	UART/RS-232/RS-422/RS-485 (Option R&S RTH-K2).....	185
8.5	CAN (Option R&S RTH-K3/R&S RTH-K9).....	191
8.6	LIN (Option R&S RTH-K3).....	203
8.7	SENT (Option R&S RTH-K10).....	212
<b>9</b>	<b>Logic Analyzer (R&amp;S RTH-B1 MSO).....</b>	<b>236</b>
9.1	Logic Analyzer Settings.....	236
9.2	Triggering on Logic Channels.....	239
9.3	Analyzing Logic Channels.....	239
<b>10</b>	<b>Frequency Counter (R&amp;S RTH-K33).....</b>	<b>241</b>
10.1	Accessing the Counter Mode.....	241
10.2	Display and Control.....	242
10.3	Performing a Counter Measurement.....	245
10.4	Counter Settings.....	247
<b>11</b>	<b>Documenting Results.....</b>	<b>250</b>
11.1	Using USB Flash Drive.....	250
11.2	Filesystem Tools.....	251
11.3	Instrument Settings.....	253
11.4	Waveforms.....	255
11.5	Logger Records.....	261

11.6	Quick Save with OneTouch.....	261
11.7	Screenshots.....	263
<b>12</b>	<b>General Instrument Setup.....</b>	<b>265</b>
12.1	Resetting the Instrument.....	265
12.2	Disabling the Touchscreen.....	265
12.3	Selfalignment.....	265
12.4	Setting the Date, Time and Language.....	267
12.5	Instrument Settings.....	268
12.6	Display Settings.....	270
12.7	Options.....	271
12.8	Updating the Firmware.....	274
<b>13</b>	<b>Network Connections.....</b>	<b>276</b>
13.1	LAN Connection.....	276
13.2	USB connection.....	278
13.3	Wireless LAN Connection (Option R&S RTH-K200/200US).....	278
13.4	Web Interface (Option R&S RTH-K201).....	281
<b>14</b>	<b>Remote Control Commands.....</b>	<b>282</b>
14.1	Conventions used in Command Description.....	282
14.2	Mode.....	282
14.3	Waveform Setup.....	283
14.4	Waveform Analysis.....	317
14.5	Mask Testing.....	331
14.6	Spectrum Analysis.....	335
14.7	Digital Multimeter (R&S RTH1002).....	361
14.8	Voltmeter (R&S RTH1004).....	377
14.9	Counter Mode (R&S RTH-K33).....	389
14.10	Data Logging.....	396
14.11	Protocol Analysis.....	408
14.12	Logic Analyzer (R&S RTH-B1 MSO).....	470
14.13	Documenting Results.....	473
14.14	General Instrument Setup.....	485
14.15	WLAN Connection (Option R&S RTH-K200/200US).....	487

<b>Annex.....</b>	<b>489</b>
<b>A SCPI Command Structure.....</b>	<b>489</b>
A.1 Syntax for Common Commands.....	489
A.2 Syntax for Device-Specific Commands.....	490
A.3 SCPI Parameters.....	492
A.4 Overview of Syntax Elements.....	495
A.5 Structure of a Command Line.....	496
A.6 Responses to Queries.....	497
<b>B Command Sequence and Synchronization.....</b>	<b>498</b>
B.1 Preventing Overlapping Execution.....	498
<b>List of Commands.....</b>	<b>500</b>

# 1 Getting Started

## 1.1 Preface

### 1.1.1 Key Features

The R&S RTH is the perfect multi-purpose tool for the lab and in the field. Outstanding key features are:

- Full isolation of all channels and interfaces
- CAT IV 600 V / CAT III 1000 V safety rating
- Bandwidth 60 MHz to 500 MHz with 5 GS/s sampling rate
- Acquisition speed up to 50.000 waveforms per second
- 2 mV/div sensitivity
- Up to 200 V offset range
- 33 automatic measurement functions
- Full operation using touch or keypad
- Wireless LAN and Ethernet for web based remote control and quick data access (optional)


The R&S RTH combines:

- Lab performance oscilloscope
- Logic analyzer with 8 digital inputs (optional)
- Protocol analyzer with trigger and decode (optional)
- Data logger
- Digital multimeter (R&S RTH1002)

### 1.1.2 Input Isolation

The instrument has independently floating isolated inputs. Each input channel has its own signal input and its own reference input. Each input channel is electrically isolated from the other input channels. Therefore, each reference of the used inputs must be connected to a reference voltage. Furthermore, input channels are electrically isolated from the communication ports and the power adapter input.



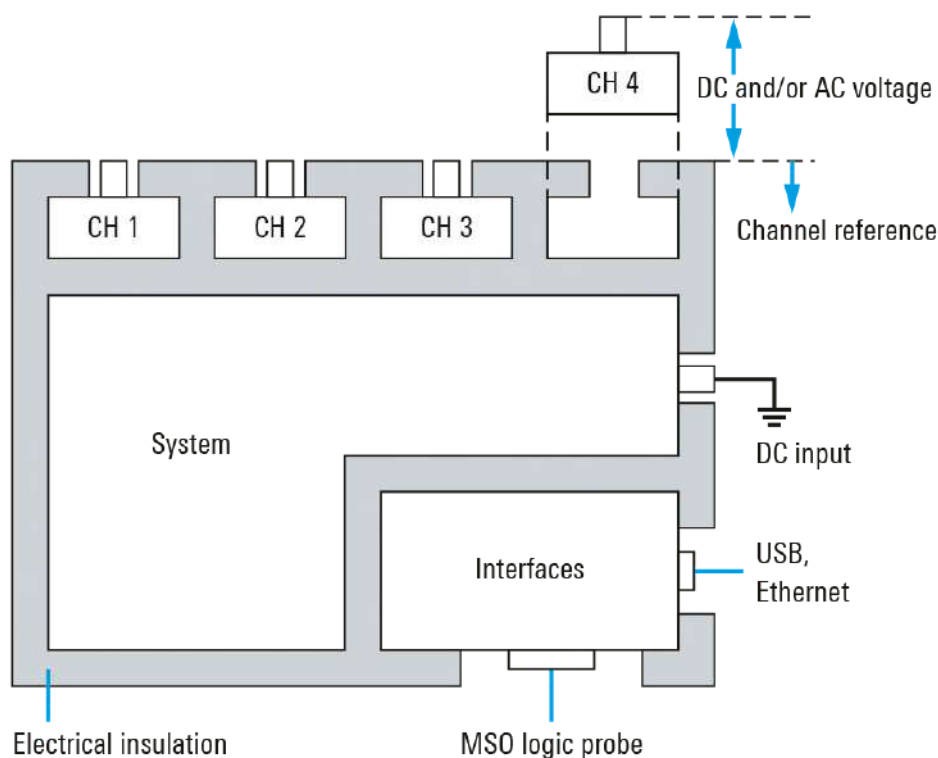

**Figure 1-1: Isolation scheme of the R&S RTH**

The input isolation has several advantages:

- You can measure independently floating signals simultaneously.
- The risk of causing a short circuit while measuring multiple signals is reduced substantially.
- When measuring signals with different grounds, the induced ground currents are kept to a minimum.

### 1.1.3 Measurement Categories

To ensure safe operation of measurement instruments, IEC 61010-2-030 defines particular safety requirements for testing and measuring circuits. The standard introduces measurement categories that rate instruments on their ability to resist short transient overvoltages that occur in addition to the working voltage of the instrument and can exceed the working voltage many times over.

Measurement categories are distinguished as follows:

- O - Instruments without rated measurement category  
For measurements performed on circuits not directly connected to mains, for example, electronics, circuits powered by batteries, and specially protected secondary circuits. This measurement category is also known as CAT I.
- CAT II:

For measurements performed on circuits directly connected to the low-voltage installation by a standard socket outlet, for example, household appliances and portable tools.

- CAT III:  
For measurements performed in the building installation, such as junction boxes, circuit breakers, distribution boards, and equipment with permanent connection to the fixed installation.
- CAT IV:  
For measurements performed at the source of the low-voltage installation, such as electricity meters and primary overcurrent protection devices.

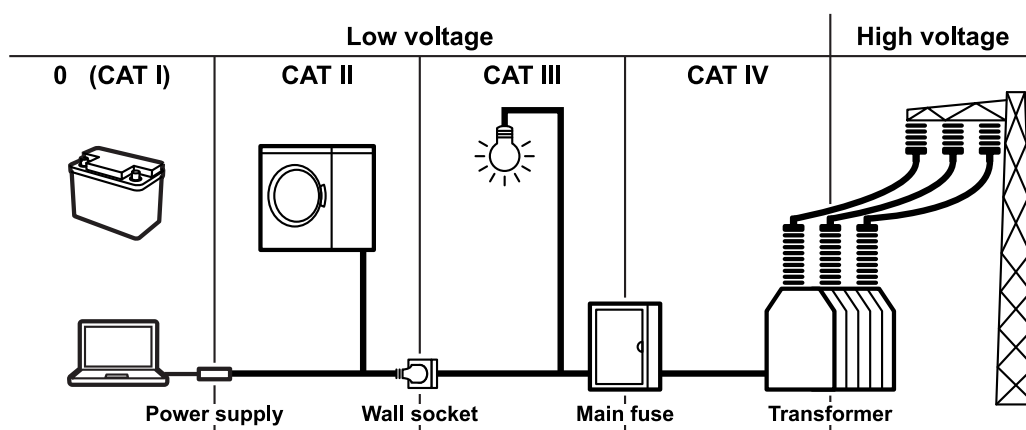


Figure 1-2: Examples of measurement categories

The higher the category, the higher the expected transient overvoltage. Overvoltages can overload a circuit and cause electrical and physical damage. Therefore, use the measurement instrument only in electrical environments for which the instrument is rated.

The measurement categories correspond to the overvoltage categories of the IEC60664 standards. Working voltages stated in context with measurement categories are always specified as effective voltages V (RMS) against earth ground.

### 1.1.4 Documentation Overview

The user documentation for the R&S RTH consists of the following parts:

- Instrument Help  
The instrument help is part of the instrument's firmware. It offers quick, context-sensitive access to the complete information directly on the instrument.
- Basic Safety Instructions  
This brochure provides safety instructions and operating conditions and further important information. The brochure is delivered with the instrument in printed form.
- Getting Started  
The Getting Started manual provides the information needed to set up and start working with the instrument, and describes basic operations. The English edition of this manual is delivered with the instrument in printed form. Editions in other lan-

guages and the newest version of the English manual are available on the product website.

- **User Manual**  
The user manual describes all instrument modes and functions in detail. It also provides an introduction to remote control and a complete description of the remote control commands with programming examples. The newest version of the manual is available in English on the R&S RTH product website at [www.rohde-schwarz.com/manual/rth](http://www.rohde-schwarz.com/manual/rth).
- **Data Sheet**  
The data sheet contains the complete instrument specification. It also lists the options and their order numbers, and optional accessories. The data sheet is available on the R&S RTH product website at [www.rohde-schwarz.com/brochure-data-sheet/rth](http://www.rohde-schwarz.com/brochure-data-sheet/rth).
- **Calibration Certificate**  
The document is available on <https://gloris.rohde-schwarz.com/calcert>.
- **Open Source Acknowledgment**  
The Open Source Acknowledgment document provides verbatim license text of open source software that is used in the instrument's firmware. It is available on the R&S RTH website at [www.rohde-schwarz.com/firmware/rth](http://www.rohde-schwarz.com/firmware/rth), and it can be read directly on the instrument.
- **Instrument security procedures manual**  
Provides information on security issues when working with the R&S RTH in secure areas.
- **Application cards and application notes**  
These documents deal with special applications or background information on particular topics. See [www.rohde-schwarz.com/application/rth](http://www.rohde-schwarz.com/application/rth)

## 1.2 Preparing for Use

This section describes the basic steps to be taken when setting up the R&S RTH for the first time.

**⚠ WARNING****Shock hazard caused by high voltages**

The instrument must be used in an appropriate manner to prevent electric shock, fire, personal injury, or damage.

- Do not open the instrument casing.
- Do not use the instrument if the instrument casing, the display or any probe or accessory are damaged. If you detect or suspect any damage, have the instrument or accessory inspected by qualified service personnel.
- Use only specified probes and accessories that comply with the measurement category of your measurement task.  
If you use other than Rohde & Schwarz accessories, make sure that they are suitable to the instrument and the measurement task.
- Do not operate the instrument in wet, damp or explosive atmospheres.  
Make sure that all connectors are completely dry before connecting the inputs.
- Voltages higher than 30 V RMS or 42 V peak or 60 V DC are regarded as hazardous contact voltages. Make sure that only electrically skilled persons may use the R&S RTH for measurements on hazardous contact voltages because these working conditions require special education and experience to perceive risks and to avoid hazards which electricity can create.
- Observe the operating conditions specified in the data sheet. Note that the general safety instructions also contain information on operating conditions that will prevent damage to the instrument.
- Read and observe the "Basic Safety Instructions" delivered as a printed brochure with the instrument. In addition, read and observe the safety instructions in the following sections.

### 1.2.1 Unpacking the Instrument

When you receive your shipping package, unpack and inspect the package and its contents for damage.

1. Inspect the package for damage.  
If the packaging material shows any signs of stress, notify the carrier as well as your Rohde & Schwarz service center. Keep the package and cushioning material for inspection. Keep a damaged package and the cushioning material until the contents have been checked for completeness and the instrument has been tested.
2. Unpack the handheld scope and the accessories and check the contents for completeness, see "[Package contents](#)" on page 12.  
If anything is missing, contact your Rohde & Schwarz service center.
3. Inspect the handheld scope and the accessories.  
If there is any damage or defect, or if the R&S RTH does not operate properly, notify your Rohde & Schwarz service center.

**Packing material**

Retain the original packing material. If the instrument needs to be transported or shipped later, you can use the material to protect the control elements and connectors.

**Package contents**

The delivery package contains the following items:

- R&S RTH handheld scope
- 4 Gbyte microSD card, installed in the battery compartment
- Power adapter with cable and adapter set for various socket types
- Battery pack
- R&S RT-ZI10 probes (2x for R&S RTH1002; 4x for R&S RTH1004)
- DMM test leads (only for R&S RTH1002)
- Hand strap, attached on the handheld scope
- Printed "Getting Started" manual and "Basic Safety Instructions" brochure

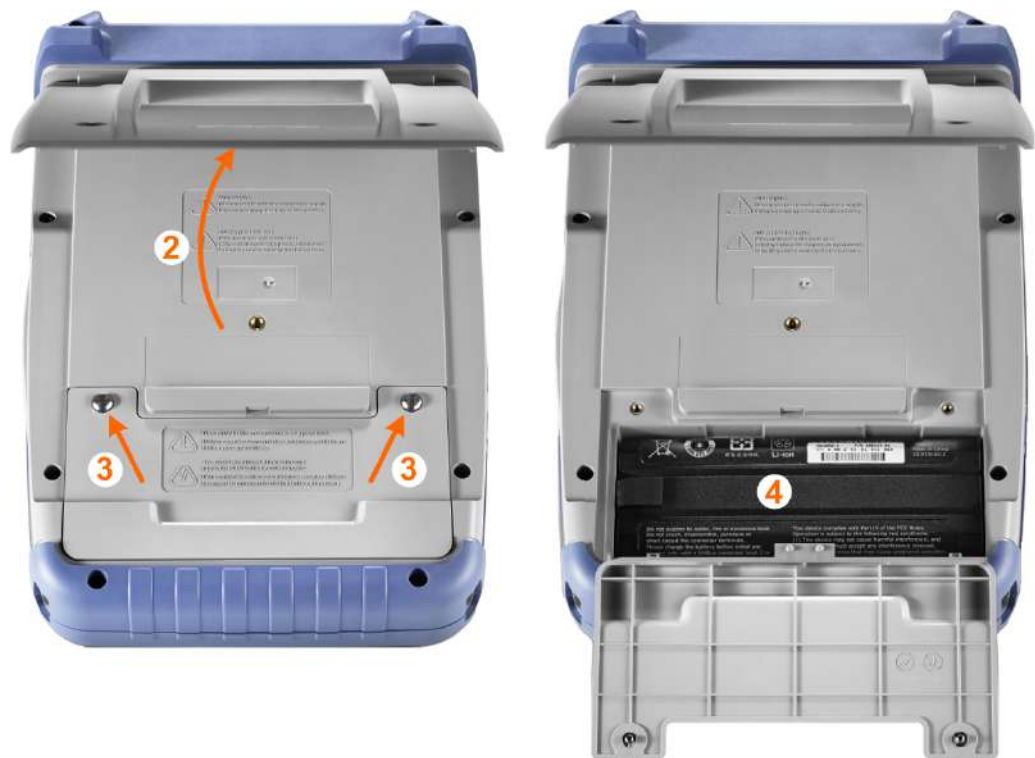
Optional accessories and their order numbers are listed in the data sheet.

## 1.2.2 Inserting and Charging the Battery

Before you can use the handheld scope for the first time, insert the battery pack and charge it.

**⚠ WARNING****Risk of electrical shock during battery replacement**

- Disconnect power supply, probes, test leads and all other cables before opening the battery cover.
- Use only the specified Li-Ion battery pack, which is delivered with the instrument. You can order additional battery packs at Rohde & Schwarz, see Data Sheet for order number.
- Do not operate the instrument with the battery cover open.
- Use only the specified power adapter, which is delivered with the instrument.



1. Turn off the instrument power. Remove power supply, probes, test leads and all other cables.
2. Fold out the tilt stand on the back of the instrument.
3. Screw open the battery cover.
4. Insert the battery pack.
5. Screw down the battery cover.
6. Connect the power adapter to the connector on the left side of the scope, and fully charge the battery. Charging may take a few hours.




If the instrument is on, the battery status is shown on the display.



Replace used batteries periodically by new batteries after 24 months of usage. Observe the safety regulations in the "Batteries and rechargeable batteries/cells" chapter in the "Basis Safety Instructions" brochure, which is delivered with the instrument.

### 1.2.3 Powering On/Off

- ▶ Press the  POWER key to switch the instrument on or off. The key blinks and turns green after a few seconds.

**Table 1-1: Colors of the Power key**

Green	Power is on
Blue	Charging the battery, power is off
Orange (yellow)	Battery is fully charged, power adapter is connected, power is off

If you do not use the instrument for a longer time, the battery gets exhausted. When you connect the power supply and switch on the instrument with exhausted battery, it takes a few minutes until the instrument can start.

### 1.2.4 Using the Tilt Stand

The R&S RTH has a tilt stand for proper handling while the scope is placed on a table.

- ▶ Pull the tilt stand as shown below.



### 1.2.5 EMI Suppression

Electromagnetic Interference (EMI) may affect the measurement results.

To suppress generated Electromagnetic Interference:

- Use suitable shielded cables of high quality. For example use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.




## 1.3 Instrument Tour

### 1.3.1 Front View



**Figure 1-3: Front panel of the R&S RTH1002**

- 1 = Touch display
- 2 = Waveform setup with AUTOSET, reset to default with PRESET
- 3 = Analysis functions
- 4 = Mode selection
- 5 = Save/Recall
- 6 = Instrument settings
- 7 = Power on/off
- 8 = Navigation controls
- 9 = Horizontal settings
- 10 = Run/stop acquisition and trigger settings
- 11 = Acquisition settings
- 12 = Screenshot and documentation output
- 13 = Channels and vertical settings
- 14 = Multimeter measurements

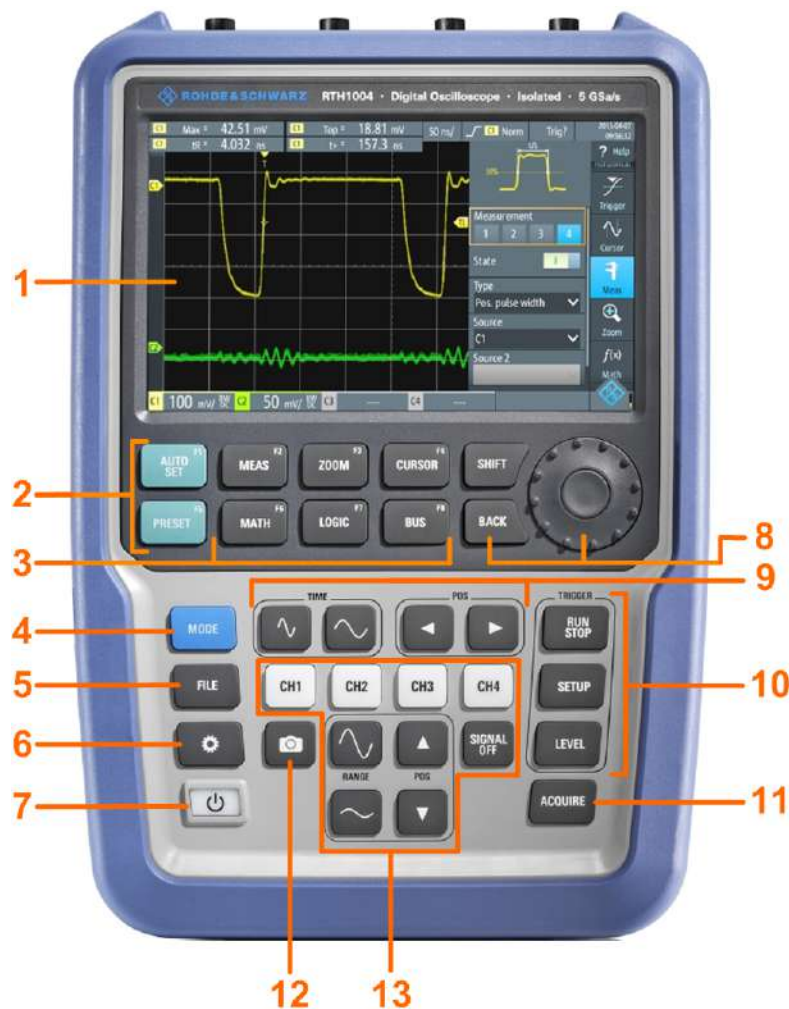

**Figure 1-4: Front panel of the R&S RTH1004**

- 1 = Touch display
- 2 = Waveform setup with AUTOSET, reset to default with PRESET
- 3 = Analysis functions
- 4 = Mode selection
- 5 = Save/Recall
- 6 = Instrument settings
- 7 = Power on/off
- 8 = Navigation controls
- 9 = Horizontal settings
- 10 = Run/stop acquisition and trigger settings
- 11 = Acquisition settings
- 12 = Screenshot and documentation output
- 13 = Channels and vertical settings

For a description of the keys, see [Chapter 1.4.1.3, "Using Front Panel Keys"](#), on page 29.

### 1.3.2 Top View

The R&S RTH1002 has two BNC input connectors CH1 and CH2, and two 4 mm banana plug inputs for multimeter measurements. The channel inputs have double channel-to-channel isolation that allows for independent floating measurements at each input. The DMM input is fully isolated from scope inputs, interfaces, and ground.



Figure 1-5: Top view of R&S RTH1002

The R&S RTH1004 has four BNC input connectors CH1, CH2, CH3, CH4. The channel inputs have double channel-to-channel isolation that allows for independent floating measurements at each input.



Figure 1-6: Top view of R&S RTH1004

## **⚠ WARNING**

### Shock hazard caused by high voltages

To avoid electrical shock and personal injury, and to prevent damage to the instrument or any other products connected to it, observe the following:

- Do not apply input voltages above the rating of the instrument and the accessories.
- Use only probes, test leads, and adapters that comply with the measurement category (CAT) of your measurement task.
- Test leads and measurement accessories used for multimeter measurements on a live mains circuit must be rated for CAT III or CAT IV according to IEC 61010-031. The voltage of the measured circuit must not exceed the rated voltage value.

Maximum input voltage:

- At BNC inputs: CAT IV 300 V
- With probe R&S RT-ZI10 or R&S RT-ZI11: CAT IV 600 V, CAT III 1000 V
- Meter input: CAT IV 600 V; CAT III 1000 V

Voltage ratings: V RMS (50 to 60 Hz) for AC sine wave and V DC for DC applications.

**⚠ WARNING****Risk of electrical shock or fire**

Voltages higher than 30 V RMS or 42 V peak or 60 V DC are regarded as hazardous contact voltages. When working with hazardous contact voltages, use appropriate protective measures to preclude direct contact with the measurement setup:

- Use only insulated voltage probes, test leads and adapters.
- Do not touch voltages higher than 30 V RMS or 42 V peak or 60 V DC.

See also: [Chapter 1.1.2, "Input Isolation"](#), on page 7.

**1.3.3 Right View**

- 1 = LAN
- 2 = USB type B for remote control
- 3 = Probe compensation
- 4 = USB type A for flash drive
- 5 = Logic probe connector

**⚠ CAUTION****Risk of injury or instrument damage**

Always close the lids of the communication ports and DC input when they are not in use.

**LAN connector**

RJ-45 connector to connect the instrument to a Local Area Network (LAN). It supports up to 100 Mbit/s.

**USB type A connector**

USB type A connector to connect a USB flash drive to store and reload instrument settings and measurement data.

**USB type B connector (mini USB)**

Mini USB connector to connect a computer for remote control of the instrument.

**Probe compensation**

Probe compensation terminal to support adjustment of passive probes to the oscilloscope channel.

**Logic probe connector**

Input for the logic probe R&S RT-ZL04. Logic analysis requires Mixed Signal Option R&S RTH-B1, which includes the logic probe R&S RT-ZL04.

**⚠ WARNING****Risk of electrical shock - no CAT rating for MSO measurements**

The logic probe R&S RT-ZL04 is not rated for any measurement category. To avoid electrical shock or personal injury, and to prevent material damage, make sure that the ground clips of the R&S RT-ZL04 are connected to protective earth on the DUT.

**1.3.4 Left View**

- 1 = DC input
- 2 = Kensington lock slot

**DC input**

Connector for the power adapter to charge the battery.

**Kensington lock slot**

The Kensington lock is used to secure the instrument against theft.

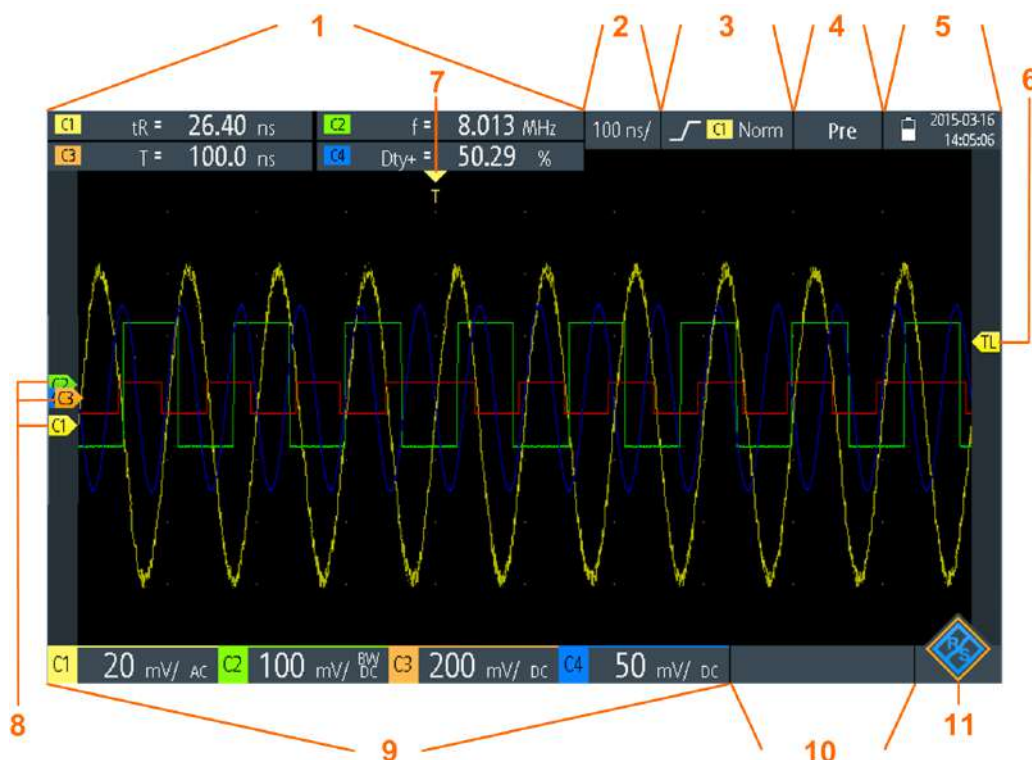
### 1.3.5 Rear View



- 1 = Tilt stand to fold out
- 2 = Thread hole M5
- 3 = Battery compartment

### 1.3.6 Display Overview

In the most important modes scope, mask and XY, the display shows the following information.



- 1 = Measurement results, depends on the mode and the selected measurement
- 2 = Time scale (horizontal scale, in s/division)
- 3 = Trigger type, trigger source, and trigger mode
- 4 = Capture status
- 5 = Battery status and AC connectivity for battery charging; date and time
- 6 = Trigger level marker, has the color of the trigger source
- 7 = Trigger position marker, has the color of the trigger source
- 8 = Channel markers indicate the ground levels. Channel C3 has the focus
- 9 = Vertical settings for each active channel: vertical scale (vertical sensitivity, in V/division), bandwidth limit (no indicator = full bandwidth, BW= limited frequency), coupling (AC or DC)
- 10 = Logic channels (MSO R&S RTH-B1)
- 11 = Menu button

You can adjust the vertical position of each waveform, the trigger level, and the trigger position by dragging the corresponding marker on the display. Alternatively, tap a marker to set the focus, and use the wheel to adjust position.

## 1.4 Operating Basics

### 1.4.1 Accessing the Functionality

The complete functionality is available in the menus and dialogs on the touchscreen. You can touch the functions directly on the display, or you can use the wheel to navigate and select. In addition, the most important functions are applied to the keys on the front panel to set up and perform measurement tasks quickly.

### 1.4.1.1 Using the Touchscreen

Using the touchscreen of the R&S RTH is as easy as using your mobile phone. To open the menu, tap the "Menu" button - that is the R&S logo in the right bottom corner of the display.

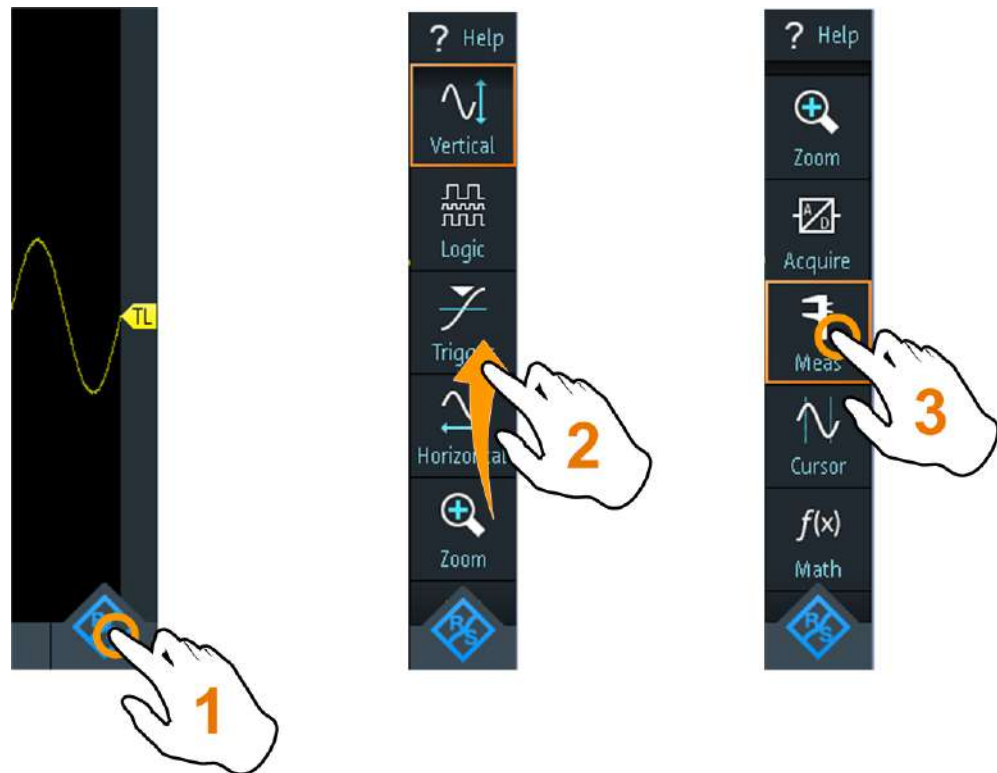


Figure 1-7: Open the menu and select a menu item





Figure 1-8: Switch on or off (left) and select a parameter value (right)

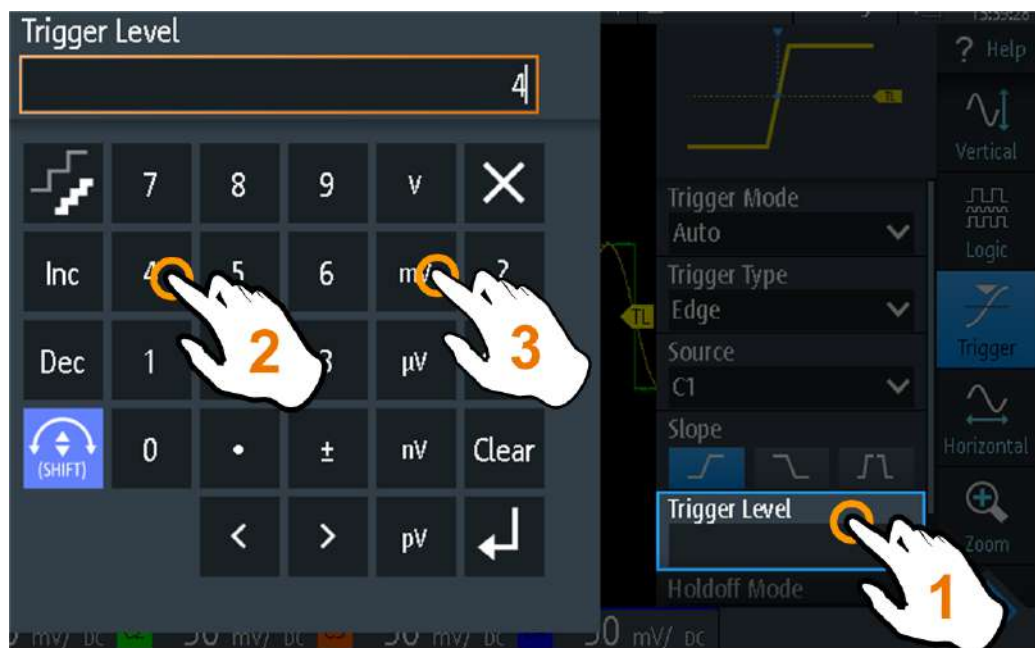


Figure 1-9: Enter numerical value and unit

#### 1.4.1.2 Using the Navigation Wheel

In addition or alternatively to the touchscreen, you can use the wheel to control the R&S RTH.

When using the wheel, always observe the position of the focus - the orange frame or other highlighting that marks the active object on the screen.

- If the focus is on the menu button or somewhere in the menu or dialogs:
  - Turn the wheel to move the focus.
  - Press the wheel button to apply the selection.
- If the focus is on an element in the diagram, for example, on a waveform, cursor line, or trigger level:
  - Turn the wheel to change the position of the active element.
  - Press the wheel button to toggle the active element, for example, to toggle the cursor lines, or zoom size and zoom position.

The BACK key closes open dialogs and menus, and resets the focus to the "Menu" button.

### Menu navigation

The following procedure describes how to access and navigate the menu. Navigating dialogs and selecting parameter values works in the same way. See also [Figure 1-10](#).

1. Press BACK until the focus is on the "Menu" button.
2. Press the wheel button to open the menu.
3. Turn the wheel to move the focus to the required menu item.
4. Press the wheel button to open the dialog, submenu, or keypad for the selected menu item.

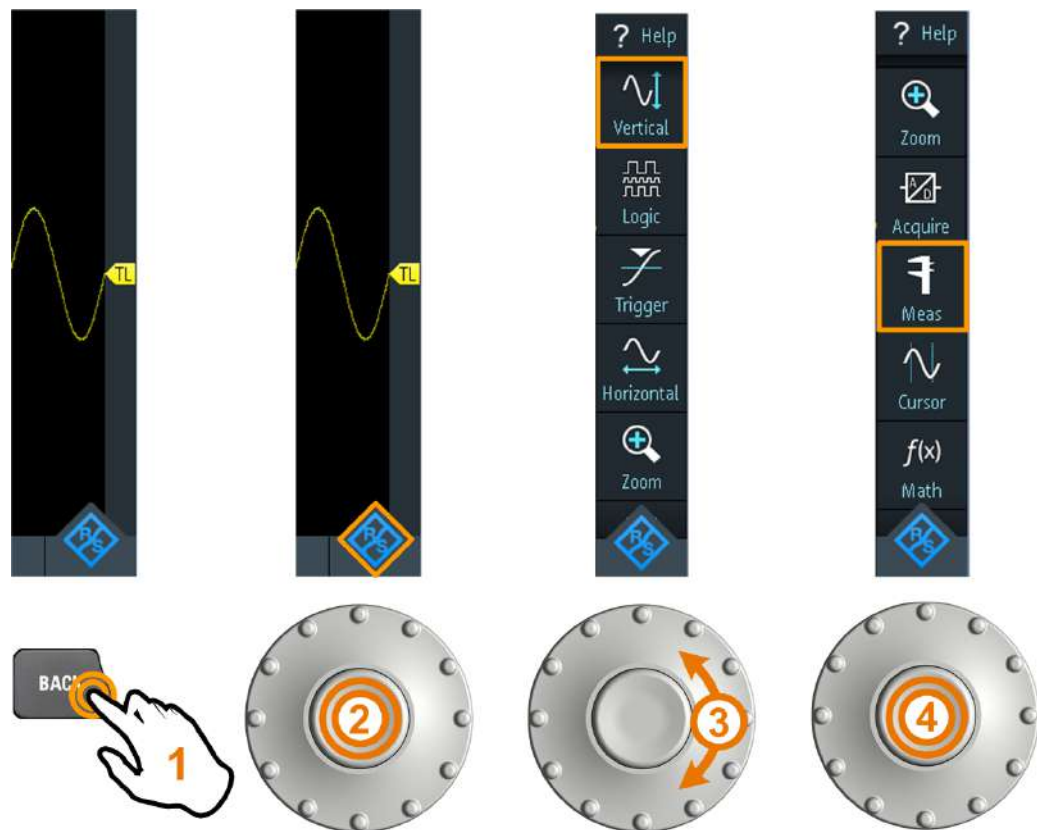


Figure 1-10: Open the menu and select a menu item

#### Set numerical value using the wheel

1. Set the focus to the required setting, and press the wheel button *once*.
2. Turn the wheel until the required value is shown.
3. Press **BACK**.



Figure 1-11: Set numerical value using the wheel

#### Data entry using wheel and keypad

You can enter precise numerical values on the keypad. See also [Figure 1-12](#).

1. Set the focus to the required setting, and press the wheel button *twice*.
2. Turn the wheel until the focus is on the required number.
3. Press the wheel button.
4. Turn the wheel until the focus is on the required unit.
5. Press the wheel button.

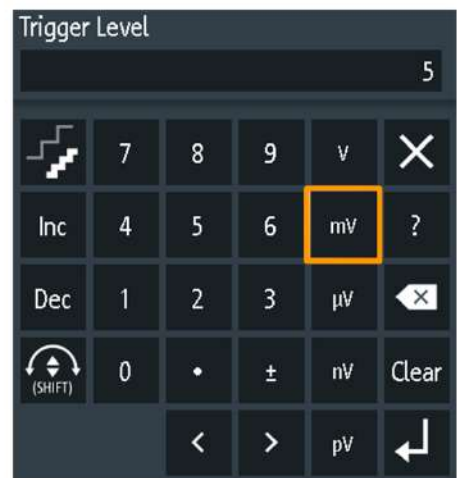
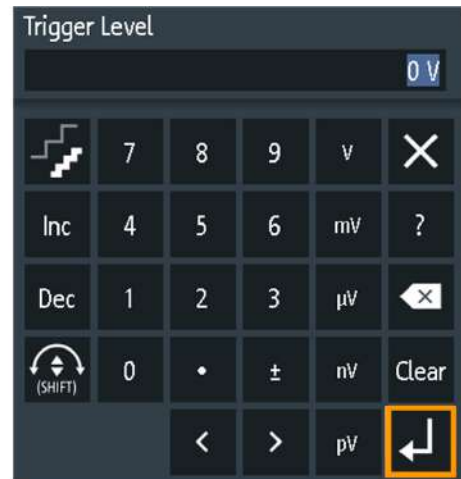








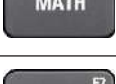



Figure 1-12: Enter numerical value and unit in the keypad






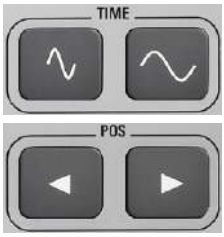









The SHIFT button toggles the wheel focus in the keypad. If the focus is on the entry field, turning the wheel changes the value. If the focus is in the lower part, the wheel selects numbers and unit.

### 1.4.1.3 Using Front Panel Keys

For an overview of the front panel keys, see [Figure 1-4](#)

Key	Press shortly	Press and hold
	AUTOSET analyses the active channels, adjusts the instrument settings, and displays stable waveforms.	
	PRESET sets the instrument to the default factory state.	
	MEAS starts or stops the last configured automatic measurements.	Opens or closes the "Meas" dialog to configure the measurements.
	ZOOM enables or disables the zoom with the last configuration. If the zoom is on but not in focus, pressing the key focuses the zoom.	Opens or closes the "Zoom" dialog to configure the zoom scale and position.
	CURSOR starts or stops the last configured cursor measurement. If the cursor is on but not in focus, pressing the key sets the focus to the first cursor line.	Opens or closes the "Cursor" dialog to configure the measurement.
	MATH switches the math waveform on or off.	Opens or closes the "Math" dialog to configure the math waveform.
	Requires logic analyzer option R&S RTH-B1 (MSO). The effect depends on the state of digital channels: If the all digital channels are off, the key switches them on and sets the focus. If the digital channels are on but not in focus, the key sets the focus. If the focus is on digital channels, the key switches them off.	Opens or closes the "Logic" dialog to configure digital channels.
	Activates or deactivates the serial bus. Requires at least one serial triggering and decoding option. Available options are listed in the data sheet.	Opens or closes the "Bus" dialog to configure serial protocols.
	SHIFT opens a dialog to save and load instrument settings.	Press and hold for 2 seconds to disable or enable the touch-screen.
	If a dialog or menu is open, BACK closes it. If the menu is closed, the key toggles the focus between focused element in the diagram and the Menu button.	

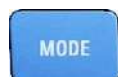
Key	Press shortly	Press and hold
	Open or close the "Mode", "File" or "Setup" dialog, respectively.	
	Saves measurement documentation: Only screenshot if "one touch" is off. ZIP file with selected data if "one touch" is on.	Opens or closes the "Screenshot" dialog to configure the screenshot and the "one touch" output.
All R&S RTH:  Only R&S RTH1004: 	The effect depends on the channel state: If the channel is off, the key switches on the channel and sets the focus. The key lights up. If the channel is on but not in focus, the key sets the focus. The key lights up.	Open or close the "Vertical" dialog for the corresponding channel to configure the channel settings.
Only R&S RTH1002: 	DMM starts or stops the meter measurements (same as MODE = "Meter"). DMM REL enables or disables relative meter measurements.	Opens or closes the "Meter" dialog to configure the measurements.
	TIME and POS adjust the horizontal time scale and position of the trigger point.	
	RANGE and POS set the vertical scale (vertical sensitivity) and the vertical position of the focused waveform (analog or channel, math or reference waveform).	
	SIGNAL OFF switches off the focused waveform.	
	RUN STOP starts and stops the acquisition.	
	SETUP opens or closes the "Trigger" dialog to select the trigger type and adjust the trigger settings.	

Key	Press shortly	Press and hold
	LEVEL activates the trigger level to be set using the wheel. If the trigger type has two trigger levels, pressing the key toggles the upper and lower levels.	
	ACQUIRE opens or closes the "Acquire" dialog to adjust the acquisition mode.	
	POWER key: switches the power on or off	

### 1.4.2 Selecting the Mode


A mode comprises all settings and functions that are needed to perform a measurement task. Selecting the mode is the first setup step.

1. Press the MODE key.



2. Select the mode:

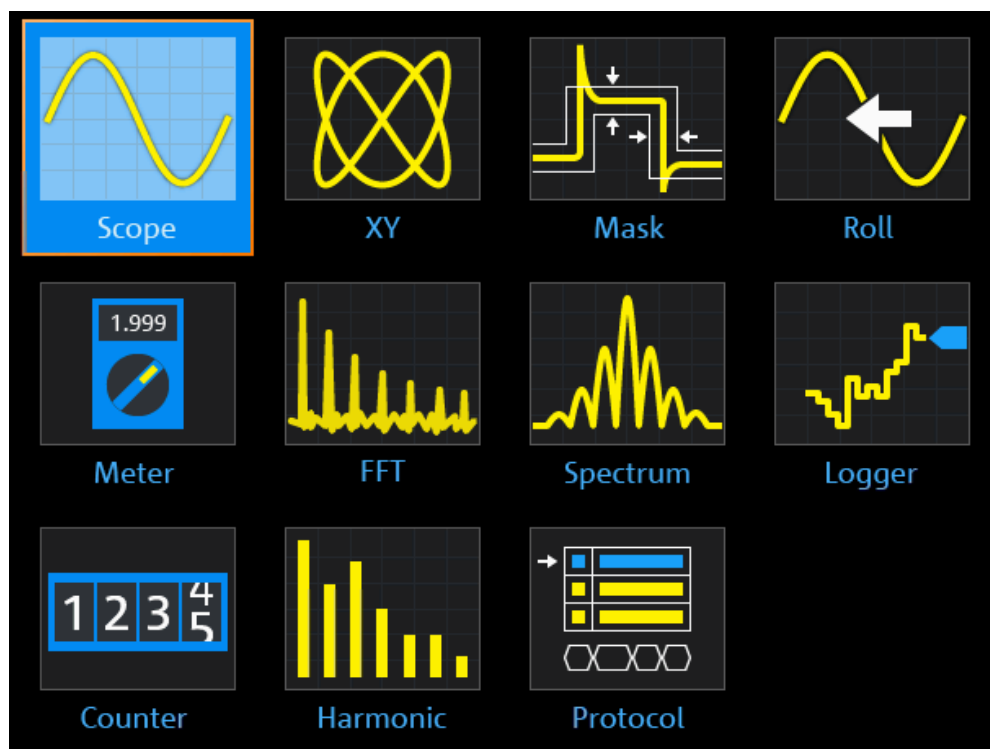- On the touchscreen: Tap the required mode icon.
- Using controls: Turn the wheel until the required mode is marked, and press the wheel button to select the mode.





Remote command:

[OP \[:MODE\]](#) on page 282

### 1.4.3 Displaying an Unknown Signal

The R&S RTH can display unknown, complex signals automatically. The AUTOSSET function analyzes the enabled channel signals, and adjusts the horizontal, vertical, and trigger settings to display stable waveforms.

1. Press the PRESET key.



PRESET sets the instrument to a default factory state. The previous user-defined configuration is removed and all channels except for channel 1 are disabled.

2. Press the AUTOSSET key.



The waveform is displayed.

### 1.4.4 Getting Information and Help

In most dialogs, graphics explain the meaning of the selected setting. For further information, you can open the help, which provides functional description of the settings with links to the corresponding remote commands, and background information.

#### 1.4.4.1 Displaying Help

- ["To open the help window"](#) on page 32
- ["To show information on a setting"](#) on page 33
- ["To close the help window"](#) on page 33

#### To open the help window

- ▶ Tap the "Help" icon on the top of the menu.



If a dialog is open, the dialog's help topic is shown beside the dialog.

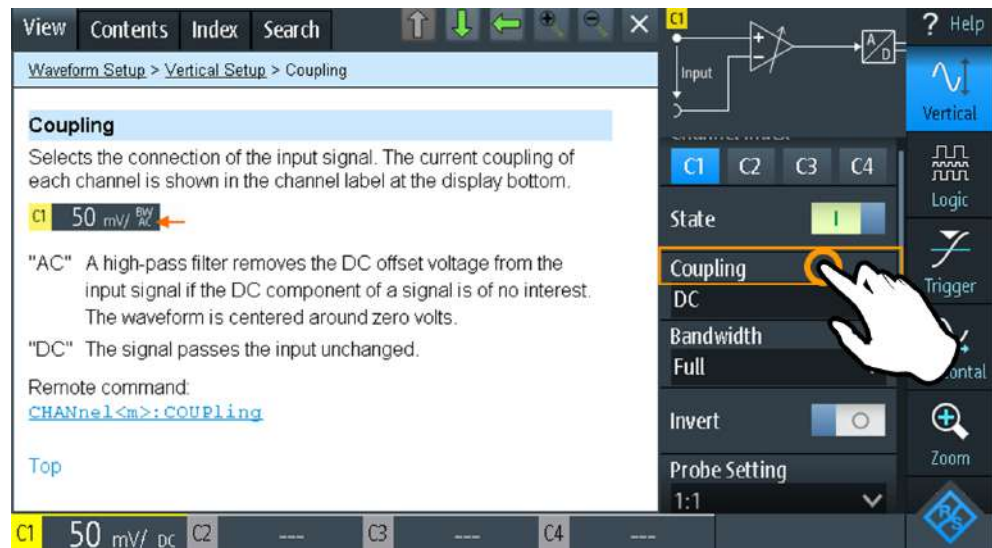
If a menu is open, the table of contents is shown.

### To show information on a setting

If a dialog and the help window are open, you can easily call the information on each setting of the dialog.

- ▶ Tap the setting's *name*.

The corresponding help topic is displayed.



If you tap the *switch* or the *entry field*, you can adjust the setting without closing the help window.



### To close the help window

- ▶ Tap the "Close" icon in the upper right corner of the help window, or press BACK.

### 1.4.4.2 Using the Help Window

The help window has several tabs:



- "View": shows the selected help topic.
- "Contents": contains a table of help contents.
- "Index": contains index entries to search for help topics.
- "Search": provides text search.

The help toolbar provides the following buttons:



- Up and down arrows: browse the topics in the order of the table of contents. Up = previous topic, down = next topic.
- Left and right arrows: browse the topics visited before: Left = back, right = forward.
- Magnifiers: increase or decrease the font.
- ×: closes the help window.

#### To search for a topic in the index

The index is sorted alphabetically. You can browse the list, or search for entries.

1. Tap the "Index" tab.
2. Tap the entry field on top of the list.
3. Enter some characters of the keyword you are interested in.  
You can use the Backspace key to delete single characters, and "Clear" to delete all characters in the "Keyword" field.
4. Tap the Enter key.  
Now only index entries are displayed that contain the keyword characters.
5. To delete the keyword:
  - a) Tap the entry field again.
  - b) Tap "Clear".
  - c) Tap the Enter key.

#### To search the help for a text string

1. Tap the "Search" tab.
2. Tap the entry field on the top.
3. Enter the words you want to find.  
If you enter several words with blanks between, topics containing all words are found.

To find a string of several words, enclose it in quotation marks. For example, a search for *"trigger mode"* finds all topics with exactly *"trigger mode"*. A search for *trigger mode* finds all topics that contain the words *trigger* and *mode*.

4. Tap the Enter key.  
A list of search results is displayed.
5. To refine the search, use "Match Whole Word" and "Match Case", and tap "Start Search".

## 1.5 Maintenance

The instrument does not need a periodic maintenance. Only cleaning the instrument is essential.

The addresses of the Rohde & Schwarz support centers can be found at [www.customersupport.rohde-schwarz.com](http://www.customersupport.rohde-schwarz.com).

A list of service centers is available on [www.services.rohde-schwarz.com](http://www.services.rohde-schwarz.com).

### 1.5.1 Cleaning

---

#### **WARNING**

##### **Shock hazard**

Before cleaning the instrument, remove all probes, leads, USB and LAN cables and power supply.

---

#### **NOTICE**

##### **Instrument damage caused by cleaning agents**

Cleaning agents contain substances such as solvents (thinners, acetone, etc.), acids, bases, or other substances. Solvents can damage the front panel labeling, plastic parts, or screens, for example.

Never use cleaning agents to clean the outside of the instrument. Use a soft, dry, lint-free dust cloth instead.

---

### 1.5.2 Data Storage and Security

The instrument is delivered with the 4 Gbyte microSD card inserted and ready to use. We recommend that you do not remove the microSD card.

All instrument configuration data and user data are stored on the microSD card. In addition, a fallback firmware is stored on the microSD card to boot the instrument if an update failed.

If you use the instrument in a secured environment, you can remove the microSD card before the instrument leaves this area. The microSD card slot is under the right lid under the battery pack.

You can also change the microSD card if you need more memory. The instrument supports microSD cards up to 32 Gbyte.

### 1.5.3 Storing and Packing

The storage temperature range of the instrument is given in the data sheet. If the instrument is to be stored for a longer period of time, it must be protected against dust.

Repack the instrument as it was originally packed when transporting or shipping. The two protective foam plastic parts prevent the control elements and connectors from being damaged. The antistatic packing foil avoids any undesired electrostatic charging to occur.

If you do not use the original packaging, use a sturdy cardboard box of suitable size and provide for sufficient padding to prevent the instrument from slipping inside the package. Wrap antistatic packing foil around the instrument to protect it from electrostatic charging.

## 2 Waveform Setup

### 2.1 Connecting Probes

#### **WARNING**

##### Shock hazard caused by high voltages

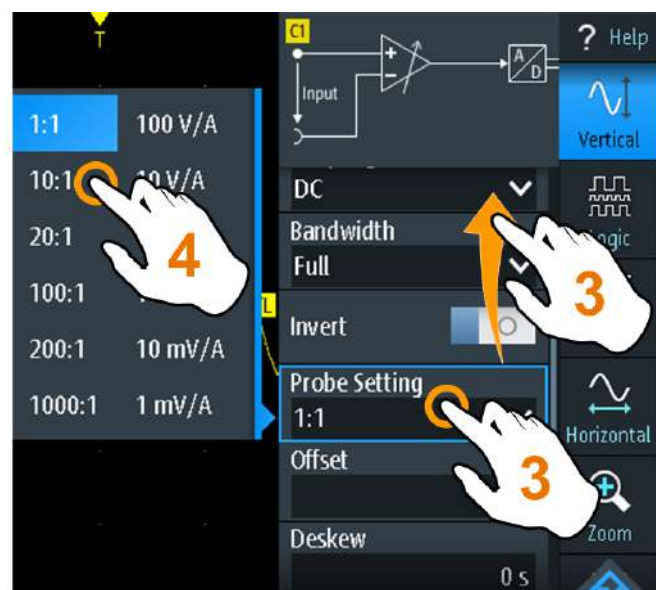
Make sure to set the attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.



##### Obtain best signal integrity

To get the most accurate waveform display and best measurement results, remove all redundant connectors: power adapter, USB flash drive, DMM test leads and unused channels.

1. Connect the probe(s) first to the channel input(s) at the top of the instrument, and then to the DUT.
2. Press and hold the CH key of the used input.
3. Select "Probe Setting".
4. Select the attenuation factor of the probe.  
The probe's attenuation factor is indicated on the probe.



**Note:** If you perform current measurements using a shunt resistor as a current sensor, you have to multiply the V/A-value of the resistor by the attenuation of the probe. For example, if a 1  $\Omega$  resistor and a 10:1 probe is used, the V/A-value of the resistor is 1 V/A, the attenuation factor of the probe is 0.1, and the resulting current probe attenuation is 100 mV/A.

## 2.2 Vertical Setup

The controls and parameters of the vertical system adjust the scale and position of the waveform vertically.



1. To set vertical scale and position, use the RANGE and POS keys.

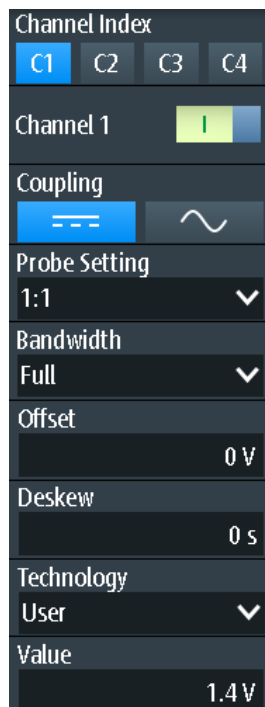


2. To adjust other vertical settings, select "Vertical" in the main menu.

Vertical scale and vertical position affect the resolution of the waveform amplitude directly. To get the full resolution, make sure that the waveforms cover most of the screen's height.

### 2.2.1 Vertical Settings

As long as the "Vertical" menu is open, the probe settings of active channels are shown on top of the display.



### Channel Index

Selects the channel to be configured. All settings in the channel menu belong to the selected channel.

You can also shortly press the channel key to select a channel. If you press and hold the channel key, the corresponding channel menu opens.

### Channel <n>

Switches the selected channel on or off.

Remote command:

[CHANnel<m>:STATe](#) on page 283

### Coupling

Selects the connection of the input signal. The current coupling of each channel is shown in the channel label at the display bottom.



AC coupling. A high-pass filter removes the DC offset voltage from the input signal if the DC component of a signal is of no interest. The waveform is centered on zero volts.



DC coupling, the signal passes the input unchanged.

Remote command:

[CHANnel<m>:COUpling](#) on page 285



**Probe Setting**

Selects the attenuation factor of the connected probe. The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual signal values.

Make sure to set the attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.

**Bandwidth**

Selects the bandwidth limit. The full instrument bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation.

For analog applications, the highest signal frequency determines the required oscilloscope bandwidth. The oscilloscope bandwidth should be at least 3 times higher than the maximum frequency included in the analog test signal to measure the amplitude with high accuracy.

Most test signals are more complex than a simple sine wave and include several spectral components. A digital signal, for example, is built up of several odd harmonics. For digital signals, the oscilloscope bandwidth should be at least 5 times higher than the clock frequency to be measured.

The oscilloscope is not an autonomous system. You need a probe to measure the signal, and the probe has a limited bandwidth, too. The combination of oscilloscope and probe creates a system bandwidth. To reduce the effect of the probe on the system bandwidth, the probe bandwidth should exceed the bandwidth of the oscilloscope, the recommended factor is 1.5 x oscilloscope bandwidth.

See also: [Chapter 2.2.2, "Effect of the Bandwidth Filter"](#), on page 42.

For FFT analysis, the channel bandwidth also determines the frequency range displayed in the spectrum (see ["Frequency range"](#) on page 105).

"Full" At full bandwidth, all frequencies in the specified range are acquired and displayed. Full bandwidth is used for most applications.

"x MHz, x kHz" Frequency limit. Frequencies above the selected limit are removed to reduce noise at different levels. Limited bandwidth is indicated in the channel label.



Remote command:

[CHANnel<m>:BANDwidth](#) on page 285

**Offset**

Sets an offset voltage that is added to correct an offset-affected signal. The value is included in measurement results. The signal is shifted in relation to the ground level by the offset value. Negative offset values move the waveform down, positive values move it up.

Remote command:

[CHANnel<m>:OFFSet](#) on page 285

**Deskew**

Sets a delay for the selected channel.

Deskew compensates delay differences between channels caused by the different length of cables, probes, and other sources. Correct deskew values are important for accurate triggering. The propagation delay may lead to a non-synchronous waveform display. For example, a coax cable with a length of 1 meter has a propagation delay of typically 5.3 ns.

Remote command:

[CHANnel<m>:DESKew](#) on page 286

**Technology, Value**

Sets the threshold, which is used to obtain the signal state. If the signal value is higher than the threshold, the signal state is high (1 or true for the Boolean logic). Otherwise, if the signal value is below the threshold, the signal state is considered low (0 or false). The threshold is used by the pattern and state trigger.

If a protocol option is installed, and the channel is used in the bus, the configured channel threshold is also used in the bus configuration. The values are the same in "Vertical" menu and bus configuration dialogs.

"Technology"      Select a predefined value for one of the most common technologies, or select "User" to define an individual threshold.

"Value"            Set an individual threshold value if "Technology" is set to "User".

Remote command:

[CHANnel<m>:THReshold:TECHnology](#) on page 286

[CHANnel<m>:THReshold:USER](#) on page 287

[CHANnel<m>:THReshold:THReshold?](#) on page 287

[CHANnel<m>:THReshold:FINDlevel](#) on page 288

**RANGE keys**

The vertical RANGE keys set the vertical scale (vertical sensitivity) of the selected waveform.

In FFT mode, the RANGE keys set the scale for the amplitude range (y-axis) in the spectrum display.

In "Counter" mode, the RANGE keys set the measurement range.

Remote command:

[CHANnel<m>:SCALE](#) on page 284

[CHANnel<m>:RANGe](#) on page 284

FFT mode:

[SPECTrum:FREQuency:MAGNitude:SCALE](#) on page 336

Spectrum mode:

[SPECTrum:FREQuency:SCALE](#) on page 341

Counter mode:

[COUNTer<m>:SENSe:RANGe](#) on page 394

**POS keys**

Move the selected signal up or down in the diagram. The position is a graphical setting given in divisions, while the offset sets a voltage.

You can also drag the channel marker on the screen.

Remote command:

[CHANnel<m>:POSition](#) on page 284

Spectrum mode:

[SPECTrum:FREQuency:POSition](#) on page 341

## 2.2.2 Effect of the Bandwidth Filter

Low-pass filters reduce the speed of the signal inside the instrument and cause a delay of the signal on the screen. The delay time depends on the selected filter.

The following table lists the approximate delay of the signal that is caused by various filters.

*Table 2-1: Approximate signal delay dependent on the bandwidth filter*

Filter	Approx. delay	Filter	Approx. delay
200 MHz	30.2 ns	500 kHz	9.07 $\mu$ s
100 MHz	30.7 ns	200 kHz	22.13 $\mu$ s
50 MHz	138.5 ns	100 kHz	43.87 $\mu$ s
20 MHz	145 ns	50 kHz	87.47 $\mu$ s
10 MHz	166.5 ns	20 kHz	218 $\mu$ s
5 MHz	193 ns	10 kHz	434.7 $\mu$ s
2 MHz	270.5 ns	5 kHz	869.3 $\mu$ s
1 MHz	4.71 $\mu$ s	2 kHz	2.173 ms
		1 kHz	4.347 ms

## 2.3 Horizontal Setup

Horizontal settings, also known as timebase settings, adjust the display in horizontal direction.

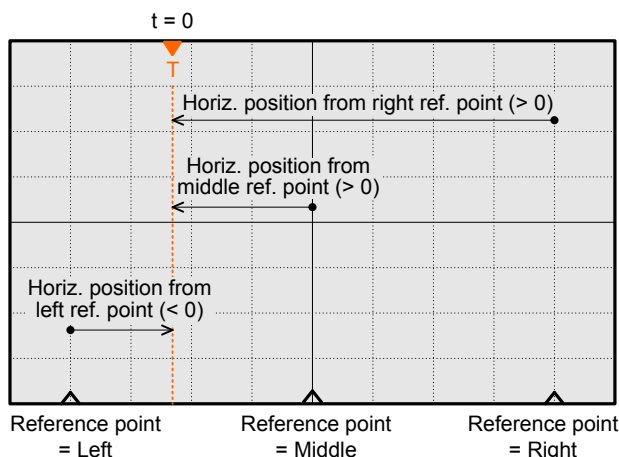


- To set the timebase and horizontal position, use the TIME and POS keys.



- To adjust all horizontal settings, select "Horizontal" in the main menu.

The determining point of an acquisition is the trigger point. Two parameters define the position of the trigger point: reference point and horizontal position (also known as trigger offset or delay). Using these parameters, you choose the part of the waveform you want to see: around the trigger, before, or after the trigger.



**Signal delay**

If you have set a bandwidth limit, the signal might appear delayed on the screen. The delay time depends on the selected filter. The effect is visible if several signals with different limits are displayed.

See also: [Chapter 2.2.2, "Effect of the Bandwidth Filter"](#), on page 42.



**Description of settings**

Time scale	100 ns/div	▼
Horizontal position	400 ns	
Reference point	Middle	▼

**Time Scale**

Sets the time scale of the horizontal axis for all signals, in seconds per division. The value is shown in the top information bar.

Increase the scale to see a longer part of the waveform. Decrease the scale to see the signal in more detail. The scale has a point that remains fixed on the screen when the scale value is changing - the reference point.

To set the time scale, you can also use the TIME keys.

**Note:** In FFT mode, the time scale may be restricted depending on the selected frequency span, (see ["Frequency Span"](#) on page 108).

Remote command:

[TIMEbase:SCALE](#) on page 288

[TIMEbase:RANGe](#) on page 288

**Horizontal Position**

Sets the horizontal position of the trigger point in relation to the reference point. The trigger position is marked by a colored triangle at the top of the diagram.

You can set the trigger point even outside the diagram and analyze the signal some time before or after the trigger. In this case, the trigger marker is shown on the left or right side of the diagram.

To set the horizontal position, you can also use the POS keys.

Remote command:

[TIMebase:HORizontal:POSition](#) on page 288

#### Reference Point

Defines the time reference point in the diagram. You can set the reference point in the middle, or to the right to see the signal before the trigger. If the reference point is on the left, you see the signal after the trigger.

Remote command:

[TIMebase:REFerence](#) on page 289

## 2.4 Acquisition Control

Acquisition settings define the processing of the captured samples in the instrument.



- ▶ To adjust the acquisition settings, press the ACQUIRE key, or select "Acquire" in the main menu.

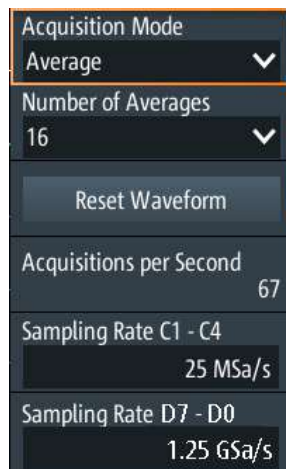


- ▶ To start or stop acquisition, press the RUN STOP key.



The R&S RTH captures the continuous signal and converts it to digital samples. The digital samples are processed according to the acquisition settings. The result is a waveform record that is displayed on the screen and stored in memory.

## ☰ Description of settings



### Acquisition Mode

Defines how the waveform is built from the captured samples. There are two general methods to build the waveform record: sample decimation and waveform arithmetic.

Sample decimation reduces the data stream of the ADC to a stream of waveform points with lower sample rate and a less precise time resolution. The R&S RTH uses decimation, if the waveform "Sampling Rate C1 - C4" is less than the ADC sample rate. The acquisition modes "Sample", "Peak Detect" and "High Resolution" are decimation methods.

Waveform arithmetic builds the resulting waveform from several consecutive acquisitions of the signal. The acquisition modes "Average" and "Envelope" are arithmetic methods.

"Sample"	One of n samples in a sample interval is recorded as waveform point, the other samples are discarded. Usually, most signals are displayed optimally with this acquisition mode but very short glitches might remain undiscovered by this method.
"Peak Detect"	The minimum and the maximum of n samples are recorded as waveform points, the other samples are discarded. Thus the instrument can detect fast signal peaks at slow time scale settings that would be missed with other acquisition modes.
"High Resolution"	The average of n captured sample points is recorded as one waveform point. Averaging reduces the noise, the result is a more precise waveform with higher vertical resolution.
"Average"	The average is calculated from the data of the current acquisition and a number of acquisitions before. The method reduces random noise. It requires a stable, triggered and periodic signal. The number of acquisitions for average calculation is defined with <a href="#">Number of Averages</a> .

"Envelope" The minimum and maximum values in a sample interval over a number of acquisitions are saved. The most extreme values of all acquisitions build the envelope. The resulting diagram shows two envelope waveforms: the minimums (floor) and maximums (roof) representing the borders in which the signal occurs.

Remote command:

[ACQUIRE:MODE](#) on page 290

#### **Number of Averages**

Sets the number of waveforms used to calculate the average waveform.

Remote command:

[ACQUIRE:AVERAGE:COUNT](#) on page 290

#### **Reset Waveform**

Restarts the envelope and average calculation.

Remote command:

[ACQUIRE:ARESET:IMMEDIATE](#) on page 290

#### **Acquisitions per Second**

Shows the number of acquired waveforms per second.

#### **Sampling Rate C1 - C4**

Shows the number of recorded analog waveform points per second. The sample rate is the reciprocal value of the resolution.

Remote command:

[ACQUIRE:POINTS:ARATE?](#) on page 289

#### **Sampling Rate D7 - D0**

Shows the number of recorded digital waveform points per second. Only available if the mixed signal option R&S RTH-B1 is installed, and logic channels are active.

#### **RUN STOP key**

Starts and stops the acquisition.

Remote command:

[RUN](#) on page 289

[STOP](#) on page 290

## 2.5 Trigger

Triggering means to capture the interesting part of the relevant waveforms. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in signals.

A trigger occurs if the trigger conditions are fulfilled. The instrument acquires continuously and keeps the sample points to fill the pretrigger part of the waveform record. When the trigger occurs, the instrument continues acquisition until the posttrigger part

of the waveform record is filled. Then it stops acquiring and displays the waveform. When a trigger is recognized, the instrument does not accept another trigger until the acquisition is complete.

Trigger conditions include:

- Source of the trigger signal (channel)
- Trigger type and its setup, including one or more trigger levels
- Trigger mode

In addition, the horizontal position of the trigger point and the reference point are important to display the interesting part of the signal. See [Chapter 2.3, "Horizontal Setup"](#), on page 42.

The trigger level and position are marked in the grid. The markers have the color of the trigger source. Information on the most important trigger settings is shown in the upper information bar.



**Figure 2-1: Trigger information: width trigger on channel 2, single trigger mode**



- ▶ To adjust all trigger settings, press the SETUP key.
- ▶ To adjust the trigger level, do one of the following:
  - Drag the trigger level marker on the right side of the display to the required position.
  - Press the LEVEL key and turn the wheel.  
If the trigger type has two trigger levels, press the LEVEL key again to toggle the upper and lower levels. Alternatively, press the wheel.
  - Press the SETUP key. Select "Trigger Level", and enter the level value.
- ▶ To start and stop acquisition, press the RUN STOP key.

### 2.5.1 General Trigger Settings

General trigger settings are the settings that are independent of the trigger type. The settings specific for a trigger type are described in the following sections.



### ☰ Description of settings



#### Trigger Mode

The trigger mode determines the behavior of the instrument if no trigger occurs, and also the number of acquired waveforms when a trigger occurs.

- |          |  |
|----------|--|
| "Auto"   | The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. This mode helps to see the waveform even before the trigger is set. Successive waveforms are not triggered at the same point of the waveform. |
| "Normal" | The instrument acquires waveforms continuously, each time when a trigger occurs. If no trigger occurs, no waveform is acquired and the last acquired waveform is displayed. If no waveform was captured before, nothing is displayed.  |
| "Single" | When a trigger occurs, the instrument acquires one waveform and stops the acquisition.   |

Remote command:

[TRIGger:MODE](#) on page 292

#### Trigger Type

Selects the trigger type, the event type that defines the trigger point.

- [Chapter 2.5.2, "Edge Trigger"](#), on page 50
- [Chapter 2.5.3, "Glitch Trigger"](#), on page 51
- [Chapter 2.5.4, "Width Trigger"](#), on page 52
- [Chapter 2.5.5, "Video/TV Trigger"](#), on page 54

R&S RTH-K19 trigger options

- [Chapter 2.5.7, "Pattern Trigger \(R&S RTH-K19\)"](#), on page 59
- [Chapter 2.5.8, "State Trigger \(R&S RTH-K19\)"](#), on page 61
- [Chapter 2.5.9, "Runt Trigger \(R&S RTH-K19\)"](#), on page 62
- [Chapter 2.5.10, "Slew Rate Trigger \(R&S RTH-K19\)"](#), on page 64
- [Chapter 2.5.11, "Data2Clock Trigger \(R&S RTH-K19\)"](#), on page 65

- [Chapter 2.5.12, "Serial Pattern Trigger \(R&S RTH-K19\)", on page 67](#)
- [Chapter 2.5.13, "Timeout Trigger \(R&S RTH-K19\)", on page 70](#)
- [Chapter 2.5.14, "Interval Trigger \(R&S RTH-K19\)", on page 71](#)
- [Chapter 2.5.15, "Window Trigger \(R&S RTH-K19\)", on page 72](#)

Options containing special triggers

- [Chapter 2.5.16, "Protocol Trigger \(R&S RTH-K1, R&S RTH-K2 and R&S RTH-K3\)", on page 73](#)

Remote command:

[TRIGger:TYPE](#) on page 292

### Source

Selects the trigger source, the channel on which the trigger condition is checked. All possible channels are listed. You can trigger on any channel to which a signal is connected, even if the channel is not active.

For most trigger types, analog and digital channels can be used as trigger source. Digital channels require option R&S RTH-B1. For video, runt and slew rate trigger, only analog channels are available.

Remote command:

[TRIGger:SOURce](#) on page 292

### Trigger Level

Sets the trigger voltage level.

For the Video/TV trigger, the trigger level is the threshold of the sync pulse. Make sure that the trigger level crosses the synchronizing pulses of the video signal.

Remote command:

[TRIGger:LEVel<m>:VALue](#) on page 293

### Holdoff Mode

Selects the method to define the holdoff.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.



- "Off" No holdoff
- "Time" Defines the holdoff as a time period. The next trigger occurs only after the ["Time"](#) on page 50 has passed.
- "Events" Defines the holdoff as a number of trigger events. The next trigger only occurs when this number of events is reached. The number of triggers to be skipped is defined in ["Events"](#) on page 50.

"Random" Defines the holdoff as a random time limited by "[Min Time / Max Time](#)" on page 50. For each acquisition, the instrument selects a new random holdoff time from the specified range. Random holdoff prevents synchronization to discover effects invisible with synchronized triggering, e.g. the features of a pulse train.

Remote command:

[TRIGger:HOLDoff:MODE](#) on page 293

#### **Time ← Holdoff Mode**

Sets the time that has to pass at least until the next trigger occurs.

Remote command:

[TRIGger:HOLDoff:TIME](#) on page 294

#### **Events ← Holdoff Mode**

Sets the number of triggers to be skipped until the next trigger occurs.

Remote command:

[TRIGger:HOLDoff:EVENTs](#) on page 294

#### **Min Time / Max Time ← Holdoff Mode**

Set the time limits for random holdoff time. For each acquisition, the instrument selects a new random holdoff time from the specified range.

Remote command:

[TRIGger:HOLDoff:MIN](#) on page 294

[TRIGger:HOLDoff:MAX](#) on page 294

#### **Noise Reject**

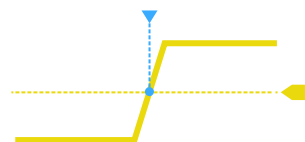
Enables a hysteresis to avoid unwanted trigger events caused by noise oscillation around the trigger level.

Remote command:

[TRIGger:MNR](#) on page 295

## 2.5.2 Edge Trigger

The edge trigger is the most common trigger type. The trigger occurs when the signal from the trigger source passes the trigger level in the specified direction (slope).



### ☰ Description of settings

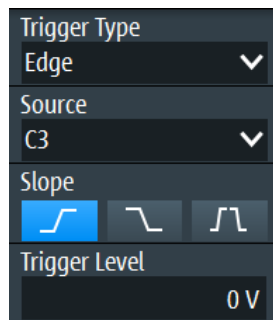





Figure 2-2: Edge trigger

#### Slope

Sets the edge direction for the trigger. You can trigger on:

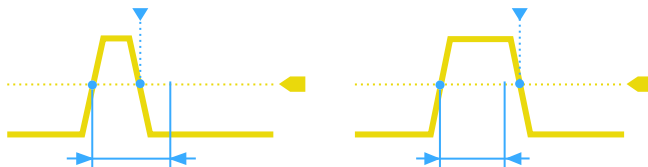
-  rising edge, that is a positive voltage change
-  falling edge, that is a negative voltage change
-  rising and falling edge

Remote command:

[TRIGger:EDGE:SLOPe](#) on page 295

### 2.5.3 Glitch Trigger

The glitch trigger detects pulses shorter or longer than a specified time. It identifies deviation from the nominal data rate and helps to analyze causes of even rare glitches and their effects on other signals.



### Description of settings

Trigger Type	Glitch
Source	C3
Polarity	<input checked="" type="radio"/>  <input type="radio"/>  <input type="radio"/> 
Range	Shorter
Width	4.8 ns
Trigger Level	0 V

#### Polarity

Sets the pulse polarity, that is the direction of the first pulse slope. You can trigger on:

- Positive going pulses. The width is defined from the rising to the falling edge.
- Negative going pulses. The width is defined from the falling to the rising edge.
- Both positive and negative going pulses

Remote command:

[TRIGger:GLITch:POLarity](#) on page 295

#### Range

Selects the glitches to be identified: shorter or longer than the specified "[Width](#)" on page 52.

Remote command:

[TRIGger:GLITch:RANGe](#) on page 296

#### Width

Sets the pulse width of the glitch.

Remote command:

[TRIGger:GLITch:WIDTh](#) on page 296

### 2.5.4 Width Trigger

The width trigger compares the measured pulse width (duration of a pulse) with a given time limit. It detects pulses with an exact pulse width, pulses shorter or longer than a given time, as well as pulses inside or outside the allowable time range. The pulse width is measured at the trigger level.

Using the width trigger, you can define the pulse width more precisely than with the glitch trigger. However, using the range settings "Shorter" and "Longer", you can also trigger on glitches.

### ☰ Description of settings



Figure 2-3: Width trigger

#### Polarity

Sets the pulse polarity, that is the direction of the first pulse slope. You can trigger on:

- Positive going pulses. The width is defined from the rising to the falling edge.
- Negative going pulses. The width is defined from the falling to the rising edge.
- Both positive and negative going pulses

Remote command:

`TRIGger:WIDTH:POLarity` on page 296

#### Range

Defines how the measured pulse width is compared with the given limits.

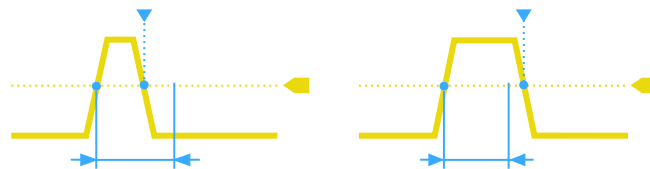


Figure 2-4: Pulse width is shorter or longer than a given width (same as glitch trigger)


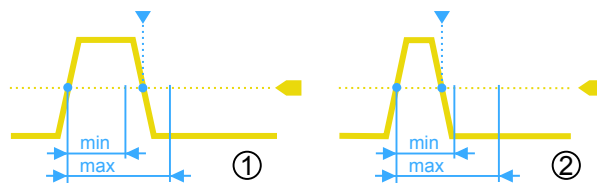


Figure 2-5: Pulse width is inside or outside a range

- 1 = Inside, pulse > min width AND pulse < max width  
 2 = Outside, pulse < min width OR pulse > max width

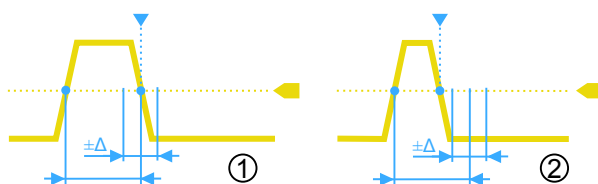

**Figure 2-6: Pulse width is equal or unequal to a given width, with optional tolerance**

- 1 = Equal, pulse > width -  $\Delta$  AND pulse < width +  $\Delta$   
 2 = Unequal, pulse < width -  $\Delta$  OR pulse > width +  $\Delta$

Remote command:

[TRIGger:WIDTH:RANGe](#) on page 296

### Width

Sets the width for comparisons equal, unequal, shorter, and longer.

Remote command:

[TRIGger:WIDTH:WIDTH](#) on page 297

### $\pm$ Tolerance

Sets a range  $\Delta t$  to the specified [Width](#) if the comparison range is equal or unequal. To trigger on an exact pulse width, set the tolerance to 0.

Remote command:

[TRIGger:WIDTH:DELTA](#) on page 297

### Min Width / Max Width

Set the lower and upper time limits defining the time range if "Inside" or "Outside" is set for comparison.

Remote command:

[TRIGger:WIDTH:MIN](#) on page 298

[TRIGger:WIDTH:MAX](#) on page 297

## 2.5.5 Video/TV Trigger

The TV or video trigger is used to analyze analog baseband video signals. You can trigger on baseband video signals from standard definition and high definition standards, and also on user defined signals.

The instrument triggers on the line start - the horizontal sync pulse. You can trigger on all lines, or specify a line number. You can also trigger on the field or frame start.

### 2.5.5.1 Standard TV Trigger Settings

Access: SETUP key > "Trigger Type" = "Video/TV"

Trigger Type	Video/TV	▼
Source	C3	▼
Standard	PAL	▼
Signal Polarity	Positive	▼
Mode	All Fields	▼
Trigger Level	0 V	

### Standard

Selects the TV standard or "Custom" for user-defined signals.

The standards PAL, PAL-M, NTSC and SECAM are available in the instrument firmware. All other standards require the advance trigger option R&S RTH-K19.

HDTV standards are indicated by the number of active lines, the scanning system (p for progressive scanning, i for interlaced scanning) and the frame rate. For interlaced scanning, the field rate is used instead of the frame rate. 1080p/24sF is an HDTV standard using progressive segmented frame scanning.


"Custom" can be used for signals of other video systems, for example, medical displays, video monitors, and security cameras. To trigger on these signals, you have to define the pulse type and length of the sync pulse, the scanning system and the line period.

Remote command:

[TRIGger:TV:STANdard](#) on page 298

### Signal Polarity

Sets the polarity of the signal. Note that the sync pulse has the opposite polarity, for example, a positive signal has a negative sync pulse.

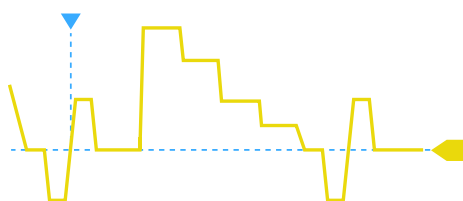

*Figure 2-7: Signal with positive polarity and tri-level sync pulse*

Remote command:

[TRIGger:TV:POLarity](#) on page 299

### Mode

Selects the lines or fields on which the instrument triggers. Available modes depend on the scanning system of the selected standard.



- "All fields" Triggers on the first video line of the frame (progressive scanning) or field (interlaced scanning), for example, to find amplitude differences between the fields.
- "Odd fields / Even fields" Triggers on the first video line of the odd or even field. These modes are available for interlaced scanning (PAL, PAL-M, SECAM, NTSC, 1080i) and progressive segmented frame scanning (1080p/24sF). They can be used, for example, to analyze the components of a video signal.
- "All lines" Triggers on the line start of all video lines, for example, to find maximum video levels.
- "Line number" Triggers on a specified line. Enter the line number in "Line #".

Remote command:

[TRIGger:TV:MODE](#) on page 299

### Line #

Sets the number of the line to be triggered on if "Mode" is set to "Line number". Usually the lines of the frame are counted, beginning from the frame start.

For NTSC signals, the lines are counted per field, not per frame. Therefore, you have to set the "Field" (odd or even), and the line number in the field.


Remote command:

[TRIGger:TV:LINE](#) on page 300

[TRIGger:TV:LFIeld](#) on page 300

### Trigger Level

Sets the trigger level as threshold for the synchronizing pulse. Make sure that the trigger level crosses the synchronizing pulses of the video signal.

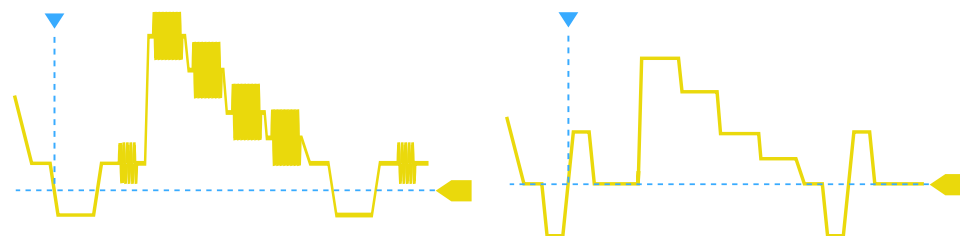

*Figure 2-8: Trigger level with bi-level (left) and tri-level (right) sync pulses*


Remote command:

[TRIGger:LEVel<m>:VALue](#) on page 293

#### 2.5.5.2 Settings for Custom Video Signals (R&S RTH-K19)

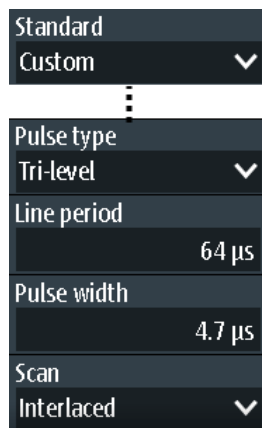In addition to the standard TV trigger settings, triggering on custom video signals requires a few more settings that describe the signal.

- ▶ SETUP key > "Trigger Type" = "Video/TV" > "Standard" = "Custom"



### Pulse Type

Sets the type of the sync pulse, either bi-level sync pulse (used in SDTV signals), or tri-level sync pulse (used in HDTV signals).

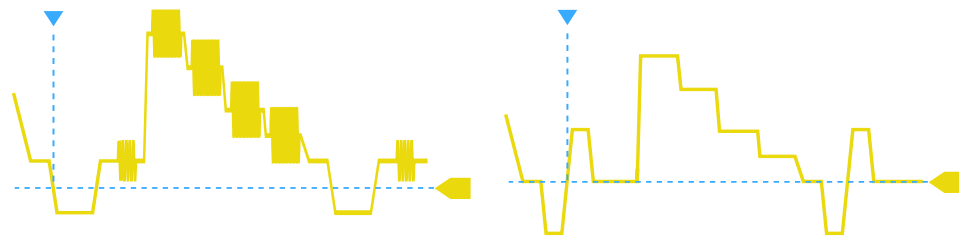


Figure 2-9: Bi-level (left) and tri-level (right) sync pulses


This setting is available for user-defined video signals if "Standard" is set to "Custom".

Remote command:

[TRIGger:TV:CUSTom:STYPe](#) on page 300

### Line Period

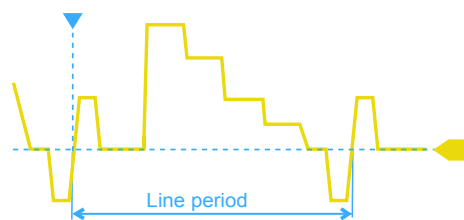Sets the duration of a single video line, the time between two successive sync pulses.




This setting is available for user-defined video signals if "Standard" is set to "Custom".

Remote command:

[TRIGger:TV:CUSTom:LDURation](#) on page 301

### Pulse Width

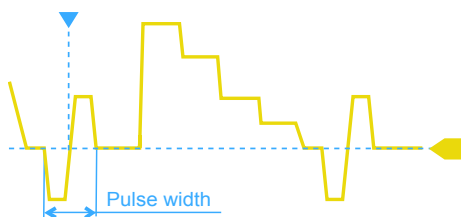Sets the width of the sync pulse.



This setting is available for user-defined video signals if "Standard" is set to "Custom".

Remote command:

[TRIGger:TV:CUSTom:SDURation](#) on page 301

**Scan**

Sets the scanning system.

This setting is available for user-defined video signals if "Standard" is set to "Custom".

- "Interlaced" Interlace scanning uses two fields to create a frame. One field contains all the odd lines (odd, first, or upper field), the other contains all the even lines of the image (even, second, or lower field). First the lines of the odd field are processed, then the lines of the even field.
- "Progressive" Progressive scanning is a method to capture, transmit and display all lines of a frame in sequence.
- "Segmented" Progressive segmented frame uses progressive scanning to capture the frame, and interlaced scanning for transmission and display.

Remote command:

[TRIGger:TV:CUSTom:SCANmode](#) on page 301

**2.5.6 External Trigger (R&S RTH1002)**

The R&S RTH1002 has an edge trigger to trigger on an external signal.

1. Connect the external trigger signal to the DMM input:
  - a) Ground to black COM input.
  - b) Signal to red input.
2. Press the SETUP key.
3. Select "Trigger Type" = "External"

 **Description of settings**



**Slope**

Sets the edge direction for the trigger. You can trigger on the rising edge, the falling edge, or rising and falling edges of the external signal.

Remote command:

`TRIGger:EXTernal:SLOPe` on page 302

**Trigger Level**

Sets the trigger voltage level.

Remote command:

`TRIGger:EXTernal:LEVel` on page 301

**2.5.7 Pattern Trigger (R&S RTH-K19)**

The pattern trigger works like a logic trigger. It provides logical combinations of the input channels and can be used for verifying the operation of digital logic. If the channel states match the desired pattern, the pattern trigger occurs. In addition to the pattern, you can define a timing condition. In this case, the trigger occurs if the pattern definition is true for the defined time.

The pattern trigger has no trigger level, only threshold values to obtain the logic state of signals are required.

- ▶ SETUP key > "Trigger Type" = "Pattern"

**Description of settings**

*Figure 2-10: Pattern trigger*

**Set Pattern**

Defines the pattern: the states of the input channels and their logical combination. If R&S RTH-B1 is installed, active digital channels are also included in the pattern definition.

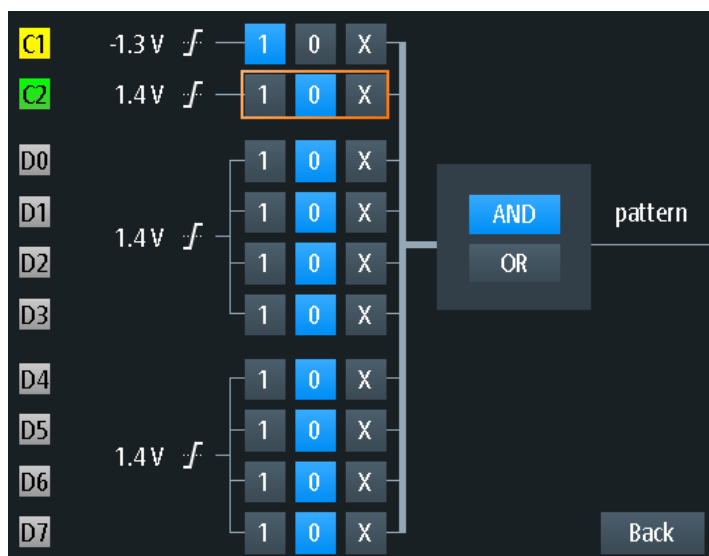


Figure 2-11: Pattern definition

The current threshold is displayed for each channel. For analog channels, the threshold is set in the "Vertical" menu > "Technology". For logic channels, the threshold is set in the "Logic" menu. To adjust the thresholds by the instrument, use "Find Level".

The switches define the state of each channel and set the logical combination:

- "1"                    The signal value is above the defined threshold.
- "0"                    The signal value is below the defined threshold.
- "X"                    The signal state does not matter.
- "AND"                 If all defined states are true, the logical result of the pattern definition is 1 (true).
- "OR"                    If at least one of the defined states is true, the logical result of the pattern definition is 1 (true).

Remote command:

[TRIGger:PATtern:STATe\[:CHANnel<m>\]](#) on page 302

[TRIGger:PATtern:STATe:COMBination](#) on page 302

### Range

Adds additional time limitation to the defined pattern.

- "None"                 No time limit is set. If the defined pattern is true, the pattern trigger occurs.
- "Timeout"             Defines a minimum time during which the signals match the pattern definition.
- "Longer"               If the pattern is true longer than the "Pattern Width" time, the trigger occurs.
- "Shorter"              If the pattern is true for a time shorter than "Pattern Width", the trigger occurs.
- "Equal"                If the pattern is true for the time "*Pattern Width*"  $\pm \Delta t$  ("*Tolerance*"), the trigger occurs.

"Unequal"	If the pattern is true for a time shorter than " <i>Pattern Width</i> " - $\Delta t$ OR longer than " <i>Pattern Width</i> " + $\Delta t$ , the trigger occurs.
"Inside"	If the pattern is true for a time between "Min Pattern Width" and "Max Pattern Width", the trigger occurs.
"Outside"	If the pattern is true for a time shorter than "Min Pattern Width" OR longer than "Max Pattern Width", the trigger occurs.

Remote command:

[TRIGger:PATtern:WIDTh:RANGe](#) on page 303

[TRIGger:PATtern:TImeout\[:TIME\]](#) on page 303

[TRIGger:PATtern:WIDTh\[:WIDTh\]](#) on page 303

[TRIGger:PATtern:WIDTh:DELTA](#) on page 304

[TRIGger:PATtern:WIDTh:MINwidth](#) on page 304

[TRIGger:PATtern:WIDTh:MAXwidth](#) on page 304

## 2.5.8 State Trigger (R&S RTH-K19)

The state trigger verifies if the channel states match the defined pattern at the clock edge. The trigger occurs if the logical combination of the input channels is true at the crossing point of the selected clock edge and the trigger level.

- ▶ SETUP key > "Trigger Type" = "State"



### Description of settings

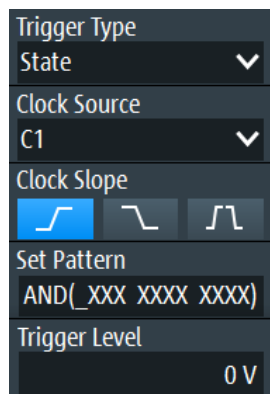


Figure 2-12: State trigger

#### Clock Source

Selects the input channel of the clock signal.

Remote command:

[TRIGger:STATe:CSourCe\[:VALue\]](#) on page 305

#### Clock Slope

Sets the edge of the clock at which the instrument checks the signal states: at the rising edge, the falling edge, or at both edges.

Remote command:

`TRIGger:STATe:CSourCe:EDGE` on page 305

**Set Pattern**

Defines the pattern: the states of the input channels and their logical combination. If R&S RTH-B1 is installed, active digital channels are also included in the pattern definition.

For details, see [Chapter 2.5.7, "Pattern Trigger \(R&S RTH-K19\)"](#), on page 59.

Remote command:

`TRIGger:STATe:CHANnel<m>` on page 305

`TRIGger:STATe:COMBination` on page 305

**2.5.9 Runt Trigger (R&S RTH-K19)**

A runt is a pulse lower than normal in amplitude. The amplitude crosses the first level twice in succession without crossing the second one. In addition to the upper and lower levels, you can define a time limit for the runt in the same way as for width triggers. For example, the runt trigger can detect signal parts remaining below a specified threshold amplitude because I/O ports are in undefined state.

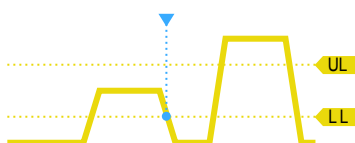


Figure 2-13: Runt trigger without time limits

- ▶ SETUP key > "Trigger Type" = "Runt"

**Description of settings**

Trigger Type	Runt		
Source	C1		
Polarity	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>		
Range	Longer	Equal	Inside
Upper Trigger Level	Runt Width	Runt Width	Min Runt Width
0 V	4.8 ns	4.8 ns	4 ns
Lower Trigger Level	Upper Trigger Level	±Tolerance	Max Runt Width
0 V	0 V	800 ps	5.6 ns
	Lower Trigger Level	Upper Trigger Level	Upper Trigger Level
	0 V	0 V	0 V
		Lower Trigger Level	Lower Trigger Level
		0 V	0 V

**Upper Trigger Level / Lower Trigger Level**

Set the upper and lower voltage thresholds for the runt trigger. The levels define the minimum and maximum runt amplitudes.

You can also press the LEVEL key to toggle the upper and lower levels, and turn the wheel to adjust the focused level. If the focus is on a trigger level, pressing the wheel also toggles the levels.

Remote command:

[TRIGger:LEVel<m>:RUNT:UPPer](#) on page 306

[TRIGger:LEVel<m>:RUNT:LOWer](#) on page 306

**Polarity**

Sets the pulse polarity, that is the direction of the first pulse slope. You can trigger on:

- Positive going pulses. The width is defined from the rising to the falling edge.
- Negative going pulses. The width is defined from the falling to the rising edge.
- Both positive and negative going pulses

Remote command:

[TRIGger:RUNT:POLarity](#) on page 306

**Range**

Defines an additional time limit of the runt pulse.

"Any runt" triggers on all runts fulfilling the level condition, without time limitation. The other comparisons are the same as for the width trigger, see "[Range](#)" on page 53.

Remote command:

[TRIGger:RUNT:RANGe](#) on page 306

**Runt Width**

Sets the width for comparisons equal, unequal, shorter, and longer.

Remote command:

[TRIGger:RUNT:WIDTh](#) on page 307

**±Tolerance**

Sets a tolerance range  $\Delta t$  to the specified [Runt Width](#) if the comparison range is equal or unequal.

Remote command:

[TRIGger:RUNT:DELTA](#) on page 307

**Min Runt Width / Max Runt Width**

Set the lower and upper time limits if "Inside" or "Outside" is set for comparison.

Remote command:

[TRIGger:RUNT:MINWidth](#) on page 307

[TRIGger:RUNT:MAXWidth](#) on page 308



### 2.5.10 Slew Rate Trigger (R&S RTH-K19)

The slew rate trigger is also known as transition trigger. It triggers if the transition time from the lower to higher voltage level (or vice versa) is shorter or longer as defined, or outside or inside a specified time range.

The slew rate trigger finds slew rates faster than expected or permissible to avoid overshooting and other interfering effects. It also detects slow edges violating the timing in pulse series.

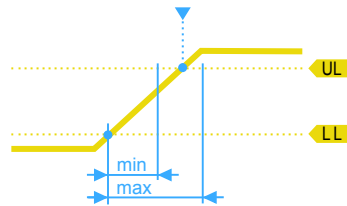


Figure 2-14: Slew rate trigger, transition time inside a range ( $t > \text{min time AND } t < \text{max time}$ )

- ▶ SETUP key > "Trigger Type" = "Slew rate"

As source, only analog channels are available.



#### Description of settings

Trigger Type	Slew Rate	
Source	C1	
Slope		
Range	Shorter	Range
Time	4.8 ns	Equal
Upper Trigger Level	0 V	Time
Lower Trigger Level	0 V	4.8 ns
		±Tolerance
		800 ps
		Upper Trigger Level
		0 V
		Lower Trigger Level
		0 V
		Range
		Inside
		Min Time
		4 ns
		Max Time
		5.6 ns
		Upper Trigger Level
		0 V
		Lower Trigger Level
		0 V

#### Upper Trigger Level / Lower Trigger Level

Set the upper and lower voltage thresholds for the slew rate trigger. The time measurement starts when the signal crosses the first trigger level, and stops when the signal crosses the second level. The first trigger level is the upper or lower level depending on the selected slope.




Remote command:

`TRIGger:LEVel<m>:SLEW:UPPer` on page 308

`TRIGger:LEVel<m>:SLEW:LOWer` on page 308

### Slope

Sets the edge direction for the trigger. You can trigger on:

-  rising edge, that is a positive voltage change
-  falling edge, that is a negative voltage change
-  rising and falling edge

Remote command:

`TRIGger:SLEW:SLOPe` on page 308

### Range

Defines the time limits of the slew rate. The comparisons are the same as for the width trigger, see "Range" on page 53.

Remote command:

`TRIGger:SLEW:RANGe` on page 308

### Time

Sets the slew rate for comparisons equal, unequal, shorter, and longer.

Remote command:

`TRIGger:SLEW:RATE` on page 309

### ±Tolerance

Sets a tolerance range  $\Delta t$  to the specified Time if the comparison range is equal or unequal.

Remote command:

`TRIGger:SLEW:DELTA` on page 309

### Min Time / Max Time

Set the lower and upper time limits if "Inside" or "Outside" is set for comparison.

Remote command:

`TRIGger:SLEW:MINwidth` on page 309

`TRIGger:SLEW:MAXwidth` on page 310

## 2.5.11 Data2Clock Trigger (R&S RTH-K19)

With the Data2Clock trigger - also known as setup/hold trigger - you can analyze the relative timing between two signals: a data signal and the synchronous clock signal. Many systems require, that the data signal must be steady for some time before and after the clock edge, for example, the data transmission on parallel interfaces.

The reference point for the time measurement is defined by clock level and clock edge.

- ▶ SETUP key > "Trigger Type" = "Data2Clk"

### Description of settings

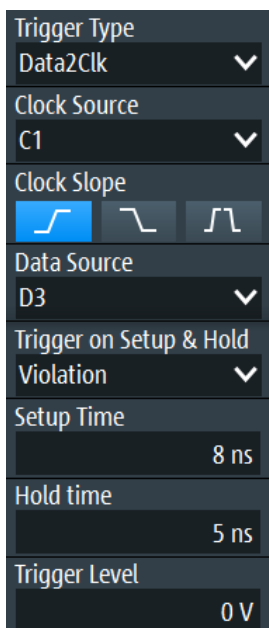


Figure 2-15: Data2Clock trigger

#### Clock Source

Selects the input channel of the clock signal.

Remote command:

[TRIGger:DATatoclock:CSource\[:VALue\]](#) on page 310

#### Clock Slope

Sets the edge of the clock signal: rising, falling, or both edges. The time reference point for the setup and hold time is the crossing point of the clock edge and the trigger level.

Remote command:

[TRIGger:DATatoclock:CSource:EDGE](#) on page 310

#### Data Source

Selects the input channel of the data signal.

Remote command:

[TRIGger:DATatoclock:DSource\[:VALue\]](#) on page 310

#### Trigger on Setup & Hold

Selects how a violation of the setup and hold time is handled.

"Violation" Triggers on a violation of the setup or hold time

"OK" Triggers if setup and hold time keep the limits.

Remote command:

[TRIGger:DATatoclock:CONDition](#) on page 310

**Setup Time**

Sets the minimum time before the clock edge while the data signal must stay steady.

The setup time can be negative. In this case, the hold time is always positive. If you set a negative setup time, the hold time is adjusted by the instrument.

Remote command:

`TRIGger:DATatoclock:STIME` on page 311

**Hold Time**

Sets the minimum time after the clock edge while the data signal must stay steady.

The hold time can be negative. In this case, the setup time is always positive. If you set a negative hold time, the setup time is adjusted by the instrument.

Remote command:

`TRIGger:DATatoclock:HTIME` on page 311

## 2.5.12 Serial Pattern Trigger (R&S RTH-K19)

The serial pattern event is used to trigger on signals with serial data patterns in relation to a clock signal - for example, on bus signals like the I<sup>2</sup>C bus. The trigger occurs during the reception of the last bit of the defined pattern.

### 2.5.12.1 Pattern Definition

The pattern defines the bits of the serial data to be found in the data stream.



The pattern definition described here is for the serial pattern trigger; however, a very similar pattern editor is available for other functions, such as protocol-specific triggers.

---

When you tap the pattern field, a pattern editor is displayed. The current bit definition in binary and hexadecimal format is displayed at the top of the editor, a virtual keypad is displayed beneath it. To define a bit, select the bit in the displayed pattern, then select the bit value from the displayed keypad. The currently selected bit is indicated by a blue background.



Figure 2-16: Pattern editor for 14-bit pattern in hexadecimal format

The maximum length of the pattern is 32 bit, however you can reduce the number of bits. The available bits are initially indicated by 'X', while the unused bits are indicated by gray squares. An 'X' indicates that the logical level for the bit is not relevant (do not care). Once you enter a value for the selected bit, the 'X' is overwritten.

You can enter the pattern in binary or hexadecimal format. Depending on which bit you select in the pattern display, binary or hexadecimal format is automatically selected for input. In binary format, each bit is defined individually, and only the digits 0 and 1 are available for input. In hexadecimal format, 4 bits are defined at the same time by the selected hexadecimal value. If fewer than 4 bits are available (due to the total number of bits), only those hexadecimal values are available that can be defined with the remaining number of bits. For example, for a total number of 14 bits, 3x4 bits can be defined by any hexadecimal value. The remaining 2 bits can define a 0, 1, 2, or 3 (as shown in [Figure 2-16](#)).

To store the defined pattern, select "Enter". The pattern editor is closed and the pattern is inserted in the pattern settings field.

### 2.5.12.2 Serial Pattern Trigger Settings

**Access:** (Trigger) SETUP key > "Trigger Type" = "Serial Pattern"

 Description of settings



Figure 2-17: Serial pattern trigger

Clock Source..... 69  
 Clock Slope..... 69  
 Data Source..... 69  
 Set Serial Pattern..... 69  
 Bit Order..... 70

**Clock Source**




Selects the input channel of the clock signal.

Remote command:

[TRIGger:SPATtern:CSourcE\[:VALue\]](#) on page 312

**Clock Slope**

Sets the edge at which the data value is sampled.

-  rising edge
-  falling edge
-  rising and falling edges are considered (double data rate).

At double data rate, "First Clock Edge of Pattern" defines the edge at which the first bit of the pattern is sampled: at the rising clock edge, falling clock edge, or the first edge that is detected ("Either").

Remote command:

[TRIGger:SPATtern:CSourcE:EDGE](#) on page 312

[TRIGger:SPATtern:CSourcE:FIRStedge](#) on page 312

**Data Source**

Selects the input channel of the data signal.

Remote command:

[TRIGger:SPATtern:DSourcE\[:VALue\]](#) on page 311

**Set Serial Pattern**

The pattern defines the bits of the serial data to be found in the data stream.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:SPATtern:PATtern](#) on page 312

#### Bit Order

Defines if the data words start with MSB (most significant bit) or LSB (least significant bit).

Remote command:


[TRIGger:SPATtern:ORDer](#) on page 312

### 2.5.13 Timeout Trigger (R&S RTH-K19)

The timeout trigger checks if the signal stays above or below the trigger level for a specified time lapse. In other words, the trigger occurs if the signal does not cross the trigger level during the specified time.

- ▶ SETUP key > "Trigger Type" = "Timeout"

#### Description of settings

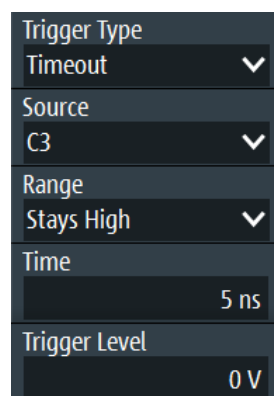

*Figure 2-18: Timeout trigger*

#### Range

Selects the relation of the signal level to the trigger level:

- "Stays High" The signal level stays above the trigger level.
- "Stays Low" The signal level stays below the trigger level.
- "High or Low" The signal level stays above or below the trigger level.

Remote command:

[TRIGger:TIMEout:RANGe](#) on page 313

#### Time

Defines the time limit for the timeout at which the instrument triggers.

Remote command:

[TRIGger:TIMEout:TIME](#) on page 313

### 2.5.14 Interval Trigger (R&S RTH-K19)

The interval trigger analyzes the time between two pulses.

- ▶ SETUP key > "Trigger Type" = "Interval"

#### Description of settings

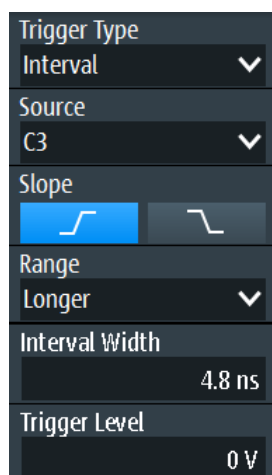


Figure 2-19: Interval trigger

#### Slope

Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Remote command:

[TRIGger:INTerval:SLOPe](#) on page 313

#### Range

Defines how the time range of an interval is defined. The comparisons are the same as for the width trigger, see "[Range](#)" on page 53.

Remote command:

[TRIGger:INTerval:RANGe](#) on page 314

#### Interval Width

Sets the time between two pulses for comparisons equal, unequal, shorter, and longer.

Remote command:

[TRIGger:INTerval:WIDTh](#) on page 314

#### ±Tolerance

Sets a tolerance range  $\Delta t$  to the specified [Interval Width](#) if the comparison range is equal or unequal.

Remote command:

[TRIGger:INTerval:DELTA](#) on page 314



**Min Interval Width / Max Interval Width**

Set the lower and upper time limits of the interval if "Inside" or "Outside" is set for comparison.

Remote command:

[TRIGger:INTerval:MINWidth](#) on page 314

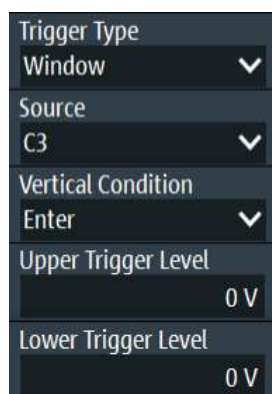
[TRIGger:INTerval:MAXWidth](#) on page 315

**2.5.15 Window Trigger (R&S RTH-K19)**

The window trigger checks the signal run in relation to a "window" that is formed by the upper and lower voltage levels. The trigger occurs, if the waveform enters or leaves the window, or if the waveform stays inside or outside for a defined time range.

With the window trigger, you can display longer transient effects.

- ▶ SETUP key > "Trigger Type" = "Window"

 **Description of settings**


*Figure 2-20: Window trigger*

**Vertical Condition**

Selects how the signal run is compared with the window:

- |                |  |
|----------------|--|
| "Enter"        | Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.  |
| "Exit"         | Triggers when the signal leaves the window.  |
| "Stay Inside"  | Triggers if the signal stays between the upper and lower level for a specified time. The time is defined in various ways by the "Range" conditions.              |
| "Stay Outside" | Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is defined in various ways by the "Range" conditions. |

Remote command:

[TRIGger:WINDow:RANGe](#) on page 316

**Upper Trigger Level / Lower Trigger Level**

Set the upper and lower voltage thresholds for the window trigger. The trigger levels are the vertical window limits.

Remote command:

[TRIGger:LEVel<m>:WINDow:UPPer](#) on page 315

[TRIGger:LEVel<m>:WINDow:LOWer](#) on page 315

**Range**

Selects how the time limit of the window is defined. Time conditioning is available for the vertical conditions "Stay Inside" and "Stay Outside".

"Longer"	Triggers if the signal crosses the upper or lower level after the specified "Width" time is reached.
"Shorter"	Triggers if the signal crosses the upper or lower level before the specified "Width" time is reached.
"Equal"	Triggers if the signal stays inside or outside the vertical window limits for the time "Width" "±Tolerance".
"Unequal"	Triggers if the signal stays inside or outside the vertical window limits for a time unequal to "Width" "±Tolerance"
"Inside"	Triggers if the signal stays inside or outside the vertical window limits at least for the time "Min Width" and for "Max Width" at the most.
"Outside"	"Outside" is the opposite definition of "Inside". The trigger occurs if the signal stays inside or outside the vertical window limits for a time shorter than "Min Width" or longer than "Max Width".

Remote command:

[TRIGger:WINDow:TIME](#) on page 315

[TRIGger:WINDow:WIDTH](#) on page 316

[TRIGger:WINDow:DELTA](#) on page 317

[TRIGger:WINDow:MINWidth](#) on page 317

[TRIGger:WINDow:MAXWidth](#) on page 317

**2.5.16 Protocol Trigger (R&S RTH-K1, R&S RTH-K2 and R&S RTH-K3)**

The protocol trigger requires at least one of the serial protocol options.

For protocol setup and trigger settings, see:

- [Chapter 8.2.3, "I2C Trigger Settings"](#), on page 174
- [Chapter 8.3.3, "SPI Trigger Settings"](#), on page 182
- [Chapter 8.4.3, "UART Trigger Settings"](#), on page 188
- [Chapter 8.5.2, "CAN Trigger Settings"](#), on page 194
- [Chapter 8.6.3, "LIN Trigger Settings"](#), on page 206

## 3 Waveform Analysis

### 3.1 Zoom

The zoom magnifies a part of the waveform in order to view more details with a maximum zoom factor of 100.




**To activate the zoom:**

- ▶ Press the ZOOM key.

The zoom is applied to all active analog and digital channels and math waveforms. The waveforms are displayed with a shorter time scale while the vertical scale remains unchanged. The zoom indicator on the bottom shows the size and position of the zoom area in the waveform.

**To adjust the zoom using the wheel:**

1. Check if the zoom has the focus - an orange frame on the zoom indicator. If not, press the ZOOM key.

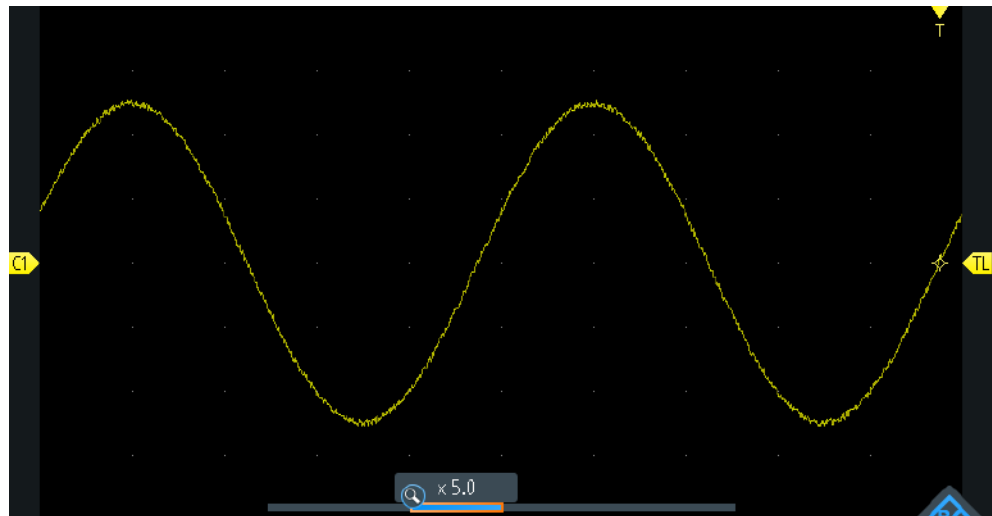

*Figure 3-1: Zoomed waveform and zoom indicator with focus on zoom factor*



*Figure 3-2: Zoom indicator with focus on zoom position*

2. Turn the wheel.  
Depending on the focus, the position of the zoom area or the zoom factor is adjusted.
3. Press the wheel to toggle the setting.

4. Turn the wheel to adjust the other parameter.

#### To position the zoom on the touchscreen:

- ▶ Use one of these methods:
  - Drag the zoom area in the zoom indicator.
  - Drag the trigger position marker.
    - In zoom mode, moving the trigger position marker changes the zoom position and not the horizontal position of the waveform.

#### To zoom in and out using pinching & spreading gestures

You can zoom in and out as you do on a mobile phone or tablet.

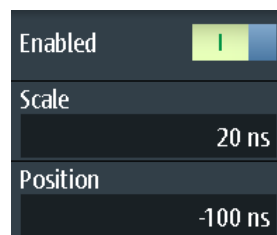
1. To zoom in, touch the screen with two fingers and spread the fingers.
2. To zoom out, touch the screen with two fingers and pinch them together.

#### To adjust the zoom numerically in the Zoom menu:

1. Press and hold the ZOOM key until the "Zoom" menu opens.
2. Adjust scale and position of the zoom in the menu.

To analyze the zoomed signal, you can use cursor measurements.

#### Description of settings



##### Enabled

Enables or disables the zoom.

Remote command:

[ZOOM:ENABLe](#) on page 317

##### Scale

Sets the time scale of the zoomed waveform.

$$Timebase_{zoom} = Timebase_{wfm} / Zoom\ factor$$

Remote command:

[ZOOM:SCALE](#) on page 318

##### Position

Sets the center position of the zoomed area in relation to the trigger point.

**Note:** The zoom overview also considers the horizontal position of the trigger point. If the horizontal position is  $\neq 0$  and thus the trigger point is not in the middle, the zoom area in the overview is also shifted, even if the zoom position is 0.

Remote command:

`ZOOM:POSition` on page 318

## 3.2 Automatic Measurements

You can perform up to four different measurements simultaneously.

### 3.2.1 Performing Automatic Measurements

#### To start and stop the last configured measurements

- ▶ Press the MEAS key.

#### To configure automatic measurements in the Meas menu

1. Press and hold the MEAS key until the "Meas" menu opens.
2. Select the number of the measurement that you want to configure.
3. If the measurement is disabled, enable "State".
4. Select the "Type".  
The selection list shows all available measurement types.
5. Select the "Source".  
The selection list shows all active sources that are allowed for the selected measurement type.
6. Some measurement types require additional settings. Scroll down the menu and adjust the additional settings if necessary.

### 3.2.2 Measurement Results

The measurement results are shown on the left-top side of the screen.

C1	T = 100.1 ns	C2	Mean = 2.876 $\mu$ V
C3	RMS = 35.37 mV	C4	Dty+ = 50.00 %

*Figure 3-3: Results of 4 active measurements*

If a result cannot be determined, "---" is displayed. Adjust the horizontal and vertical settings if the instrument cannot measure.

If the measurement result is outside the measurement range and clipping occurs, the results are marked with < (underflow) or > (overflow). Adjust the vertical scale to get valid results.

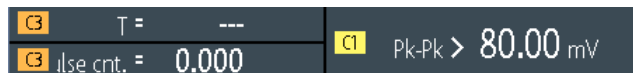


Figure 3-4: Invalid measurement results

Meas1 = period measurement on C3, no complete period detected  
 Meas2 = peak to peak measurement on C1, waveform is clipped  
 Meas3 = pulse count on C3, no pulse detected

Remote commands:

- [MEASurement<m>:RESult:ACTual?](#) on page 320
- [MEASurement<m>:RESult:LIMit?](#) on page 320







### 3.2.3 Measurement Types

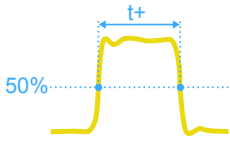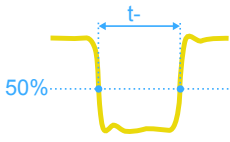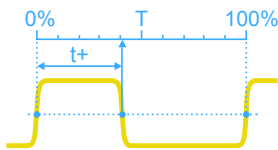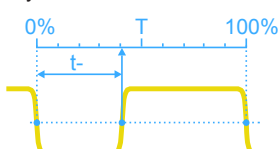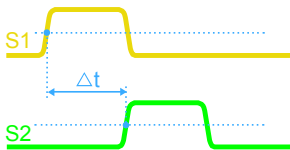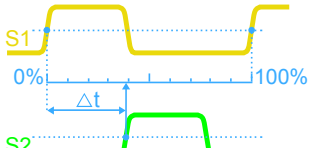The R&S RTH provides 35 measurement types to measure time, amplitude and power characteristics, and to count pulses and edges.

All measurement types that require only one source are also available for gated measurements using CURSOR > "Type" = "Measure".

#### 3.2.3.1 Time Measurements

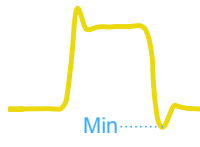
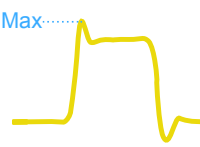
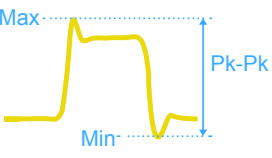
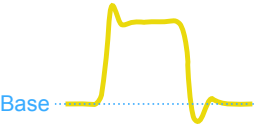
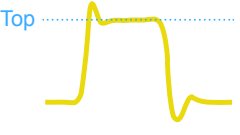

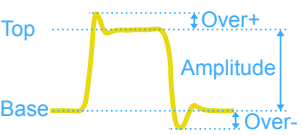
Meas. type	Symbol	Description	Graphic / formula	Source
Period	T in s	Time of the first period, measured on the 50% level. The measurement requires at least one complete period of the signal.	A square wave signal is shown. A horizontal double-headed arrow labeled 'T' spans one full cycle of the signal. A dashed horizontal line is drawn at the 50% level of the signal's amplitude.	Analog, math, reference, logic
Frequency	f in Hz	Frequency of the signal, reciprocal value of the measured first period.	A square wave signal is shown. A horizontal double-headed arrow labeled 'f = 1 / T' spans one full cycle of the signal. A dashed horizontal line is drawn at the 50% level of the signal's amplitude.	Analog, math, reference, logic
Rise time	tR in s	Rise time of the first rising edge. This is the time it takes the signal to rise from the 10% level to the 90% level.	A rising edge of a signal is shown. A horizontal double-headed arrow labeled 'Rise' indicates the time interval between the 10% and 90% amplitude levels. Dashed lines indicate these levels on the signal's curve.	Analog, math, reference
Fall time	tF in s	Fall time of the first falling edge. This is the time it takes the signal to fall from the 90% level to the 10% level.	A falling edge of a signal is shown. A horizontal double-headed arrow labeled 'Fall' indicates the time interval between the 90% and 10% amplitude levels. Dashed lines indicate these levels on the signal's curve.	Analog, math, reference

Meas. type	Symbol	Description	Graphic / formula	Source
Positive pulse width	t+ in s	Duration of the first positive pulse: time between a rising edge and the following falling edge measured on the 50% level.		Analog, math, reference, logic
Negative pulse width	t- in s	Duration of the first negative pulse: time between a falling edge and the following rising edge measured on the 50% level.		Analog, math, reference, logic
Positive duty cycle	Dty+ in %	Width of the first positive pulse in relation to the period in %. The measurement requires at least one complete period of the signal.	Dty+ = t+ / T * 100% 	Analog, math, reference, logic
Negative duty cycle	Dty- in %	Width of the first negative pulse in relation to the period in %. The measurement requires at least one complete period of the signal.	Dty- = t- / T * 100% 	Analog, math, reference, logic
Delay	Δt in s	Time difference between two slopes of the same or different waveforms, measured on the 50% level. Not available for cursor measurements		2 sources: analog, math, reference, logic
Phase	∠ in °	Phase difference between two waveforms, measured on the 50% level. Not available for cursor measurements	Phase = Δt / T * 360° 	2 sources: analog, math, reference, logic





### 3.2.3.2 Amplitude Measurements

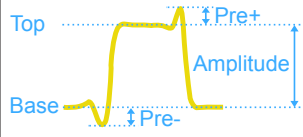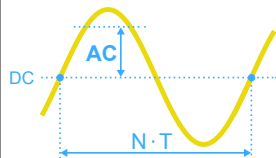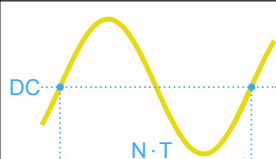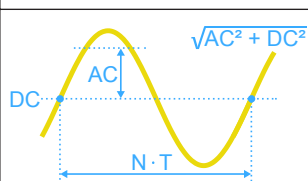The unit of most amplitude measurement results depends on the measured source.





Meas. type	Symbol	Description	Graphic / formula	Source
Mean value	Mean	Arithmetic average of the complete displayed waveform.	$\text{Mean} = \frac{1}{N} \sum_{k=1}^N x_k$	analog, math, reference, logic
RMS value	RMS	RMS (Root Mean Square) value of the voltage of the complete displayed waveform.	$\text{RMS} = \sqrt{\frac{1}{N} \sum_{k=1}^N x_k^2}$	analog, math, reference

Meas. type	Symbol	Description	Graphic / formula	Source
Crest factor	Crest	The crest factor is also known as peak-to-average ratio. It is the maximum value divided by the RMS value of the displayed waveform.	$\text{Crest} = \frac{\text{Max}  x_k }{\text{RMS}}$	analog, math, reference
Standard deviation	$\sigma$	Standard deviation of the displayed waveform.	$\sigma = \sqrt{\frac{1}{N-1} \sum_{k=1}^N (x_k - \text{Mean})^2}$	analog, math, reference
Minimum	Min	Minimum value within the displayed waveform.		analog, math, reference
Maximum	Max	Maximum value within the displayed waveform.		analog, math, reference
Peak to peak	Pk-Pk	Difference of maximum and minimum values.		analog, math, reference
Base level	Base	Low level of the displayed waveform - the lower maximum of the sample distribution. The measurement requires at least one complete period of the signal.		analog, math, reference
Top level	Top	High level of the displayed waveform - the upper maximum of the sample distribution. The measurement requires at least one complete period of the signal.		analog, math, reference
Amplitude	Amp	Difference between the top level and the base level of the signal. The measurement requires at least one complete period of the signal.		analog, math, reference
Overshoot	Over in %	Overshoot of a square wave <i>after</i> a rising or falling edge. It is calculated from measurement values top level, base level, local maximum, local minimum, and amplitude.	$\text{Over}+ = \frac{\text{Max}_{\text{local}} - \text{Top}}{\text{Amplitude}} \cdot 100\%$ $\text{Over}- = \frac{\text{Base} - \text{Min}_{\text{local}}}{\text{Amplitude}} \cdot 100\%$ 	analog, math, reference



Meas. type	Symbol	Description	Graphic / formula	Source
Preshoot	Pre in %	Overshoot of a square wave <i>before</i> a rising or falling edge.	Same equations as overshoot 	analog, math, reference
AC	AC in V	RMS value of the AC part of a periodic signal, calculated over all periods on the display. The AC result is derived from the DC and AC+DC results.		analog, math, reference
DC	DC in V	Mean value of a periodic signal, calculated over all periods on the display. If no complete period is available, only the mean value of the visible waveform is calculated.		analog, math, reference
AC+DC	AC+DC in V	RMS value of a periodic signal, calculated over all periods on the display. If no complete period is available, only the RMS value of the visible waveform is calculated.		analog, math, reference

### 3.2.3.3 Counting

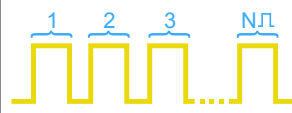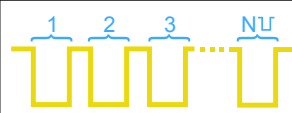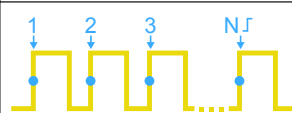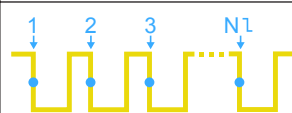Meas. type	Symbol	Description	Graphic / formula	Sources
Positive pulse count	Cnt+	Number of positive pulses on the display. The mean value of the signal is determined. If the signal passes the mean value, an edge is counted. A positive pulse is counted if a rising edge and a following falling edge are detected.		Analog, math, reference, logic
Negative pulse count	Cnt-	Number of negative pulses on the display. The mean value of the signal is determined. If the signal passes the mean value, an edge is counted. A negative pulse is counted if a falling edge and a following rising edge are detected.		Analog, math, reference, logic
Rising edge count	Cnt↑	Number of rising edges on the display. The instrument determines the mean value of the signal and counts an edge every time the signal passes the mean value in the specified direction.		Analog, math, reference, logic
Falling edge count	Cnt↓	Number of falling edges on the display. The instrument determines the mean value of the signal and counts an edge every time the signal passes the mean value in the specified direction.		Analog, math, reference, logic


### 3.2.3.4 Power Measurements

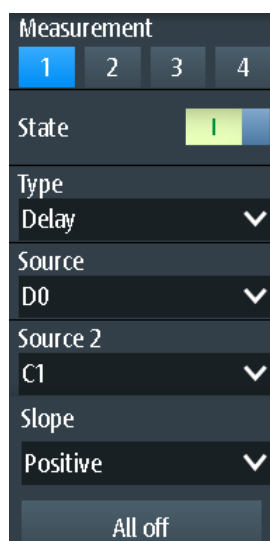Power measurements require two sources, one voltage source and one current source. They are not available for cursor measurements and logic channel sources.

Meas. type	Symbol	Description	Graphic / formula	Sources
Active power	P in W	Active or real power is the energy of the system that can be used to do work.		2 sources: analog, math, reference
Apparent power	S in VA	Complex power S is the magnitude of the vector sum of real and reactive power.		2 sources: analog, math, reference
Reactive power	Q in var	Reactive power is temporally stored in a system because of the inductive and capacitive elements.		2 sources: analog, math, reference
Power factor	PF (no unit)	Power factor is a measure of the system efficiency. The value varies between -1 and 1.	PF = cos(phi) 	2 sources: analog, math, reference

### 3.2.4 Measurement Settings

Access: "Meas" menu



**Measurement**

Selects the measurement to be configured in the menu. You can perform up to four different measurements simultaneously.

**State**

Enables or disables the selected measurement.

Remote command:

`MEASurement<m>:ENABle` on page 318

**Type**

Selects the measurement type. For a detailed description, see [Chapter 3.2.3, "Measurement Types"](#), on page 77.

Remote command:

`MEASurement<m>:TYPE` on page 319

**Source / Source 2**

Defines the waveform to be measured. For delay, phase, and power measurements, 2 sources are required.

The sources can be any active input signal, math or reference waveform. Available source waveforms depend on the measurement type, see [Chapter 3.2.3, "Measurement Types"](#), on page 77.

Remote command:

`MEASurement<m>:SOURce` on page 319

**All off**

Disables all active measurements.

Remote command:

`MEASurement<m>:AOFF` on page 320

**Slope**

Sets the slope for the delay measurement type.

"Positive"      Delay between the first rising edge of each source waveform.

"Negative"      Delay between the first falling edge of each source waveform.

"Either"      Delay between the first edge of each source waveform, no matter if it is rising or falling.

Remote command:

`MEASurement<m>:DELay:SLOPe` on page 320

### 3.3 Cursor Measurements

The cursor measurement determines the results at the current cursor positions, or performs gated automatic measurements between the cursor lines. The cursors can be positioned manually at fixed positions, or they can follow the waveform.

You can perform cursor measurements on analog input signals, math waveform, XY-diagram, as well as on logic channels (requires option R&S RTH-B1).

Cursor measurements on spectrum displays are also available, if the option R&S RTH-K18 is installed (see [Chapter 5.2.7, "Cursor Measurements on Spectrums"](#), on page 121).

### 3.3.1 Performing Cursor Measurements

#### To start and stop the last configured measurement

- ▶ Press the CURSOR key.

#### To configure the cursor measurement in the Cursor menu

1. Press and hold the CURSOR key until the "Cursor" menu opens.
2. Select the "Type" of the cursor.
3. For horizontal, track and measure types, select the "Source" channel that you want to measure.
4. Scroll down the menu and adjust the additional settings, which are required for the selected cursor type.

### 3.3.2 Cursor Types and Results

The results of cursor measurements are displayed at the top of the display. 4 cursor types are available.

#### Vertical cursors

For vertical cursors, two results are displayed by default: the absolute value of the time difference between the cursor lines  $\Delta t$  and its inverse value  $1/\Delta t$ . Optionally, the positions of the cursor lines  $t_1$  and  $t_2$  are also measured. The results are time values and do not depend on any waveform, thus no source is required.



Cursor  
Vert.       $\Delta t = 600.0 \text{ ns}$        $1/\Delta t = 1.667 \text{ MHz}$

- [CURSor:TDElta?](#) on page 323
- [CURSor:ITDElta?](#) on page 323
- [CURSor:X1Position](#) on page 323
- [CURSor:X2Position](#) on page 323

#### Horizontal cursors

For horizontal cursors, the vertical values of the cursor positions  $y_1$  and  $y_2$  are measured. These are usually voltage or current values. The absolute value of the difference between the positions  $\Delta y$  is also displayed.

Cursor Horiz.	<b>C1</b>	y1 = -120.0 mV	$\Delta y = 240.0$ mV
		y2 = 120.0 mV	

- [CURSor:Y1Position](#) on page 324
- [CURSor:Y2Position](#) on page 324
- [CURSor:DELTA?](#) on page 323

### Track cursors

Two vertical cursor lines are coupled to the waveform. The instrument measures the vertical values y1 and y2 of the crossings between the cursor lines and the waveform. It also measures the absolute values of the difference between the positions  $\Delta y$  and of the time difference between the cursor lines  $\Delta t$

Cursor Track	<b>C1</b>	y1 = 384.3 mV	$\Delta y = 13.41$ mV
		y2 = 397.7 mV	$\Delta t = 600.0$ ns

- [CURSor:Y1Amplitude?](#) on page 324
- [CURSor:Y2Amplitude?](#) on page 324
- [CURSor:DELTA?](#) on page 323
- [CURSor:TDELTA?](#) on page 323

### Measurements

Two vertical cursor lines define a gate for two parallel automatic measurements. All automatic measurements that need only one source are available. Delay, phase, and power measurements are not provided for cursor measurements, they require two sources.

See [Chapter 3.2.3, "Measurement Types"](#), on page 77.

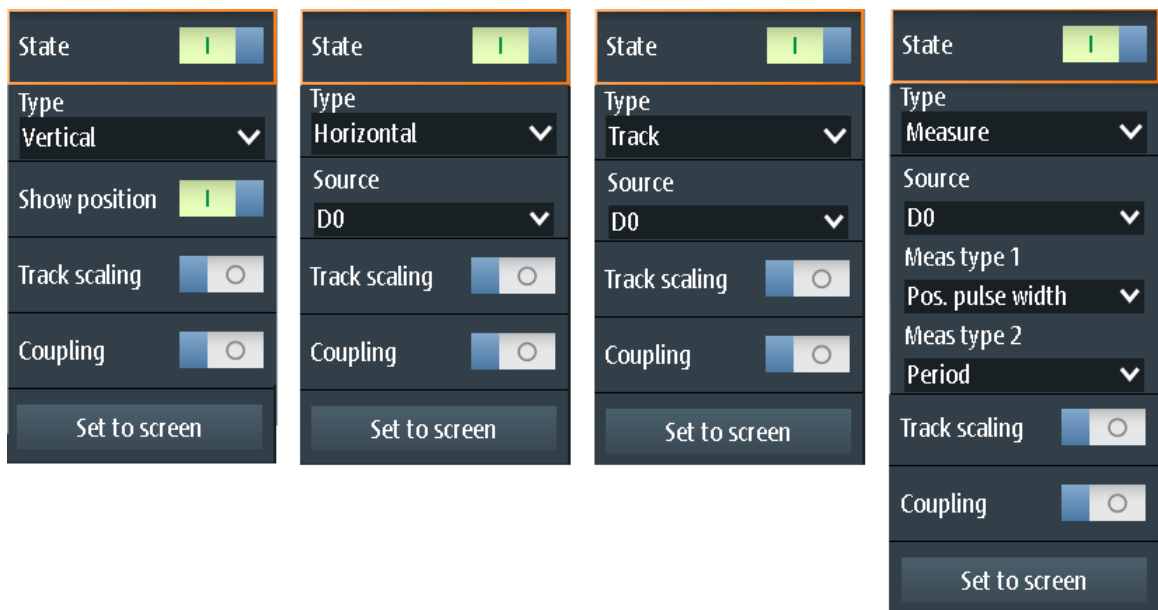
Cursor Meas	<b>C1</b>	T = 99.85 ns	Rise = 27.13 ns
-------------	-----------	--------------	-----------------

If the measurement result is outside the measurement range and clipping occurs, the results are marked with < (underflow) or > (overflow). Adjust the vertical scale to get valid results.

- [CURSor:MEASurement<m>:RESult:ACTual?](#) on page 324
- [CURSor:MEASurement<m>:RESult:LIMit?](#) on page 324

### 3.3.3 Settings for Cursor Measurements

Access: "Cursor" menu

**State**

Enables or disables the cursor measurement.

Remote command:

[CURSor:STATe](#) on page 321

**Type**

Defines the type of the cursor measurement.

For details, see [Chapter 3.3.2, "Cursor Types and Results"](#), on page 83.

"Vertical"	Displays two vertical cursor lines and measures their timing parameters.
"Horizontal"	Displays two horizontal cursor lines and measures their amplitude parameters.
"Track"	Displays two vertical cursor lines and couples them to the source waveform. The amplitude characteristics and the time difference of the crossing points are measured.
"Measure"	Displays two vertical cursor lines that define a gate for two simultaneous automatic measurements.

Remote command:

[CURSor:FUNction](#) on page 321

**Source**

Defines the source on which the cursor measurement is performed. The source can be any active analog or digital input signal, math waveform, or bus (requires option).

The source setting is not available for the cursor type "Vertical", and for measurements in the XY-diagram.

Remote command:

[CURSor:SOURce](#) on page 321

**Show Position**

Shows the position values of the vertical cursor lines t1 and t2 in the measurement results. The setting is only available for the vertical cursor type.

Cursor	t1 = -285.6 ns	$\Delta t$ = 600.0 ns
Vert.	t2 = 314.4 ns	1/ $\Delta t$ = 1.667 MHz

**Meas Type 1 / Meas Type 2**

Set the automatic measurements to be performed on the source waveform between the cursor lines. The setting is only available for the "Measure" cursor type.

All automatic measurements that need only one source are available. Delay, phase, and power measurements are not provided for cursor measurements, they require two sources.

For a description of the measurement types, see [Chapter 3.2.3, "Measurement Types"](#), on page 77.

Remote command:

[CURSor:MEASurement<m>:TYPE](#) on page 322

**Track Scaling**

If enabled, the position of the cursor lines is adjusted if the vertical or horizontal scales are changed. The cursor lines keep their relative position to the waveform.

If disabled, the cursor lines remain on their position on the display if the scaling is changed.

Remote command:

[CURSor:SCPLing](#) on page 322

**Coupling**

Couples the cursor lines so that the distance between the two lines remains the same if one cursor is moved.

Remote command:

[CURSor:COUPling](#) on page 322

**Set to Screen**

Sets the cursors to a default position on the screen. This is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Remote command:

[CURSor:SCReen](#) on page 322

## 3.4 Mathematics

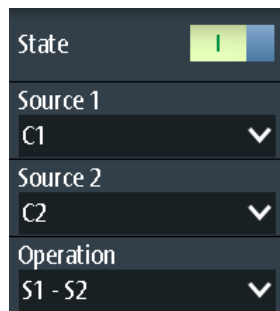
A math waveform is a calculated waveform. You can calculate data out of one or two different sources using several predefined operations.

- ▶ To configure the math waveform, press and hold the MATH key until the menu opens.

- ▶ To activate or deactivate the last configured math waveform, shortly press the MATH key.
- ▶ To adjust vertical scale and position of the math waveform, use the RANGE and POS keys.

You can analyze math waveforms in the same way as channel waveforms: use zoom, perform automatic and cursor measurements, save as reference waveform, and perform mask tests.

### Description of settings



#### State

Activates the waveform and displays it.

Remote command:

[REFCurve:STATe](#) on page 327

[CALCulate:MATH:STATe](#) on page 325

#### Source 1 / Source 2

Sets the source(s) for the defined mathematic operation.

#### Operation

Select an operation to calculate the math waveform.

"S1 + S2"

*Addition:* Adds the values of "Source 1" and "Source 2".



"S1 - S2"

*Subtraction:* Subtracts the values of "Source 2" from the values of "Source 1".





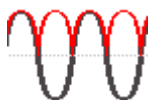
"S1 \* S2" *Multiplication:* Multiplies the values of "Source 1" and "Source 2".



"-S1," *Inverse:* Inverts all voltage values of "Source 1", i.e. all values are mirrored at the ground level. Thus, a positive voltage offset becomes negative.



"|S1|" *Abs. Value:* Calculates the absolute value of "Source 1". All negative values are inverted to positive values.



"S1<sup>2</sup>" *Square:* Squares the value of "Source 1".



Remote command:

[CALCulate:MATH\[:EXPRession\] \[:DEFine\]](#) on page 325

#### RANGE keys

The vertical RANGE keys set the vertical scale (vertical sensitivity) of the math waveform.

Remote command:

[CALCulate:MATH:VERTical:SCALE](#) on page 326

[CALCulate:MATH:VERTical:RANGE](#) on page 326

#### POS keys

Move the math waveform or down in the diagram. The position is a graphical setting given in divisions.

You can also drag the waveform marker on the screen.

Remote command:

[CALCulate:MATH:VERTical:POSition](#) on page 326

## 3.5 Reference Waveforms

To compare waveforms and analyze differences between waveforms, you can use a reference waveform. You can also save reference waveforms and load them for further use. The display of a reference waveform is independent from that of the source waveform; you can change the vertical scale and position

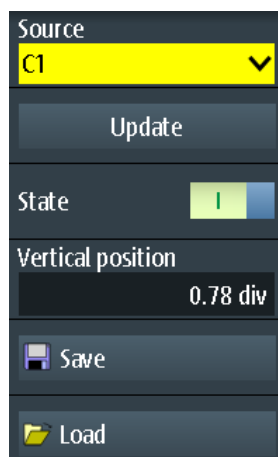


### To create and save a reference waveform

1. Set up the waveform that will be the reference.
2. Open the "Ref" menu.
3. Select the "Source" waveform.
4. Select "Update".  
The reference waveform is created, activated, and shown on top of the original waveform.
5. You can change the vertical scale and position using the RANGE and POS keys.
6. To save the reference, select "Save".
7. Select the "File Type" (format BIN, XML, or CSV).
8. Select the "File Name" and enter the file name.

## 3.5.1 Settings for Reference Waveforms

Access: "Ref" menu



### Source

Selects the waveform to be taken as reference waveform. Any active channel or math waveform can be used.

Remote command:

[REFCurve:SOURce](#) on page 326

### Update

Creates the reference waveform from the source waveform.

Remote command:

[REFCurve:UPDate](#) on page 326

### State

Activates the waveform and displays it.

Remote command:

`REFCurve:STATe` on page 327

`CALCulate:MATH:STATe` on page 325

### Vertical Position

Sets the vertical position of the reference waveform.

You can also tap the waveform label "R" to set the focus to the reference waveform, and use the RANGE and POS keys to adjust the display.

Remote command:

`REFCurve:POSition` on page 327

### Save/ Load

Saves or loads a reference waveform. The default directory is `C:/Users/<user>/Rohde-Schwarz/RTH/ReferenceCurves`.

Select the "File Type" (format BIN, XML, or CSV) and enter the "File Name". See also [Chapter 3.5.2, "Waveform Files"](#), on page 90.

Remote command:

`REFCurve:NAME` on page 327

`REFCurve:SAVE` on page 327

`REFCurve:OPEN` on page 327

`REFCurve:DELeTe` on page 327

## 3.5.2 Waveform Files

Reference waveforms can be stored in XML, CSV, or BIN format.



If you want to reload reference waveforms on the instrument, save them in BIN or CSV format. XML files cannot be reloaded.

Waveform data is saved in two files. One file contains the waveform data values and is indicated by `*Wfm.*` in the file name. The second file contains the header data, for example, time scale, vertical scale, vertical position, acquisition mode, and more. Header data is required to reload the waveform from data, or to analyze the data values of the data file.

### 3.5.2.1 Waveform Header Files

The header files of XML and BIN waveform files are written in XML format. The header files of CSV waveform files are written in CSV format. You can open the header files and use their information for data analysis.

CSV header files only contain the property names and values, one property per row.

```
VerticalScale:0.05:
```

```
HorizontalScale:5e-08:
```

XML header files contain more information than CSV header files. For analysis, only Name and Value are needed.

```
<Prop Name="VerticalScale" Value="0.05" UserValue="0.05" Step="0.001" Default="0.05"
Min="0.001" Max="100" StepDefault="0.001" StepFactor="10" UnitId="77"
UnitName="V/div" BitGroupSize="0" Format="0"></Prop>
<Prop Name="HorizontalScale" Value="1e-07" UserValue="1e-07" Step="1e-09"
Default="1e-07" Min="1e-09" Max="500" StepDefault="1e-09" StepFactor="10"
UnitId="75" UnitName="s/div" BitGroupSize="0" Format="0"></Prop>
```

Header files contain the following properties:

Value	Description
<b>Vertical settings</b>	
VerticalScale	Vertical scale of the waveform in Volts per division, or other unit / division
VerticalOffset	Vertical offset of the waveform in Volts, or other unit
VerticalPosition	Vertical position of the waveform in divisions
<b>Horizontal and acquisition settings</b>	
HorizontalScale	Time scale in seconds per division
HorizontalLeft	Horizontal start value of the waveform (time in s)
HorizontalResolutionPP	Time between two recorded samples
HorizontalAcquisitionMode	Sample, Peak Detect, High Res, Envelope, or Average
HorizontalDecimationFactor	At long time bases, if the number of captured samples is higher than the available record length, decimation takes effect. If the time scale is $\leq 5 \mu\text{s}/\text{div}$ , the decimation factor is 1.
<b>Samples</b>	
HorizontalTraceLength	Record length, number of recorded waveform samples, which are stored in the memory
PostSettlingSamples	Number of additional samples after the end of the waveform record.
PreSettlingSamples	Number of additional samples before the beginning of waveform samples. They ensure that all measurements can be performed on the reloaded waveform that could be performed on the original waveform.

### 3.5.2.2 Waveform Data Files

The waveform data files are indicated by *\*Wfm.\** in the file name. They contain the actual waveform data, the Y-values of the samples. Mostly, the Y-values are voltages: Y0; Y1; Y2; Y3; ...

Before and after the waveform data, the instrument writes some presettling and post-settling samples. The overall number of values in the data file is:

$$\text{ValuesNumber} = \text{PreSettlingSamples} + \text{HorizontalTraceLength} + \text{PostSettlingSamples}$$

For envelope waveforms, the number of values in the file doubles. Two Y-values for each sample are written, one for the upper and one for the lower envelope:

Ymin0; Ymax0; Ymin1; Ymax1; Ymin2; Ymax2; Ymin3; Ymax3;...

In peak detect acquisition mode, the number of values depends on the decimation factor. If the decimation factor is 1, one value per sample is written. At higher decimation factors, two values per sample are written.

In CSV files, the data values of one sample are written in one row. Envelope data, for example, looks like this:

```
-0.0125490196078431    -0.0619607843137255
-0.0133333333333333    -0.0627450980392157
-0.0149019607843137    -0.0650980392156863
```

XML files are easy to read:

```
<sample>
  <datamax>-0.012549</datamax>
  <datamin>-0.0619608</datamin>
</sample>
<sample>
  <datamax>-0.0133333</datamax>
  <datamin>-0.0627451</datamin>
</sample>
<sample>
  <datamax>-0.014902</datamax>
  <datamin>-0.065098</datamin>
</sample>
```

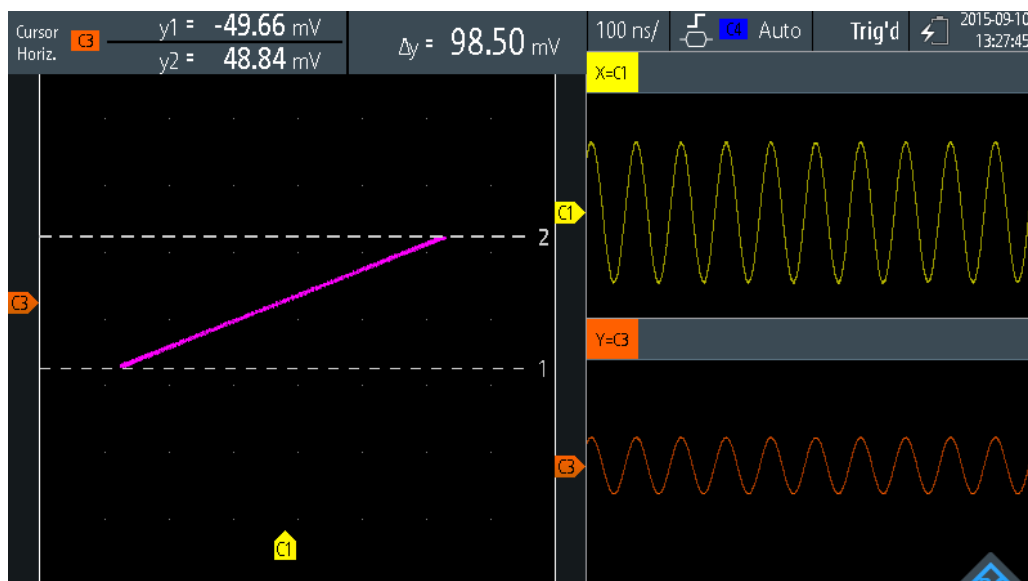
## 3.6 XY-Diagram

XY-diagrams combine the voltage or current levels of two input signals in one diagram. They use the level of a second signal as the x-axis, rather than a time base. This allows you to perform phase shift measurements, for example.



1. Press the MODE key.
2. Select "XY".
3. Make sure that the signals, the trigger, and the acquisition are set up correctly. The following menus are available in XY-mode:
  - "Vertical", see [Chapter 2.2, "Vertical Setup"](#), on page 38.
  - "Horizontal", see [Chapter 2.3, "Horizontal Setup"](#), on page 42.
  - "Trigger", see [Chapter 2.5, "Trigger"](#), on page 46.
  - "Acquire", see [Chapter 2.4, "Acquisition Control"](#), on page 44.

To analyze the signal in XY-mode, you can use cursor measurements. You can select vertical or horizontal cursors, couple the cursor lines or set them to screen. All other cursor settings are not relevant for measuring the XY-diagram.



### Description of settings

#### Source X

Defines the signal that supplies the x-values of the XY-diagram, replacing the usual time base. The source can be any of the active analog channels.

#### Source Y

Defines the signal to be displayed in y-direction in an XY-diagram. The source can be any of the active analog channels.

## 3.7 History (Option R&S RTH-K15)

The history option R&S RTH-K15 accesses the data of previous acquisitions and provides them for further analysis. Using this option, you can analyze, for example, packet communication on serial buses, radar pulses, laser pulses, and signals that occur in short bursts with long idle times.

If history is enabled and an acquisition runs, the instrument stores the captured waveforms, processes the data and displays the current waveform. Each stored waveform is called a segment. When the acquisition is stopped, the history player is shown to access the stored segments, and to display and analyze them. When you start a new acquisition, the history is cleared and written anew.

The history stores the following data during acquisition:

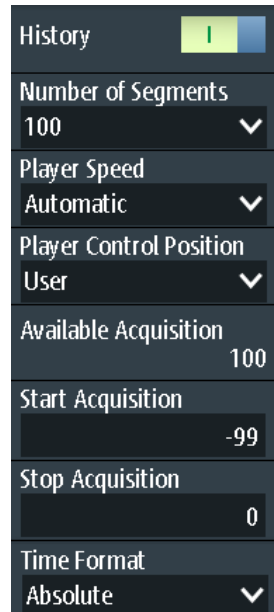
- All active analog channels.
- All logic channels if at least one logic is active (with option R&S RTH-B1).
- Decoded bus data if the bus is active (with option R&S RTH-K1 and/or R&S RTH-K2).

**To enable the history:**

1. Tap the Menu button and select "History" on the menu.
2. Enable "History".

**3.7.1 History Settings**

Access: "History" menu

**History**

Enables the history function. The instrument stores the captured waveforms in segments. After stopping the acquisition, you can analyze them.

Remote command:

[CHANnel<m>:HISTory\[:STATe\]](#) on page 328

**Number of Segments**

Sets the number of segments to be stored.

**Note:** If zoom or mathematics are active during acquisition, the actual number of stored segments may be less than the defined number. To avoid the decrease of stored waveforms, disable zoom and mathematics before you acquire the waveforms. You can enable zoom and mathematics later in stop mode and use them to analyze any of the history segments.

Remote command:

[CHANnel<m>:HISTory:NSEGments](#) on page 328

**Player Speed**

Defines how fast the history player shows the stored segments.

Remote command:

[CHANnel<m>:HISTory:TPACq](#) on page 328

#### Player Control Position

Sets the position of the history player window on the display. You can drag the window on the touchscreen to another position. If so, a "User" position is indicated.

#### Available Acquisition

Shows the number of segments that are currently stored in the history.

Remote command:

[ACQuire:AVailable?](#) on page 329

#### Start Acquisition / Stop Acquisition

Define the index of the first and the last history segment that the history player shows. Change these values if you want to see a smaller range of subsequent segments from the history. The newest segment has always the index "0". Older segments have a negative index. The number of available segments is shown in "Available Acquisition".

Remote command:

[CHANnel<m>:HISTory:STARt](#) on page 329

[CHANnel<m>:HISTory:STOP](#) on page 329

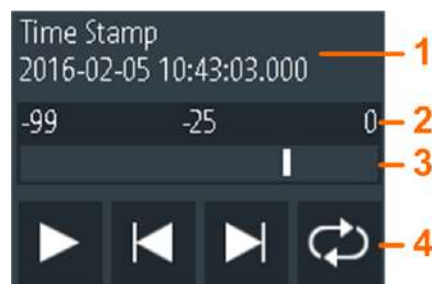
#### Time Format

Defines if the timestamp in the history player window shows the absolute or relative time. Absolute time is the date and the daytime of the current acquisition. Relative time is the difference to the newest segment (index = 0).

See also "[Timestamp](#)" on page 96.

### 3.7.2 Displaying History Data

In the history player window, you start and stop the playback of the stored segments, and you can display a particular acquisition.



1 = Timestamp, here: absolute time

2 = Index of the oldest, current, and newest (= 0) segment

3 = Slider to set the displayed segment

4 = Control buttons: Play, Step Forward, Step Back, and Repeat



## Timestamp

The timestamp shows the time of the currently displayed history segment. Thus, the time relation between acquisitions is always available. More precisely, the timestamp is the time of the trigger event.

The timestamp can be absolute or relative:

- Absolute: Date and daytime of the trigger event of the displayed segment. Depending on the horizontal position, the waveform can be captured up to 100,000 seconds after the trigger event, and thus after the displayed timestamp. The instrument considers this delay automatically, all measurements are related to the trigger event.
- Relative: time difference of the current segment to the newest segment (index = 0).

Remote command:

- `CHANnel<m>:HISTory:TSABsolute?` on page 330
- `CHANnel<m>:HISTory:TSDate?` on page 330
- `CHANnel<m>:HISTory:TSRelative?` on page 331

## To display history segments

You can access the history segments in several ways:

- Play back all captured history segments.
- Play back a specified range of subsequent segments.
- Show one particular segment.

Proceed as follows:

1. If the acquisition is running, stop the acquisition.  
The history player is shown.
2. To play back the segments once, tap the Play button.  
By default, all captured waveforms are shown.
3. To display a range of segments out of the history:
  - a) Open the "History" menu.
  - b) Set the index of the first and the last segment that you want to see.  
See "[Start Acquisition / Stop Acquisition](#)" on page 95.
  - c) In the history player window, tap the Play button.
4. To play back the segments repeatedly.
  - a) Enable the "Repeat" button.
  - b) Tap the "Play" button.
5. To access a particular segment, you can:
  - Drag the slider in the history player window, until the required index number is shown.
  - Use the "Step Forward" and "Step Back" buttons to show the next segment.

Remote command:

- `CHANnel<m>:HISTory:PLAY` on page 330
- `CHANnel<m>:HISTory:REPLay` on page 330
- `CHANnel<m>:HISTory:CURRent` on page 329


### 3.7.3 Analyzing History Data

You can analyze the stored segments using the following possibilities:

- Switch analog channels on and off if they were active during acquisition.
- Change vertical scale and position of captured channels.
- Use the zoom.
- Save screenshots.
- Perform cursor measurements.
- Perform automatic measurements.
- Use the mathematical functions.
- Switch logic channels on and off if at least one channel was active during acquisition.
- Enable and disable the serial bus if it was active during acquisition.

### 3.7.4 Exporting History Data

You can export history data to files. History data is always saved in "Compressed CSV" files. Each segment is saved to a separate file, and all segment files are written to a compressed folder.

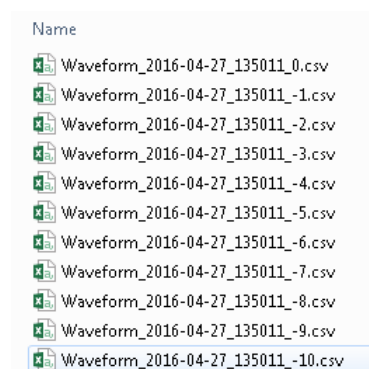

**Figure 3-5: Content of a history waveform folder**

The file names are built using the filename pattern and the segment index:

`<filename base>_<date>_<time>_<index>.csv.`

In the header section, the relative timestamp of each segment is written. The newest segment with index 0 has the timestamp 0. All timestamps are relative to the newest segment, in s.

Timestamp	-0.000046568
Waveform Type	ANALOG
Acquisition Mode	SAMPLE
Horizontal Unit	s
Horizontal Scale	1.00E-07
Horizontal Position	1.06E-22
Reference Point	50%
Sample Interval	2.00E-10
Record Length	5000
Probe Setting	'10:1'
Vertical Unit	V
Vertical Scale	0.5
Vertical Position	0
Vertical Offset	0

To save history data:

1. Set up the history and capture the waveforms.
2. Press the FILE key.
3. Select "Waveforms".
4. Tap "Select Waveform" and select one waveform for export, or select all active waveforms.
5. Enable "Save History".  
If acquisition is running, enabling "Save History" stops the acquisition.
6. Check the "Waveform Directory", the "Filename Base", and the "CSV Column Delimiter". Adjust if necessary.
7. If you need time information for analysis, enable "Store with Time".
8. Tap "Save Waveform".

All export settings are described in [Chapter 11.4.2, "Waveform Export Settings"](#), on page 256.

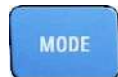
## 4 Mask Testing

Masks are used to determine whether the amplitude of a signal remains within specified limits, e.g. to detect errors or test compliance of digital signals.


A mask is specified by an upper and a lower limit line. The signal must run inside these limit lines, otherwise a mask violation occurs. A new mask is created from an existing signal: Mask limits are created by copying the waveform, and the limits are moved and stretched. The result is a tolerance tube around the signal that is used as mask.

### 4.1 Accessing the Mask Mode

1. Press the MODE key.



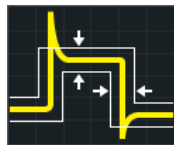2. Select "Mask".



The mask interface is displayed and mask testing is started if masks are already defined and activated.

### 4.2 Mask Test Results

Mask testing checks all active waveforms for mask violation simultaneously.

The test result of the selected mask is shown in the result table in the upper left corner of the display.



Figure 4-1: Mask-mode-view

- 1 = Selected channel
- 2 = Number and percentage share of passed acquisitions
- 3 = Number and percentage share of failed acquisitions
- 4 = Number of tested acquisitions
- 5 = Test duration

Remote commands for mask test results:

- [MASK:CHANnel<m>:RESult:PASS\[:COUNT\]? on page 334](#)
- [MASK:CHANnel<m>:RESult:PASS:PERCentage? on page 334](#)
- [MASK:CHANnel<m>:RESult:FAIL\[:COUNT\]? on page 333](#)
- [MASK:CHANnel<m>:RESult:FAIL:PERCentage? on page 333](#)
- [MASK:CHANnel<m>:RESult:TOTL\[:COUNT\]? on page 334](#)
- [MASK:ELAPsedtime:TOTAL? on page 334](#)
- [MASK:ELAPsedtime\[:SECS\]? on page 335](#)
- [MASK\[:TESTstate\]? on page 333](#)

## 4.3 Running Mask Tests

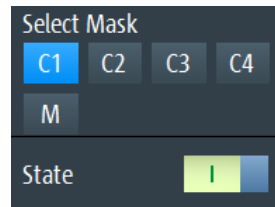
1. Before you can perform mask tests, adjust the waveforms by editing the vertical, horizontal, trigger and acquisition settings.

For details see:

- [Chapter 2.2, "Vertical Setup", on page 38](#)
- [Chapter 2.3, "Horizontal Setup", on page 42](#)
- [Chapter 2.5, "Trigger", on page 46](#)
- [Chapter 2.4, "Acquisition Control", on page 44](#)

**Note:** The acquisition mode "Envelope" is not available while running mask tests.

2. If you want to test a mathematical (math) waveform, generate a math waveform, see [Chapter 3.4, "Mathematics"](#), on page 86.
3. Select the "Mask" menu.
4. Select the mask channel that is assigned to the tested waveform.
5. To activate the mask, tap "State".



**Note:** If the selected mask was used before, the stored mask is displayed.

6. To set the mask width, enter "Width X" and "Width Y".
7. Select the "Action on Violation".  
This action is applied to all masks.
8. To create the mask, tap "Create Mask".
9. To start and stop mask testing, press the RUN STOP key.




#### Analyzing the mask test

To view the details of the waveform at a mask test violation, you can use the zoom function, see [Chapter 3.1, "Zoom"](#), on page 74. Zooming is only possible while the mask test is stopped.

## 4.4 Mask Settings

Access: "Mask" menu

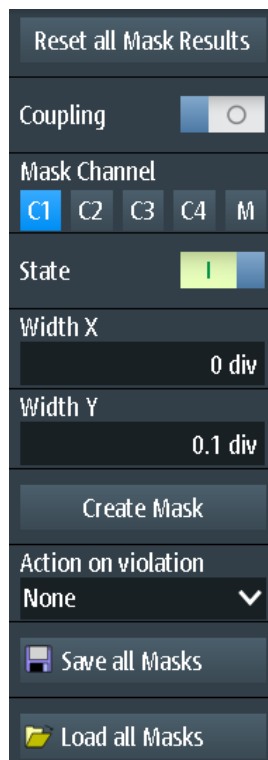

**Figure 4-2: Mask settings**

### Reset all Mask Results

Resets all mask test results.

Remote command:

[MASK:RST](#) on page 333

### Coupling

If enabled, the settings of the selected mask are applied to all active masks when you tap "Create Mask".

### Mask Channel

Selects the mask to be configured.

If the selected mask has been created before, and it is active, the mask is shown on the display.

Each mask channel is assigned to its related waveform (input channel or math waveform) as indicated by the mask channel name.

### State

Turns the mask on or off.

If the assigned waveform is inactive, it is activated together with the mask.

Remote command:

[MASK:CHANnel<m>:STATe](#) on page 331

**Width X**

Changes the width of the mask in horizontal direction.

The specified number of divisions is added to the positive x-values and subtracted from the negative x-values of the mask limits in relation to the mask center. Thus, the left half of the mask is pulled to the left, the right half is pulled to the right.

To apply the changed value to an existing mask, tap "Create Mask".

Remote command:

[MASK:CHANnel<m>:PROPerties:XWIDth](#) on page 331

**Width Y**

Changes the width of the mask in vertical direction.

The specified number of divisions is added to the y-values of the upper mask limit and subtracted from the y-values of the lower mask limit. Thus, the upper half of the mask is pulled upwards, the lower half is pulled down, and the overall height of the mask is twice the "Width Y".

To apply the changed value to an existing mask, tap "Create Mask".

Remote command:

[MASK:CHANnel<m>:PROPerties:YWIDth](#) on page 332

**Create Mask**

Creates a new mask, or applies modified mask settings to the mask.

If "Coupling" is enabled, all active masks are recreated with the settings of the selected mask.

Remote command:

[MASK:CHANnel<m>:CREatemask](#) on page 332

**Action on Violation**

Selects the action to be executed if the mask limits are violated.

This action is applied to all masks.

Remote command:

[MASK:ONViolation\[:SELECTION\]](#) on page 332

**Save all Masks**

Opens an explorer to save all active masks.

**Load all Masks**

Opens an explorer to load masks.

If an acquisition is running, the acquisition is topped until the masks are reloaded.

**RUN / STOP**

Starts and stops triggering on mask violations.

Remote command:

[RUN](#) on page 289

[STOP](#) on page 290



## 5 Spectrum Analysis

The R&S RTH provides several forms of spectrum analysis:

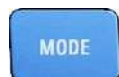
- Basic FFT calculation, which is included in the firmware
  - Spectrum analysis option R&S RTH-K18, which is hardware-supported and provides a wide range of analysis possibilities, for example,
  - Harmonics measurement option R&S RTH-K34, which provides an overview and characteristic details on the harmonics contained in the measured signal
- |  |     |
|--|-----|
| • <a href="#">FFT Mode</a> .....                                       | 104 |
| • <a href="#">Spectrum Mode (Option R&amp;S RTH-K18)</a> .....         | 109 |
| • <a href="#">Harmonics Measurement (Option R&amp;S RTH-K34)</a> ..... | 126 |

### 5.1 FFT Mode

The new FFT mode is included in the standard R&S RTH installation and allows you to perform FFT analysis directly on the instrument. During FFT analysis, the captured signal in the time domain is converted to a spectrum of frequencies. As a result, the magnitude of the determined frequencies can be displayed.

#### 5.1.1 Accessing the FFT Mode

1. Press the MODE key.



2. Select "FFT".



A power vs. frequency (spectrum) diagram is displayed, and the spectrum of the currently captured data is analyzed, if available.

#### 5.1.2 Display and Control

The FFT display shows a power vs. frequency (spectrum) diagram and relevant analysis parameters. FFT results are useful to obtain an overview of the input signal in the frequency domain and to detect unusual signal effects (such as spurs or distortions) visually.

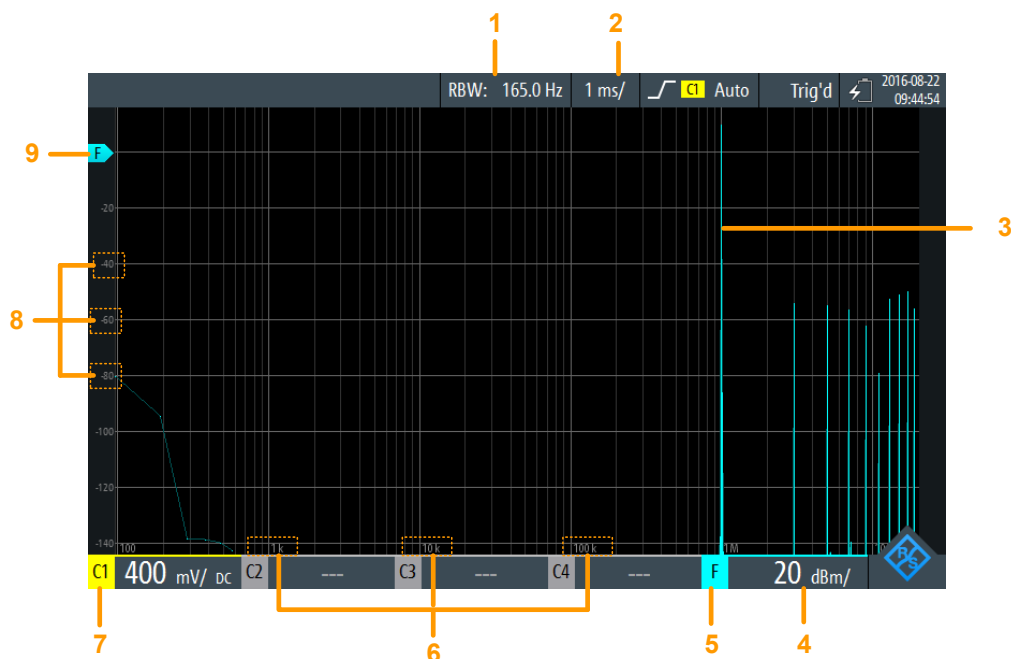


Figure 5-1: FFT display

- 1 = Resolution bandwidth (RBW), determined from channel bandwidth and frequency span
- 2 = Time scale (time per division)
- 3 = Power vs. time waveform
- 4 = Amplitude (y-axis) scale (range per division)
- 5 = FFT mode active
- 6 = Frequency values (x-axis)
- 7 = Channel providing input data
- 8 = Amplitude values (y-axis)
- 9 = 0 dBm line (y-axis)

**Data source**

FFT analysis is performed on the data captured from one of the active input channels. Analysis can be performed on all channels simultaneously.

**Time base**

FFT analysis is generally performed on the data captured during the entire data acquisition. To restrict the time base for which FFT analysis is to be performed (thus reducing calculation time), you must change the [Time Scale](#). Gating or zooming is not available for FFT analysis.

**Frequency range**

The spectrum display can also be restricted to a specified frequency range. By default, the full determined spectrum is displayed. However, you can restrict the channel bandwidth to a smaller value.



### Aliasing

In FFT mode, no lowpass filter is applied. If aliasing occurs, try restricting the frequency range of the input signal using the [Channel Bandwidth](#) setting.

Note that, as opposed to FFT mode, the Spectrum mode (option R&S RTH-B18) uses an anti-aliasing filter.

The frequency axis is adjusted to the available spectrum and the selected [X-Scaling](#) mode (linear or logarithmic). For linear scaling, the frequency axis starts at 0 Hz.

For logarithmic scaling, it starts at the frequency resolution (the distance between two individual frequency values on the x-axis), which depends on the selected [Frequency Span](#) and the [Channel Bandwidth](#).



In logarithmic mode, not all possible amplitude values for a specific frequency may occur. Each result is indicated by a bright, colored trace point.

The DC amplitude (at 0 Hz) is not displayed, as  $\lg(0)$  is not defined.

The maximum frequency value depends on the following parameters and is adjusted accordingly:

- [Sample Frequency](#) (the sample rate with which FFT analysis is performed)
- [Channel Bandwidth](#)
- Installed bandwidth options

### Amplitude range

The amplitudes determined for each frequency are displayed on the y-axis of the spectrum. The values are scaled in dBm (dBmW) based on 50  $\Omega$  impedance.

To change the displayed range, use the [RANGE keys](#) and the [POS keys](#). The position of the 0 dBm line is indicated by an "F" on the y-axis.



### AUTOSET, vertical, and trigger settings

Vertical and trigger settings for the input signal must be applied in Scope mode, before FFT mode is selected. The same applies to automatic adjustment of the instrument settings to the input signal (AUTOSET).

## 5.1.3 Performing FFT Analysis

1. Before you can perform FFT analysis, adjust the waveforms by editing the vertical, horizontal, trigger and acquisition settings.

For details, see:

- [Chapter 2.2, "Vertical Setup"](#), on page 38
- [Chapter 2.3, "Horizontal Setup"](#), on page 42
- [Chapter 2.5, "Trigger"](#), on page 46

- [Chapter 2.4, "Acquisition Control"](#), on page 44
2. To adjust the instrument settings to the current input signal automatically, press AUTOSET.
  3. Select the "FFT" mode.
  4. Select the "Frequency Span" setting and determine which sample frequency you require ("Max" is the highest).
  5. Select the "Window" type according to the signal characteristics that are most relevant for your measurement task (see ["Window type"](#) on page 108).
  6. Select the "Channel Bandwidth" setting and define the frequency limit of the spectrum diagram. Frequencies above the selected limit are removed to reduce noise at different levels.
  7. To switch to a logarithmic frequency scaling, select "X-Scaling": "Logarithmic".
  8. To start and stop FFT analysis, press the RUN STOP key.



### 5.1.4 FFT Mode Settings

**Access:** "FFT" menu



Additional settings for horizontal (time) scaling and data acquisition are available for FFT mode and directly accessible via the FFT menu. For a description, see:

- ["Time Scale"](#) on page 43
- ["Acquisition Mode"](#) on page 45
- ["Sampling Rate C1 - C4"](#) on page 46

Furthermore, the history function can be used to perform FFT analysis on stored data, see [Chapter 3.7, "History \(Option R&S RTH-K15\)"](#), on page 93.

---

<a href="#">CH &lt;N&gt;</a> .....	107
<a href="#">Frequency Span</a> .....	108
<a href="#">Window type</a> .....	108
<a href="#">Channel Bandwidth</a> .....	109
<a href="#">X-Scaling</a> .....	109
<a href="#">Sample Frequency</a> .....	109



**CH <N>**

Selects the channel for which the captured data is analyzed in FFT mode. FFT analysis can be performed on all channels simultaneously.

Remote command:

[SPECTrum: SOURce](#) on page 335

### Frequency Span

Determines how many values are analyzed by a single FFT (sample frequency), and thus the frequency resolution. The larger the value, the higher the resolution, but the longer the required analysis time.

**Note:** Due to the longer analysis time, changes to the measurement settings may only become visible with a time delay.

Furthermore, the frequency span determines the visible range in the spectrum diagram. Depending on the selected frequency span, the time scale may be restricted (see "Time Scale" on page 43).

"Narrow"            8k values analyzed per FFT; time scale  $\geq$  100 ms/div

"Max"                64k values analyzed per FFT; time scale  $\geq$  1  $\mu$ s/div

Remote command:

[SPECTrum:FREQuency:SPAN:MODE](#) on page 337

[SPECTrum:FREQuency:SPAN\[:VALue\]](#) on page 337

[SPECTrum:FREQuency:CENTer](#) on page 336

[SPECTrum:FREQuency:START](#) on page 337

[SPECTrum:FREQuency:STOP](#) on page 338

[SPECTrum:FREQuency:BANDwidth\[:RESolution\]\[:VALue\]](#) on page 336

### Window type

Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the R&S RTH to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

**Table 5-1: Window type characteristics**

Window type	Frequency resolution	Magnitude resolution	Measurement recommendation
Rectangular	Best	Worst	Separation of two tones with almost equal amplitudes and a small frequency distance
Hamming Hann	Good	Poor	Frequency response measurements, sine waves, periodic signals and narrow-band noise
Flat-Top	Poor	Best	Accurate single-tone measurements
Blackman	Worst	Best	Mainly for signals with single frequencies to detect harmonics Accurate single-tone measurements

Remote command:

[SPECTrum:FREQuency:WINDow:TYPE](#) on page 338

[SPECTrum:FREQuency:WINDow:FACTor?](#) on page 338

**Channel Bandwidth**

Determines the frequency limit of the spectrum. Frequencies above the selected limit are removed to reduce noise at different levels. Values from 1 kHz to 10 MHz can be selected. Alternatively, the full span of the current input signal can be selected.

For more details on the channel bandwidth, see ["Bandwidth"](#) on page 40.

Remote command:

[CHANnel<m>:BANDwidth](#) on page 285

**X-Scaling**

Defines the scaling method for the frequency (x-)axis of the spectrum display.

"Linear"            Linear scaling

"Logarithmic"    Logarithmic scaling

Note that in this mode, not all possible amplitude values for a specific frequency may occur. Each result is indicated by a bright, colored trace point.

The DC amplitude (at 0 Hz) is not displayed, as  $\lg(0)$  is not defined.

Remote command:

[SPECTrum:FREQUENCY:HORIZontal:SCALE](#) on page 336

**Sample Frequency**

Indicates the sample rate with which FFT analysis is performed. This value may differ from the [Sampling Rate C1 - C4](#) in the data acquisition settings, as the number of samples must be adjusted to a value of  $2^x$  FFT points.

Remote command:

[SPECTrum:FREQUENCY:SAMPLE?](#) on page 337

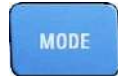
## 5.2 Spectrum Mode (Option R&S RTH-K18)

The optional Spectrum mode allows you to perform sophisticated spectrum analysis directly on the instrument. During spectrum analysis, the captured signal in the time domain is converted to a spectrum of frequencies. As a result, various signal characteristics in the frequency domain can be displayed.


- [Accessing the Spectrum Mode](#)..... 110
- [Display and Control](#)..... 110
- [Performing Spectrum Analysis](#)..... 112
- [Spectrum Mode Settings](#)..... 113
- [Vertical Settings](#)..... 117
- [Marker \(Peak Search\) Settings](#)..... 118
- [Cursor Measurements on Spectrums](#)..... 121
- [Spectrum File Functions](#)..... 124
- [Spectrum Results Export File Format](#)..... 125

### 5.2.1 Accessing the Spectrum Mode

1. Press the MODE key.



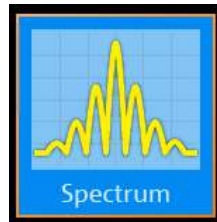2. Select "Spectrum".



A power vs frequency (spectrum) diagram is displayed, and the spectrum of the currently captured data is analyzed, if available.

### 5.2.2 Display and Control


The Spectrum display shows a power vs frequency (spectrum) diagram and relevant analysis parameters. Spectrum results are useful to obtain an overview of the input signal in the frequency domain and to detect unusual signal effects (such as spurs or distortions) visually.

The power levels in the diagram are always scaled logarithmically. The frequency axis can be displayed either logarithmically or linearly.

Various statistical evaluations can be performed and displayed simultaneously. In this case, the different traces are displayed in different colors:

- Currently calculated spectrum: cyan-colored trace (like basic FFT)
- Min hold and max hold evaluation: blue trace
- Averaged spectrum: magenta-colored trace

Optionally, markers can be activated to indicate peak values in the spectrum. Track cursors are available to determine the power or power density in a specific frequency range.

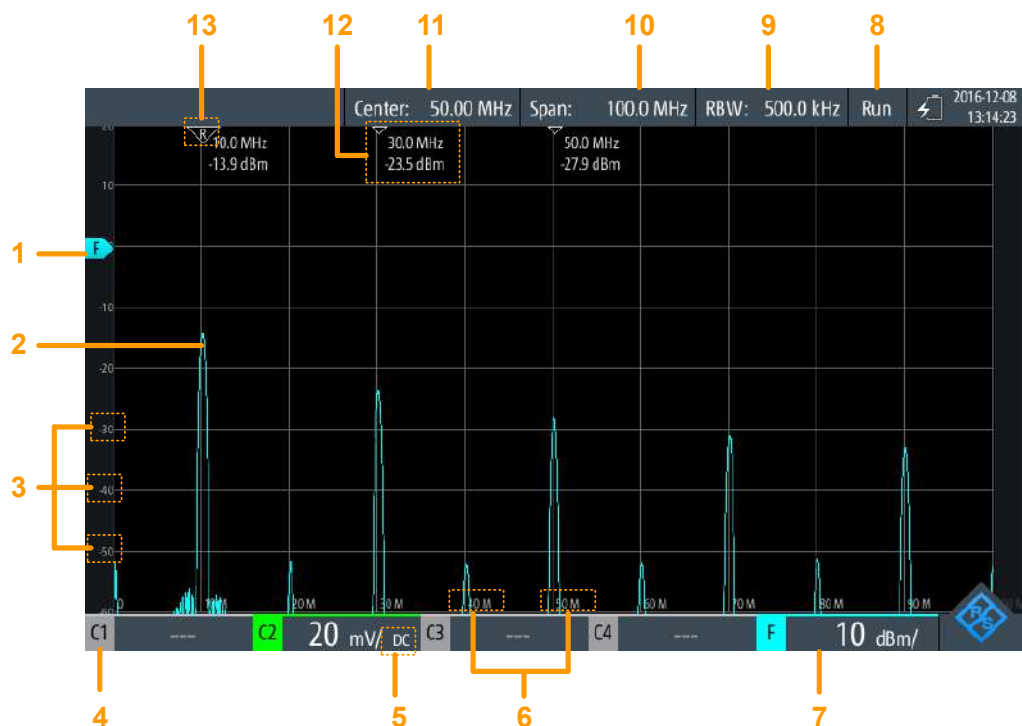

**Figure 5-2: Spectrum display**

- 1 = Reference level (y-axis, by default 0 dBm line)
- 2 = Currently calculated spectrum (power vs. frequency graph)
- 3 = Amplitude scale (y-axis)
- 4 = Channel providing input data
- 5 = Coupling of the input channel
- 6 = Frequency scale (x-axis)
- 7 = Amplitude scale (y-axis, power per division)
- 8 = Operating status of the spectrum measurement ("Hold"/"Run")
- 9 = Displayed resolution bandwidth
- 10 = Displayed frequency span
- 11 = Center frequency
- 12 = Marker results
- 13 = Reference marker

### Data source

Spectrum analysis is performed on the data captured from one of the active input channels. Analysis can only be performed on one channel at a time.

### Time base and resolution bandwidth

Spectrum analysis is generally performed on the data captured during the entire data acquisition. To restrict the time base for which spectrum analysis is to be performed (thus reducing calculation time), you must increase the resolution bandwidth (RBW, see "[Resolution bandwidth \(RBW\)](#)" on page 115). Gating or zooming is not available for spectrum analysis.



### Frequency range

The spectrum display can also be restricted to a specified frequency range.

The frequency axis is adjusted to the available spectrum and the selected [X-Scaling](#) mode (linear or logarithmic). Note that changing the frequency range only affects the spectrum display, not the calculated results.



In logarithmic mode, not all possible amplitude values for a specific frequency may occur. Each result is indicated by a bright, colored trace point.

The DC amplitude (at 0 Hz) is not displayed, as  $\lg(0)$  is not defined.

### Amplitude range

The amplitudes determined for each frequency are displayed on the y-axis of the spectrum. The values are scaled in dBm (dBmW) based on 50  $\Omega$  impedance.

To change the displayed range, use the [RANGE keys](#) and the [POS keys](#). The position of the 0 dBm line is indicated by an "F" on the y-axis.

### Triggering

During spectrum analysis, no triggering is used - the trigger settings are ignored. A spectrum is calculated from the input data continuously.

## 5.2.3 Performing Spectrum Analysis

1. Before you perform spectrum analysis, adjust the instrument settings to the input signal by editing the vertical, horizontal, and acquisition settings.

For details, see:

- [Chapter 2.2, "Vertical Setup"](#), on page 38
- [Chapter 2.3, "Horizontal Setup"](#), on page 42
- [Chapter 2.4, "Acquisition Control"](#), on page 44

2. To adjust the instrument settings to the current input signal automatically, press AUTOSET.
3. Select the "Spectrum" mode.
4. Define the "Center Frequency" for analysis.
5. Define the "Span" of the spectrum to be analyzed.
6. Define the required "RBW: Span Ratio" according to your test requirements.
7. Select the "Window" type according to the signal characteristics that are most relevant for your measurement task (see ["Window type"](#) on page 108).
8. To switch to a logarithmic frequency scaling, select "X-Scaling": "Logarithmic".

9. To perform statistical evaluation of the spectrum results, select one of the evaluation modes.

For averaging, define the number of values to be considered.

10. Select the "Vertical" menu.

11. Define the unit in which the magnitude values are indicated.

12. Define the "Reference Level" as the highest expected input level.



13. To start and stop spectrum analysis, press the RUN STOP key.

14. To determine peaks in the spectrum:

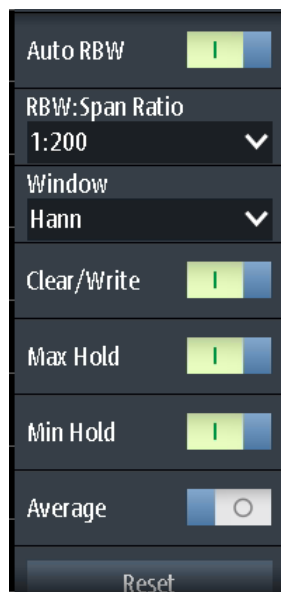
- a) Select the "Marker" menu.
- b) Set the "State" to "On" to enable a peak search.
- c) Define the number of markers as the maximum number of peaks to be detected.
- d) Define the "Threshold", "Excursion", and "Distance" to configure the peak search.
- e) Select one of the displayed traces to be used as the source of the peak search.
- f) Select whether the marker values are indicated as absolute values or relative to the reference (highest) peak.

15. To determine the frequency or level values, or both, at specific points in the spectrum, enable the spectrum track cursors:

- a) Select the "Cursor" menu.
- b) Set the "State" to "On" to display the cursors.
- c) Select one of the displayed traces to be used as the source of the track cursors.
- d) Select whether the values are indicated as absolute values or as the difference between the two cursors ("Delta").
- e) Drag the cursors to the required positions in the spectrum.  
The levels and frequencies of the cursors at the crossings with the spectrum are indicated at the top of the diagram.
- f) To keep the cursors at a fixed distance to one another, enable the "Coupling" option.
- g) To keep the cursors at a fixed (relative) distance to the spectrum, regardless of the current scaling, enable the "Track Scaling" option.

#### 5.2.4 Spectrum Mode Settings

**Access:** "Spectrum" menu



Additional settings for horizontal (frequency) scaling and data acquisition are available for Spectrum mode and directly accessible via the "Spectrum" menu. For a description, see:

- "Time Scale" on page 43
- "Acquisition Mode" on page 45
- "Sampling Rate C1 - C4" on page 46

X-Scaling.....	114
Center Frequency.....	115
Span.....	115
Start Frequency/ Stop Frequency.....	115
Resolution bandwidth (RBW).....	115
Window type.....	116
Trace mode (Clear/Write/ Max Hold/ Min Hold/Average ).....	116
Reset.....	117

### X-Scaling

Defines the scaling method for the frequency (x-)axis of the spectrum display.

"Linear"            Linear scaling

"Logarithmic"    Logarithmic scaling

Note that in this mode, not all possible amplitude values for a specific frequency may occur. Each result is indicated by a bright, colored trace point.

The DC amplitude (at 0 Hz) is not displayed, as  $\lg(0)$  is not defined.

Remote command:

`SPECTrum:FREQUENCY:HORizontal:SCALE` on page 336

### Center Frequency

Defines the frequency in the center of the displayed span for linear frequency scaling (see "X-Scaling" on page 109). Usually, the center frequency is set to the highest measured power level in spectrum analysis.

To set the center frequency, you can also use the POS keys.

Remote command:

`SPECTrum:FREQuency:CENTer` on page 336

### Span

Determines the measured frequencies and the visible range in the spectrum diagram for linear frequency scaling (see "X-Scaling" on page 109). Depending on the selected span, the time scale may be restricted (see "Time Scale" on page 43).

To set the span, you can also use the TIME keys.

The span must be within the range 1 kHz to 500 MHz.

Note that this range only affects the displayed spectrum, not the calculated results.

Remote command:

`SPECTrum:FREQuency:SPAN[:VALue]` on page 337

### Start Frequency/ Stop Frequency

For logarithmic frequency scaling (see "X-Scaling" on page 109), the displayed frequency range is defined by a start and a stop value, rather than a span and center frequency. Note that this range only affects the displayed spectrum, not the calculated results.

Remote command:

`SPECTrum:FREQuency:START` on page 337

`SPECTrum:FREQuency:STOP` on page 338

### Resolution bandwidth (RBW)

The resolution bandwidth (RBW) determines the resolution of the spectrum, that is: the minimum distance between two distinguishable peaks. The higher the resolution (the smaller the ratio), the more peaks are detected, but the longer the measurement requires to finish.

In manual operation, the RBW is defined in relation to the selected frequency span and must lie between 1:1000 and 1:10. If you change the span, the RBW is automatically adjusted to the minimum or maximum allowed value, if necessary. (In remote operation, the RBW can also be defined directly, independently of the span).

In Auto mode, the optimal resolution according to the frequency **Span** and selected **Window type** is used. It is indicated for the "RBW" setting.

Remote command:

`SPECTrum:FREQuency:BANDwidth[:RESolution]:AUTO` on page 340

`SPECTrum:FREQuency:BANDwidth[:RESolution]:RATio` on page 340

`SPECTrum:FREQuency:BANDwidth[:RESolution][:VALue]` on page 336

**Window type**

Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the R&S RTH to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

**Table 5-2: Window type characteristics**

Window type	Frequency resolution	Magnitude resolution	Measurement recommendation
Rectangular	Best	Worst	Separation of two tones with almost equal amplitudes and a small frequency distance
Hamming Hann	Good	Poor	Frequency response measurements, sine waves, periodic signals and narrow-band noise
Flat-Top	Poor	Best	Accurate single-tone measurements
Blackman	Worst	Best	Mainly for signals with single frequencies to detect harmonics Accurate single-tone measurements

Remote command:

[SPECTrum:FREQUENCY:WINDow:TYPE](#) on page 338

[SPECTrum:FREQUENCY:WINDow:FACTOR?](#) on page 338

**Trace mode (Clear/Write/ Max Hold/ Min Hold/Average )**

Determines which of the acquired data is displayed. Several traces can be displayed in parallel, but at least one mode must be selected. By default, the "Clear/Write" mode is selected.

As soon as a new mode is selected, statistical evaluation is restarted.

To clear the results for previous measurements used for statistical evaluation, select [Reset](#).

"Clear/Write"	The currently measured value for each frequency is displayed.
"Max Hold"	The maximum value for each frequency over all measurements is displayed. Using the max hold trace mode is a good way to detect intermittent signals or the maximum values of fluctuating signals, for example.
"Min Hold"	The minimum value for each frequency over all measurements is displayed. Using the min hold trace mode is a good way to highlight signals within noise or suppress intermittent signals.
"Average"	The average value for each frequency in the Clear/write trace over the specified "Number of Averages" is calculated. Averaging reduces the effects of noise, but has no effects on sine signals. Using the trace averaging therefore is a good way to detect signals in the vicinity of noise.

Remote command:

[SPECTrum:WAVEform:MAXimum\[:ENABLE\]](#) on page 342

[SPECTrum:WAVEform:MINimum\[:ENABLE\]](#) on page 342

[SPECTrum:WAVEform:SPECTrum\[:ENABLE\]](#) on page 342

[SPECTrum:WAVEform:AVERage\[:ENABLE\]](#) on page 341

[SPECTrum:FREQuency:AVERage:COUNT](#) on page 339

### Reset

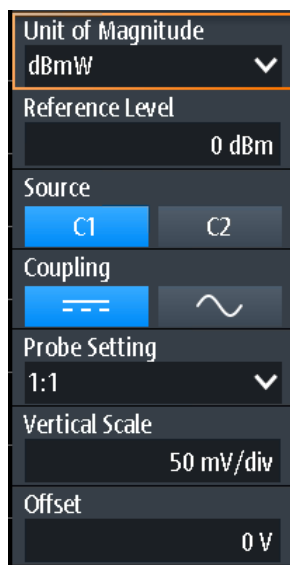
Clears the results for previous measurements used in statistical evaluation (see [Trace mode \(Clear/Write/ Max Hold/ Min Hold/Average \)](#)).

Remote command:

[SPECTrum:FREQuency:RESet](#) on page 342

## 5.2.5 Vertical Settings

You can configure the vertical settings for the input signal in Scope mode. When you select the Spectrum mode, the configuration is maintained. Some additional vertical settings are available in Spectrum mode.



The AUTOSSET function sets the center frequency to the frequency with the highest measured power. All other vertical settings are set to allow for an optimal spectrum display.

The following vertical settings are identical to Scope mode:

- ["Coupling"](#) on page 39
- ["Probe Setting"](#) on page 40
- ["Offset"](#) on page 40

The following settings are available in Spectrum mode only:

Unit of Magnitude..... 118  
 Reference Level..... 118  
 Source..... 118  
 Vertical Scale..... 118

**Unit of Magnitude**

Defines the unit in which the power values are displayed.

Remote command:

[SPECTrum:FREQUency:MAGNitude:SCALE](#) on page 336

**Reference Level**

Defines the expected maximum input signal level.

Remote command:

[SPECTrum:FREQUency:MAGNitude:REFerence\[:VALue\]](#) on page 340



**Source**

Selects the channel for which the captured data is analyzed. Spectrum analysis can only be performed on one channel at a time.

The source can also be selected using the CH1/CH2 keys.

Remote command:

[SPECTrum:SOURce](#) on page 335

**Vertical Scale**

Defines the scaling of the input signal in Volt per division.

Vertical scale and vertical position affect the resolution of the waveform amplitude directly. To get the full resolution, make sure that the waveforms cover most of the screen's height.

**Note:** This value configures the input signal. The vertical scale of the y-axis of the spectrum, which is indicated in the channel settings beneath the spectrum diagram, must be configured using the RANGE and POS keys.

**5.2.6 Marker (Peak Search) Settings**

**Access:** "Marker" menu



You can configure which peaks the instrument will find within the spectrum results. Peaks are indicated by markers in the power vs frequency display. The frequency and power level measured at the peak is also indicated in the diagram.



**Overlapping markers**

If two detected peaks are very close to each other and the markers in the display overlap, the marker with the lower amplitude is indicated in a darker color and put slightly in the background, while the one with the higher amplitude is displayed normally. Using the remote commands, both values can be retrieved.

**Remote commands for results:**

[SPECTrum:MARKer:RESult<m>:FREQuency\[:VALue\]? on page 347](#)

[SPECTrum:MARKer:RESult<m>:FREQuency:DELTA? on page 347](#)

[SPECTrum:MARKer:RESult<m>:LEVel\[:VALue\]? on page 348](#)

[SPECTrum:MARKer:RESult<m>:LEVel:DELTA? on page 348](#)

[SPECTrum:MARKer:RMARker:FREQuency? on page 348](#)

[SPECTrum:MARKer:RMARker:VALue? on page 349](#)

State..... 120

Number of Markers..... 120

Threshold..... 120

Peak excursion..... 120

Distance..... 121

Trace Source..... 121

Marker Value..... 121



**State**

If enabled, a peak search is performed on the current spectrum results and the specified **Number of Markers** are displayed.

Remote command:

`SPECTrum:MARKer[:STATe]` on page 345

**Number of Markers**

Defines the maximum number of markers used to indicate peaks in the spectrum results. With 3 active markers, the 3 peak values in the spectrum are indicated. Note that if fewer peaks are detected than the specified maximum number of markers, fewer markers are displayed.

Remote command:

`SPECTrum:MARKer:COUNT` on page 345

`SPECTrum:MARKer:RCOUNT?` on page 347

**Threshold**

Defines an absolute level threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

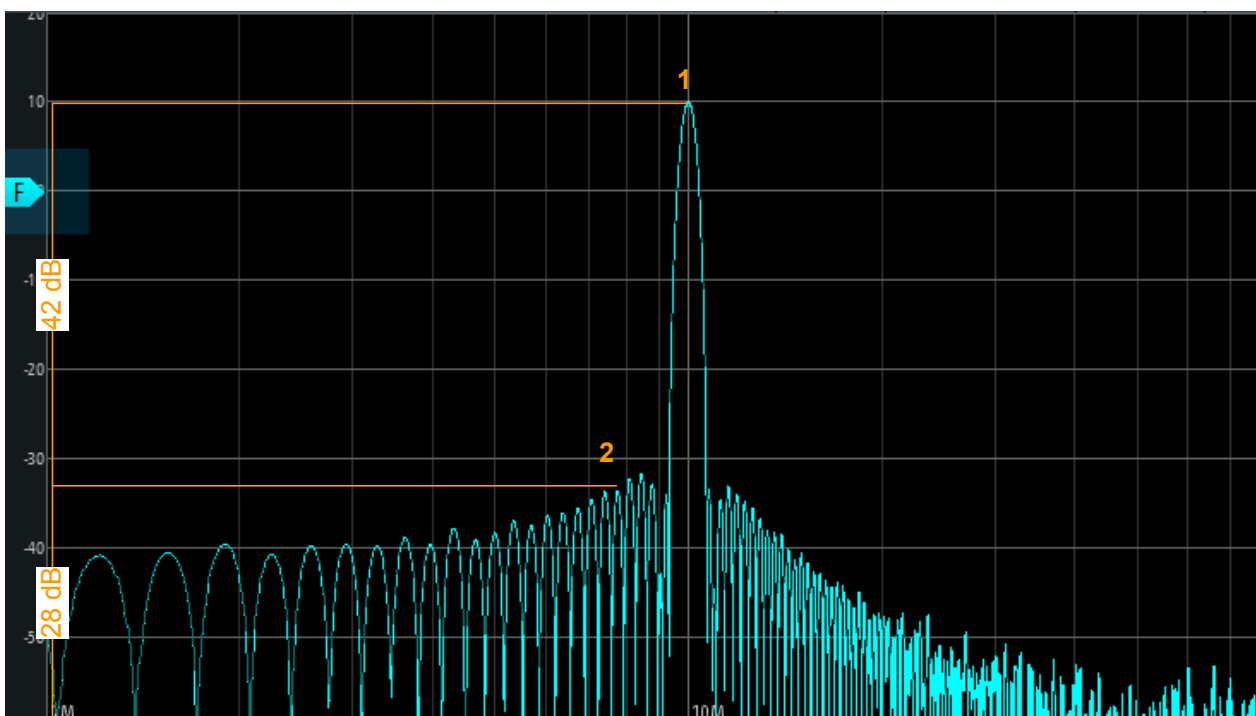
Remote command:

`SPECTrum:MARKer:SETup:MLEVel` on page 346

**Peak excursion**

Defines a relative threshold, the minimum level value by which the waveform must rise or fall to be considered a peak. To avoid identifying noise peaks, enter a peak excursion value that is higher than the noise levels.

The following figure shows a spectrum display:



If "Peak excursion" is 30 dB, the peak 1 is found. If "Peak excursion" is 20 dB, also the peak 2 and several others are found.

Remote command:

[SPECTrum:MARKer:SETup:EXCursion](#) on page 346

#### **Distance**

Defines a minimum distance between two frequencies that must be exceeded in order to detect individual peaks.

Remote command:

[SPECTrum:MARKer:SETup:DIStance](#) on page 346

#### **Trace Source**

Selects the trace on which the markers are placed. Only active traces are available (see "Trace mode (Clear/Write/ Max Hold/ Min Hold/Average )" on page 116).

Remote command:

[SPECTrum:MARKer:SOURce](#) on page 346

#### **Marker Value**

Determines whether the absolute measured results at each cursor position are displayed, or the delta between the cursors.

Remote command:

[SPECTrum:MARKer:RESult<m>:FREQuency\[:VALue\]?](#) on page 347

[SPECTrum:MARKer:RESult<m>:FREQuency:DELTA?](#) on page 347

[SPECTrum:MARKer:RESult<m>:LEVel\[:VALue\]?](#) on page 348

[SPECTrum:MARKer:RESult<m>:LEVel:DELTA?](#) on page 348

## **5.2.7 Cursor Measurements on Spectrums**

Track cursors are available for spectrum data to determine the power or power density in a specific frequency range.

### **5.2.7.1 Cursor Measurement Results**

For the spectrum diagram, special track cursors are available. If enabled, you can place the two cursors at any position in the spectrum. As a result, the frequency and measured power levels of the selected trace at the crossing point with the cursors are displayed. Both the power and the power density for each cursor are indicated. Instead of the absolute results for the second cursor, the delta between both cursors can be provided.

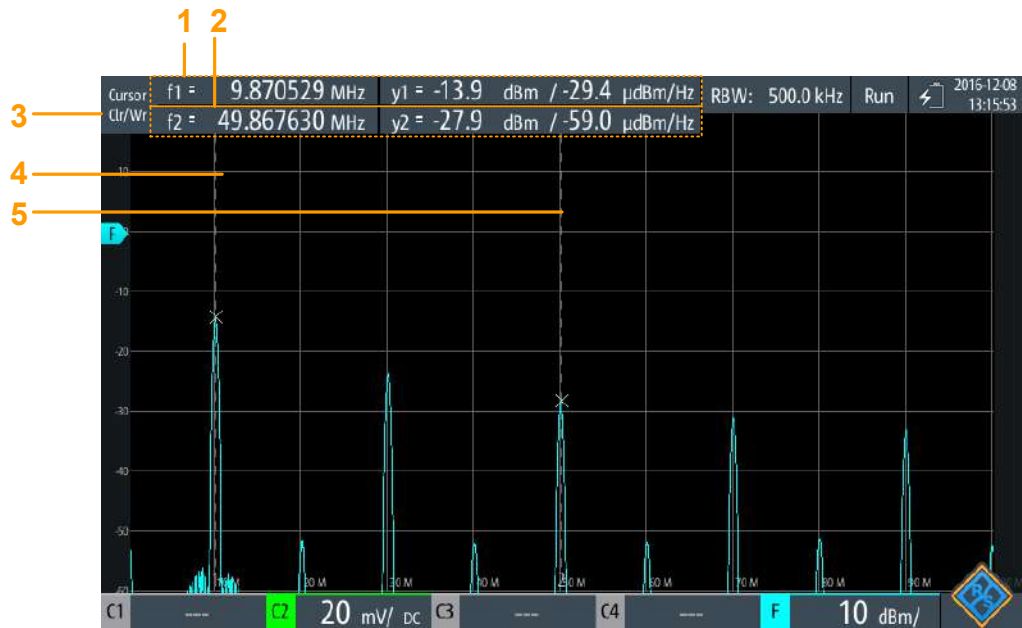


Figure 5-3: Cursor display in Spectrum mode

- 1 = Cursor 1 frequency and level results
- 2 = Cursor 2 frequency and level results
- 3 = Trace used as source for cursor results
- 4 = Cursor 1
- 5 = Cursor 2

#### Remote commands for results:

[SPECTrum:CURSor<m>:FREQuency\[:VALue\]](#) on page 344

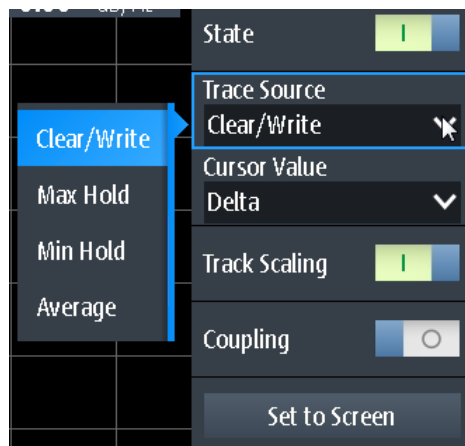
[SPECTrum:CURSor<m>:FREQuency:DELTA?](#) on page 344

[SPECTrum:CURSor<m>:LEVel\[:VALue\]?](#) on page 344

[SPECTrum:CURSor<m>:LEVel:DELTA?](#) on page 344

#### 5.2.7.2 Cursor Settings

**Access:** "Cursor" menu

**State**

Enables or disables the spectrum cursor measurement.

Remote command:

[SPECTrum:CURSor<m>:STATe](#) on page 342

**Trace Source**

Selects the trace on which the cursors are placed. Only active traces are available (see "Trace mode (Clear/Write/ Max Hold/ Min Hold/Average )" on page 116).

Remote command:

[SPECTrum:CURSor<m>:SOURce](#) on page 343

**Cursor Value**

Determines whether the absolute measured results at each cursor position are displayed, or the delta between the cursors.

Remote command:

[SPECTrum:CURSor<m>:FREQuency\[:VALue\]](#) on page 344

[SPECTrum:CURSor<m>:FREQuency:DELTA?](#) on page 344

[SPECTrum:CURSor<m>:LEVel\[:VALue\]?](#) on page 344

[SPECTrum:CURSor<m>:LEVel:DELTA?](#) on page 344

**Track Scaling**

If enabled, the position of the cursor lines is adjusted if the vertical or horizontal scales are changed. The cursor lines keep their relative position to the waveform.

If disabled, the cursor lines remain on their position on the display if the scaling is changed.

Remote command:

[SPECTrum:CURSor<m>:SCPLing](#) on page 343

**Coupling**

Couples the cursor lines so that the distance between the two lines remains the same if one cursor is moved.

Remote command:

[SPECTrum:CURSor<m>:COUPLing](#) on page 343

**Set to Screen**

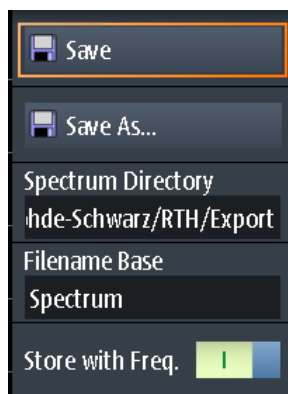
Sets the cursors to a default position on the screen. This is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Remote command:

[SPECTrum:CURSor<m>:SCReen](#) on page 345

**5.2.8 Spectrum File Functions**

Access: FILE > "Spectrum"



The results of a spectrum measurement can be exported similarly to a waveform (see also [Chapter 11, "Documenting Results"](#), on page 250). The OneTouch functionality is also available (see [Chapter 11.6, "Quick Save with OneTouch"](#), on page 261).

For details on the export file format, see [Chapter 5.2.9, "Spectrum Results Export File Format"](#), on page 125.

**Save, Save As**

Save the harmonic results. The functions are available if the instrument is in "Spectrum" mode.

"Save" Saves the file in the defined "Harmonic Directory" using the autonaming pattern.

"Save As" Opens a file explorer where you can select the directory and enter the filename.

Remote command:

[SPECTrum:EXPort:SAVE](#) on page 349

**Harmonic Directory**

Defines the directory where the harmonic results files are stored. If a USB flash drive is connected, the instrument stores the data to this external device by default.

Remote command:

[SPECTrum:EXPort:NAME](#) on page 349

**Filename Base**

Defines the first part of the filename. The complete filename pattern is:

<filename base>\_<date>\_<time>.csv.

Remote command:

`SPECTrum:EXPort:NAME` on page 349

#### Store with Freq.

Includes the frequency values in the stored results.

Remote command:

`SPECTrum:EXPort:INCXvalues` on page 349

## 5.2.9 Spectrum Results Export File Format

The spectrum results export file format is similar to a waveform export file; it is also stored in CSV format. You can convert the comma-separated text to columns (see [Chapter 11.4.3.3, "Converting CSV to Excel Files"](#), on page 260).

**Table 5-3: Header data (converted to table)**

Spectrum Results	[Example data]
Model	RTH1004
SerialNumber	xxxxx
Firmware Version	'1.50'
Center Frequency [Hz]	2.5e+008
Span [Hz]	5e+008
RBW [Hz]	2.5e+006
Window	Hann
Number of Average [n]	64
Record Length [n]	6554
Start Frequency [Hz]	0
Frequency Resolution [Hz]	76293.9

**Table 5-4: Spectrum (trace) data (converted to table data)**

Frequency	Clear/Write	Max	Min	Average
[Hz]	[V]/[A]*)	[V]/[A]*)	[V]/[A]*)	[V]/[A]*)
0	0.000113039			
76293.9	0.000226932			
...				
*) depends on probe setting				



### Converting voltage or Ampere to power values

The spectrum results are provided as voltages or in Amperes (depending on the probe setting). To convert these results (U/I) to power values (P), use the following equations:

$$P_{dBV}(U) = 20 \cdot \lg\left(\frac{U}{1V}\right)$$

$$P_{dBA}(I) = 20 \cdot \lg\left(\frac{I}{1A}\right)$$

$$P_{dBm}(U) = 10 \cdot \lg\left(\frac{P}{1mW}\right) = 10 \cdot \lg\left(\frac{U^2}{R} / 1mW\right) = P_{dBV}(U) + 30 - 10 \cdot \lg\left(\frac{R}{1\Omega}\right)$$

$$P_{dBm}(I) = 10 \cdot \lg\left(\frac{P}{1mW}\right) = 10 \cdot \lg\left(\frac{I^2 \cdot R}{1mW}\right) = P_{dBA}(I) + 30 + 10 \cdot \lg\left(\frac{R}{1\Omega}\right)$$

Where:

- R = 50 Ω
- P = U \* I = U<sup>2</sup> / R = I<sup>2</sup> \* R

## 5.3 Harmonics Measurement (Option R&S RTH-K34)

With this measurement, you can easily measure the harmonics of an input signal. In addition, the total harmonic distortion (THD) is calculated.

The harmonics measurement performs an FFT on the input signal and determines the power levels measured at the specified fundamental frequency and at each harmonic. Harmonics are frequencies that are a multiple of the fundamental frequency.

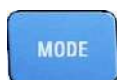
As a result, the magnitude, frequency and phase values for the selected harmonics are shown, as well as the RMS power values and the total harmonic distortion (THD).

In general, every signal contains harmonics. Harmonics are generated by nonlinear characteristics, which add frequencies to a pure sine wave. Harmonics are particularly critical regarding high-power transmitters such as transceivers because large harmonics can interfere with other radio services.


Harmonic distortion can be determined as the level of the individual components, or as the root mean square of all components together, the total harmonic distortion (THD). The THD is set in relation to the power of the fundamental frequency.

### 5.3.1 Accessing the Harmonic Mode

1. Press the MODE key.



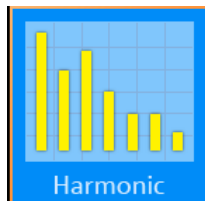2. Select "Harmonic".



An FFT is performed on the input signal, and the power level at the fundamental and all harmonic frequencies of the signal (that is: all multiples of the fundamental frequency) are analyzed.

### 5.3.2 Harmonic Measurement Results and Display

As the result of a harmonic measurement, a bargraph is displayed, with one bar for each of 64 possible harmonic frequencies. The amplitudes determined for each harmonic are indicated by a colored bar. The results for each active input channel are displayed in a different color. The values are scaled in dB or percent, in relation to the level at the fundamental frequency. If a limit is defined, either manually or predefined by a standard, the limit is indicated by a blue horizontal line for each harmonic. If the measured value exceeds the limit, the background is highlighted red. The darker colored bar indicates the maximum value measured for the harmonic.

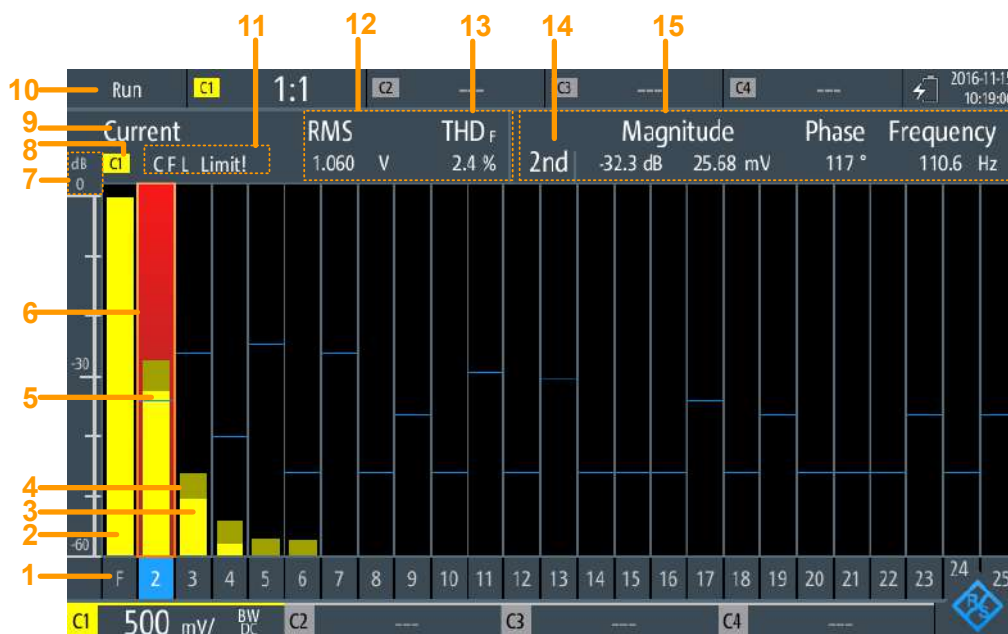


Figure 5-4: Harmonic results and display



(1) Order of harmonic.....	128
(2) Power level of fundamental frequency.....	128
(3+4) Power level of individual harmonics.....	128
(5+6) Limit line and check for individual harmonics.....	128
(7) Power level scale.....	129
(8) Input channel.....	129
(9) Result type for numeric results.....	129
(10) Operating status.....	129
(11) Error indicator.....	129
(12) RMS.....	130
(13) Total harmonic distortion (THD).....	130
(14) Selected harmonic.....	130
(15) Numeric results for selected harmonic.....	131

### (1) Order of harmonic

Results are displayed for each of 64 possible harmonic frequencies. You can restrict the number of harmonics to be analyzed (see "[Display Harmonics, Max No Harmonics](#)" on page 134).

Remote command:

(determined by suffix <n> in remote command)

### (2) Power level of fundamental frequency

The calculated power level at the fundamental frequency. The graphical level results are indicated in relation to the power level of the fundamental frequency. Thus, this bar is always at 100 % or 0 dB.

Remote command:

`HARMonic:RESult<m>:HARMonics1:ABSMagnitude?`

### (3+4) Power level of individual harmonics

For each harmonic and each input channel, a colored bar indicates calculated power level at the selected harmonic frequency, set in relation to the power level of the fundamental frequency. The color of the bar corresponds to the color of the input channel.

The brighter colored bar is the current value, while the darker colored bar is the maximum value in the current measurement.

Remote command:

`HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude[:CURRent]?`

on page 356

`HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MAXimum?` on page 356

`HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MINimum?` on page 356

`HARMonic:RESult<m>:HARMonics<n>:RELMagnitude[:CURRent]?`

on page 359

`HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MAXimum?` on page 359

`HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MINimum?` on page 359

### (5+6) Limit line and check for individual harmonics

If a limit is defined for the individual harmonic, it is indicated in the graphic (see "[Limits, Loaded File](#)" on page 133). If the measured value exceeds the limit line, the background of the harmonic bar is highlighted red.

Remote command:

[HARMonic:RESult<m>:HARMonics<n>:LIMit?](#) on page 357

[HARMonic:RESult<m>:HARMonics<n>:LIMCheck?](#) on page 356

[HARMonic:RESult<m>:HARMonics<n>:LIMViolation?](#) on page 357

### (7) Power level scale

Indicates whether the bargraph results are displayed in percent or dB.

Remote command:

[HARMonic:SCALE](#) on page 353

### (8) Input channel

Harmonics measurement is performed on the data captured from one of the active input channels. The measurement can be performed on all channels simultaneously. The bars and numeric results for each channel are displayed in the same color as the channel indicator.

Remote command:

[CHANnel<m>:STATe](#) on page 283

### (9) Result type for numeric results

Either the currently measured numeric values, or the minimum or maximum values can be displayed. The selected result type is indicated above the diagram. The bargraph always displays both the current and the maximum values.

In addition, an average over several measurements can be calculated (not indicated in the diagram.)

Remote command:

[HARMonic:STATistic](#) on page 353

### (10) Operating status

Indicates the status of the harmonic measurement ("Hold"/"Run").

### (11) Error indicator

If an error occurs during the measurement, an indicator is displayed above the bargraph. These indicators remain visible throughout the measurement, for all acquisitions. In addition, the long form of the error is indicated, blinking, for the duration of the acquisition in which an error occurs only.

The following errors may be indicated:

- **"C"** (Clipping)  
The amplitudes determined for each frequency must be within the currently defined amplitude range in order to be measured correctly. If the signal is not entirely within the defined range, a "Clipping" message is displayed next to the channel indicator in the numeric result area of the screen. The measurement is invalid and no results are calculated.  
To change the amplitude range, use the [RANGE keys](#) or the AUTOSSET function.
- **"F"** (Frequency)  
If the specified [fundamental frequency](#)  $\pm 10\%$  is not detected in the signal, the measurement is invalid.
- **"L"** (Limit)

If a limit check is activated and the measured value exceeds the specified limit for a harmonic, a limit violation has occurred. The background of the harmonic is highlighted red.

Remote command:

[HARMonic:RESult<m>:CLIPping?](#) on page 355

[HARMonic:RESult<m>:FRQMissing?](#) on page 355

[HARMonic:RESult<m>:LIMViolation?](#) on page 359

## (12) RMS

The calculated root mean square (RMS) amplitude in the entire signal, that is: for all harmonics and the fundamental frequency.

$$U_{RMS} = \sqrt{\frac{1}{n} \cdot \sum_{k=0}^{N-1} u^2(k)}$$

Remote command:

[HARMonic:RESult<m>:RMS\[:CURRent\]?](#) on page 360

[HARMonic:RESult<m>:RMS:MINimum?](#) on page 360

[HARMonic:RESult<m>:RMS:MAXimum?](#) on page 360

## (13) Total harmonic distortion (THD)

THD (total harmonic distortion), that is: the root mean square (RMS) amplitude (voltage or current) of the harmonics.

The value is provided either:

- Relative to the RMS amplitude at the fundamental frequency (first harmonic,  $THD_F$ ):

$$THD_F = \frac{1}{U_{RMS,1}} \cdot \sqrt{\sum_{i=2}^{64} U_{RMS,i}^2}$$

- Relative to the total power of the signal ( $THD_R$ ):

$$THD_R = \frac{THD_F}{\sqrt{1 + THD_F^2}}$$

Remote command:

[HARMonic:RESult<m>:THD\[:CURRent\]?](#) on page 361

[HARMonic:RESult<m>:THD:MINimum?](#) on page 361

[HARMonic:RESult<m>:THD:MAXimum?](#) on page 361

[HARMonic:THDType](#) on page 354

## (14) Selected harmonic

Some results are provided for a single, selected harmonic. You select the harmonic by tapping the number at the bottom of the bargraph. The selected harmonic is highlighted.

Remote command:

(determined by suffix <n> in remote command)

**(15) Numeric results for selected harmonic**

The following numeric results are displayed for the (14) Selected harmonic:

- Order of the harmonic
- Magnitude (relative to (2) Power level of fundamental frequency and absolute value)
- Phase (percent or dB, depending on Scale setting)
- Frequency

Remote command:

`HARmonic:RESult<m>:HARMonics<n>:ABSMagnitude[:CURRent]?`

on page 356

`HARmonic:RESult<m>:HARMonics<n>:ABSMagnitude:MINimum?` on page 356

`HARmonic:RESult<m>:HARMonics<n>:ABSMagnitude:MAXimum?` on page 356

`HARmonic:RESult<m>:HARMonics<n>:RELMagnitude[:CURRent]?`

on page 359

`HARmonic:RESult<m>:HARMonics<n>:RELMagnitude:MINimum?` on page 359

`HARmonic:RESult<m>:HARMonics<n>:RELMagnitude:MAXimum?` on page 359

`HARmonic:RESult<m>:HARMonics<n>:PHASe?` on page 358

`HARmonic:RESult<m>:HARMonics<n>[:FREQuency]?` on page 359

**5.3.3 Performing a Harmonic Measurement**

1. Select the "Harmonic" mode.
2. To adjust the instrument settings to the current input signal automatically, press AUTOSET.  
The AUTOSET function detects the fundamental frequency in the signal automatically if it lies between 10 Hz and 1 kHz. If none of the predefined values (50 Hz, 60 Hz, 400 Hz) fit, a "User" value is set.
3. Alternatively to the AUTOSET function, define the "Fundamental Frequency" manually. Select "User" and enter the frequency.
4. If a "Clipping" message is displayed next to the channel indicator in the numeric result area of the screen, the signal is not entirely within the defined measurement range. Use the AUTOSET key or the RANGE keys to correct the range.
5. To perform a limit check, do one of the following for the "Limits" setting:
  - To check the limits specified by the standard, select "EN50160".
  - To configure user-specified limits in a file, select "User" and open the .CSV file.
6. To restrict the number of harmonics to be displayed in the bargraph, use the "Display Selection" setting.  
Select a predefined selection, or define the number in the "Max No Harmonics" field.
7. To display the results for a specific harmonic, select the number below the bar in the graph.

8. To calculate the average results over several measurements, select "Average" and define the number of results to consider.
9. To clear the result data used for statistical evaluation and start a new measurement, select "Clear Results".

**To save the results to a file**

1. Press the FILE key.
2. Select "Harmonics".
3. Check the "Harmonic Directory" and the "Filename Base". Adjust if necessary.
4. Select "Save".

For details on the format of the result file, see [Chapter 5.3.6.2, "Harmonic Results Export File Format"](#), on page 136.

### 5.3.4 Harmonic Mode Settings

**Access:** "Harmonic" menu

CH <N>.....	132
Scale.....	132
THD Type.....	132
Statistic.....	133
Clear Results.....	133
Fundamental Frequency, Value.....	133
Limits, Loaded File.....	133
Open.....	134
Display Harmonics, Max No Harmonics.....	134
Average.....	134



**CH <N>**

Selects the channel for which the captured data is analyzed in "Harmonic" mode. Harmonic measurements can be performed on all channels simultaneously. The results are indicated by different colored bars and numbers, corresponding to the channel button color.

Remote command:  
[CHANnel<m>:STATe](#) on page 283

**Scale**

Switches the scale for the measured harmonic levels between logarithmic (dB) and linear (percent). The values are relative to the level measured for the fundamental frequency.

Remote command:  
[HARMonic:SCALE](#) on page 353

**THD Type**

Switches between different calculation methods for the total harmonic distortion.

"THD <sub>F</sub> "	The RMS amplitude (voltage or current) of the harmonics relative to the RMS amplitude of the fundamental component
"THD <sub>R</sub> "	The RMS amplitude of the harmonics relative to the RMS amplitude of the input signal

Remote command:

[HARMonic:THDType](#) on page 354

### Statistic

By default, the numeric results indicate the currently measured values. Optionally, you can switch to the minimum or maximum values. Which value is calculated is indicated in the result display (see "(9) Result type for numeric results" on page 129).

**Note:** The bargraph always displays both the current and the maximum values.

Remote command:

[HARMonic:STATistic](#) on page 353

### Clear Results

Clears the results for previous acquisitions used in statistical evaluation (see "Statistic" on page 133 and "Average" on page 134).

Remote command:

[HARMonic:CLEar](#) on page 350

### Fundamental Frequency, Value

Defines the basis of the harmonics measurement. Harmonics are determined as multiples of this frequency.

For a user-defined frequency, select "User" and enter the "Value".

If the specified frequency  $\pm 10\%$  is not detected in the signal, the measurement is invalid. An "F" is displayed as an error indicator.

Remote command:

[HARMonic:FUNDamental:TYPE](#) on page 351

[HARMonic:FUNDamental:USER](#) on page 352

[HARMonic:RESult<m>:FRQMissing?](#) on page 355

### Limits, Loaded File

Defines for which harmonics a limit check is to be performed. If a limit check is activated and the specified limit is exceeded for a harmonic, the background of the harmonic is highlighted red in the graphic. In addition, an "L" is displayed as an error indicator.

"Limit!" is indicated during the acquisition in which the violation occurs.

If the number of harmonics to be analyzed is restricted by a standard or a user-defined file, only the results for those harmonics can be displayed or exported (see also "Display Harmonics, Max No Harmonics" on page 134).

"None" No limit check is performed. All 64 harmonics can be displayed and exported.

"EN50160" Limits are checked according to the predefined values in the EN50160 standard. Only specific harmonics are selected for analysis.

"User" Limits are checked according to the values in a user-defined file. For details on the required file format, see [Chapter 5.3.6.1, "Limit File Format"](#), on page 135.

If a user-defined limit file is loaded for harmonics measurement, only the results for the specified harmonics are calculated, displayed, and exported. A limit check is performed only for those harmonics for which a limit value is defined.

If "User" is selected, the "Loaded File" field indicates the currently loaded file.

Select the file that contains the user-defined limits using the [Open](#) function.

Remote command:

[HARMonic:LIMits:TYPE](#) on page 353

### Open

Opens a user-defined file that contains the selection of harmonics and, optionally, the limits for individual harmonics.

The "Loaded File" field indicates the currently loaded file.

Note that this setting is only available if [Limits](#) is set to "User".

Remote command:

[HARMonic:LIMits:NAME](#) on page 353

[HARMonic:LIMits:LOAD](#) on page 352

[HARMonic:RESult<m>:NOHarmonics?](#) on page 360

[HARMonic:FUNDamental:CURRent?](#) on page 351

### Display Harmonics, Max No Harmonics

Determines the number of harmonics to be displayed in the bargraph. Up to 64 harmonics can be displayed. By decreasing the number of harmonics, the bargraph becomes easier to analyze.

Note that this setting only affects the graphical result display. It has no effect on the measurement results or the selection of harmonics for which results are provided during a file export (manually or via remote command). For that purpose, see [Limits](#).

Harmonics that were previously eliminated by the [Limits](#) setting cannot be displayed.

To restrict the number of harmonics to display, select a predefined selection, or "User" and enter the "Max No Harmonics". All harmonics of an order smaller than or equal to the specified value (and selected for analysis) are displayed.

Remote command:

[HARMonic:DISPlay:TYPE](#) on page 350

[HARMonic:DISPlay:USER](#) on page 351

[HARMonic:RESult<m>:NOHarmonics?](#) on page 360

### Average

Determines the number of acquisitions for which the results are averaged. By default, no averaging is performed.

Note that invalid measurements (for example due to clipping or a missing fundamental frequency) are not considered for averaging.

To clear the results for previous acquisitions used for averaging, select [Clear Results](#).

Remote command:

[HARMonic:AVERage](#) on page 350

### 5.3.5 Harmonic File Functions

Access: FILE > "Harmonics"

The results of a harmonic measurement can be exported similarly to a waveform (see also [Chapter 11, "Documenting Results"](#), on page 250). The OneTouch functionality is also available (see [Chapter 11.6, "Quick Save with OneTouch"](#), on page 261).

For details on the export file format, see [Chapter 5.3.6.2, "Harmonic Results Export File Format"](#), on page 136.

#### Save, Save As

Save the harmonic results. The functions are available if the instrument is in "Harmonics" mode.

"Save" Saves the file in the defined "Harmonic Directory" using the autonaming pattern.

"Save As" Opens a file explorer where you can select the directory and enter the filename.

Remote command:

[HARMonic:EXPort:SAVE](#) on page 355

#### Harmonic Directory

Defines the directory where the harmonic results files are stored. If a USB flash drive is connected, the instrument stores the data to this external device by default.

Remote command:

[HARMonic:EXPort:NAME](#) on page 354

#### Filename Base

Defines the first part of the filename. The complete filename pattern is:

<filename base>\_<date>\_<time>.csv.

Remote command:

[HARMonic:EXPort:NAME](#) on page 354

### 5.3.6 Reference: Harmonic Results and Limit File Formats

#### 5.3.6.1 Limit File Format

The limit file defines which harmonics are of interest for analysis, and optionally, the limits against which each harmonic is to be tested. If a user-defined limit file is loaded for harmonics measurement, only the results for the specified harmonics are calcula-



ted, displayed, and exported. A limit check is performed only for those harmonics for which a limit value is defined.



### Sample file

A sample limit file is provided on the instrument:

C:\Users\<<user\_name>\Rohde-Schwarz\RTH\Harmonic\LimitExample.csv

The file format is a comma-separated list (.csv). At least the following contents must be included:

#### Header:

<Device>,Version,<file\_version>

Harmonics,Limit[%]

#### Values:

<Order of harmonic>, <limit value in % of fundamental>



- Comments introduced by "#" are allowed.
- If a limit is not provided for a harmonic, the harmonic is displayed and its results are included in the export, but not in the limit check.
- The fundamental is always displayed and need not be included in the list.

#### Example:

```
RTH,Version,1.0
Harmonics,Limit[%]
2,10.5
4,0.004
20,3.7
10
13,0.01
3,0.01
```

### 5.3.6.2 Harmonic Results Export File Format

The harmonic results export file format is similar to a waveform export file; it is also stored in CSV format. You can convert the comma-separated text to columns (see [Chapter 11.4.3.3, "Converting CSV to Excel Files"](#), on page 260).

The harmonics results file contains some general header data and then a set of result data for each harmonic. A maximum of 64 results can be provided, but the actual number of harmonics may be restricted (see ["Limits, Loaded File"](#) on page 133). Each set of data contains the results for a specific harmonic in each input channel.

**Table 5-5: Header data (converted to table)**

Harmonic Results		[Description - not included in file]
Model	RTH1004	

SerialNumber	xxxxx				
Firmware Version	'1.50'				
ID	CH1	CH2	CH3	CH4	Results for each channel
NbOfResults [n]					Number of results included in averaging and statistics operations
RMS Unit					Unit used for RMS results
RMS					Current RMS of the signal power (
RMS Max					Maximum RMS of the signal power
RMS Min					Minimum RMS of the signal power
THDf/ THDr [%]					Current THD in relation to the RMS amplitude of the fundamental frequency (THDf) or the total power of the signal (THDr)
THDf/ THDr Max [%]					Maximum THD
THDf/ THDr Min [%]					Minimum THD
Clipping [bool]					Clipping occurred during the measurement?
FrequencyMissing [bool]					Fundamental frequency could not be measured?
LimitViolation [bool]					A limit was exceeded?

**Table 5-6: Results for individual harmonics (converted to table data)**

		Ch 1						Ch 2 ...		
Harmonic ID	Limit	Freq.	Magn. current	Magn. max	Magn. min	Phase	Limit violation	Limit	Freq.	Magn. current
[n]	[%]	[Hz]	[V]	[V]	[V]	[deg]	[bool]	[Hz]	[V]	[V]
1										
2										
...										

## 6 Multimeter Measurements

The 4-channel R&S RTH1004 has 4 software-based voltmeters, which can measure in parallel. For each voltmeter you can select the source and measurement type. See [Voltmeter \(R&S RTH1004\)](#).

The 2-channel R&S RTH1002 has a hardware-based digital multimeter with two separate banana plug inputs for various multimeter measurements. Except for voltages, the DMM can also measure resistance, capacitance, temperature and more. See [Digital Multimeter \(R&S RTH1002\)](#).

### 6.1 Digital Multimeter (R&S RTH1002)

The hardware-based digital multimeter features various multimeter measurements. Except for voltages, the DMM can also measure resistance, capacitance, temperature and more.

The R&S RTH can run one DMM measurement at a time, the maximum resolution is 10000 counts and 4 digits.

The measurement range can be set automatically or manually. In auto range, the instrument sets the range so that it can measure and display with maximum accuracy. Probe settings are not affected, and statistical results are kept when the instrument adjusts the range automatically. Auto range is available for all voltage and current measurements, and also for resistance, capacitance and frequency measurements.

In "Meter" mode, a separate self-alignment of the meter inputs is available, see [Chapter 12.3, "Selfalignment"](#), on page 265.

All remote commands for configuration and measuring are listed in [Chapter 14.7, "Digital Multimeter \(R&S RTH1002\)"](#), on page 361.

#### 6.1.1 Connecting Test Leads (R&S RTH1002)

The R&S RTH1002 has an integrated digital multimeter (DMM) and test leads for multimeter measurements.



Figure 6-1: Meter inputs to connect test leads

1. Connect the leads first to the DMM inputs at the top of the instrument, and then to the DUT.
2. To start meter measurements, press the DMM key.

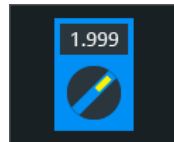
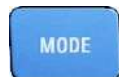
### 6.1.2 Accessing the Meter Mode

- ▶ There are several ways to start the multimeter mode:

- Press the DMM key.



- Press the MODE key, and select "Meter".



- To start relative measurements, press the DMM REL key.

The multimeter interface is displayed, and the measurement is started immediately.

### 6.1.3 Display and Control

The multimeter display shows detailed results and setup icons.

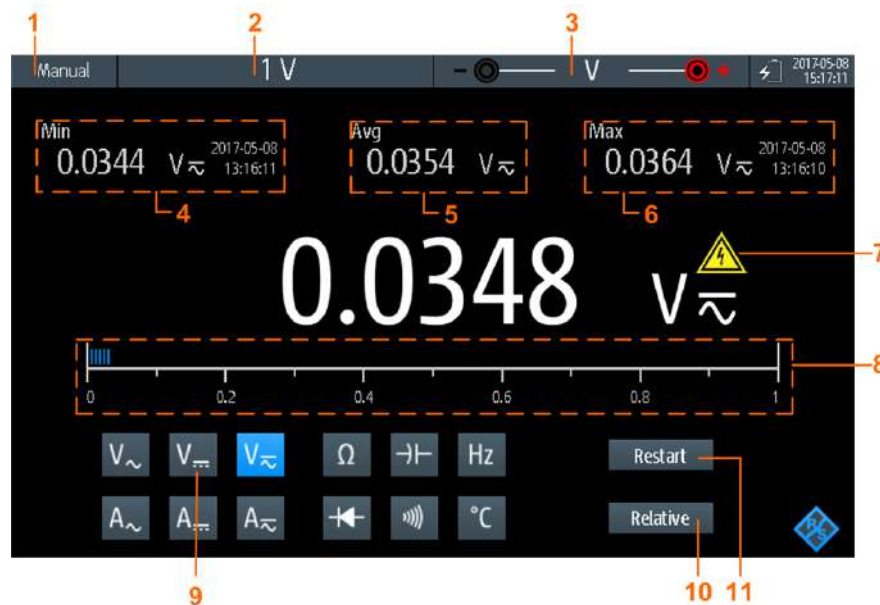




Figure 6-2: Display of the digital multimeter

- 1 = Measurement state. "Manual" or "Auto": running measurement with manual or automatic range. "Hold": stopped measurement.
- 2 = Measurement range
- 3 = Test lead connection including polarity
- 4 = Minimum value and timestamp
- 5 = Average value
- 6 = Maximum value and timestamp
- 7 = Warning sign, shows up if the measured value is higher than 30 V
- 8 = Bargraph displaying the measured value
- 9 = Measurement type
- 10 = Activates or deactivates relative measurement
- 11 = Restarts the measurement and resets all values

In meter mode, the keys behave slightly different from scope mode:

- The AUTOSSET key toggles the range mode: autoranging and manual range setting.
- The vertical RANGE and POS keys adjust the measurement range.
- The MEAS key opens the "Meter" menu.
- The following keys work as usual: FILE, , , PRESET, MODE, BACK.
- The CH keys switch back to the scope mode.
- All other keys do not work.

#### 6.1.4 Running Multimeter Measurements

1. Connect the test leads to the meter inputs.
2. Select the "Meter" mode.
3. Select the measurement type (no. 9 in [Figure 6-2](#)).

4. To set the range mode to autoranging or manual range setup, press AUTOSET.
5. If you are in manual range mode, adjust the measurement range: Press the RANGE keys.
6. For current and temperature measurements, adjust the "Probe Setting" in the "Meter" menu.
7. For continuity measurement, adjust the "Resistance Threshold".
8. If you want to get relative result values:
  - a) Activate "Relative" (no. 10).
  - b) To set a user-defined reference value, open the "Meter" menu.
  - c) Activate "Reference".
  - d) Enter the reference value in "Reference Manual".
9. To stop the meter measurement, press the RUN STOP key.



The status "Hold" is displayed on the upper left. Stopping the measurement does not delete statistical values. The measurement continues when you press RUN STOP again.

### 6.1.5 Settings

Access: "Meter" menu

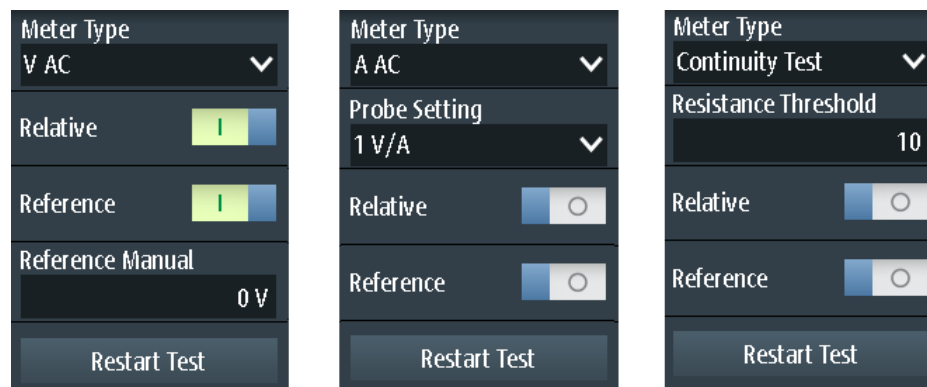


Figure 6-3: Digital multimeter settings

#### Meter Type

Sets the measurement type for the multimeter.

Meter icon	"Meter Type"	Description
	"V AC"	AC voltage measurement
	"V DC"	DC voltage measurement
	"V AC+DC"	AC+DC voltage (RMS) measurement

Meter icon	"Meter Type"	Description
	"A AC"	AC current measurement
	"A DC"	DC current measurement
	"A AC+DC"	AC+DC current (RMS) measurement
	"Resistance"	Resistance measurement
	"Continuity Test"	Continuity measurement
	"Diode Test"	Diode measurement
	"Capacitance"	Capacity measurement
	"Temperature"	Temperature measurement (an adapter is required)
	"Frequency"	Frequency measurement

Remote command:

`METer<m>:SENSe:FUNction` on page 384

### Probe Setting

Sets the sensitivity factor of the current probe for current measurements.

Sets the adapter type for temperature measurements.

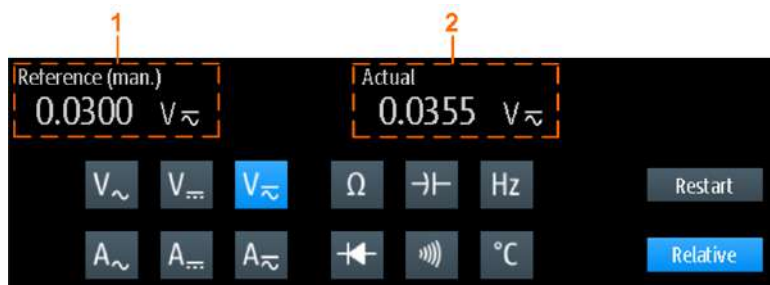
### Resistance Threshold

This setting is only relevant for continuity measurement. If the measured voltage drops below the "Resistance Threshold", the instrument beeps.

### Relative

Activates or deactivates relative measurement. If you activate this function, the currently measured value is taken as reference value. Instead of the bargraph, the reference value and the measured value are displayed. You can also set a desired value as reference value, see "[Reference/Reference Manual](#)" on page 143.

You can also activate or deactivate relative measurement by pressing DMM REL.



- 1 = Reference value
- 2 = Actual value relative to reference value

Remote command:

[Chapter 14.7.3, "Relative Measurements"](#), on page 369...

#### Reference/Reference Manual

"Reference" activates or deactivates the setting of a manual reference value.

If active, enter the reference value in "Reference Manual".

#### Restart Test

Restarts the measurement.

#### RANGE / POS

In meter mode, the vertical RANGE and POS keys adjust the DMM measurement range and reset statistical values.

Remote command:

[Chapter 14.7.2, "Measurement Configuration"](#), on page 362

## 6.2 Voltmeter (R&S RTH1004)

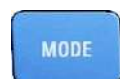
The software-based voltmeter features AC, DC, AC+DC voltage measurements. Current measurements are also possible if you use a shunt resistor or I/U converter.

The R&S RTH can run four voltmeter measurement in parallel, the maximum resolution is 999 counts and 3 digits.


All remote commands for configuration and measuring are listed in [Chapter 14.8, "Voltmeter \(R&S RTH1004\)"](#), on page 377.

### 6.2.1 Accessing the Meter Mode

1. Press the MODE key.



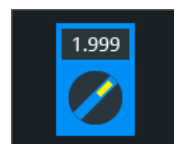2. Select "Meter".




The multimeter interface is displayed.



## 6.2.2 Display and Control

The voltmeter display shows all 4 voltmeters at a glance, or only one voltmeter with details and setup icons.

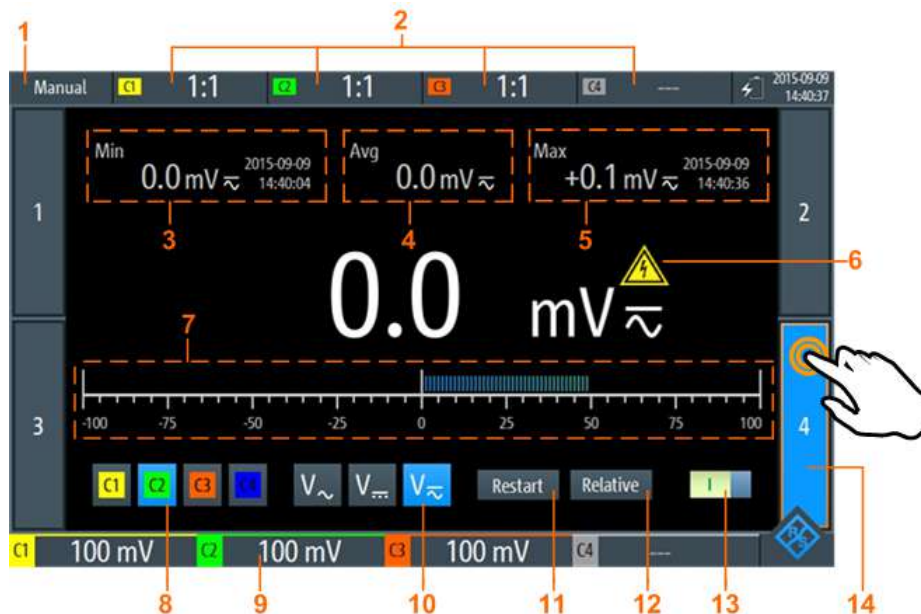

**Figure 6-4: One-voltmeter-view**

- 1 = Measurement state. "Manual": running measurement. "Hold": stopped measurement.
- 2 = Probe settings
- 3 = Minimum value and timestamp
- 4 = Average value
- 5 = Maximum value and timestamp
- 6 = Warning sign, shows up if the measured value is higher than 30 V
- 7 = Bargraph displaying the measured value
- 8 = Measurement source (input channel). Selected source is highlighted.
- 9 = Measurement ranges of active channels
- 10 = Measurement type (AC, DC or AC+DC). Selected type is highlighted.
- 11 = Restarts the measurement and resets all values
- 12 = Activates or deactivates relative measurement
- 13 = On/Off-Switch to turn selected meter on or off
- 14 = Displayed voltmeter, indicated by highlighted number

The buttons at the bottom of the display offer the following quick settings:



- [Input Signal](#)
- [Measure Type](#)
- [Restart Test](#)
- [Relative](#)



**Figure 6-5: Four-voltmeter-view**

- 1 = Channel measured by the voltmeter
- 2 = Bargraph displaying the measured value
- 3 = Measurement ranges of active channels

In meter mode, the keys behave different from scope mode:

- The vertical RANGE and POS keys both adjust the measurement range of the selected channel.
- The MEAS key opens the "Meter" menu.
- The following keys work as usual: FILE, , , PRESET, MODE, BACK.
- All other keys do not work.



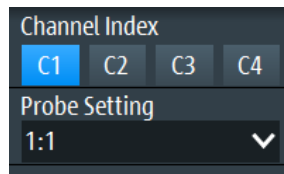
### Displaying voltmeters

- ▶ To switch to one-voltmeter-view, use one of the following methods:
  - Tap the meter number as shown in [Figure 6-5](#).
  - Turn the wheel to select a voltmeter, and press the wheel button to open it.
- ▶ To view all 4 voltmeters, use one of the following methods:
  - Tap the highlighted number of the opened voltmeter as shown in [Figure 6-4](#).
  - Press BACK.

## 6.2.3 Running Voltmeter Measurements

1. Set up the channels for voltmeter measurements.
  - a) Select the "Vertical" menu.

- b) Adjust the "Probe Setting" for all measured channels.  
See also "Probe Setting" on page 40.



2. If the 4-voltmeter-view is shown, switch to the one-voltmeter-view.  
See "Displaying voltmeters" on page 145.
3. Select the channel to be measured (no. 8 in Figure 6-4).
4. Select the measurement type (no. 10).
5. Activate the voltmeter (no. 13)
6. To adjust the measurement range, press the RANGE keys.
7. If you want to get relative result values:
  - a) Activate "Relative" (no. 12).
  - b) To set a user-defined reference value, open the "Meter" menu.
  - c) Activate "Reference", and enter the reference value in "Reference Manual".
8. To stop the meter measurement, press the RUN STOP key.



The status "Hold" is displayed on the upper left. Stopping the measurement does not delete statistical values. The measurement continues when you press RUN STOP again.

Alternatively, you can select the voltmeter and adjust the meter settings in the "Meter" menu.

## 6.2.4 Voltmeter Settings

Access: "Meter" menu

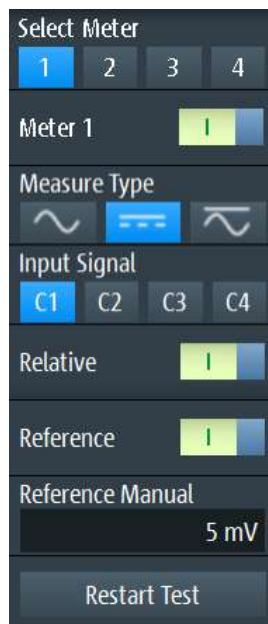


Figure 6-6: Voltmeter settings

### Select Meter

Selects one of the 4 voltmeters and displays its settings in the menu.

### Meter <n>

Switches the selected meter on or off.

Remote command:

[METer<m>:SENSe:STATe](#) on page 378

### Measure Type

Sets the measurement type for the selected meter.

**Note:** The AC coupling is activated if the selected channel is only used for AC measurements. If the selected channel is also used for DC or AC+DC measurement, the AC coupling is deactivated and the AC value is calculated out of the AC+DC and DC values. The precision of the results is reduced.

Menu icon	Meter icon	Description
		AC voltage or current measurement
		AC+DC voltage or current (RMS) measurement
		DC voltage or current measurement

**Note:** An external shunt resistor or I/U converter is needed for current measurement.

Remote command:

[METer<m>:SENSe:FUNctIon](#) on page 384

**Input Signal**


Selects the channel which is measured by the selected meter.

Remote command:

[METer<m>:SENSe:SOURce](#) on page 378

**Relative**

Activates or deactivates relative measurement. If you activate this function, the currently measured value is taken as reference value. Instead of the bargraph, the reference value and the measured value are displayed (see [Figure 6-7](#)). You can also set a desired value as reference value, see "[Reference/Reference Manual](#)" on page 148.

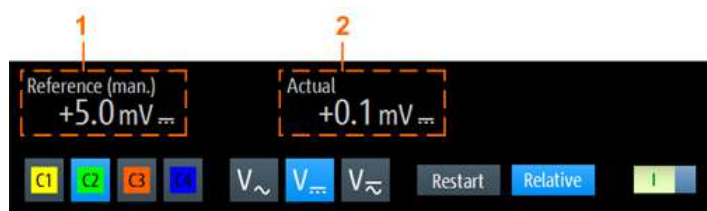

**Figure 6-7: Relative measurement**

1 = Reference value

2 = Measured value relative to reference value

Remote command:

[Chapter 14.8.3, "Relative Measurements"](#), on page 382

**Reference/Reference Manual**

"Reference" activates or deactivates the manual reference value.

If active, enter the reference value in "Reference Manual".

**Restart Test**

Restarts the measurement and also restarts statistical calculation.

**RANGE / POS**

In meter mode, the vertical RANGE and POS keys adjust the measurement range of the selected channel.

Remote command:


[Chapter 14.8.2, "Measurement Configuration"](#), on page 378

## 7 Data Logging

The data logger records scope or meter data captured of up to 4 different measurements. The logging can last up to 23 days. The records are displayed as an on-screen-chart and can be stored in 10 different slots. Using the "Zoom" and "Cursor" functions, logged data can be analyzed.

### 7.1 Accessing the Logger Mode

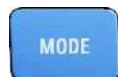1. Press the MODE key.



2. Select "Logger".




The logger interface is displayed.

If a scope measurement or meter measurement is running, the logging is started automatically when you enter the logger mode.

### 7.2 Logger Display

If you log data of scope measurements, you can log all active measurements at once. The logger display shows all logs with latest results at a glance, or one log with latest and statistical results.

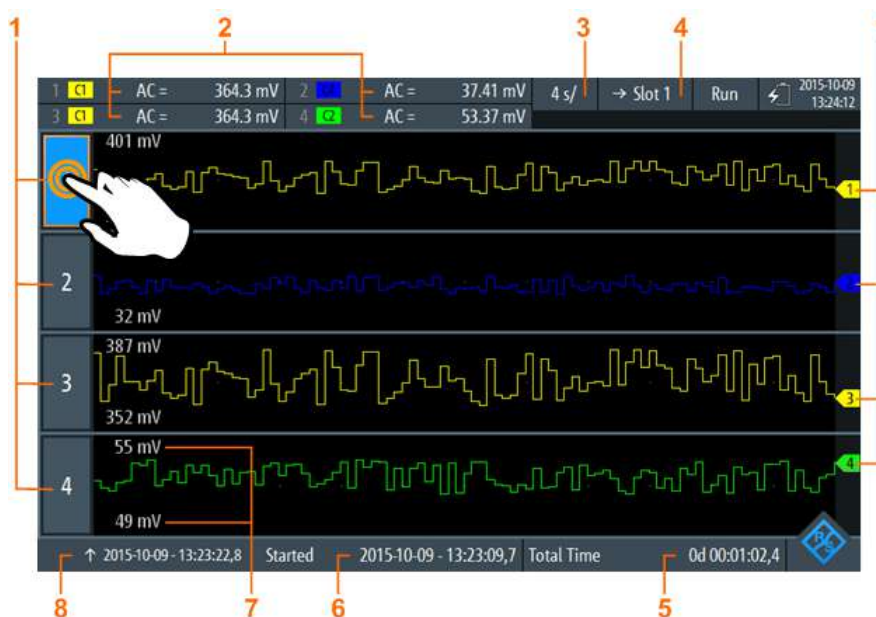

**Figure 7-1: Logger display, view of all logged scope measurements**

- 1 = Logger channel, each logger channel records one measurement
- 2 = Latest values of the logged measurements (depends on logging type and measurement type)
- 3 = Time basis
- 4 = In run mode (recording): →Slot <x> is the slot to which data is written. In stop mode: Slot <x> is the active slot where data has been stored to or loaded from
- 5 = Recording time
- 6 = Start time
- 7 = Upper and lower scaling value of each measurement
- 8 = Time stamp of the left side of the display

### Displaying logged measurements



1. To switch to one-log-view, tap on one of the logged measurements as shown in [Figure 7-1](#).
2. To view all logs, use one of the following methods, tap the highlighted number of the open logger channel.

## 7.3 Using the Logger

You can log up to four different scope measurements, or meter measurements (one with R&S RTH1002, four with R&S RTH1004), or two counter measurements simultaneously. Counter measurements require option R&S RTH-K33.

### 7.3.1 Logging Data

Before you start the logging, set up and activate the measurements that you want to log as described in:

- [Chapter 3.2, "Automatic Measurements"](#), on page 76
- [Chapter 6, "Multimeter Measurements"](#), on page 138
- [Chapter 10, "Frequency Counter \(R&S RTH-K33\)"](#), on page 241

1. Access the logger mode, see [Chapter 7.1, "Accessing the Logger Mode"](#), on page 149.
2. Select the "Logger" menu.
3. Select the source that you want to log.
4. Select the sample rate.

If you change the source or the sample rate during running acquisition, you are asked to restart the logging with the new setting. Without logger restart, the source or sample rate remains unchanged.

5. Select the horizontal scale.  
By default, the horizontal scale is set to "auto". In this case, all logged data are always displayed, and the scaling is adjusted automatically when the amount of data increases.
6. Select the slot, where the logged data will be stored.
7. Optionally, enter a name for the slot.
8. To start logging, press the RUN STOP key.



When you stop logging, the logged data is stored automatically in the selected slot. Each slot stores the data of a single logging period. If you use the slot a second time, the stored data is overwritten.

### 7.3.2 Automatic and Manual Scaling

Nomally, the instrument adjusts the vertical scale of the logger data automatically, using the statistical values. If the automatic scale and position are not optimal due to outliers in the measurement results, you can adjust the scaling manually. The scaling mode is shown in one-log-view, in the upper right corner of the screen.



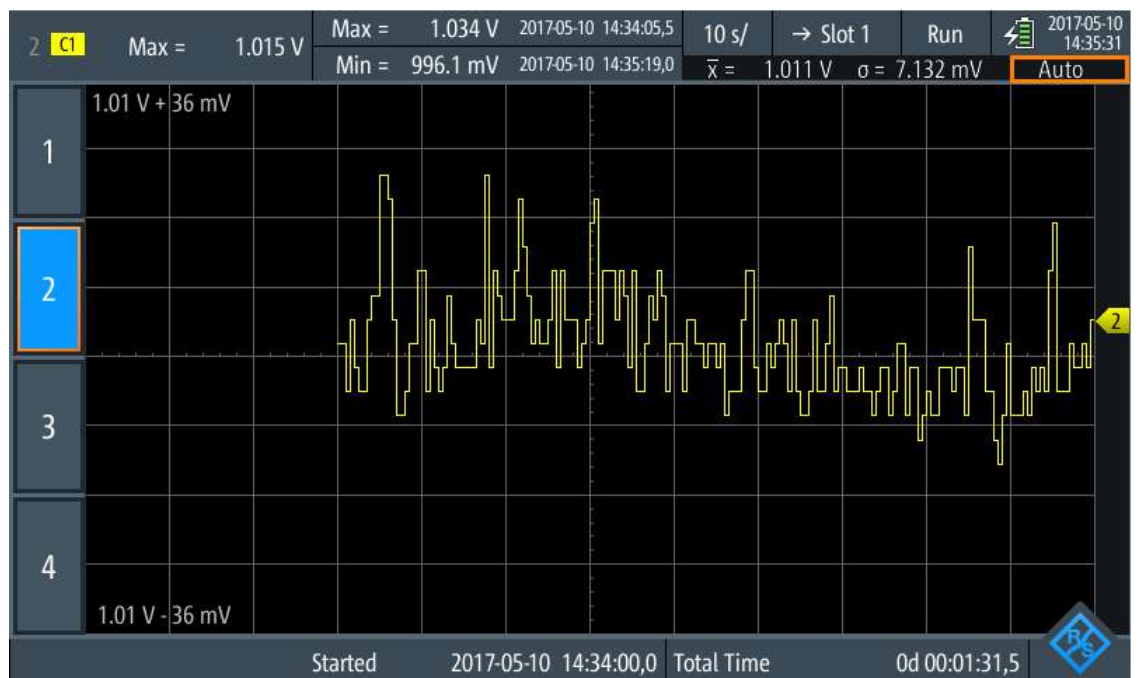


Figure 7-2: One-log-view with highlighted scaling mode

- ▶ To change the vertical scale and position manually, press the vertical RANGE and POS keys.  
In both log views (one-log and all-log), the keys affect only the selected channel.
- ▶ To return a single logger channel to autoscale:
  - a) Switch to the one-log-view of the channel.
  - b) Press AUTOSET.
- ▶ To return a all logger channels to autoscale:
  - a) Switch to the all-log-view.
  - b) Press AUTOSET.

Note that AUTOSET sets also the horizontal scaling to "auto".

Remote commands:

- [LOGGer:AUToset](#) on page 399
- [LOGGer:MEASurement<m>:VERTical:AUTO](#) on page 399
- [LOGGer:MEASurement<m>:VERTical:UPPer](#) on page 399
- [LOGGer:MEASurement<m>:VERTical:LOWer](#) on page 399
- [LOGGer:MEASurement<m>:VERTical:DEVIation](#) on page 400
- [LOGGer:MEASurement<m>:VERTical:MEAN](#) on page 400

### 7.3.3 Loading Logged Data

Logged data can be loaded from the slot, in which they were stored.

1. Access the logger mode, see [Chapter 7.1, "Accessing the Logger Mode"](#), on page 149.
2. Select the "Logger" menu.
3. If a data logging is running, press RUN STOP to stop logging.
4. Select the slot with the logs that you want to display.
5. Tap "Load Slot" to display the stored logs.

### 7.3.4 Deleting Logged Data

Logs stored on the slots can be deleted individually or all together.

To delete logs of a single slot:

1. Select the slot with the logs which you want to delete.
2. Tap "Clear Slot".

To delete logs on all slots:

- ▶ Tap "Clear All Slots".

## 7.4 Logger Settings

Access: "Logger" menu

Source
Meter ▼
Sample Rate
1 Sample/s ▼
Horizontal Scale
2 s/div ▼
Slot
Slot 1 ▼
Slot Name
Amplitudes
2017-05-10 13:51:16
Load Slot
Clear Slot
Clear All Slots

**Source**

Selects the logger source: "Scope", "Meter" or "Counter" (with option R&S RTH-K33).

If you change the source during running acquisition, you are asked to restart the logging. Without restart, the source remains unchanged.

Remote command:

[LOGGer : SOURce](#) on page 396

**Sample Rate**

Selects the number of log samples per second.

If you change the sample rate during running acquisition, you are asked to restart the logging. Without restart, the sample rate remains unchanged.

Remote command:

[LOGGer : TIMebase : SRATe](#) on page 397

**Horizontal Scale**

Selects the horizontal scale of the logged data.

The horizontal scale is set to "auto" by default. In this case, all logged data is always displayed.

Remote command:

[LOGGer : TIMebase : SCALe](#) on page 397

**Slot**

Selects one of the 10 memory slots for storing the logged data. Data is stored automatically to the selected slot if you stop the acquisition, change source or sample rate, or press PRESET. You can change the slot during recording.

If data is stored in the slot, the start time of the stored data is displayed in the menu.

Remote command:

[LOGGer: SLOT: CURRent](#) on page 397

### Slot Name

Enter an optional slot name to describe the logged data. The maximum length of the name is 20 characters.

Remote command:

[LOGGer: SLOT: SLOT<m>: NAME](#) on page 397

### Load Slot

Loads the stored log data of the selected slot.

Only possible while logging is stopped.

Remote command:

[LOGGer: SLOT: LOAD](#) on page 398

[LOGGer: SLOT: SLOT<m>: HASData?](#) on page 398

### Clear Slot

Deletes the log data of the selected slot.

Only possible while logging is stopped.

Remote command:

[LOGGer: SLOT: CLear](#) on page 398

### Clear All Slots

Deletes the log data of all slots.

Only possible while logging is stopped.

Remote command:

[LOGGer: ACLR](#) on page 399

## 7.5 Analyzing Logged Data

You can analyze logged data using the "Cursor" and the "Zoom". To analyze logged data at a later time, the data is stored automatically, and you can load the stored data to the display.

### 7.5.1 Cursor

To analyze logged data, you can use cursor measurements, see also [Chapter 3.3, "Cursor Measurements"](#), on page 82.

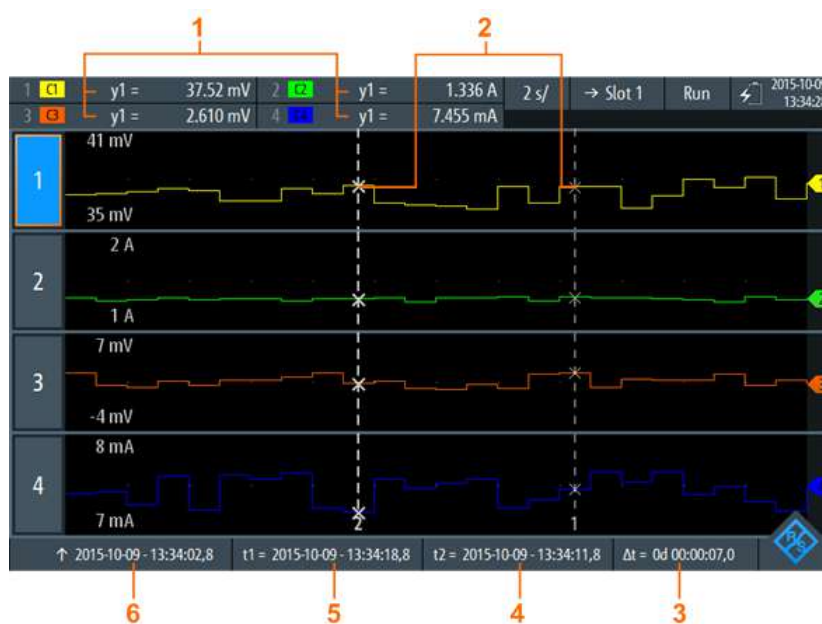


Figure 7-3: Logger display with cursors

- 1 = Values of the crossings between the selected cursor line and the waveform
- 2 = Cursor lines
- 3 = Absolute value of the time difference between the cursor lines  $\Delta t = |t1-t2|$
- 4 = Position of the cursor line 2
- 5 = Position of the cursor line 1
- 6 = Time stamp of the logged signal on the left side of the display



To select one of the two cursor lines, tap a cursor line, or use the wheel to navigate and select. The selected line is highlighted by a bold line.

Remote commands for cursor results:

- `LOGGer:CURSor<m>:RESult<n>[:AMPLitude]?` on page 402
- `LOGGer:CURSor:RESult<n>:DELTA?` on page 403
- `LOGGer:CURSor<m>:POSition` on page 403
- `LOGGer:CURSor:TDELTA?` on page 403



The logger cursor only allows you to set a "Cursor Value". The cursor settings "Type" and "Source" are not relevant for logging, and thus not available



### Description of settings

Access: "Cursor" menu

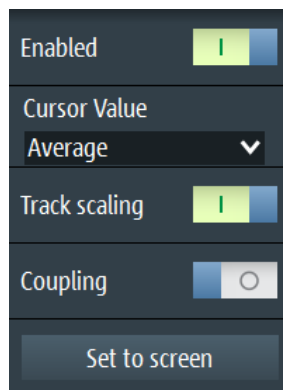


Figure 7-4: Cursor settings

### Enable

Enables or disables the cursor measurement.

Remote command:

`LOGGer:CURSor[:STATe]` on page 401

### Cursor Value

Sets the measured crossing point between the cursor lines and the waveform, see [Figure 7-5](#). These settings only apply if data logging is running for more than 2 days and 7 hours. After this time, the logger compresses 4 logging values into a "Minimum", "Average" and "Maximum" value.

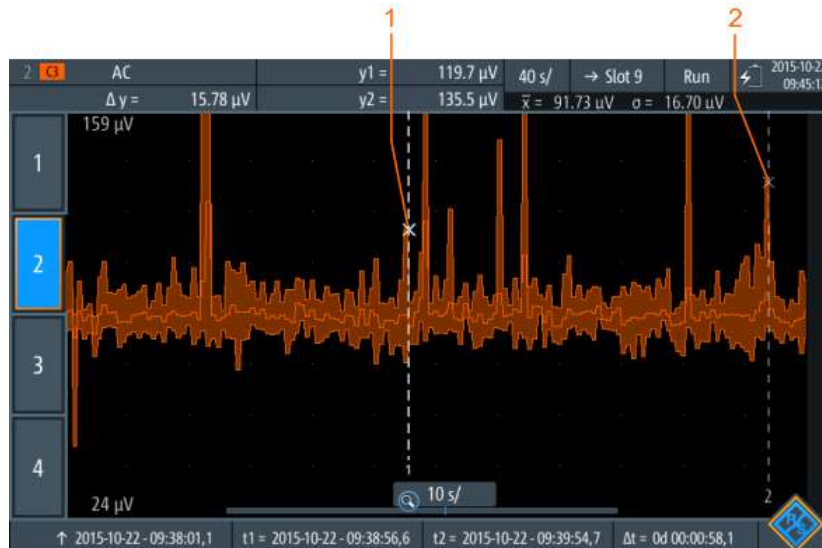


Figure 7-5: Logger cursor with summarized data

1 = Maximum value of cursor line 1

2 = Maximum value of cursor line 2

Remote command:

`LOGGer:CURSor:TYPE` on page 401

**Track scaling**

If enabled, the position of the cursor lines is adjusted if the scale is changed. The cursor lines keep their relative position to the waveform.

If disabled, the cursor lines remain on their position on the display if the scaling is changed.

Remote command:

[LOGGer:CURSor:SCPLing](#) on page 402

**Coupling**

Couples the cursor lines so that the distance between the two lines remains the same if one cursor is moved.

Remote command:

[LOGGer:CURSor:COUPling](#) on page 402

**Set to screen**

Sets the cursors to a default position on the screen. This is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Remote command:

[LOGGer:CURSor:SCReen](#) on page 402

## 7.5.2 Zoom

To analyze logged data, you can use the "Zoom" function, see also [Chapter 3.1, "Zoom"](#), on page 74.



The zoom is only available if enough data have been logged.

The zoom settings in logger mode are the same as in scope mode, but the time range is much longer.

---

If data logging is running for more than 2 days and 7 hours, the logger compresses 4 logging values into a minimum, average and maximum value, see [Figure 7-6](#).

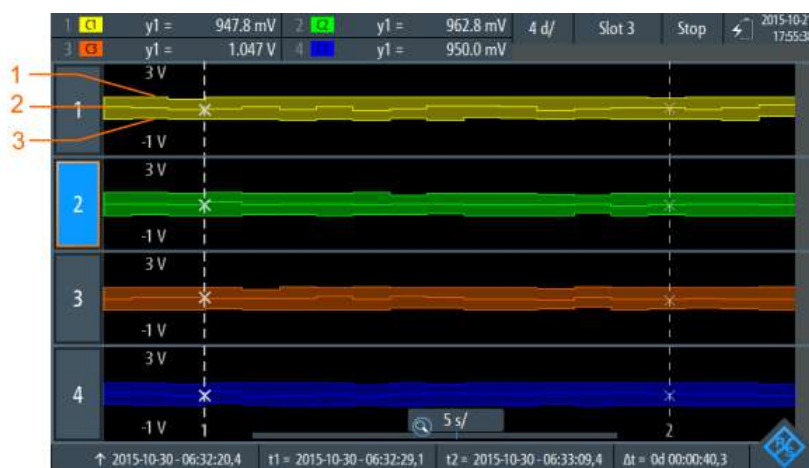


Figure 7-6: Logger zoom with summarized data

- 1 = Maximum values
- 2 = Average values
- 3 = Minimum values

 **Description of settings**

Access: "Zoom" menu

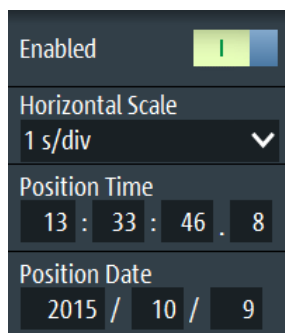


Figure 7-7: Zoom settings

**Enable**

Turns the zoom on or off.

Remote command:

[LOGGer:ZOOM:ENABLe](#) on page 404

**Horizontal Scale**

Sets the horizontal scale of the horizontal axis for all logged signals, in seconds per division.

Remote command:

[LOGGer:ZOOM:SCALE](#) on page 404

**Position, Position Date**

Sets the position of the zoomed area in relation to the left side of the display.



Remote command:

`LOGGer:ZOOM:POSition` on page 404

### 7.5.3 Logger Statistics



**Figure 7-8: Logger statistics**

1 = Measurement results; display depends on the logger mode and the selected measurement

2 = Mean value statistic

3 = Standard deviation statistic



Statistics are only shown if a single log is displayed.

Remote commands for logger statistics:

- `LOGGer:RECOding:STARt?` on page 405
- `LOGGer:RECOding:TOTal?` on page 405
- `LOGGer:MEASurement<m>:RESult:CURRentsampl?` on page 405
- `LOGGer:MEASurement<m>:RESult:MAXimum:POSition?` on page 405
- `LOGGer:MEASurement<m>:RESult:MAXimum:VALue?` on page 405
- `LOGGer:MEASurement<m>:RESult:MINimum:POSition?` on page 406
- `LOGGer:MEASurement<m>:RESult:MINimum:VALue?` on page 406
- `LOGGer:MEASurement<m>:RESult:MEAN?` on page 406
- `LOGGer:MEASurement<m>:RESult:STDDev?` on page 406
- `LOGGer:MEASurement<m>:ENABled?` on page 407
- `LOGGer:MEASurement<m>:TYPE?` on page 407
- `LOGGer:MEASurement<m>:SOURce?` on page 407

## 7.6 Export of Logger Records

Export means to save a logger record (slot) to a CSV or MAT file for further analysis. Export is only possible if the instrument is in "Logger" mode. The instrument always saves the data of the last saved slot, you cannot select the slot to be stored.

You can also save the data of the measured waveforms when you are in logger mode. The waveform data has no time correlation to the logger data. For details of waveform export, see [Chapter 11.4, "Waveforms"](#), on page 255.

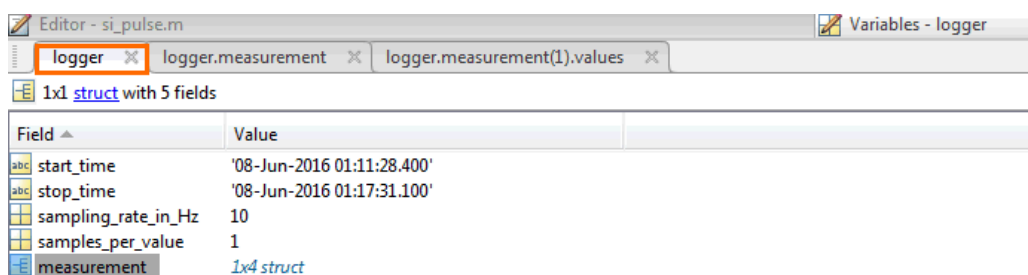
1. If data logging is running, press RUN/STOP to stop the logging. The logged data is saved automatically to the slot.
2. Press the FILE key.
3. Tap "Logger Records".
4. Tap "Export As".
5. Select the "File Type", enter the "File Name", and change the folder if necessary. If a USB flash drive is attached, the file is stored there. Otherwise, the file is stored in the `Export` folder on the microSD card.
6. Tap "Save".  
The data of the last used slot is saved.

Remote commands:


- `LOGGER:SLOT:EXPORT:NAME` on page 408
- `LOGGER:SLOT:EXPORT:SAVE` on page 408

### 7.6.1 Logger Records in MATLAB

To analyze logger records in MATLAB, save the logger data in a MAT file. When you load the file in MATLAB, you see the following structure:



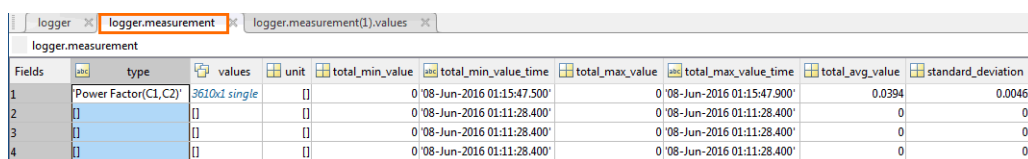The "logger" structure contains a substructure "measurement":



The "measurement" structure contains the values:

	1	2	3	4	5	6
1	NaN					
2	NaN					
3	NaN					
4	NaN					
5	0.0397					
6	0.0397					
7	0.0397					
8	0.0397					
9	0.0396					
10	0.0396					
11	0.0396					
12	0.0396					
13	0.0398					
14	0.0398					
15	0.0398					
16	0.0398					
17	0.0398					
18	0.0398					
19	0.0398					

Required attributes are described in [Chapter 7.6.3, "Attributes in Exported Logger Records"](#), on page 163.

Except for MATLAB, the open source software "Octave" can also read the exported MAT files. "Octave" seeks for compatibility of commands with MATLAB.

## 7.6.2 Logger Records in CSV Files

Logger data is saved in two CSV files. One file contains the data values and is indicated by \*Wfm.\* in the file name. The second file contains the header data, which is required for data analysis.

### Example:

```
logger.wfm.csv
logger.csv
```

`logger.wfm.csv` contains the recorded data values. `logger.csv` contains the header data, the attributes that are required to interpret the data values.

The header file lists the attribute names and values, one attribute per row.

```
RecordedSource:Scope:
ActiveLoggerChannels:1:
...
```

The header file lists many attributes but you need only some of them. In the following figure, required attributes are marked, and most of surplus attributes are hidden. Some attributes are given for each logger channel (measurement type, unit, statistical data). The attributes of a logger channel start with `ArrayItem: Index`.

1	LoggerAttributes:	
2	RecordedSource:Scope:	
3	ActiveLoggerChannels:1:	
4	VerticalRange:Medium:	
5	VerticalNotation:Auto:	
6	SampleRate:1 Sample/s:	
7	SampleRateAsNum:1:	
8	SamplesPerValue:1:	
9	StartTime:2016,09,08,15,58,01,0:	
10	StartTimeAsNum:1473343081000:	
11	StopTime:2016,09,08,15,58,42,0:	
32	LoggerChannel:	
33	ActiveIndex:0:	
34	ArrayItem:Index:0	Logger channel 1
35	Enabled:On:	
41	TimeOfMin:2016,09,08,15,58,12,0:	
42	Minimum:0.098108962178:	
44	TimeOfMax:2016,09,08,15,58,04,0:	
45	Maximum:0.099266834557:	
46	Average:0.098667144775:	
47	StdDeviation:0.000287987496:	
64	MeasUnitAsStr:V:	
68	MeasTypeAsStr:Amplitude(C1):	
80	ArrayItem:Index:1	Logger channel 2
81	Enabled:Off:	
82	...	

Required attributes are described in [Chapter 7.6.3, "Attributes in Exported Logger Records"](#), on page 163.

### 7.6.3 Attributes in Exported Logger Records

The following attributes are required to interpret the exported data values.

MATLAB	CSV	Description
	ActiveLoggerChannels	Number of logger channels that recorded data
start_time	StartTime	Absolute start time of the logger record
stop_time	StopTime	Absolute end time of the logger record
sampling_rate_in_Hz	SampleRate or SampleRateAsNum	Number of log samples per second

MATLAB	CSV	Description
samples_per_value	SamplesPerValue	Compression factor. If data logging is running for more than 2 days and 7 hours, the logger compresses subsequent logging values into a "Minimum", "Average" and "Maximum" value. <i>SamplesPerValue</i> = 4 means that four values are summarized.
measurement(m)	ArrayItem:Index	Logger channel (1, 2, 3, or 4) In CSV: <i>Logger channel</i> = <i>Index</i> + 1
	Enabled	Status of the logger channel: on or off
measurement(m).type	MeasTypeAsStr	Type of the logged measurement
measurement(m).unit	MeasUnitAsStr	Unit of the logged measurement
measurement(m).total_min_value	Minimum	Lowest value of the logged data
measurement(m).total_min_value_time	TimeOfMin	Time when the minimum was measured
measurement(m).total_max_value	Maximum	Highest value of the logged data
measurement(m).total_max_value_time	TimeOfMax	Time when the maximum was measured
measurement(m).total_avg_value	Average	Average value of the logged data
measurement(m).standard_deviation	StdDeviation	Standard deviation of the logged data

## 8 Protocol Analysis

Using the R&S RTH and additional options, you can analyze the following serial protocols:

- Serial Peripheral Interface (SPI) - requires option R&S RTH-K1
- Inter-Integrated circuit bus (I<sup>2</sup>C) - requires option R&S RTH-K1
- UART / RS-232 / RS-422 / RS-485 interfaces - require option R&S RTH-K2
- Controller Area Network (CAN) - requires option R&S RTH-K3
- Local Interconnect Network (LIN) - requires option R&S RTH-K3

The analysis of serial data consists of three main steps:

- Protocol configuration:  
Select the protocol type, and configure the input line as well as the protocol-specific settings.
- Decoding:  
Select the display format of the decoded data. The digitized signal data is displayed on the screen together with the decoded content of the messages in combs. You can scale the signal display and zoom into it to see it in more detail. You can also list the decoded results in tabular form in the "Protocol" mode.
- Triggering:  
You can trigger on various events that are typical for the configured bus type, for example, on start and stop of messages, or on data patterns.

Analysis is performed on analog input channels. The instrument uses the threshold to convert the analog signal into a logic signal. If MSO option R&S RTH-B1 is installed, you can also analyze logic channels.

• <a href="#">Basics of Protocol Analysis</a> .....	165
• <a href="#">I2C (Option R&amp;S RTH-K1)</a> .....	171
• <a href="#">SPI (Option R&amp;S RTH-K1)</a> .....	179
• <a href="#">UART/RS-232/RS-422/RS-485 (Option R&amp;S RTH-K2)</a> .....	185
• <a href="#">CAN (Option R&amp;S RTH-K3/R&amp;S RTH-K9)</a> .....	191
• <a href="#">LIN (Option R&amp;S RTH-K3)</a> .....	203
• <a href="#">SENT (Option R&amp;S RTH-K10)</a> .....	212

### 8.1 Basics of Protocol Analysis

#### 8.1.1 General Protocol Settings

Access: "Bus" menu

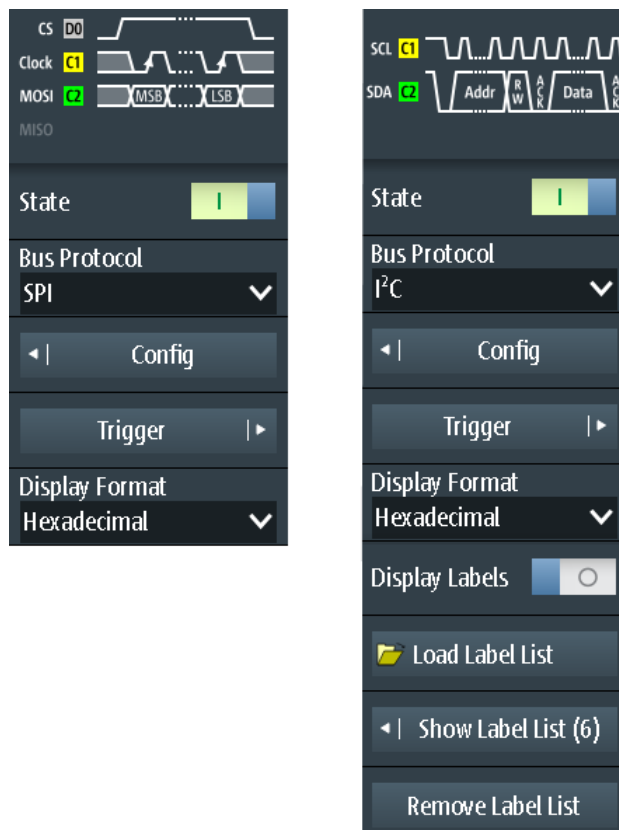


Figure 8-1: Bus menu. Left: for protocols without address (SPI, UART). Right: for protocols with address or identifier (I<sup>2</sup>C, CAN, LIN)

For all serial protocols, the following settings are required:

#### State

Enables the decoding and the display of the serial bus data.

Remote command:

[BUS\[:STATe\]](#) on page 409

#### Bus Protocol

Defines protocol type of the bus for configuration and trigger settings.

Remote command:

[BUS:TYPE](#) on page 409

#### Display Format

Sets the decoding format of the data: binary, hexadecimal, decimal, octal, or ASCII.

Remote command:

[BUS:FORMat](#) on page 409

#### Display Labels

Activates the last loaded label list and shows the label in the decoding results (comb display and protocol table).

**Symbolic Decode ← Display Labels**

Only available for CAN protocols if DBC file is loaded.

If disabled, only the message names are shown in the comb display of the decoded data. If enabled, the signal labels are shown in addition.

**Load Label List**

Selects and loads a label list file.

Label lists are protocol-specific. Their contents are described in the corresponding protocol chapters:

- [Chapter 8.2.4, "I<sup>2</sup>C Label List"](#), on page 176
- [Chapter 8.5.3, "CAN Label List"](#), on page 198
- [Chapter 8.6.4, "LIN Label List"](#), on page 208
- [Chapter 8.7.4, "SENT Label List"](#), on page 221

**Show Label List**

Shows the content of the label list file in a window.

**Remove Label List**

Disables the loaded label list.

## 8.1.2 Decode Results

When the configuration of the serial bus is complete, the instrument can decode the signal. The decode results are displayed in two ways:

- Bus signal with combs, time-correlated to the input signals. The combs show the values of the frames or words.
- Decode results table. The table provides data values and time information of the frames or words.

**To decode the serial bus**

1. In the "Bus" menu, enable "State".

The bus signal with combs is shown. The colors of the combs are protocol-specific and described in the "Decode Results" chapters of the protocol description.



*Figure 8-2: Comb display of a decoded CAN signal*

2. To show the decode results in a table, do the following:
  - a) Press the MODE key.
  - b) Select the "Protocol" mode.

The result table is shown. The contents is protocol-specific and described in the "Decode Results" chapters of the protocol description.



### To adjust the scaling of the decoded bus signal in scope mode

1. The horizontal size of the combs is defined by the horizontal time scale, which is the same for input signals and the bus signal. Press the TIME keys to change the time scale.
2. The vertical size is specific for the bus signal.
  - a) Tap the bus signal to set the focus to it.
  - b) Press the RANGE keys.

### Protocol mode

In "Protocol" mode, you see the results table and the small signals below. Each table row contains the information of one frame.

All menus that are relevant for protocol analysis are available, in particular, the "Bus" and "Trigger" menus. Thus, you can adjust the settings without changing the mode.

Sometimes the row is too short to show the all frame information. To show the complete information, tap the row. A window with values and time data of the selected row opens.

## 8.1.3 Label Lists

For all protocols using ID or address identification, it is possible to create label lists containing addresses or IDs, a symbolic name for each node (symbolic label), and some protocol-specific information.

You can load label lists, and activate its usage for decoding. As a result, an additional "Label" column appears in the "Decode results" table, containing the symbolic label. The frame captions of the decoded signal show the symbolic label instead of the ID or address values so it is easy to identify the messages of the different bus nodes.

You can also use the label list to trigger on an identifier or address. Instead of entering the value, you select the name, which is defined in the label list.

Available file formats are PTT, CSV, and DBC (CAN only).

Label lists are protocol-specific. Their contents are described in the corresponding protocol chapters:

- [Chapter 8.2.4, "I<sup>2</sup>C Label List"](#), on page 176
- [Chapter 8.5.3, "CAN Label List"](#), on page 198
- [Chapter 8.6.4, "LIN Label List"](#), on page 208
- [Chapter 8.7.4, "SENT Label List"](#), on page 221

### 8.1.3.1 Using Label Lists

To load a label list and display the labels:

1. Save the label list file on a USB flash drive, or on the microSD card.

2. Press and hold the BUS key until the menu opens.
3. Configure the protocol.
4. In the "Bus" menu, tap "Load Label List".
5. Navigate to the label list file, select it, and tap "Select".
6. To read the label list, tap "Show Label List".
7. To use the labels in the display of the decoded data, tap "Display Labels".

To trigger on an identifier or address using the label:

Prerequisites: The bus is configured, decoding is enabled, and a decoded signal is visible.

1. Open the "Trigger" menu.
2. Set the following trigger settings:
  - "Trigger Mode" = "Normal"
  - "Trigger Type" = "Bus"
  - "<Protocol> Trigger" = "Identifier", or "Identifier + Data", or "Address", or "Address and Data".
3. Tap "Identifier from Label" or "Address from Label".
4. Select the label. Tap "Back".

If the selected identifier or address is available in the acquired data, its value is shown in the menu, and the instrument triggers on it.

### 8.1.3.2 Content and Format of the PTT File

Label lists are stored as PTT (protocol translation table) files. The PTT file format is an extension of the CSV format (comma-separated values). You can edit it with standard editors, for example, with MS Excel or a text editor.

The PTT file has three types of lines:

- Comment lines begin with a hash character #. A hash character at any other position in the line is treated like a standard character.
- Command lines begin with a commercial at character @. An @ character at any other position in the line is treated like a standard character.
- Standard lines are the lines that not qualify as comment or command lines. They build the core of the label list.

#### Command lines

Command lines define the version of the PTT file and the protocol name:

- @FILE\_VERSION: must appear exactly once in the file
- @PROTOCOL\_NAME: must appear at least once in the file. Thus, one file can contain several label lists for different protocols.

```
# --- Start of PTT file
@FILE_VERSION = 1.0
@PROTOCOL_NAME = i2c
[... Label list for I2C]
@PROTOCOL_NAME = can
[... Label list for CAN]
# --- End of PTT file
```

### Standard lines

Standard lines define the contents of the label list. The rules for standard lines follow the csv convention, they are:

- Values are separated by commas
- Space characters following a delimiter are ignored
- Values with a special character (comma, newline, or double quote) must be enclosed in double quotes
- Text in double quotes must be escaped by double quote characters

The format of the numeric value is indicated by a suffix. The following formats are supported:

Format	Suffix	Example
Decimal	<empty> d	106, DeviceName 106d, DeviceName
Hexadecimal	h	6Ah, DeviceName or prefix: 0x6A, DeviceName
Octal	o	152o, DeviceName
Binary	b	01101010b, DeviceName

The maximum supported word size for (unsigned) integers is 64 bits.

```
# --- Start of PTT file
@FILE_VERSION = 1.0
@PROTOCOL_NAME = i2c
#   Following two lines are equal:
7,01h,Temperature
7,01h, Temperature
#   A comma must be enclosed in double quotes:
7,01h,"Temperature, Pressure, and Volume"
#   A double quote must also be enclosed in double quotes:
7,7Fh,"Highspeed ""Master"" 01"
#   Following lines yield the same result:
7d,0x11,Pressure
7h,11h,Pressure
0x7,17d,Pressure
7,17,Pressure
```

## 8.2 I2C (Option R&S RTH-K1)

### 8.2.1 The I<sup>2</sup>C Protocol

This chapter provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "I2C-bus specification and user manual" available on the NXP manuals web page at <http://www.nxp.com/>.

#### I<sup>2</sup>C characteristics

Main characteristics of I<sup>2</sup>C are:

- Two-wire design: serial clock (SCL) and serial data (SDA) lines
- Master-slave communication: the master generates the clock and addresses the slaves. Slaves receive the address and the clock. Both master and slaves can transmit and receive data.
- Addressing scheme: each slave device is addressable by a unique address. Multiple slave devices can be linked together and can be addressed by the same master.
- Read/write bit: specifies if the master will read (=1) or write (=0) the data.
- Acknowledge: takes place after every byte. The receiver of the address or data sends the acknowledge bit to the transmitter.

The R&S RTH supports all operating speed modes: high-speed, fast mode plus, fast mode, and standard mode.

#### Data transfer

The format of a simple I<sup>2</sup>C message (frame) with 7 bit addressing consists of the following parts:

- Start condition: a falling slope on SDA while SCL is high
- 7-bit address of the slave device that either will be written to or read from
- R/W bit: specifies if the data will be written to or read from the slave
- ACKnowledge bits: is issued by the receiver of the previous byte if the transfer was successful  
Exception: At read access, the master terminates the data transmission with a NACK bit after the last byte.
- Data: a number of data bytes with an ACK bit after every byte
- Stop condition: a rising slope on SDA while SCL is high

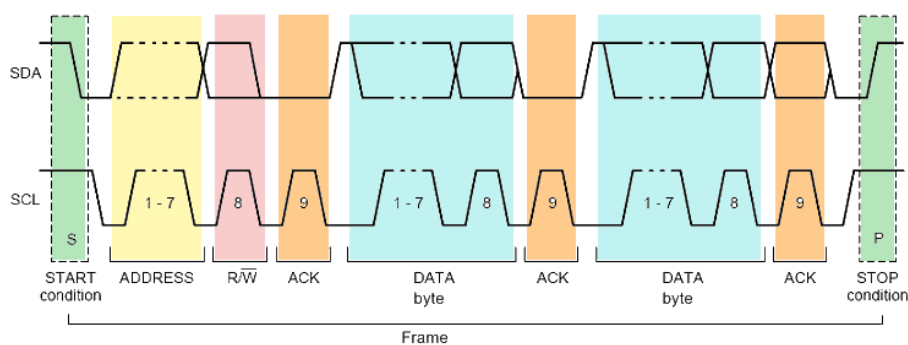


Figure 8-3: I2C write access with 7-bit address

**Address types: 7-bit and 10-bit**

Slave addresses can be 7 or 10 bits long. A 7-bit address requires one byte, 7 bits for the address followed by the R/W bit.

A 10-bit address for write access requires two bytes: the first byte starts with the reserved sequence 11110, followed by the two MSB of the address and the write bit. The second byte contains the remaining 8 LSB of the address. The slave acknowledges each address byte.

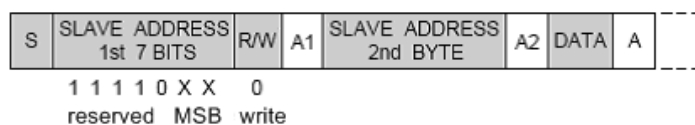


Figure 8-4: 10-bit address, write access

A 10-bit address for read access requires three bytes. The first two bytes are identical to the write access address. The third byte repeats the address bits of the first byte and sets the read bit.

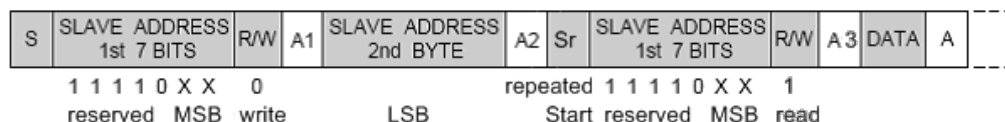


Figure 8-5: 10-bit address, read access

**Trigger**

The R&S RTH can trigger on various parts of I<sup>2</sup>C messages. The data and clock lines must be connected to the input channels, triggering on math and reference waveforms is not possible.

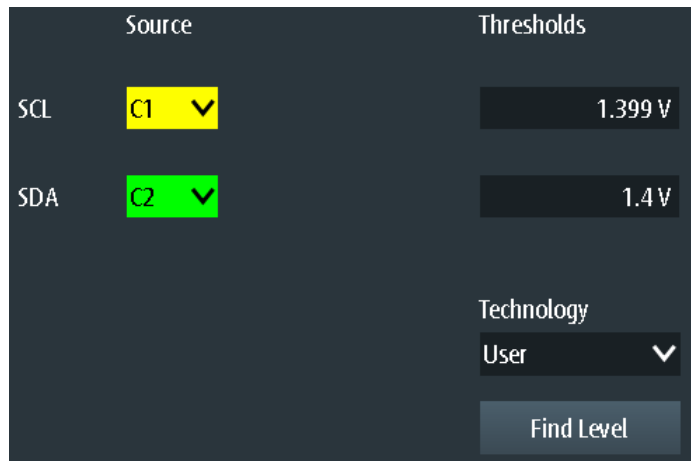
You can trigger on:

- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit

- Specific slave address
- Specific data pattern in the message

## 8.2.2 I2C Configuration Settings

Access: "Bus" menu > "Bus Protocol" = "I2C" > "Config"



### SCL, SDA

Set the input source of the data line (SDA) and clock line (SCL).

If option R&S RTH-B1 is installed, digital channels can also be used as source.

Remote command:

[BUS:I2C:SCL:SOURce](#) on page 410

[BUS:I2C:SDA:SOURce](#) on page 410

### Thresholds, Technology, Find Level

Sets the threshold value for digitization of signals. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

You can select the threshold voltages for various types of integrated circuits in the "Technology" list, or set a user-defined value in "Thresholds". You can also let the instrument set the appropriate threshold using "Find Level".

Changing the thresholds in the bus configuration changes also the thresholds of analog channels in the "Vertical" menu, or the thresholds of logic channels in the "Logic" menu.

Remote command:

[BUS:I2C:TECHnology](#) on page 410

[BUS:I2C:SCL:THReshold](#) on page 410

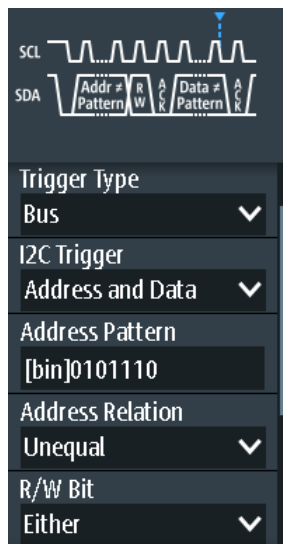
[BUS:I2C:SDA:THReshold](#) on page 410

[BUS:SETReflevels](#) on page 410

[CHANnel<m>:THReshold:FINDlevel](#) on page 288

### 8.2.3 I2C Trigger Settings

Access: "Bus" menu > "Bus Protocol" = "I2C" > "Trigger"



#### I2C Trigger

Selects the trigger type for I<sup>2</sup>C analysis.

- "Start"                      Sets the trigger to the start of the message. The start condition is a falling edge on SDA while SCL is high. The trigger instant is the falling edge of the SDA line.
- "Restart"                    Sets the trigger to a restart - when the start condition occurs without previous stop condition. Restart conditions occur when a master exchanges multiple messages with a slave without releasing the bus.
- "Stop"                        Sets the trigger to the end of the message. The stop condition is a rising slope on SDA while SCL is high.
- "No Ack (Missing Ack)"    Missing acknowledge bit: the instrument triggers if the data line remains HIGH during the clock pulse following a transmitted byte. You can also localize specific missing acknowledge bits by setting the [No Ack \(Missing Ack\)](#) bits.
- "Address"                    Sets the trigger to one specific address pattern that is expected. The trigger time is the falling clock edge of the acknowledge bit after the address.
- "Data"                        Sets the trigger to a specified data pattern that is expected.
- "Address and Data"         Sets the trigger to a combination of address and data condition.

Remote command:

[TRIGger:I2C:MODE](#) on page 411

**No Ack (Missing Ack)**

Selects which missing acknowledge bits is detected if the trigger type is set to "No Ack (Missing Ack)".

"Address NACK"

No slave recognizes the address.

"Data Read NACK"

Marks the end of the read process when the master reads data from the slave. This Nack is sent according to the protocol definition, it is not an error.

"Data Write NACK"

The addressed slave does not accept the written data.

Remote command:

[TRIGger:I2C:ADNack](#) on page 411

[TRIGger:I2C:DRNack](#) on page 411

[TRIGger:I2C:DWNack](#) on page 412

**Address Pattern**

Specifies the address pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:I2C:ADDRess](#) on page 412

**Address Relation**

Defines how the specified serial address pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

[TRIGger:I2C:ACONdition](#) on page 412

**R/W Bit**

Toggles the trigger condition between read and write access of the master. Select "Either" if the transfer direction is not relevant for the trigger condition.

Remote command:

[TRIGger:I2C:ACCess](#) on page 412

**Data Pattern**

Specifies the data pattern to be found on the specified line, in binary or hex format. Enter the words in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:I2C:DATA](#) on page 412

**Data Relation**

Sets how the defined serial data pattern is compared with the acquired signal. The instrument triggers if the acquired data pattern is equal or unequal the defined pattern.



Remote command:

[TRIGger:I2C:DCondition](#) on page 413

### Byte Offset

Sets the number of bytes before the first byte of the data pattern. These bytes are ignored.

Remote command:

[TRIGger:I2C:DPosition](#) on page 413

## 8.2.4 I<sup>2</sup>C Label List

Label lists are protocol-specific. Label lists for I<sup>2</sup>C are available in CSV and PTT format.

An I<sup>2</sup>C label file contains three values for each address:

- Address type, 7-bit or 10-bit long
- Address value
- Symbolic label: name of the address, specifying its function in the bus network.

### Example: I<sup>2</sup>C PTT file

```
# -----
@FILE_VERSION = 1.00
@PROTOCOL_NAME = i2c
# -----
# Labels for I2C protocol
# Column order: Identifier type, Identifier value, Label
# -----
7,0x1E,Voltage
7,38h,Pressure
7,2Ah,Temperature
7,16h,Speed
7,118,Acceleration
7,07h,HighSpeed_Master_0x3
7,51h,EEPROM
10,3A2h,DeviceSetup
10,1A3h,GatewayStatus
10,06Eh,LeftSensor
# -----
```

For general information on label lists, see [Chapter 8.1.3, "Label Lists"](#), on page 168.

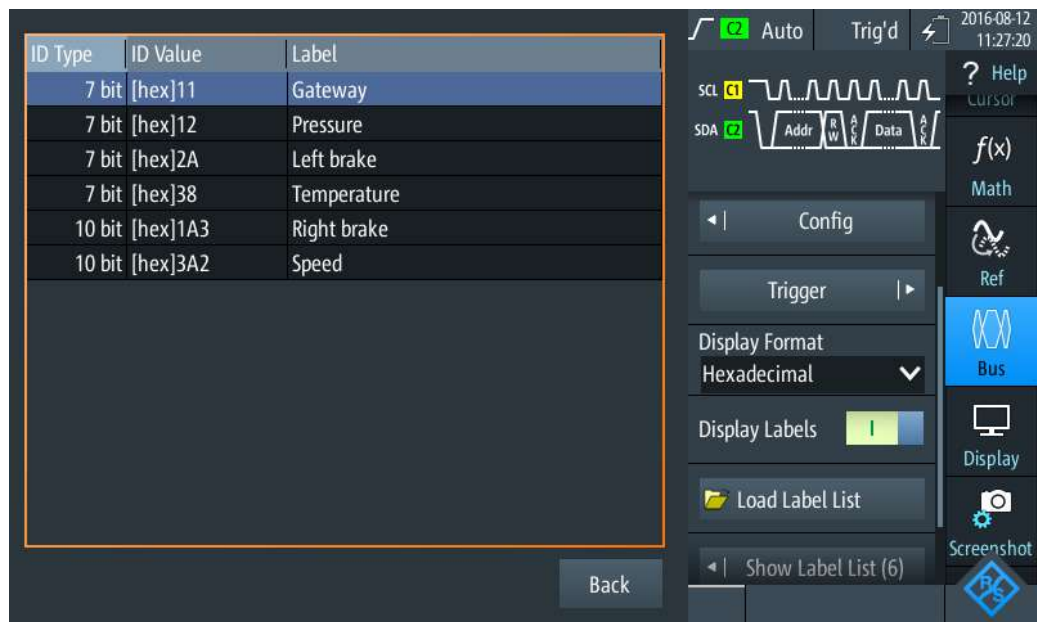


Figure 8-6: Display of an I<sup>2</sup>C label list

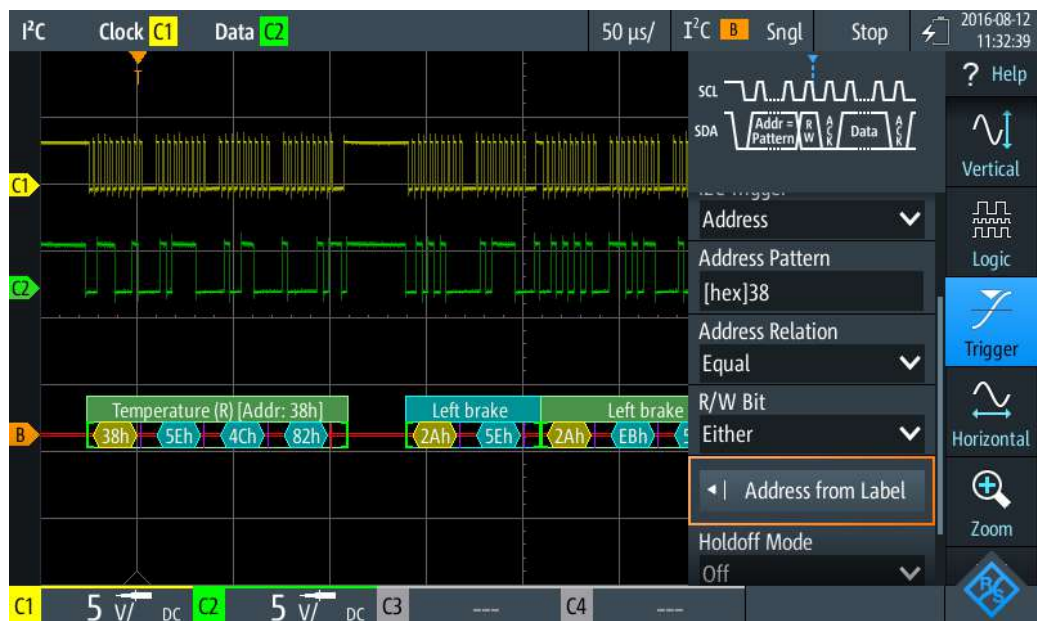


Figure 8-7: Trigger on address "Temperature", value 38 (hex)

### 8.2.5 I<sup>2</sup>C Decode Results

This chapter describes the comb display and the decode results table of decoded I<sup>2</sup>C buses. Basic information on decoding and display of decode results is given in [Chapter 8.1.2, "Decode Results"](#), on page 167.

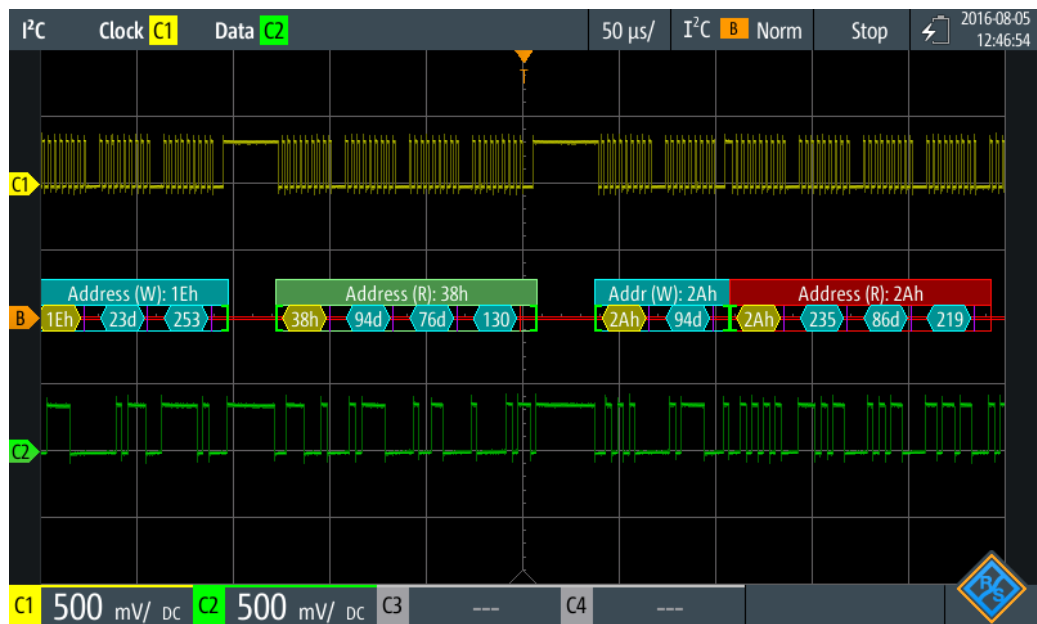


Figure 8-8: Comb display of a decoded I<sup>2</sup>C signal, triggered on a missing acknowledge bit



Figure 8-9: Comb display of a decoded I<sup>2</sup>C signal, triggered on address 2A (hex)

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display.

Table 8-1: Color codes of decoded I<sup>2</sup>C signals

Color, display element	Description
Green brackets [...]	Start and end of frame
Green frame header	Read frame. Text indicates transfer direction (R = read) and address of the frame (hex)

Color, display element	Description
Cyan frame header	Write frame. Text indicates transfer direction (W = write) and address of the frame (hex)
Yellow comb	Address
Cyan comb	Data bytes
Violet	Acknowledge bit
Red	Missing acknowledge bit, error in frame, insufficient frame (end of acquisition before decoding has been completed)

In "Protocol" mode, decoded data is shown in tabular form.

**Table 8-2: Content of the protocol table for decoded I<sup>2</sup>C signal**

Column	Description
#	Frame index
Frame Start	Time of frame start
Address [hex]	Hexadecimal value of the address
Address R/W	Value of the R/W bit
Values 8 bit [format]	Value of data byte. The data format is selected in the "Bus" menu.
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the time scale to get a longer acquisition.

Remote commands are described in [Chapter 14.11.2.3, "I2C Decode Results"](#), on page 413.

## 8.3 SPI (Option R&S RTH-K1)

### 8.3.1 The SPI Protocol

A 4-channel instrument is required for full support of the SPI protocol, or the MSO option R&S RTH-B1.

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

Main characteristics of SPI are:

- Master-slave communication
- No device addressing; The slave is accessed by a chip select, or slave select line.
- No acknowledgement mechanism to confirm receipt of data
- Duplex capability

Most SPI buses have four lines, two data and two control lines:

- Clock line to all slaves (SCLK)
- Slave Select or Chip Select line (SS or CS)
- Master data output, slave data input (MOSI or SDI)
- Master data input, slave data output (MISO or SDO)

When the master generates a clock and selects a slave device, data may be transferred in either or both directions simultaneously.

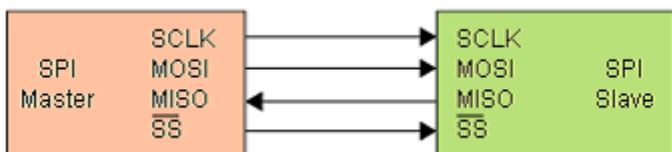


Figure 8-10: Simple configuration of SPI bus

The data bits of a message are grouped by following criteria:

- A word contains a number of successive bits. The word length is defined in the protocol configuration.
- A frame contains a number of successive words, at least one word.

For SPI buses, the R&S RTH provides the following trigger possibilities:

- On frame start
- On frame end
- On a serial pattern at a specified position

### 8.3.2 SPI Configuration Settings

Access: "Bus" menu > "Bus Protocol" = "SPI" > "Config"

	Source	Polarity	Thresholds
CS	None	Active high	1.4 V
		Slope	
Clock	C1	Rising	1.399 V
MOSI	C2		1.4 V
MISO	None		1.4 V
Word Length	8 bit	Bit Order	Technology
		MSB First	User
Frame Timeout	1 ms		Find Level

**Source: CS, Clock, MOSI, MISO**

Set the input channels of the SPI lines.

If option R&S RTH-B1 is installed, digital channels can also be used as source.

Remote command:

[BUS:SPI:SSEL:SOURce](#) on page 420

[BUS:SPI:SCLK:SOURce](#) on page 420

[BUS:SPI:MISO:SOURce](#) on page 420

[BUS:SPI:MOSI:SOURce](#) on page 420

**Polarity**

Selects whether the chip select signal is high active (high = 1) or low active (low = 1).

Remote command:

[BUS:SPI:SSEL:POLarity](#) on page 420

**Slope**

Selects if data are sampled on the rising or falling slope of the clock. The clock slope marks the begin of a new bit.

Remote command:

[BUS:SPI:SCLK:SLOPe](#) on page 420

**Thresholds, Technology, Find Level**

Sets the threshold value for digitization of signals. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

You can select the threshold voltage on all lines for various types of integrated circuits in the "Technology" list, or set a user-defined value for each line in "Thresholds". You can also let the instrument set the appropriate thresholds using "Find Level".

Changing the thresholds in the bus configuration changes also the thresholds of analog channels in the "Vertical" menu, or the thresholds of logic channels in the "Logic" menu.

Remote command:

[BUS:SPI:TECHnology](#) on page 421

[BUS:SPI:SSEL:THReshold](#) on page 421

[BUS:SPI:SCLK:THReshold](#) on page 421

[BUS:SPI:MISO:THReshold](#) on page 421

[BUS:SPI:MOSI:THReshold](#) on page 421

[BUS:SETReflevels](#) on page 410

[CHANnel<m>:THReshold:FINDlevel](#) on page 288

**Word Length**

Sets the number of bits in a word. The maximum length is 32 bit.

Remote command:

[BUS:SPI:WSIZe](#) on page 421

**Bit Order**

Defines if the data of the words starts with MSB (most significant bit) or LSB (least significant bit). The display of the decoded signal considers this setting, results are displayed in the specified order.

Remote command:

[BUS:SPI:ORDeR](#) on page 422

### Frame Timeout

Sets the minimum idle time between two data frames. If the time interval between the data frames is shorter, the words are part of the same frame. Within the timeout, the data and clock lines are low. A new frame begins when the timeout has expired.

Timeout is only relevant if the bus has no chip select.

Remote command:

[BUS:SPI:TIMEout](#) on page 422

## 8.3.3 SPI Trigger Settings

Access: "Bus" menu > "Bus Protocol" = "SPI" > "Trigger"



### SPI Trigger

Selects the trigger type for SPI analysis.

- "Frame Start" Sets the trigger to the start of the message. If the bus has a CS line, the frame starts when the chip select signal changes to the active state. Without CS line, the frame starts when the idle time has expired.
- "Frame End" Sets the trigger to the end of the message. If the bus has a CS line, the frame ends when the chip select signal changes to the inactive state. Without CS line, the frame ends when the idle time has expired after the last clock and no new clock appeared during that time.

"Data" Sets the trigger to a specified bit pattern that is expected on one of the lines.

Remote command:

[TRIGger:SPI:MODE](#) on page 422

#### **Datasource**

Selects the line, on which the trigger pattern is expected.

Remote command:

[TRIGger:SPI:DSRC](#) on page 423

#### **Pattern**

Specifies the data pattern to be found on the specified line, in binary or hex format. Enter the words in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:SPI:DATA](#) on page 423

#### **Relation**

Defines how the defined serial data pattern is compared with the acquired signal. The instrument triggers if the acquired data word is equal or unequal the defined pattern.

Remote command:

[TRIGger:SPI:DCondition](#) on page 423

#### **Bit Offset**

Sets the number of bits before the first bit of the pattern. These bits are ignored. The first bit after CS or timeout is bit 0. For example, with bit offset = 2, bit 0 and bit 1 after CS are ignored, and the pattern starts with bit 2.

Remote command:

[TRIGger:SPI:DPosition](#) on page 423

#### **Chip Select**

Defines if the SPI bus uses a chip select line or not.

Remote command:

[BUS:SPI:SSEL:STATe](#) on page 423

### **8.3.4 SPI Decode Results**

This chapter describes the comb display and the decode results table of decoded SPI buses. Basic information on decoding and display of decode results is given in [Chapter 8.1.2, "Decode Results"](#), on page 167.



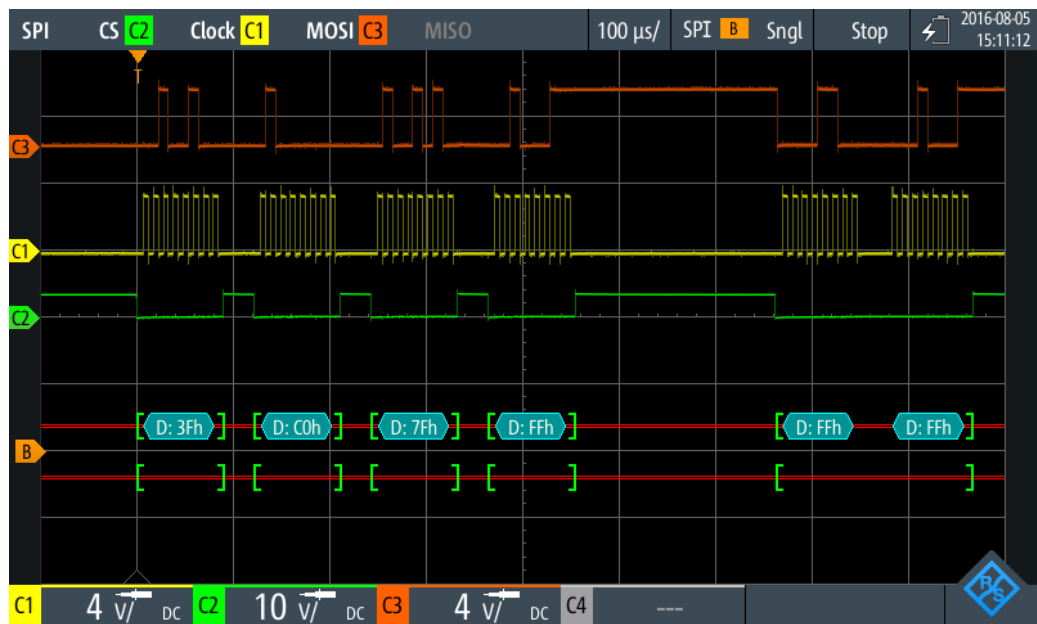


Figure 8-11: Comb display of a decoded SPI signal, triggered on frame start

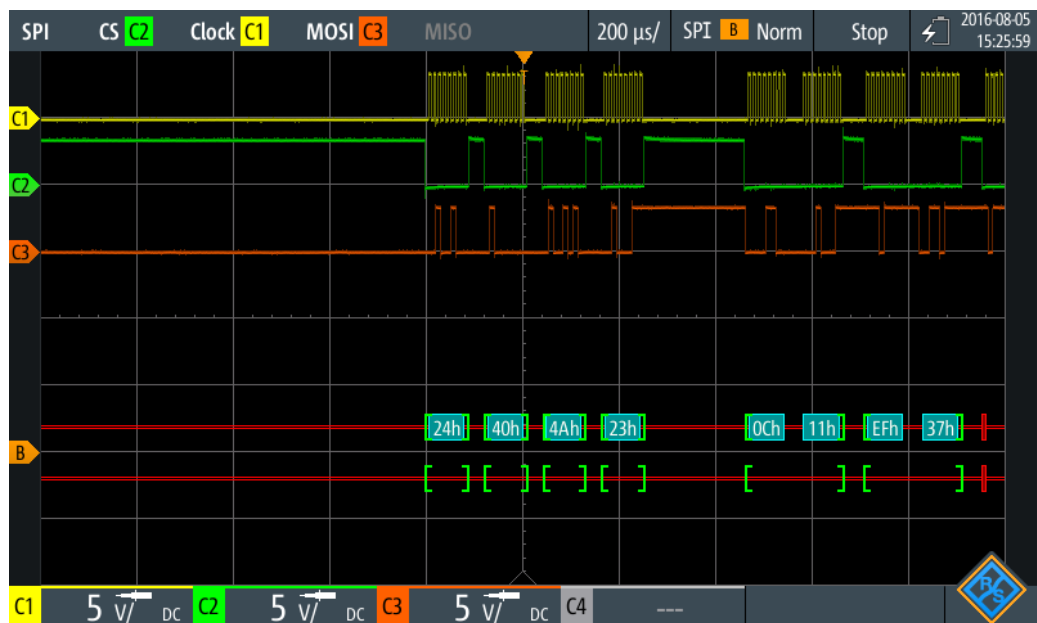


Figure 8-12: Comb display of a decoded SPI signal, triggered on data pattern 40 (hex)

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display.

**Table 8-3: Color codes of decoded SPI signals**

Color, display element	Description
Green brackets [...]	Start and end of frame
Cyan comb	Data words
Red	Error, or insufficient frame (end of acquisition before decoding has been completed)

In "Protocol" mode, decoded data is shown in tabular form.

**Table 8-4: Content of the protocol table for decoded SPI signal**

Column	Description
#	Frame index
Frame Start	Time of frame start
MOSI <x> bit [format]	Value of the MOSI data word. The data format is selected in the "Bus" menu. The column header indicates the selected word length.
MISO <x> bit [format]	Value of the MISO data word. The data format is selected in the "Bus" menu. The column header indicates the selected word length.
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the time scale to get a longer acquisition.

Remote commands are described in [Chapter 14.11.3.3, "SPI Decode Results"](#), on page 424.

## 8.4 UART/RS-232/RS-422/RS-485 (Option R&S RTH-K2)

### 8.4.1 UART Interface

The Universal Asynchronous Receiver/Transmitter UART converts words of data into serial data, and vice versa. It is the base of many serial protocols like of RS-232 and RS-422. The UART uses only one line, or two lines for transmitter and receiver. The R&S RTH can analyze one UART line.

#### Data transfer

The data is transmitted in words, also referred to as symbols or characters. Each word consists of a start bit, several data bits, an optional parity bit, and one or more stop bits. Several words can form a frame, or package. The end of a frame is marked by a pause between two symbols.

**Figure 8-13: Bit order in a UART word (symbol)**

- The start bit is a logic 0.
- The stop bits and the idle state are always logic 1.

The UART protocol has no clock for synchronization. The receiver synchronizes by means of the start and stop bits, and the bit rate that must be known to the receiver.

### Trigger

The R&S RTH can trigger on specified parts of UART serial signals:

- Start bit of a word
- Frame start
- Data pattern
- Parity error
- Stop error
- Break

## 8.4.2 UART Configuration Settings

Access: "Bus" menu > "Bus Protocol" = "UART" > "Config"

Source	C1	Polarity	Idle High	Threshold	1.399 V
Bit Rate	14.4 kbps	Predefined Bit Rates	14.4 kbps	Technology	User
Data Bits	8 bit	Parity	None	Stop Bits	1 bit
Bit Order	MSB First	Frame Mode	None	Idle Time	1 ms

Find Level

### Source

Selects the input channel to which the UART line is connected.

If option R&S RTH-B1 is installed, digital channels can also be used as source.

Remote command:

[BUS : UART : SOURce](#) on page 428

### Polarity

Defines the logic states of the line. In idle high state, the idle state corresponds to a logic 1, and the start bit to a logic 0. In idle low state, the idle state corresponds to a logic 0, and the start bit to a logic 1. During idle time, no data is transmitted.

Remote command:

[BUS:UART:POLarity](#) on page 428

### Threshold, Technology, Find Level

Sets the threshold value for digitization of signals. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low. The interpretation of high and low is defined by the [Polarity](#).

You can select the threshold voltages for various types of integrated circuits in the "Technology" list, or set a user-defined value in "Threshold". You can also let the instrument set the appropriate threshold using "Find Level".

Changing the thresholds in the bus configuration changes also the thresholds of analog channels in the "Vertical" menu, or the thresholds of logic channels in the "Logic" menu.

Remote command:

[BUS:UART:TECHnology](#) on page 428

[BUS:UART:THReshold](#) on page 428

[BUS:SETRefllevels](#) on page 410

[CHANnel<m>:THReshold:FINDlevel](#) on page 288

### Predefined Bit Rates, Bit Rate

Set the number of transmitted bits per second.

You can select a predefined value in the "Predefined Bit Rates" list, or set a user-defined value in "Bit Rate".

Remote command:

[BUS:UART:STDBitrate](#) on page 429

[BUS:UART:BITRate](#) on page 429

### Data Bits

Sets the number of data bits in a word (symbol) in a range from 5 bits to 9 bits.

Remote command:

[BUS:UART:SSIZE](#) on page 429

### Parity

Defines the optional parity bit that is used for error detection.

"None"            No parity bit is used.

"Odd"            The parity bit is set to "1" if the number of data bits set to "1" is even.

"Even"           The parity bit is set to "1" if the number of data bits set to "1" is odd.

Remote command:

[BUS:UART:PARity](#) on page 429

### Stop Bits

Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Remote command:

[BUS:UART:SBIT](#) on page 430

**Bit Order**

Defines if a word starts with MSB (most significant bit) or LSB (least significant bit). The display of the decoded signal considers this setting, results are displayed in the specified order.

Remote command:

[BUS:UART:ORDER](#) on page 430

**Frame Mode**

Allows you to decode frames of several words in the data stream, which are defined by a timeout between a stop bit and the next start bit. Enter the minimum timeout between two frames in "Idle Time".

Remote command:

[BUS:UART:FRAMEmode](#) on page 430

[BUS:UART:TOUT](#) on page 430

**8.4.3 UART Trigger Settings**

Access: "Bus" menu > "Bus Protocol" = "UART" > "Trigger"

**UART Trigger**

Selects the trigger type for UART analysis.

"Start Bit"	Triggers on a start bit. The start bit is the first low bit after a stop bit if polarity is idle high.
"Frame Start"	Triggers on the begin of a data frame. The frame start is configured with <a href="#">BUS:UART:FRAMEmode</a> .
"Data"	Triggers on a serial pattern or data word. You can define the <a href="#">Pattern</a> and <a href="#">Relation</a> .
"Parity Error"	Triggers on a parity error, which indicates a transmission error. This trigger type is only available if a parity is configured for the UART bus.
"Stop Error"	Triggers if the stop bit is a logic 0.
"Break Condition"	Triggers if a start bit is not followed by a stop bit, and the data line remains at logic 0 for longer than a UART word.

Remote command:

[TRIGger:UART:TYPE](#) on page 431

**Pattern**

Specifies the data pattern to be found on the specified trigger source, in binary or hex format. Enter the words in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:UART:DATA](#) on page 431

### Relation

Defines how the defined serial data pattern is compared with the acquired signal. The instrument triggers if the acquired data word is equal or unequal the defined pattern.

Remote command:

[TRIGger:UART:DCONdition](#) on page 431

## 8.4.4 UART Decode Results

This chapter describes the comb display and the decode results table of decoded UART buses. Basic information on decoding and display of decode results is given in [Chapter 8.1.2, "Decode Results"](#), on page 167.

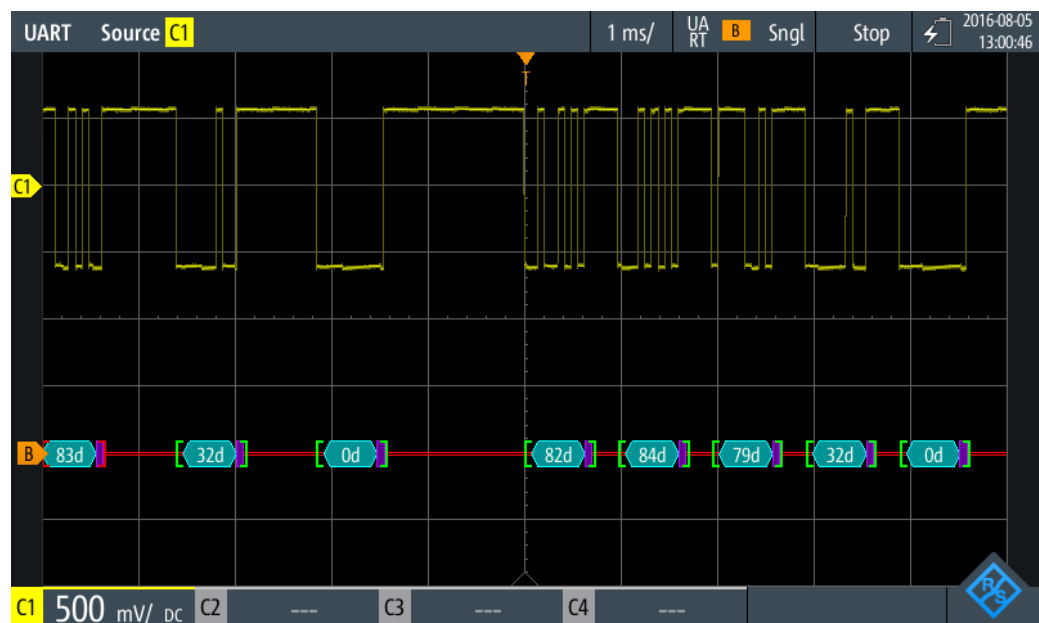


Figure 8-14: Comb display of a decoded UART signal, triggered on start bit

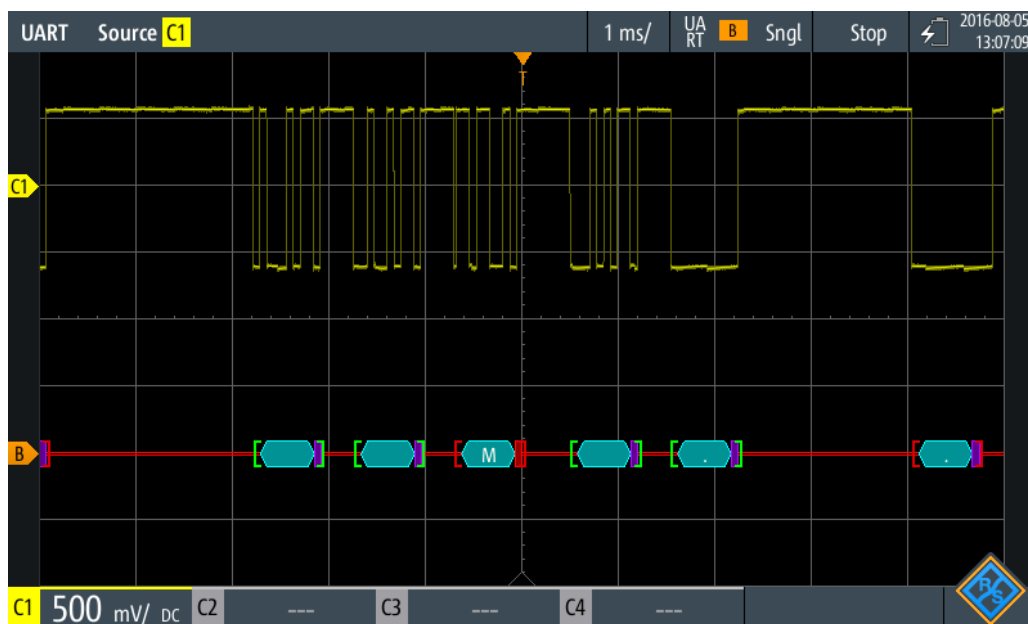


Figure 8-15: Comb display of a decoded UART signal, triggered on parity error

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display.

Table 8-5: Color codes of decoded UART signals

Color, display element	Description
Green brackets [...]	Start and end of frame
Cyan comb	Data words
Violet comb	Parity bit
Red	Start error, stop error, parity error, or insufficient frame (end of acquisition before decoding has been completed)

In "Protocol" mode, decoded data is shown in tabular form.

Table 8-6: Content of the protocol table for decoded UART signal

Column	Description
#	Frame index
Frame Start	Time of frame start
Value <x> bit [format]	Value of the data word. The data format is selected in the "Bus" menu. The column header indicates the selected word length.
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the time scale to get a longer acquisition.

Remote commands are described in [Chapter 14.11.4.3, "UART Decode Results"](#), on page 432.

## 8.5 CAN (Option R&S RTH-K3/R&S RTH-K9)

CAN is the Controller Area Network, a bus system designed by Bosch for use within automotive network architecture, for example, for brake, power train and engine management. Today, it is also used in many other systems, for example, in industrial machines, aerospace, subsea, merchant marine etc..

More than 20 years after the invention of CAN, communication needs have increased, and CAN has reached it's bandwidth limits in some application fields. Therefore, Bosch specified an improved CAN protocol with flexible data rate - CAN FD. It introduces a higher bit rate in the data phase up to 15 Mbit/s and an extended data field from up to 64 bytes.

The R&S RTH provides decoding, triggering and searching CAN and CAN FD signals with following options:

- CAN: option R&S RTH-K3
- CAN FD: option R&S RTH-K9, requires CAN option R&S RTH-K3

### 8.5.1 CAN Configuration Settings

Access: "Bus" menu > "Bus Protocol" = "CAN" > "Config"

Source	C1	Polarity	CAN_L	Threshold	2.5 V
CAN Standard	CAN	Technology	CMOS	Find Level	
Bit Rate	50 kbps	Predefined Bit Rates	50 kbps	Sample Point	50 %

Source	C1	Polarity	CAN_L	Threshold	2.5 V
CAN Standard	CAN FD	CAN FD Standard	ISO	Find Level	
Arbitration Bit Rate	50 kbps	Predefined Bit Rates	50 kbps	Sample Point	50 %
Data Bit Rate	50 kbps	Predefined Bit Rates	50 kbps	Sample Point	50 %



**Source**

Sets the input channel of the CAN line. All active analog channels can be used.

If option R&S RTH-B1 is installed, digital channels can also be used as source.

Remote command:

[BUS:CAN:DATA:SOURce](#) on page 434

**Polarity**

Selects whether the chip select signal is high active (high = 1) or low active (low = 1).

Remote command:

[BUS:CAN:TYPE](#) on page 434

**Threshold, Technology, Find Level**

Sets the threshold value for digitization of signals. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

You can select the threshold voltage on the source CAN for various types of integrated circuits in the "Technology" list, or set a user-defined value in "Threshold". You can also let the instrument set the appropriate threshold using "Find Level".

Changing the thresholds in the bus configuration changes also the thresholds of analog channels in the "Vertical" menu, or the thresholds of logic channels in the "Logic" menu.

Remote command:

[BUS:CAN:TECHnology](#) on page 435

[BUS:CAN:DATA:THReshold](#) on page 435

[BUS:SETRefllevels](#) on page 410

[CHANnel<m>:THReshold:FINDlevel](#) on page 288

**CAN Standard**

Selects the CAN protocol.

For decoding CAN buses, option R&S RTH-K3 is required and for CAN FD option R&S RTH-K9.

Remote command:

[BUS:CAN:FDATa:ENABle](#) on page 437

**CAN FD Standard**

The setting is available in CAN FD option R&S RTH-K9.

Selects the standard of the tested CAN FD signal.

"Non-ISO"      Signals are decoded according to the Bosch CAN FD protocol.

"ISO"            Signals are decoded according to the ISO CAN FD protocol. This protocol has an additional stuff count field before the CRC sequence.

Remote command:

[BUS:CAN:FDATa:PSTandard](#) on page 437

**Bit Rate, Predefined Bit Rates**

Sets the number of transmitted bits per second. The maximum bit rate is 1 Mbit/s.

To select a bit rate from the list of predefined values, tap the "Predefined Bit Rates" field, then select the value.

To set a user-defined value, double-tap the "Bit Rate" field, then enter the value and unit using the displayed keypad. The "Predefined Bit Rates" setting is automatically set to "User".

Remote command:

[BUS:CAN:BITRate](#) on page 434

#### **Arbitration Bit Rate, Predefined Bit Rates**

The setting is available in CAN FD option R&S RTH-K9.

Sets the bit rate of the arbitration phase. The maximum bit rate is 1 Mbit/s.

To select a bit rate from the list of predefined values, tap the "Predefined Bit Rates" field, then select the value.

To set a user-defined value, double-tap the "Arbitration Bit Rate" field, then enter the value and unit using the displayed keypad. The "Predefined Bit Rates" setting is automatically set to "User".

Remote command:

[BUS:CAN:FDATa:ABITrate](#) on page 436

#### **Data Bit Rate, Predefined Bit Rates**

The setting is available in CAN FD option R&S RTH-K9.

Sets the bit rate of the data phase. The data rate can be equal or higher than the arbitration rate; and it is uniform and fixed for a given CAN FD bus.

To select a data rate from the list of predefined values, tap on "Predefined Bit Rates" beside the field. To enter a specific value, open the keypad. The list of predefined values is also available in the keypad.

To set a user-defined value, double-tap the "Data Bit Rate" field, then enter the value and unit using the displayed keypad. The "Predefined Bit Rates" setting is automatically set to "User".

Remote command:

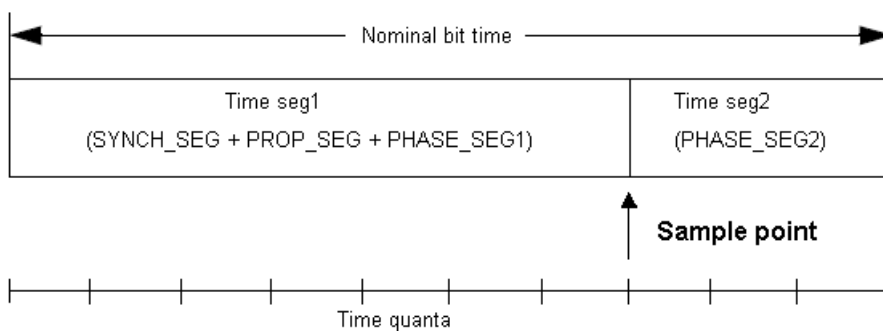
[BUS:CAN:FDATa:DBITrate](#) on page 436

#### **Sample Point**

The CAN bus interface uses an asynchronous transmission scheme. The standard specifies a set of rules to resynchronize the local clock of a CAN node to the message.

The sample point divides the nominal bit period into two distinct time segments. The length of the time segments is defined in time quanta according to network and node conditions during CAN development.

For CAN FD signals, you can define the sample point separately for the arbitration phase and data phase.



Remote command:


[BUS:CAN:SAMPlepoint](#) on page 435

[BUS:CAN:FDATA:ASAMPlepoint](#) on page 436

[BUS:CAN:FDATA:DSAMPlepoint](#) on page 436

### 8.5.2 CAN Trigger Settings

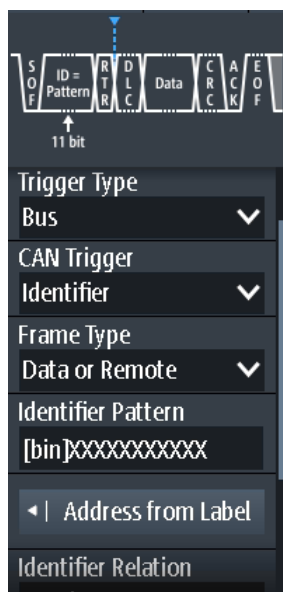Access: SETUP (TRIGGER) > "Trigger type" = "Bus"



<a href="#">CAN Trigger</a> .....	195
<a href="#">Frame type</a> .....	195
<a href="#">ID type</a> .....	196
<a href="#">Identifier Pattern</a> .....	196
<a href="#">Identifier Relation</a> .....	196
<a href="#">FDF Bit</a> .....	196
<a href="#">BRS Bit</a> .....	196
<a href="#">ESI Bit</a> .....	197
<a href="#">Data Pattern</a> .....	197
<a href="#">Data Relation</a> .....	197

Byte Offset.....	197
Address from Label.....	197
Error conditions: CRC, Bit stuffing, Form, Ack, SC.....	197

### CAN Trigger

Depending on the selected CAN trigger type, different additional parameters are available.

#### "Start of Frame"

Triggers on the stop bit of the sync field.

#### "End of frame"

Triggers after a wakeup frame.

#### "Frame type"

Triggers on a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.

#### "Identifier"

Sets the trigger to a specific identifier or an identifier range. Only the 6-bit identifier without parity bits is considered, not the protected identifier.

#### "Identifier + Data"

Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

#### "Error condition"

Identifies various errors in the frame. You can select one or more error types as the trigger condition.

Remote command:

[TRIGger:CAN:TYPE](#) on page 440

### Frame type

CAN has several frame types which can be used as trigger condition.

For data and remote frames, the identifier format has to be set with [ID type](#).

"Error" When a node recognizes an error, it cancels transmission by sending an error frame.

The instrument triggers seven bit-periods after the end of the error flag that is marked by a dominant-recessive edge.

The [ID type](#) is irrelevant for error frames.

"Overload" When a node needs a delay between data and/or remote frames, it sends an overload frame.

The instrument triggers seven bit-periods after the end of the overload flag that is marked by a dominant-recessive edge.

The [ID type](#) is irrelevant for overload frames.

"Data" The data frame is the only frame for actual data transmission.

"Remote" Remote frames are only available in the CAN protocol.

The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.

"Data or Remote" Data frames or remote frames initiate the transmission of data by another node. The frame format is the same as of data frames.

Remote command:

[TRIGger:CAN:FTYPE](#) on page 439

### ID type

Selects the length of the identifier:

"11 bit"	Identifier length of the CAN base frame format. The instrument triggers on the sample point of the IDE bit (identifier extension flag).
"29 bit"	Identifier length of the CAN extended frame format. The instrument triggers on the sample point of the RTR bit.
"Any"	The ID type and ID pattern are not relevant for the trigger condition. If the trigger type is "Identifier", the instrument triggers on any identifier in the specified frame type. If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to trigger only on data.

Remote command:

[TRIGger:CAN:ITYPe](#) on page 440

### Identifier Pattern

Specifies the identifier pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:CAN:IDENTifier](#) on page 440

### Identifier Relation

Defines how the specified identifier pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

[TRIGger:CAN:ICONdition](#) on page 439

### FDf Bit

The bit determines whether a frame is CAN or CAN-FD. It corresponds to the EDL bit (extended data length), which only exists in CAN FD format. If you do not know if the signal is CAN or CAN FD, you can use this bit to identify the format.

Remote command:

[TRIGger:CAN:FDATa:FDf](#) on page 442

### BRS Bit

The setting is available in CAN FD option R&S RTH-K9.

Sets the the bit rate switch bit.

Value 1 means that the bit rate switches from the "Arbitration rate" to the faster "Data rate".

Remote command:

[TRIGger:CAN:FDATa:BRS](#) on page 441

**ESI Bit**

The setting is available in CAN FD option R&S RTH-K9.

Sets the error state indicator bit. If set to "Dominant", the bit indicates an error active state.

Remote command:

[TRIGger:CAN:FDATa:ESI](#) on page 441

**Data Pattern**

Specifies the data pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:CAN:DATA](#) on page 438

**Data Relation**

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

[TRIGger:CAN:DONdition](#) on page 438

**Byte Offset**

The setting is available in CAN FD option R&S RTH-K9.

Sets the byte offset, that defines the start position of the data for the data pattern comparison.

Remote command:

[TRIGger:CAN:FDATa:DPOSITION](#) on page 441

**Address from Label**

If a label list with node names was loaded and applied in the bus configuration, you can select the node name from the list instead of entering the numeric identifier.

The instrument triggers on the identifier of the selected node.

**Error conditions: CRC, Bit stuffing, Form, Ack, SC**

If a CAN detects a bit stuffing error, form error, or Ack error, it transmits an error flag at the next bit. The R&S RTH detects errors in the message and triggers on these errors even if no CAN node sends an error flag.

- **CRC error**  
CAN uses the cyclic redundancy check (CRC), which is a complex checksum calculation method. The transmitter calculates the CRC and sends the result in the CRC sequence. The receiver calculates the CRC in the same way. A CRC error occurs when the calculated result differs from the received value in the CRC sequence.
- **Bit stuffing error**  
The frame segments Start Of Frame, Arbitration Field, Control Field, Data Field and CRC Sequence are coded by the bit stuffing method. The transmitter automatically inserts a complementary bit into the bit stream when it detects five consecu-

tive bits of identical value in the bit stream to be transmitted. A stuff error occurs when the 6th consecutive equal bit level in the mentioned fields is detected.

- Form error  
A form error occurs when a fixed-form bit field contains one or more illegal bits.
- Ack error  
An acknowledgement error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the Ack slot.
- SC error  
A stuff count (SC) error occurs if the received stuff count value does not match the value calculated from the own stuff bit count.  
Only relevant for CAN FD signals in ISO standard.

Remote command:

[TRIGger:CAN:ACKerror](#) on page 438

[TRIGger:CAN:BITSterror](#) on page 438

[TRIGger:CAN:CRCErrror](#) on page 438

[TRIGger:CAN:FORMerror](#) on page 439

[TRIGger:CAN:FDATa:SCERror](#) on page 442

### 8.5.3 CAN Label List

Label list files (symbolic data files) for CAN protocols are available in PTT and CSV file formats, similar to other serial protocols. In addition, the R&S RTH can read and apply DBC files to the decoded signal and use them for triggering.

For general information on label lists, see [Chapter 8.1.3, "Label Lists"](#), on page 168.

#### 8.5.3.1 PTT and CSV Files for CAN

Label list files are protocol-specific. A PTT label file for CAN protocols contains three values for each identifier:

- Identifier type, 11-bit or 29-bit long
- Identifier value
- Label, symbolic name of the identifier, specifying its function in the bus network.

##### Example: CAN PTT file

```
# -----
@FILE_VERSION = 1.00
@PROTOCOL_NAME = can
# -----
# Labels for CAN protocol
# Column order: Identifier type, Identifier value, Label
# -----
11,064h,Diag_Response
11,1E5h,EngineData
11,0A2h,Ignition_Info
11,1BCh,TP_Console
11,333h,ABSdata
```

```

11,313h,Door_Left
11,314h,Door_Right
29,01A54321h,Throttle
29,13A00FA2h,LightState
29,0630ABCDh,Engine_Status
29,03B1C002h,Airbag_Status
29,01234ABCh,NM_Gateway
# -----

```

### 8.5.3.2 DBC Files for CAN

Industry-standard DBC files contain more information than PTT and CSV files and translate the abstract decode results to human language. For each frame, the frame ID and the symbolic name of the ID are given; the frames are also called messages in CAN. The data of a CAN message can consist of several "signals". The DBC file provides the label, unit, start bit, length and other indicators for each signal. For state-encoded signals, the meaning of the states is given.

In the demo example, the message "EngineData" has the decimal ID 2,166,573,756 and consists of 8 data bytes. These 8 bytes are defined as 6 signals. The first one, "PetrolLevel", starts at bit #24, has a length of 8 bit, and the unit is liter. The signal "IdleRunning" is state-encoded. It has only one bit. The binary value 0 means "Running", and the binary value 1 means "Idle".

#### Example: CAN DBC file section

```

BO_ 2166573756 EngineData: 8 Engine
SG_ PetrolLevel : 24|8@1+ (1,0) [0|255] "l" ...
SG_ EngPower : 48|16@1+ (0.01,0) [0|350] "kW" ...
SG_ EngForce : 32|10@1+ (1,0) [0|1000] "N" ...
SG_ IdleRunning : 23|1@1+ (1,0) [0|1] "" ...
SG_ EngTemp : 16|7@1+ (2,-50) [-50|150] "degC" ....
SG_ EngSpeed : 0|13@1+ (1,0) [0|8000] "rpm" ...
....
VAL_ 2166573756 IdleRunning 0 "Running" 1 "Idle" ;

```

If a DBC file is loaded, the bus menu provides an additional entry: [Display Labels](#).





Figure 8-16: Display of an CAN DBC file

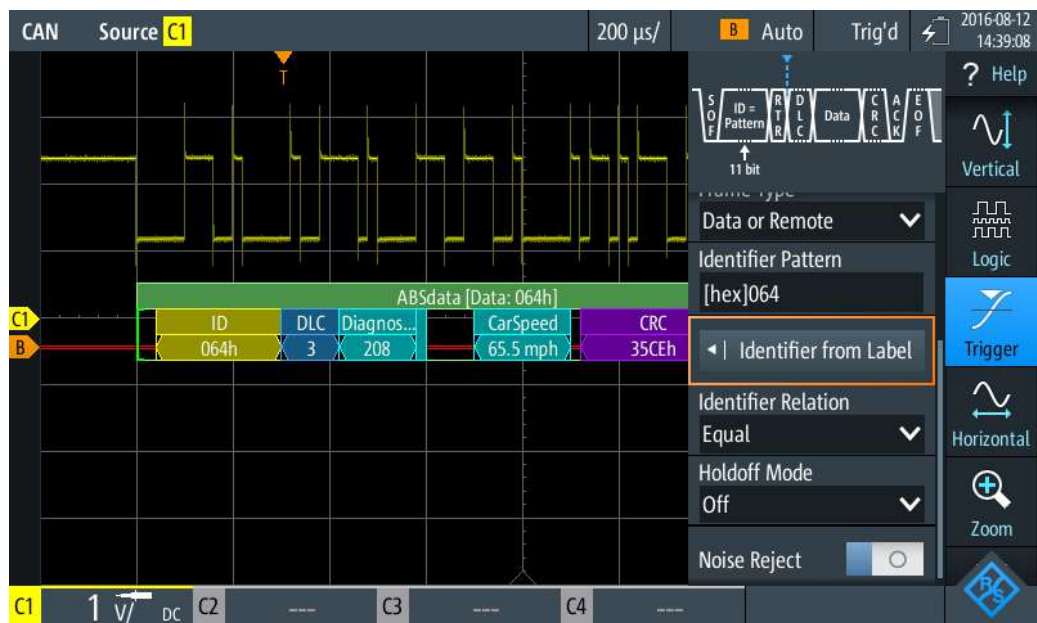


Figure 8-17: Trigger on message "ABSdata", identifier value 064 (hex)

### 8.5.4 CAN Decode Results

This chapter describes the comb display and the decode results table of decoded CAN buses. Basic information on decoding and display of decode results is given in [Chapter 8.1.2, "Decode Results"](#), on page 167.

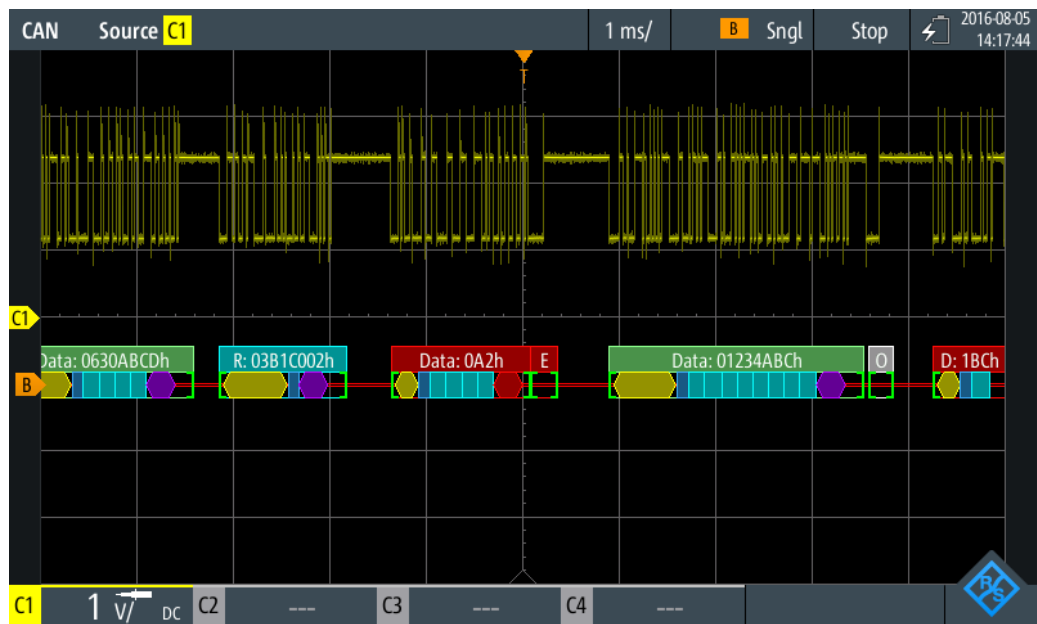


Figure 8-18: Comb display of a decoded CAN signal, triggered on CRC error

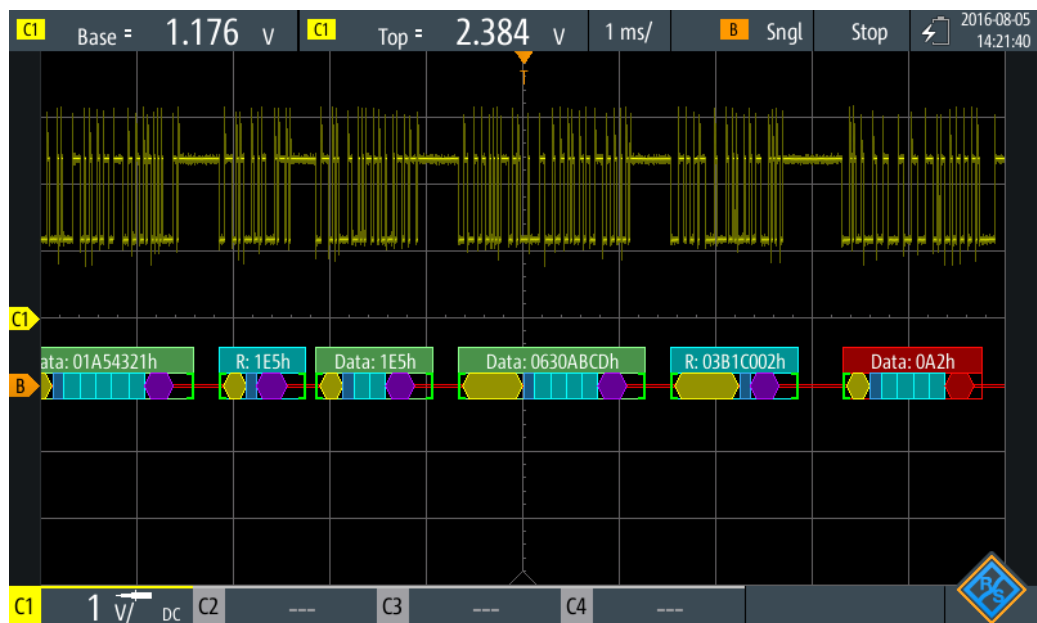


Figure 8-19: Comb display of a decoded CAN signal, triggered on address 0630ABCD (hex)

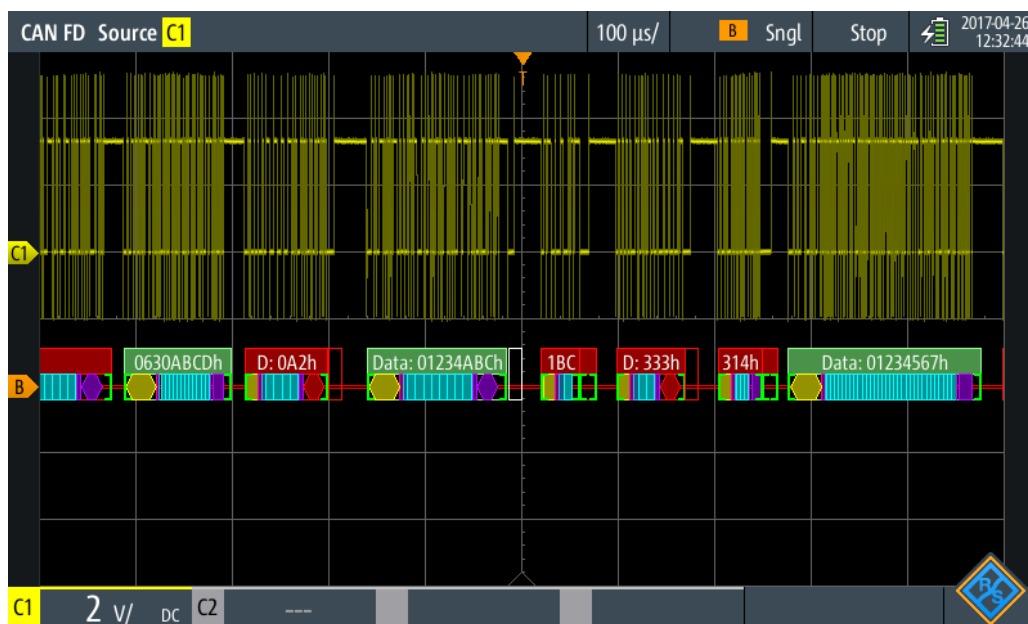


Figure 8-20: Comb display of a decoded CAN FD signal, triggered on overload frame

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display.

Table 8-7: Color codes of decoded CAN signals

Color, display element	Description
Green brackets [...]	Start and end of frame
Green frame header	Data frame. Text indicates the frame type and frame ID (hex).
Cyan frame header	Remote frame. Text indicates the frame type and frame ID (hex).
White frame header	Overload frame. Text indicates the frame type.
Yellow comb	ID (standard 11 bit and extended 29 bit)
Cyan comb	Data bytes
Blue comb	Data length code (DLC)
Violet	CRC
Red	Error frame, start/stop error, CRC error, stuff bit error, form error, ACK error, insufficient frame (end of acquisition before decoding has been completed)

In "Protocol" mode, decoded data is shown in tabular form.

Table 8-8: Content of the protocol table for decoded CAN signal

Column	Description
#	Frame index
Frame Start	Time of frame start
Frame Type	Data, remote, overload or error frame
ID bit	ID type, 11 bit standard format or 29 bit extended format

Column	Description
ID [hex]	Identifier value, hexadecimal value
DLC	Data length code, coded number of data bytes
Values 8 bit [format]	Values of data frames. The data format is selected in the "Bus" menu.
CRC	CRC value
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the time scale to get a longer acquisition.

Remote control commands are described in [Chapter 14.11.5.3, "CAN Decode Results"](#), on page 442.

## 8.6 LIN (Option R&S RTH-K3)

The Local Interconnect Network (LIN) is a simple, low-cost bus system used within automotive network architectures. LIN is usually a subnetwork of a CAN bus. The primary purpose of LIN is to integrate uncritical sensors and actuators with low bandwidth requirements. Common applications in a motor vehicle are the control of doors, windows, wing mirrors, and wipers.

### 8.6.1 The LIN Protocol

This chapter provides an overview of protocol characteristics, frame format, identifiers and trigger possibilities. For detailed information, order the LIN specification on <http://www.lin-subbus.org/> (free of charge).

#### LIN characteristics

Main characteristics of LIN are:

- Single-wire serial communications protocol, based on the UART byte-word interface
- Single master, multiple slaves - usually up to 12 nodes
- Master-controlled communication: master coordinates communication with the LIN schedule and sends identifier to the slaves
- Synchronization mechanism for clock recovery by slave nodes without crystal or ceramics resonator

The R&S RTH supports several versions of the LIN standard: v1.3, v2.0, v2.1 and the American SAE J2602.


#### Data transfer

Basic communication concept of LIN:

- Communication in an active LIN network is always initiated by the master.

- Master sends a message header including the synchronization break, the synchronization byte, and the message identifier.
- The identified node sends the message response: one to eight data bytes and one checksum byte.
- Header and response form the message frame.

The data is transmitted in bytes using the UART byte-word interface without the parity bit. Each byte consists of a start bit, 8 bits and a stop bit.

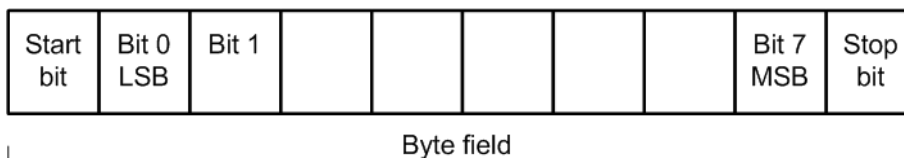

*Figure 8-21: Structure of a byte field*

Data bytes are transmitted LSB first.

The identifier byte consists of 6 bits for the frame identifier and two parity bits. This combination is known as protected identifier.

### Trigger

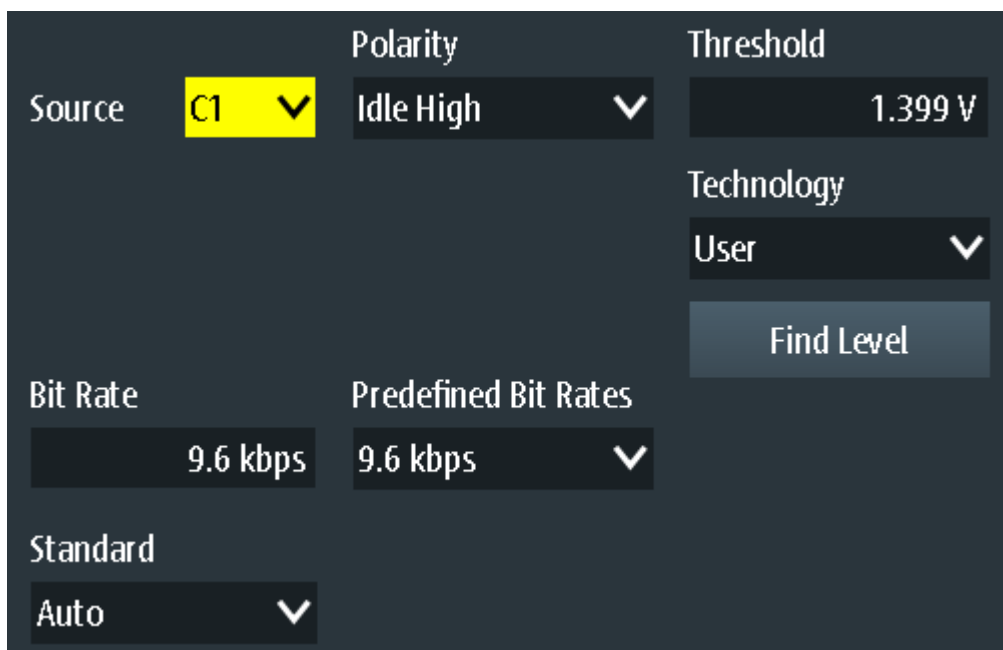
The R&S RTH can trigger on various parts of LIN frames. The data line must be connected to an input channel, triggering on math and reference waveforms is not possible.

You can trigger on:

- Frame start (synchronization field)
- Specific slave identifier or identifier range
- Data pattern in the message
- Wake up signal
- Checksum error (error in data), parity error (error in identifier)

## 8.6.2 LIN Configuration Settings

Access: PROTOCOL > "Bus type" = "LIN" > "Configuration"



Source..... 205  
 Polarity..... 205  
 Standard..... 205  
 Bit rate, Predefined Bit Rates..... 206  
 Threshold, Technology, Find Level..... 206

**Source**

Sets the source of the data line. All active analog channels can be used. If option R&S RTH-B1 is installed, digital channels can also be used as source.

Remote command:  
[BUS:LIN:DATA:SOURce](#) on page 449

**Polarity**

Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logical 1.

- "Idle Low"            The bus is idle (state = 1) when the signal is low
- "Idle High"           The bus is idle (state = 1) when the signal is high

Remote command:  
[BUS:LIN:POLarity](#) on page 450

**Standard**

Selects the version of the LIN standard that is used in the DUT. The setting mainly defines the checksum version used during decoding.

The most common version is v2.x. For mixed networks, or if the standard is unknown, set the LIN standard to "Auto".

Remote command:  
[BUS:LIN:STANdard](#) on page 450

**Bit rate, Predefined Bit Rates**

Sets the number of transmitted bits per second. The maximum bit rate is 20 kbit/s.

To select a bit rate from the list of predefined values, tap the "Predefined Bit Rates" field, then select the value.

To set a user-defined value, double-tap the "Bit Rate" field, then enter the value and unit using the displayed keypad. The "Predefined Bit Rates" setting is automatically set to "User Bit Rate".

Remote command:

[BUS:LIN:BITRate](#) on page 450

**Threshold, Technology, Find Level**

Sets the threshold value for digitization of signals. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

You can select the threshold voltages for various technologies in the "Technology" list, or set a user-defined value in "Threshold". You can also let the instrument set the appropriate threshold using "Find Level".

Changing the thresholds in the bus configuration changes also the thresholds of analog channels in the "Vertical" menu, or the thresholds of logic channels in the "Logic" menu.

Remote command:

[BUS:LIN:TECHnology](#) on page 451

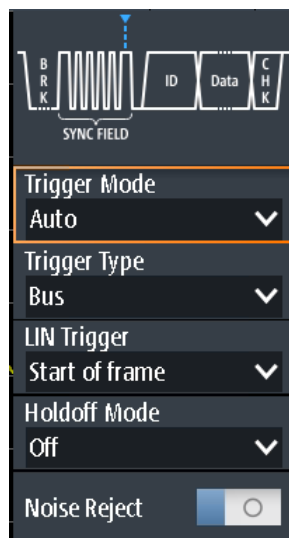
[BUS:LIN:DATA:THReshold](#) on page 450

[BUS:SETReflevels](#) on page 410

[CHANnel<m>:THReshold:FINDlevel](#) on page 288

**8.6.3 LIN Trigger Settings**

Access: SETUP (TRIGGER) > "Trigger type" = "Bus"



LIN Trigger.....	207
Checksum Error.....	207
Parity Error.....	207
Sync Error.....	207
Identifier Pattern.....	208
Identifier Relation.....	208
Identifier from Label.....	208
Data Pattern.....	208
Data Relation.....	208

### LIN Trigger

Depending on the selected LIN trigger type, different additional parameters are available.

#### "Start of Frame"

Triggers on the stop bit of the sync field.

#### "Wakeup frame"

Triggers after a wakeup frame.

#### "Error condition"

Identifies various errors in the frame. You can select one or more error types as the trigger condition.

#### "Identifier"

Sets the trigger to a specific identifier or an identifier range. Only the 6-bit identifier without parity bits is considered, not the protected identifier.

#### "Identifier + Data"

Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

Remote command:

`TRIGger:LIN:TYPE` on page 453

### Checksum Error

Triggers on a checksum error. The checksum verifies the correct data transmission. It is the last byte of the frame response. The checksum includes not only the data but also the protected identifier (PID).

Remote command:

`TRIGger:LIN:CHKSError` on page 451

### Parity Error

Triggers on a parity error. Parity bits are the bits 6 and 7 of the identifier. They verify the correct transmission of the identifier.

Remote command:

`TRIGger:LIN:IPERror` on page 453

### Sync Error

Triggers if synchronization caused an error.

Remote command:

`TRIGger:LIN:SYERror` on page 453



**Identifier Pattern**

Specifies the identifier pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

`TRIGger:LIN:IDENTifier` on page 452

**Identifier Relation**

Defines how the specified identifier pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

`TRIGger:LIN:ICONdition` on page 452

**Identifier from Label**

If a label list with node names was loaded and applied in the bus configuration, you can select the node name from the list instead of entering the numeric identifier.

The instrument triggers on the identifier of the selected node.

**Data Pattern**

Specifies the data pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

`TRIGger:LIN:DATA` on page 452

**Data Relation**

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

`TRIGger:LIN:DCONDITION` on page 452

## 8.6.4 LIN Label List

Label lists are protocol-specific. Label lists for LIN are available in CSV and PTT format.

A LIN label file contains two values for each identifier:

- Identifier value
- Symbolic name for the identifier

**Example of a LIN PTT file**

```
# -----
@FILE_VERSION = 1.0
@PROTOCOL_NAME = lin
# -----
# Labels for LIN protocol
```

```
# Column order: Identifier, Label
# -----
# Labels for standard addresses
0x3F, Temperature
1Ch, Left brake
20h, Right brake
# Following ID is provided as integer
33, Mirror
0x37, Indoor lights
# Labels for reserved addresses
0x3C, Master_Request_Frame
0x3D, Slave_Response_Frame
# -----
```

For general information on label lists, see [Chapter 8.1.3, "Label Lists"](#), on page 168.

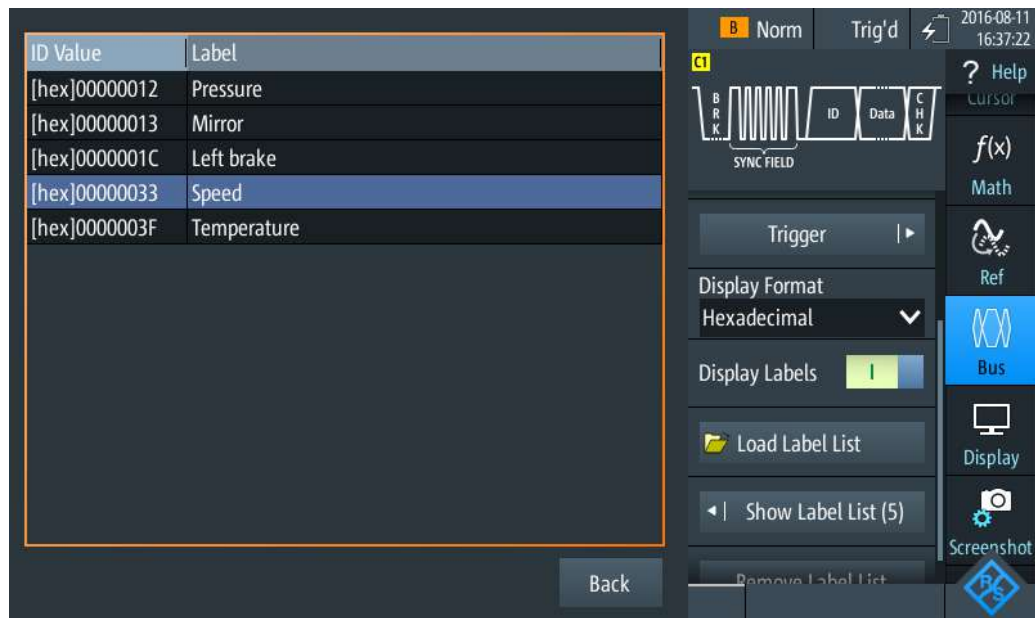


Figure 8-22: Display of a LIN label list

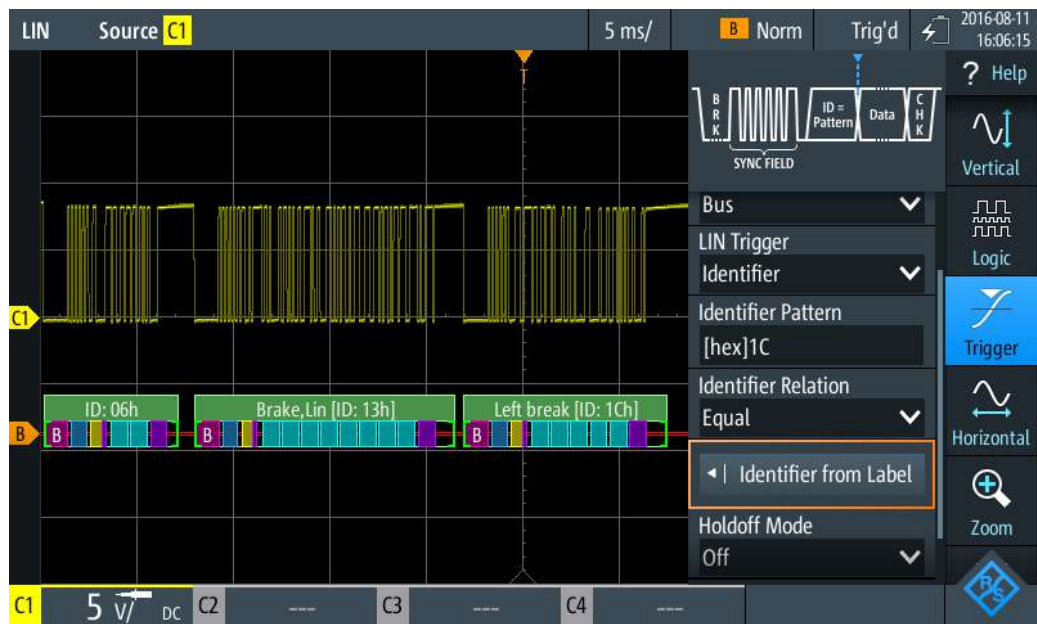


Figure 8-23: Trigger on identifier "Left brake"

### 8.6.5 LIN Decode Results

This chapter describes the comb display and the decode results table of decoded LIN buses. Basic information on decoding and display of decode results is given in [Chapter 8.1.2, "Decode Results"](#), on page 167.

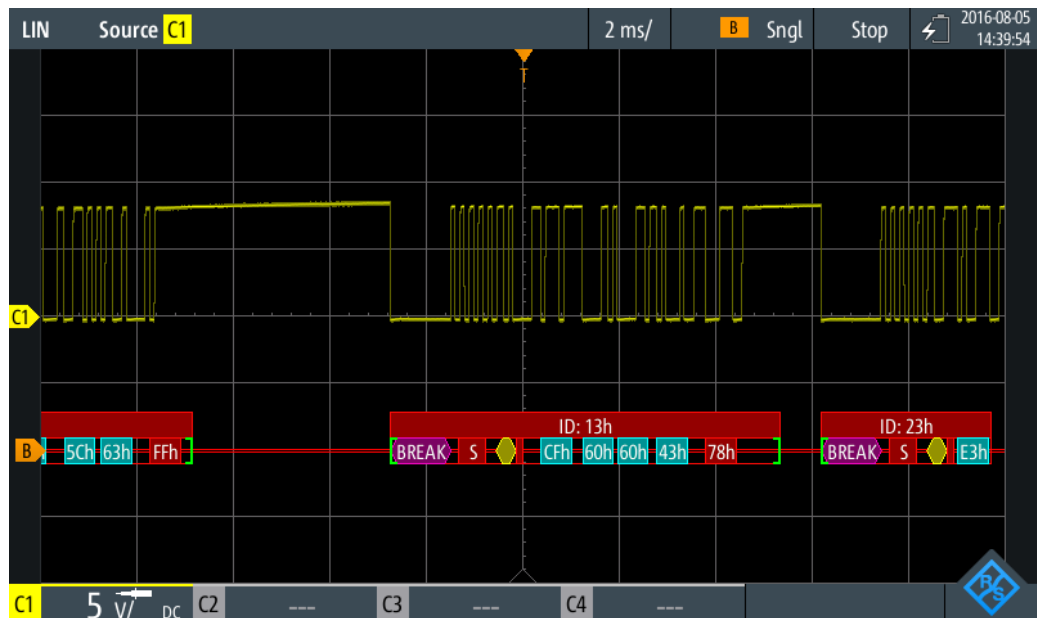


Figure 8-24: Comb display of a decoded LIN signal, triggered on parity error

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display.

**Table 8-9: Color codes of decoded LIN signals**

Color, display element	Description
Green brackets [...]	Start and end of frame
Green frame header	Data frame. Text indicates the frame ID (hex).
Magenta frame header	Wake-up frame. Text indicates the frame type.
Magenta comb	Break field
Blue comb	Synch field
Yellow comb	Identifier
Violet comb	Parity bit and checksum
Cyan comb	Data bytes
Red	Error in frame ID, checksum error, parity error, insufficient frame (end of acquisition before decoding has been completed)

In "Protocol" mode, decoded data is shown in tabular form.

**Table 8-10: Content of the protocol table for decoded LIN signal**

Column	Description
#	Frame index
Frame Start	Time of frame start
ID [hex]	Identifier value, hexadecimal value
ID Label	Symbolic name of the identifier. Column is shown instead of "ID [hex]" if a label list is used.
ID P [bin]	Value of the protected identifier, binary value
Values 8 bit [format]	Values of data bytes. The data format is selected in the "Bus" menu.
CHK [hex]	Checksum value, hexadecimal value
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the time scale to get a longer acquisition.

Remote control commands are described in [Chapter 14.11.6.3, "LIN Decode Results"](#), on page 453.

## 8.7 SENT (Option R&S RTH-K10)

### 8.7.1 The SENT Protocol

This chapter provides an overview of the protocol characteristics, encoding scheme, identifiers and trigger possibilities.

The SENT protocol transmits signal values point-to-point from a sensor to a controller (electronic control unit ECU), unidirectional. In contrast to conventional measurements, you can receive multiple data parameters via the SENT interface in a single transmission. Nevertheless, SENT is characterized by its simplicity and yet very high customizability to meet the individual requirements of the applications.

SENT operates via a three wire connection, a signal line, a supply voltage line for the sensor and a ground line. It transmits data digitally in variable timing units and evaluates the time between two falling edges (single edges). The signal is amplitude modulated with a constant amplitude voltage. Thus influences of interfering signals are not critical.

#### SENT key features

Main characteristics of SENT are:

- serial communication protocol
- 3 wires: SENT (signal line), 5V (voltage line), GND (ground line)
- output only, from sensor to receiver
- point-to-point transmission, no bus
- digital transmission
- high baud rate
- data transmission in variable timing units of 4 bits (1 nibble) between two falling edges
- transmitter-specific clock period (tick)
- time measured between single falling edges

#### 8.7.1.1 SENT Transmission Concept

A sensor converts the analog measured data to a digital signal, and thus transmits a series of pulses to the receiver. The receiver, e.g. an ECU processes the received signal also digitally.

The format of a SENT message frame has a fixed pulse order and a transmitter-specific clock period. The total transmission time varies depending on the clock variation of the transmitter and the transmitted data values. The data pulses embedded in the transmission sequence represent one or multiple data parameters to be communicated. The last pulses in a message frame are the CRC check pulse, allowing the receiver to perform a number of diagnostic tests, and an optional pause pulse.

A SENT transmission starts without a request from the receiver. Consecutive sequences are transmitted continuously after the falling edge of the last pulse.

The SENT protocol distinguishes between two channel types:

- **Fast channel:** transmits primary data, i.e. sensor readings like temperature, pressure, mass air flow, throttle position.
- **Slow channel:** transmits secondary data consisting of transfer characteristics, sensor ID, type, manufacturer diagnostic, etc.  
The slow channel transmission provides two serial message formats *Short* and *Enhanced* for customizing the secondary data.

The data of both, the fast and the slow channels is transmitted simultaneously, by including two bits of a slow channel message in the message frame of the fast channel. Even though it requires many fast channel messages to complete a slow channel message, you can use this function to transmit several slow channel messages with minimal impact on the primary sensor data and the data rate.

### 8.7.1.2 SENT Message Definitions

#### SENT terms

See the specific terms and definition used in SENT protocol:

- **Tick (clock tick):** basic unit of time
  - transmitter-specific nominal clock period
  - $3\ \mu\text{s} < \text{clock tick} < 90\ \mu\text{s}$ , with max. 20 % clock variation
- **Nibble:** minimum unit of data
  - used to transmit data
  - variable timing units between two falling edges

#### SENT Fast Channel

The SENT protocol enables you to transmit measurements of multiple sensors in one transmission sequence with data signals of varying length. The diagram in [Figure 8-25](#) shows, for example, the encoding scheme for two 12-bit data signals.

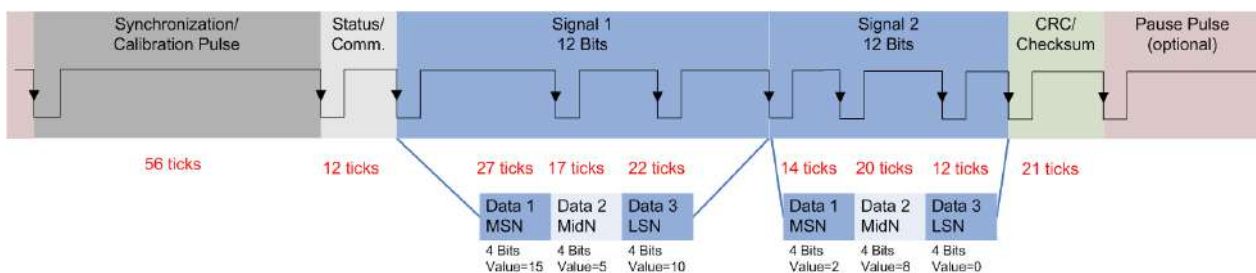


Figure 8-25: Example of a SENT transmission sequence

The format of a SENT transmission sequence consists of the following pulses:

- **Synchronization/Calibration Pulse:**
  - initial sequence of the receiver

- the start condition is the falling edge of the last pulse (CRC or Pause)
- nominal pulse period is 56 clock ticks
- measures the actual clock variation of the transmitter and calculates the tick timing
- **Status/Communication Pulse (Nibble)**
  - one 4 bit pulse
  - communicates status and enables the sensor to include slow channel message bits
    - 0: (LSB) specific application
    - 1: specific application
    - 2: Serial Data message or specific application (e.g. Infineon TLE4998S)
    - 3: (MSB) 1= message start; 0=Serial Data message or specific application (e.g. Infineon TLE4998S)
  - 12 to 27 clock ticks
  - not included in CRC frame calculation
- **Data Pulses (Nibbles)**
  - one up to six 4 bit data nibbles
  - 12 to 27 clock ticks pulse period
  - initial logic 0 time with  $\geq 5$  ticks, subsequent logical 1 with variable duration
- **CRC/Checksum**
  - one 4 bit pulse
  - used for error checking of data nibbles (status nibble not included)
  - detects single bit, odd number of nonconsecutive and single burst errors
- **Pause Pulse**
  - one optional pulse
  - variable pulse length: 12 to 768 clock ticks
  - can be used to create a transmission with constant number of clock ticks

## SENT Slow Channel

### Short Serial Messages

For transmission of a slow channel message, 2 bits are included in a fast channel message, see the status nibble (Bit 2,3) in [Figure 8-26](#).

A short serial message needs 16 fast channel messages until it is completely transmitted. Prerequisite for the complete transmission of the slow channel message are 16 consecutive error-free fast channel transmissions.

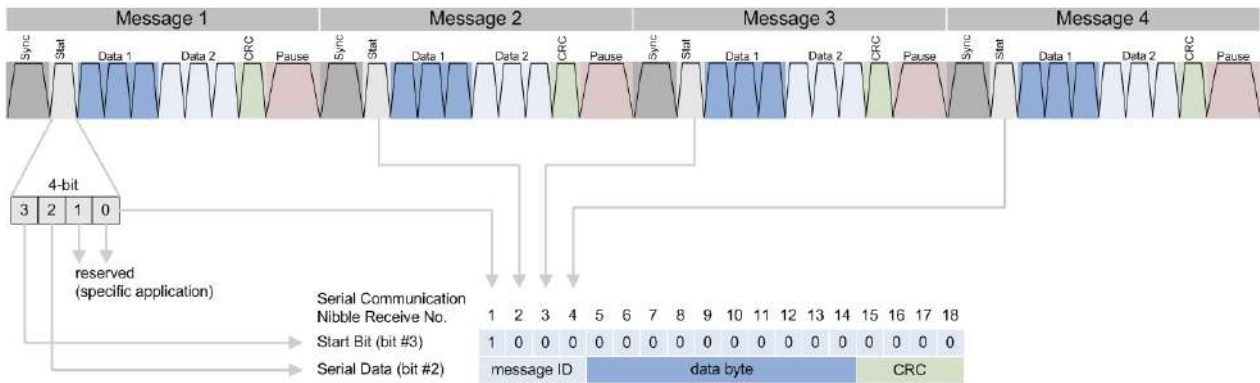


Figure 8-26: One serial message, composed of 16 SENT consecutive fast channel transmissions

### Enhanced Serial Messages


The transmission of an enhanced serial message format requires 18 fast channel transmissions. Each slow channel message is assigned a message ID, which is transmitted with the data.

The enhanced serial message format provides two alternatives for configuring the message:

- 4 bit ID and 16 bit data
- 8 bit ID and 12 bit data

The graphs below illustrate the variants.

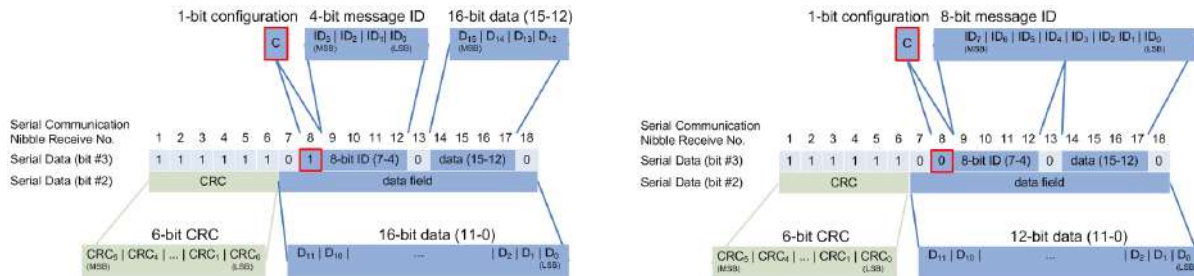Table 8-11: Enhanced serial message formats




16 bit data and 4 bit message ID

12 bit data and 8 bit message ID

## 8.7.2 SENT Configuration Settings

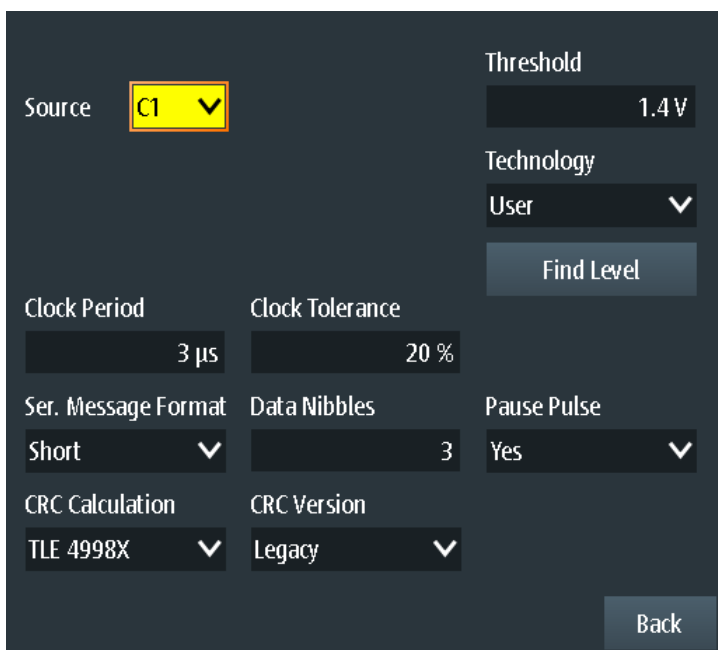Access: "Bus" menu > "Bus Protocol" = "SENT" > "Config"





Source.....216  
 Threshold, Technology, Find Level.....216  
 Clock Period.....217  
 Clock Tolerance.....217  
 Ser. Message Format.....217  
 Data Nibbles.....217  
 Pause Pulse.....217  
 CRC Calculation.....218  
 CRC Version.....218  
 Frame Length.....218

**Source**

Sets the source of the line. All active analog channels can be used.

If option R&S RTH-B1 is installed, digital channels can also be used as source.

Remote command:

`BUS:SENT:DATA:SOURce` on page 460

**Threshold, Technology, Find Level**

Sets the threshold value for digitization of signals. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

You can select the threshold voltages for various technologies in the "Technology" list, or set a user-defined value in "Threshold". You can also let the instrument set the appropriate threshold using "Find Level".

Changing the thresholds in the bus configuration changes also the thresholds of analog channels in the "Vertical" menu, or the thresholds of logic channels in the "Logic" menu.

Remote command:

`BUS:SENT:DATA:THReshold` on page 460

`BUS:SENT:TECHnology` on page 461

`BUS:SETReflevels` on page 410

`CHANnel<m>:THReshold:FINDlevel` on page 288

### Clock Period

Sets the transmitter specific nominal clock period (clock tick).

The clock period and signal length determine the speed of transmission.

Remote command:

`BUS:SENT:CLKPeriod` on page 459

### Clock Tolerance

Specifies a tolerated deviation of the clock.

Remote command:

`BUS:SENT:CLKTolerance` on page 459

### Ser. Message Format

Selects the protocol format in the transmitted signal.

"Short"            Short serial messages.

"Enhanced"        Enhanced serial messages.

"None"            No serial messages. Transmission sequences only.

Remote command:

`BUS:SENT:SFOFormat` on page 461

### Data Nibbles

Sets the number of data units in a single transmission sequence.

The maximum number of data nibbles is 6.

Remote command:

`BUS:SENT:DNIBbles` on page 460

### Pause Pulse

Determines whether a pause pulse is transmitted after the checksum nibble.

You can use this pulse to create a transmission with a constant number of clock ticks. The pause pulse length can be between a minimum of 12 clock ticks up to 768 ( $3 \cdot 256$ ) ticks at a maximum.

"No"

No pause pulse between the transmission sequences.

"Yes"

Pause pulse with fixed length at the end of each transmission sequence.

The R&S RTH computes the length of the pause pulse automatically.

**"Constant frame length"**

Pause pulse with dynamic length to maintain a fixed transmission sequence length.

To define the constant frame length, set the number of clock ticks under **"Frame Length"** on page 218.

Remote command:

`BUS:SENT:PPULse` on page 460

**CRC Calculation**

Selects the method for CRC calculation.

SENT CRC calculates the checksum over all nibbles except the communication and status nibble.

"SAE\_J2716" Calculates the CRC according to the SAE standard.

"TLE\_4998X" Calculates the CRC according to the standard computing method for Infineon TLE\_4998X sensors.

Remote command:

`BUS:SENT:CRMethod` on page 459

**CRC Version**

Selects the version the CRC check is based on.

"Legacy" Based on the CRC calculation version used earlier than 2010.

"v2010, v2016" Based on the recent CRC calculation version updated in 2010/2016.

Remote command:

`BUS:SENT:CRVersion` on page 459

**Frame Length**

Determines the frame length in terms of ticks. The dialog displays this settings parameter, if the signal has a constant frame length.

Remote command:

`BUS:SENT:PPFLength` on page 460

### 8.7.3 SENT Trigger Settings

Access: SETUP (TRIGGER) > "Trigger type" = "Bus"



SENT Trigger.....	219
Status Pattern.....	220
Status Relation.....	220
Data Pattern.....	220
Data Relation.....	220
Identifier Pattern.....	220
Identifier Relation.....	220
Sync Pulse Error.....	220
Pulse Period Error.....	221
Fast CRC Error.....	221
Slow CRC Error.....	221
Frame Length Error.....	221

### SENT Trigger

Sets the SENT trigger type. Depending on the selected value, different additional parameters are available.

#### "Start of Frame"

Triggers at the end of the synchronization/calibration pulse.

#### "Fast status"

Sets the trigger to a specific status or a specific pattern from the fast channel.

#### "Fast status and data"

Sets the trigger to a combination of status and data condition from the fast channel. Triggers at the end of the last data nibble.

#### "Slow Identifier"

Sets the trigger to a specific identifier or a specific pattern from the slow channel. The instrument triggers at the end of the last transmission sequence which includes the last serial bits of the slow channel.

#### "Slow Identifier and Data"

Sets the trigger to a combination of identifier and data condition from the slow channel. The instrument triggers at the end of the last transmission sequence which includes the last serial bits of the slow channel.

#### "Error condition"

Identifies various errors in the frame. You can select one or more error types as the trigger condition.

Remote command:

[TRIGger:SENT:TYPE](#) on page 462

### Status Pattern

Specifies the status pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:SENT:STATus](#) on page 463

### Status Relation

Defines how the specified status pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

[TRIGger:SENT:SCONdition](#) on page 463

### Data Pattern

Specifies the data pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:SENT:DATA](#) on page 462

### Data Relation

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

[TRIGger:SENT:DCONdition](#) on page 462

### Identifier Pattern

Specifies the identifier pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

See also [Chapter 2.5.12.1, "Pattern Definition"](#), on page 67.

Remote command:

[TRIGger:SENT:IDENtifier](#) on page 463

### Identifier Relation

Defines how the specified identifier pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

Remote command:

[TRIGger:SENT:ICONdition](#) on page 462

### Sync Pulse Error

Detects a synchronization/calibration pulse error in transmission sequences of the fast channel. An error occurs when:

- The duration of the synchronization/calibration pulse (in ticks) is less than  $56 \cdot (1 - \text{clock tolerance})$  or more than  $56 \cdot (1 + \text{clock tolerance})$ .
- The synchronization/calibration pulse duration of frame (n-1) varies by more than 1.5625% from the calibration/sync pulse duration of frame (n).

Remote command:

[TRIGger:SENT:PULSeerror](#) on page 464

#### Pulse Period Error

Detects an error in the calibration/sync pulse in transmission sequences of the fast channel. An error occurs when a nibble has any of the following:

- Number of ticks at low is less than 4 ticks.
- Nibble value < 0 (less than 12 ticks) or > 15 (more than 27 ticks).

Through the pulse period error, you can also identify a nibble length error of the previous transmission sequence.

Remote command:

[TRIGger:SENT:PPERioderror](#) on page 464

#### Fast CRC Error

Detects a checksum error in the transmission sequences of the fast channel. The CRC length is 4 bits.

Remote command:

[TRIGger:SENT:FCRCerror](#) on page 463

#### Slow CRC Error

Detects a checksum error in serial messages of the slow channel. The CRC length is 4 bits for short serial messages, and 6 bit of enhanced serial messages.

Remote command:

[TRIGger:SENT:SCRCerror](#) on page 464

#### Frame Length Error

Detects frame length errors in transmission sequences when [Pause Pulse](#) is set to "Constant frame length".

A frame length error occurs, when the total length of the transmission sequence (including pause pulse) does not match the [Frame Length](#).

Remote command:

[TRIGger:SENT:IRFLength](#) on page 463

### 8.7.4 SENT Label List

For all protocols using ID or address identification, it is possible to create label lists containing addresses or IDs, a symbolic name for each node (symbolic label), and some protocol-specific information.

You can load label lists, and activate its usage for decoding. As a result, an additional "Label" column appears in the "Decode results" table, containing the symbolic label. The frame captions of the decoded signal show the symbolic label instead of the ID or address values so it is easy to identify the messages of the different bus nodes.

You can also use the label list to trigger on an identifier or address. Instead of entering the value, you select the name, which is defined in the label list.

SENT label lists provide a useful way of translating the decoded data into user format. The label lists are highly customizable. The format of supplying the label list description is through a .xml file and is explained with an example, see "[Label list structure for SENT protocol](#)" on page 222.

For general information on the "Label List" tab, see [Chapter 8.1.3, "Label Lists"](#), on page 168.

### Label list structure for SENT protocol

```
<sb:FRAME NAME="Diagnostic Error Codes" STATE="ON">
  <!-- Start of a Frame Definition -->
  <!-- This block defines the information of a Transmission Sequence
  or Serial Message:
  NAME => Symbolic Label of the Frame
  STATE [ON/OFF] => When ON, this frame Translation is taken into consideration.
  When OFF, this frame Translation is skipped.-->
<sb:DESCRIPTION> used to diagnose the current SENT System</sb:DESCRIPTION>
  <!-- Doesn't affect the Translation -->
<sb:ID-VALUE>01</sb:ID-VALUE>
  <!-- ID Value of the Serial Message (in decimal) -->
  <!-- Absence of the ID-VALUE field implies that the current Frame Translation
  is to be used for Transmission Sequences and not for a Serial Message -->
<sb:ID-LENGTH>8</sb:ID-LENGTH>
  <!-- ID Length of the Serial Message (in bits) -->
<sb:DATA-SIZE>12</sb:DATA-SIZE>
  <!-- Data Length of the Serial Message (in bits) -->
<sb:SIGNALS>
  <!-- This block defines the information of the Signals embedded
  in the Data Field of the Frame (Transmission Sequence or Serial Message) -->
<sb:SIGNAL ID="Diagnostic">
  <!-- Unique ID of the Signal (no effect on Translation) -->
<sb:SHORT-NAME>Diagnostic Code</sb:SHORT-NAME>
  <!-- Name of the Signal -->
<sb:DESCRIPTION></sb:DESCRIPTION>
  <!-- Info Field (no effect on Translation) -->
<sb:BIT-POSITION>11</sb:BIT-POSITION>
  <!-- Ending Bit position of the Signal
  (The whole Data Field is represented as MSB -> LSB Sequence) -->
<sb:BIT-LENGTH>12</sb:BIT-LENGTH>
  <!-- Number of Bits representing the Signal Value -->
<sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
  <!-- Byte Order of the Signal Value [MSB or LSB], Default: MSB -->
<sb:VALUE-TYPE>ENUM</sb:VALUE-TYPE>
  <!-- Representation of the Bits [ENUM, UNSIGNED_INT, INT, FLOAT, DOUBLE],
  Default: UNSIGNED_INT
```

```

    The Signal Value is calculated according to the following:
    Translated_Value = Encoded_Value * FACTOR + OFFSET -->
<sb:FACTOR>1.0</sb:FACTOR>
    <!-- Signal Factor (decimal value)-->
<sb:OFFSET>0.0</sb:OFFSET>
    <!-- Signal Offset (decimal value)-->
<sb:MIN>0</sb:MIN>
    <!-- Minimum Signal Value (decimal value) -->
<sb:MAX>4096</sb:MAX>
    <!-- Maximum Signal Value (decimal value) -->
<sb:ENUM-VALUES>
    <!-- This block is only valid (and taken into consideration)
        when the VALUE-TYPE is ENUM
        It defines the Enumeration List Translation of the Signal -->
<sb:ENUM INDEX="0" LABEL="No Error"/>
    <!-- INDEX is the Enum Value (corresponds to the Signal Value in decimal),
        LABEL is the matching Translated Signal Value -->
<sb:ENUM INDEX="1" LABEL="Channel 1 out of range high"/>
</sb:ENUM-VALUES>
    <!-- End of Signal Enumeration List Definition -->
</sb:SIGNAL>
    <!-- End of a Signal Definition -->
    <!-- More Signals can be defined here! -->
</sb:SIGNALS>
    <!-- End of list of Signals Definition -->
</sb:FRAME>
    <!-- End of Frame Definition -->

```

For an example to label list translation, see [Chapter 8.7.4.1, "SENT Label List Translation Example"](#), on page 224.



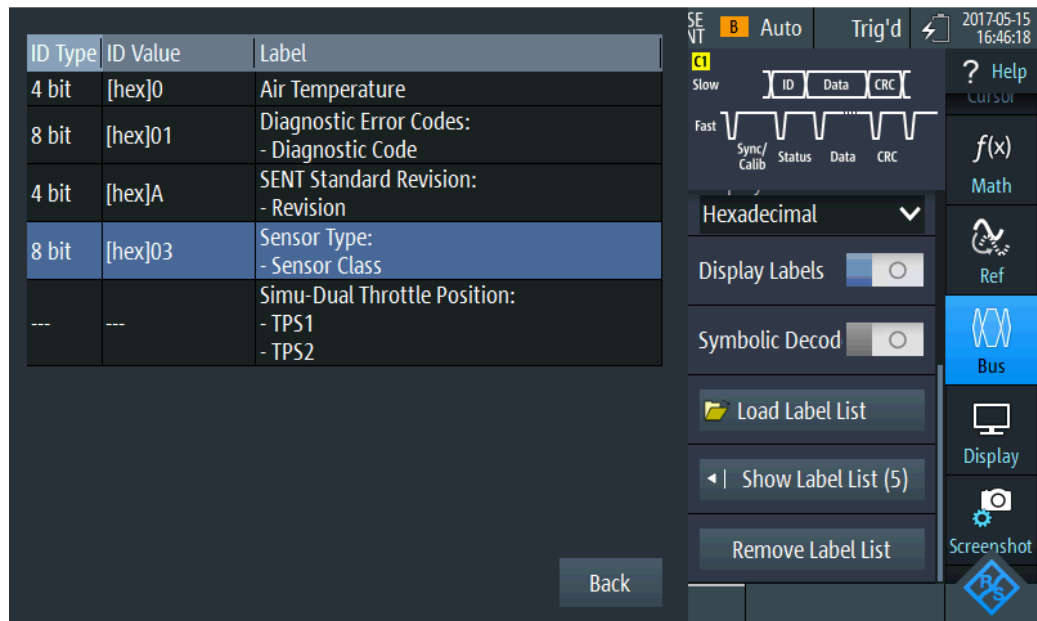


Figure 8-27: SENT label list



Figure 8-28: SENT decode results with label list translation

Remote command:

`BUS:SENT:FRAME<m>:SYMBOL?` on page 469

#### 8.7.4.1 SENT Label List Translation Example

The example shows the `xml` sequence for a label list translation in the SENT protocol:

```

<?xml version="1.0" encoding="UTF-8"?>
<sb:LABEL-LIST-FILE>
  <sb:PROJECT ID="SENT-TRANSLATION SYSTEM">
    <sb:SHORT-NAME>SENT</sb:SHORT-NAME>
    <sb:LONG-NAME>SENT-Translation System Demo</sb:LONG-NAME>
    <sb:DESCRIPTION>This is the database for Translation demo for SENT.</sb:DESCRIPTION>
  </sb:PROJECT>
  <sb:FRAMES>
    <sb:FRAME NAME="Air Temperature" STATE="ON">
      <sb:DESCRIPTION></sb:DESCRIPTION>
      <sb:ID-VALUE>0</sb:ID-VALUE>
      <sb:ID-LENGTH>4</sb:ID-LENGTH>
      <sb:DATA-SIZE>16</sb:DATA-SIZE>
    </sb:FRAME>
    <sb:FRAME NAME="Humidity" STATE="OFF">
      <sb:DESCRIPTION></sb:DESCRIPTION>
      <sb:ID-VALUE>2</sb:ID-VALUE>
      <sb:ID-LENGTH>4</sb:ID-LENGTH>
      <sb:DATA-SIZE>16</sb:DATA-SIZE>
    </sb:FRAME>
    <sb:FRAME NAME="Barometric Pressure" STATE="OFF">
      <sb:DESCRIPTION></sb:DESCRIPTION>
      <sb:ID-VALUE>4</sb:ID-VALUE>
      <sb:ID-LENGTH>4</sb:ID-LENGTH>
      <sb:DATA-SIZE>16</sb:DATA-SIZE>
    </sb:FRAME>
    <sb:FRAME NAME="Configuration Code" STATE="OFF">
      <sb:DESCRIPTION></sb:DESCRIPTION>
      <sb:ID-VALUE>04</sb:ID-VALUE>
      <sb:ID-LENGTH>8</sb:ID-LENGTH>
      <sb:DATA-SIZE>12</sb:DATA-SIZE>
    </sb:FRAME>
    <sb:FRAME NAME="Manufacturer Code" STATE="OFF">
      <sb:DESCRIPTION></sb:DESCRIPTION>
      <sb:ID-VALUE>05</sb:ID-VALUE>
      <sb:ID-LENGTH>8</sb:ID-LENGTH>
      <sb:DATA-SIZE>12</sb:DATA-SIZE>
    </sb:FRAME>
    <sb:FRAME NAME="Sensor Type" STATE="ON">
      <sb:DESCRIPTION>specifies the SENT Sensor Type</sb:DESCRIPTION>
      <sb:ID-VALUE>03</sb:ID-VALUE>
      <sb:ID-LENGTH>8</sb:ID-LENGTH>
      <sb:DATA-SIZE>12</sb:DATA-SIZE>
      <sb:SIGNALS>
        <sb:SIGNAL ID="Sensor Class">
          <sb:SHORT-NAME>Sensor Class</sb:SHORT-NAME>
          <sb:BIT-POSITION>11</sb:BIT-POSITION>
          <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
          <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
          <sb:VALUE-TYPE>ENUM</sb:VALUE-TYPE>
        </sb:SIGNAL>
      </sb:SIGNALS>
    </sb:FRAME>
  </sb:FRAMES>
</sb:LABEL-LIST-FILE>

```

```

<sb:FACTOR>1.0</sb:FACTOR>
<sb:OFFSET>0.0</sb:OFFSET>
<sb:MIN>0</sb:MIN>
<sb:MAX>32.0</sb:MAX>
<sb:ENUM-VALUES>
  <sb:ENUM INDEX="0" LABEL="Not Specified"/>
  <sb:ENUM INDEX="1" LABEL="P"/>
  <sb:ENUM INDEX="2" LABEL="P/-"/>
  <sb:ENUM INDEX="3" LABEL="P/S"/>
  <sb:ENUM INDEX="4" LABEL="P/S/Default T"/>
  <sb:ENUM INDEX="5" LABEL="P/S/Sensor-Specific T"/>
  <sb:ENUM INDEX="6" LABEL="P1/P2"/>
  <sb:ENUM INDEX="7" LABEL="P/Default T"/>
  <sb:ENUM INDEX="8" LABEL="P/Sensor-Specific T"/>
  <sb:ENUM INDEX="9" LABEL="P1/P2/Default T"/>
  <sb:ENUM INDEX="10" LABEL="P1/P2/Sensor-Specific T"/>
  <sb:ENUM INDEX="16" LABEL="Not Defined"/>
  <sb:ENUM INDEX="17" LABEL="MAF (hi-res,lin)"/>
  <sb:ENUM INDEX="18" LABEL="MAF (hi-res,non-lin)"/>
  <sb:ENUM INDEX="19" LABEL="MAF (hi-res,lin) / Pressure"/>
  <sb:ENUM INDEX="20" LABEL="MAF (hi-res,non-lin) / Pressure"/>
  <sb:ENUM INDEX="21" LABEL="MAF (lin) / Pressure (hi-res)"/>
  <sb:ENUM INDEX="22" LABEL="MAF (non-lin) / Pressure (hi-res)"/>
</sb:ENUM-VALUES>
</sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="SENT Standard Revision" STATE="ON">
  <sb:SHORT-NAME>SENT Standard</sb:SHORT-NAME>
  <sb:DESCRIPTION>specifies the SENT Standard Revision Number</sb:DESCRIPTION>
  <sb:ID-VALUE>10</sb:ID-VALUE>
  <sb:ID-LENGTH>4</sb:ID-LENGTH>
  <sb:DATA-SIZE>8</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Revision">
      <sb:SHORT-NAME>Revision</sb:SHORT-NAME>
      <sb:DESCRIPTION>SENT-Standard Revision Number</sb:DESCRIPTION>
      <sb:BIT-POSITION>7</sb:BIT-POSITION>
      <sb:BIT-LENGTH>8</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:VALUE-TYPE>ENUM</sb:VALUE-TYPE>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>4.0</sb:MAX>
      <sb:ENUM-VALUES>
        <sb:ENUM INDEX="0" LABEL="Not defined"/>
        <sb:ENUM INDEX="1" LABEL="J2716 Rev 1"/>
        <sb:ENUM INDEX="2" LABEL="J2716 Rev 2"/>
        <sb:ENUM INDEX="3" LABEL="J2716 Rev 3"/>
      </sb:ENUM-VALUES>
    </sb:SIGNAL>
  </sb:SIGNALS>
</sb:FRAME>

```

```

    </sb:ENUM-VALUES>
  </sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Diagnostic Error Codes" STATE="ON">
  <sb:DESCRIPTION>used to diagnose the current SENT System</sb:DESCRIPTION>
  <sb:ID-VALUE>01</sb:ID-VALUE>
  <sb:ID-LENGTH>8</sb:ID-LENGTH>
  <sb:DATA-SIZE>12</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Diagnostic">
      <sb:SHORT-NAME>Diagnostic Code</sb:SHORT-NAME>
      <sb:DESCRIPTION></sb:DESCRIPTION>
      <sb:BIT-POSITION>11</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:VALUE-TYPE>ENUM</sb:VALUE-TYPE>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>4096</sb:MAX>
      <sb:ENUM-VALUES>
        <sb:ENUM INDEX="0" LABEL="No Error"/>
        <sb:ENUM INDEX="1" LABEL="Channel 1 out of range high"/>
        <sb:ENUM INDEX="2" LABEL="Channel 1 out of range low"/>
        <sb:ENUM INDEX="3" LABEL="Initialization Error (Channel 1)"/>
        <sb:ENUM INDEX="4" LABEL="Channel 2 out of range high"/>
        <sb:ENUM INDEX="5" LABEL="Channel 2 out of range low"/>
        <sb:ENUM INDEX="6" LABEL="Initialization Error (Channel 2)"/>
        <sb:ENUM INDEX="7" LABEL="Channel 1 and 2 Rationality Error"/>
        <sb:ENUM INDEX="1025" LABEL="Slow Channel Temperature out of range high"/>
        <sb:ENUM INDEX="1026" LABEL="Slow Channel Temperature out of range low"/>
        <sb:ENUM INDEX="1027" LABEL="Slow Channel Temperature initialization error"/>
        <sb:ENUM INDEX="1028" LABEL="Slow Channel Humidity out of range high"/>
        <sb:ENUM INDEX="1029" LABEL="Slow Channel Humidity out of range low"/>
        <sb:ENUM INDEX="1030" LABEL="Slow Channel Humidity initialization error"/>
        <sb:ENUM INDEX="1031" LABEL="Slow Channel Barometric Pressure out of range high"/>
        <sb:ENUM INDEX="1032" LABEL="Slow Channel Barometric Pressure out of range low"/>
        <sb:ENUM INDEX="1033" LABEL="Slow Channel Barometric Pressure initialization error"/>
      </sb:ENUM-VALUES>
    </sb:SIGNAL>
  </sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Simu-Dual Throttle Position" STATE="ON">
  <sb:SHORT-NAME>DTP</sb:SHORT-NAME>
  <sb:DATA-SIZE>20</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>TPS1</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>

```

```

<sb:BIT-POSITION>19</sb:BIT-POSITION>
<sb:BIT-LENGTH>12</sb:BIT-LENGTH>
<sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
<sb:VALUE-TYPE>UNSIGNED_INT</sb:VALUE-TYPE>
<sb:FACTOR>1.0</sb:FACTOR>
<sb:OFFSET>0.0</sb:OFFSET>
<sb:MIN>0</sb:MIN>
<sb:MAX>10000.0</sb:MAX>
<sb:UNIT></sb:UNIT>
</sb:SIGNAL>
<sb:SIGNAL ID="Channel_2">
  <sb:SHORT-NAME>TPS2</sb:SHORT-NAME>
  <sb:DESCRIPTION>"</sb:DESCRIPTION>
  <sb:BIT-POSITION>7</sb:BIT-POSITION>
  <sb:BIT-LENGTH>8</sb:BIT-LENGTH>
  <sb:BYTE-ORDER>LSB</sb:BYTE-ORDER>
  <sb:FACTOR>1.0</sb:FACTOR>
  <sb:OFFSET>0.0</sb:OFFSET>
  <sb:MIN>0</sb:MIN>
  <sb:MAX>10000.0</sb:MAX>
  <sb:UNIT></sb:UNIT>
</sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Dual Throttle Position" STATE="OFF">
  <sb:SHORT-NAME>DTP</sb:SHORT-NAME>
  <sb:DATA-SIZE>24</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>TPS1</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>23</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:VALUE-TYPE>UNSIGNED_INT</sb:VALUE-TYPE>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
    <sb:SIGNAL ID="Channel_2">
      <sb:SHORT-NAME>TPS2</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>11</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>LSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>

```

```

        <sb:MAX>10000.0</sb:MAX>
        <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Mass Air Flow (16)" STATE="OFF">
    <sb:SHORT-NAME>MAF/P</sb:SHORT-NAME>
    <sb:DATA-SIZE>24</sb:DATA-SIZE>
    <sb:SIGNALS>
        <sb:SIGNAL ID="Channel_1">
            <sb:SHORT-NAME>MAF</sb:SHORT-NAME>
            <sb:DESCRIPTION>"</sb:DESCRIPTION>
            <sb:BIT-POSITION>23</sb:BIT-POSITION>
            <sb:BIT-LENGTH>16</sb:BIT-LENGTH>
            <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
            <sb:FACTOR>1.0</sb:FACTOR>
            <sb:OFFSET>0.0</sb:OFFSET>
            <sb:MIN>0</sb:MIN>
            <sb:MAX>10000.0</sb:MAX>
            <sb:UNIT></sb:UNIT>
        </sb:SIGNAL>
    </sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Mass Air Flow (16/8)" STATE="OFF">
    <sb:SHORT-NAME>MAF/P</sb:SHORT-NAME>
    <sb:DATA-SIZE>24</sb:DATA-SIZE>
    <sb:SIGNALS>
        <sb:SIGNAL ID="Channel_1">
            <sb:SHORT-NAME>MAF</sb:SHORT-NAME>
            <sb:DESCRIPTION>"</sb:DESCRIPTION>
            <sb:BIT-POSITION>23</sb:BIT-POSITION>
            <sb:BIT-LENGTH>16</sb:BIT-LENGTH>
            <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
            <sb:FACTOR>1.0</sb:FACTOR>
            <sb:OFFSET>0.0</sb:OFFSET>
            <sb:MIN>0</sb:MIN>
            <sb:MAX>10000.0</sb:MAX>
            <sb:UNIT></sb:UNIT>
        </sb:SIGNAL>
        <sb:SIGNAL ID="Channel_2">
            <sb:SHORT-NAME>Pressure</sb:SHORT-NAME>
            <sb:DESCRIPTION>"</sb:DESCRIPTION>
            <sb:BIT-POSITION>7</sb:BIT-POSITION>
            <sb:BIT-LENGTH>8</sb:BIT-LENGTH>
            <sb:BYTE-ORDER>LSB</sb:BYTE-ORDER>
            <sb:FACTOR>1.0</sb:FACTOR>
            <sb:OFFSET>0.0</sb:OFFSET>
            <sb:MIN>0</sb:MIN>
            <sb:MAX>10000.0</sb:MAX>
            <sb:UNIT></sb:UNIT>
        </sb:SIGNAL>
    </sb:SIGNALS>
</sb:FRAME>

```

```

    </sb:SIGNAL>
  </sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Mass Air Flow (14/10)" STATE="OFF">
  <sb:SHORT-NAME>MAF/P</sb:SHORT-NAME>
  <sb:DATA-SIZE>24</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>MAF</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>23</sb:BIT-POSITION>
      <sb:BIT-LENGTH>14</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
    <sb:SIGNAL ID="Channel_2">
      <sb:SHORT-NAME>Pressure</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>9</sb:BIT-POSITION>
      <sb:BIT-LENGTH>10</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>LSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
  </sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Single Secure Sensor" STATE="OFF">
  <sb:SHORT-NAME>SSS</sb:SHORT-NAME>
  <sb:DATA-SIZE>24</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>Ch1</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>23</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
    <sb:SIGNAL ID="Channel_2">

```

```

    <sb:SHORT-NAME>Counter</sb:SHORT-NAME>
    <sb:DESCRIPTION>""</sb:DESCRIPTION>
    <sb:BIT-POSITION>11</sb:BIT-POSITION>
    <sb:BIT-LENGTH>8</sb:BIT-LENGTH>
    <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
    <sb:FACTOR>1.0</sb:FACTOR>
    <sb:OFFSET>0.0</sb:OFFSET>
    <sb:MIN>0</sb:MIN>
    <sb:MAX>256.0</sb:MAX>
    <sb:UNIT></sb:UNIT>
  </sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Pressure Sensor" STATE="OFF">
  <sb:SHORT-NAME>P</sb:SHORT-NAME>
  <sb:DATA-SIZE>24</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>Pressure1</sb:SHORT-NAME>
      <sb:DESCRIPTION>""</sb:DESCRIPTION>
      <sb:BIT-POSITION>23</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
    <sb:SIGNAL ID="Channel_2">
      <sb:SHORT-NAME>Pressure2</sb:SHORT-NAME>
      <sb:DESCRIPTION>""</sb:DESCRIPTION>
      <sb:BIT-POSITION>11</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>LSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
  </sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Pressure and Temperature Sensor" STATE="OFF">
  <sb:SHORT-NAME>P/T</sb:SHORT-NAME>
  <sb:DATA-SIZE>24</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>Pressure</sb:SHORT-NAME>
      <sb:DESCRIPTION>""</sb:DESCRIPTION>

```



```

    <sb:BIT-POSITION>23</sb:BIT-POSITION>
    <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
    <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
    <sb:FACTOR>1.0</sb:FACTOR>
    <sb:OFFSET>0.0</sb:OFFSET>
    <sb:MIN>0</sb:MIN>
    <sb:MAX>10000.0</sb:MAX>
    <sb:UNIT></sb:UNIT>
  </sb:SIGNAL>
  <sb:SIGNAL ID="Channel_2">
    <sb:SHORT-NAME>Temperature</sb:SHORT-NAME>
    <sb:DESCRIPTION>"</sb:DESCRIPTION>
    <sb:BIT-POSITION>11</sb:BIT-POSITION>
    <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
    <sb:BYTE-ORDER>LSB</sb:BYTE-ORDER>
    <sb:FACTOR>1.0</sb:FACTOR>
    <sb:OFFSET>0.0</sb:OFFSET>
    <sb:MIN>0</sb:MIN>
    <sb:MAX>10000.0</sb:MAX>
    <sb:UNIT></sb:UNIT>
  </sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
<sb:FRAME NAME="Pressure and Secure Sensor" STATE="OFF">
  <sb:SHORT-NAME>P/S</sb:SHORT-NAME>
  <sb:DATA-SIZE>24</sb:DATA-SIZE>
  <sb:SIGNALS>
    <sb:SIGNAL ID="Channel_1">
      <sb:SHORT-NAME>Pressure</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>23</sb:BIT-POSITION>
      <sb:BIT-LENGTH>12</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
    <sb:SIGNAL ID="Channel_2">
      <sb:SHORT-NAME>Counter</sb:SHORT-NAME>
      <sb:DESCRIPTION>"</sb:DESCRIPTION>
      <sb:BIT-POSITION>11</sb:BIT-POSITION>
      <sb:BIT-LENGTH>8</sb:BIT-LENGTH>
      <sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
      <sb:FACTOR>1.0</sb:FACTOR>
      <sb:OFFSET>0.0</sb:OFFSET>
      <sb:MIN>0</sb:MIN>
      <sb:MAX>10000.0</sb:MAX>
      <sb:UNIT></sb:UNIT>
    </sb:SIGNAL>
  </sb:SIGNALS>
</sb:FRAME>

```

```

</sb:SIGNAL>
</sb:SIGNALS>
</sb:FRAME>
</sb:FRAMES>
</sb:LABEL-LIST-FILE>

```

## 8.7.5 SENT Decode Results

This chapter describes the comb display and the decode results table of decoded SENT buses. Basic information on decoding and display of decode results is given in [Chapter 8.1.2, "Decode Results"](#), on page 167.

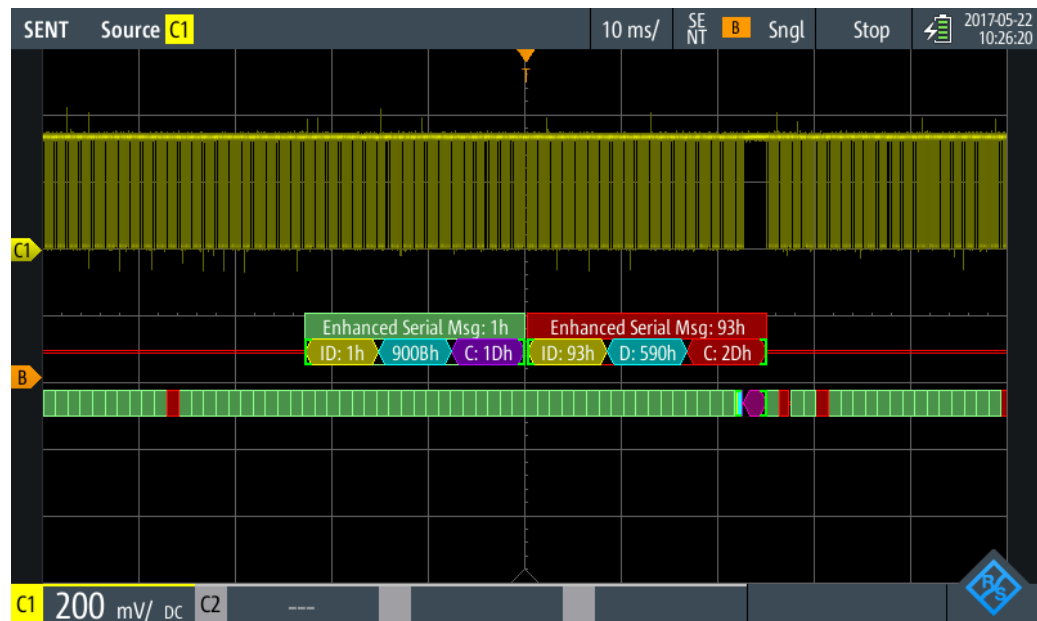


Figure 8-29: Comb display of a decoded SENT signal, triggered on slow ID



Figure 8-30: Comb display of a decoded SENT signal, triggered on fast CRC

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display.

Table 8-12: Color codes of decoded SENT signals

Color, display element	Description
Green brackets [...]	Start and end of frame
Green frame header	Data frame. Text indicates the frame ID (hex).
Magenta comb	Pause pulse field
Blue comb	Sync/ calibration field
Yellow comb	Identifier
Violet comb	CRC checksum
Cyan comb	Data bytes
Red	Error in frame, CRC error, nibble length error, pulse period error, frame length error, incomplete frame

In "Protocol" mode, decoded data is shown in tabular form. The fast channel messages and the slow channel messages are shown in separate tables.

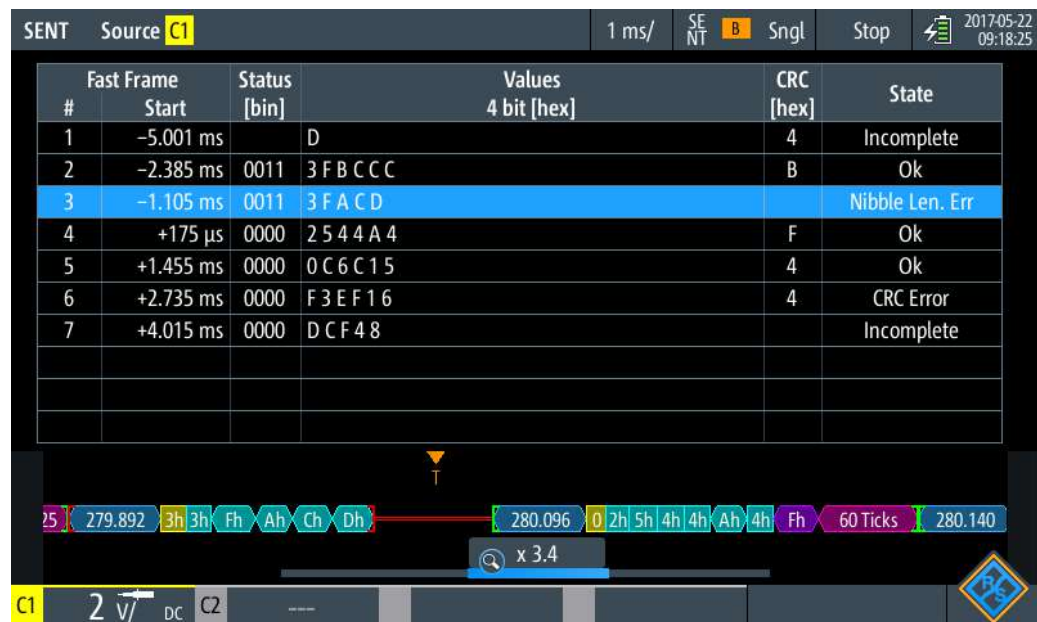


Figure 8-31: Table display of a decoded SENT signal, triggered on pulse period error

Table 8-13: Content of the protocol table for decoded SENT signal

Column	Description
#	Frame index
Frame start	Time of frame start
Status	Status value
ID [hex]	Identifier value, hexadecimal value
Values 8 bit [format]	Values of data bytes. The data format is selected in the "Bus" menu.
CRC [bin]	CRC sequence value
State	Overall state of the frame. "Incomplete" indicates that the frame is not contained completely in the acquisition. Change the time scale to get a longer acquisition.

Remote control commands are described in [Chapter 14.11.7.3, "SENT Decode Results"](#), on page 464.

## 9 Logic Analyzer (R&S RTH-B1 MSO)

The Mixed Signal Option R&S RTH-B1 adds logic analyzer functions to the classical oscilloscope functions. Using the logic analyzer, you can analyze and debug embedded systems with mixed-signal designs that use analog signals and time-correlated digital signals simultaneously. The option provides a logic probe with 8 logic channels. The instrument ensures that analog and digital waveforms are time-aligned and synchronized so that critical timing interactions between analog and digital signals can be displayed and tested.

Each logic channel can be displayed on the screen and used as trigger source.

- ▶ To activate the logic analyzer, shortly press the LOGIC key.  
To disable, press LOGIC again.
- ▶ To configure logic channels, press and hold the LOGIC key until the "Logic" menu opens.

To scale and move the logic channels vertically:

1. If the logic channels are not focused, press the LOGIC key to set the focus.
2. Press the vertical RANGE and POS keys.

### 9.1 Logic Analyzer Settings

Access: "Logic" menu



### Logic Channels

Enables or disables the logic channels.

Remote command:

[LOGic:STATE](#) on page 470

### Visible

By default, all 8 logic channels are displayed. Disable the logic channels that you do not need for analysis.

### Couple Thresh.

Couples the threshold and hysteresis settings for the logic channels.

If enabled, all logic channels use the same threshold and hysteresis settings.

If disabled, 2 channel groups are available, which can use different threshold and hysteresis settings: D0 - D3, and D4 - D7.

Remote command:

[LOGic:THCoupling](#) on page 470

### Threshold

Sets the threshold value for the selected channel group, or for all logic channels. For each acquired sample, the instrument compares the input voltage with the threshold value. If the input voltage is above the threshold, the signal state "1" is stored. Otherwise, the signal state "0" is stored if the input voltage is below the threshold.

You can set the digital threshold in several ways:

- The same threshold and hysteresis are used for all logic channels: Enable "Threshold" and set the values for channels D0 - D3, and D4 - D7.
- Different thresholds and hysteresis are used for individual channel groups: Disable "Threshold" and set the threshold and hysteresis for each group.

You can select the threshold voltages for various types of integrated circuits in the list, or set a user-defined value.

"TTL"	1.4 V
"ECL"	-1.3 V
"CMOS"	2.5 V
"GND"	0 V (for CAN channels, requires option R&S RTH-K3)
"CAN"	2 V (for CAN channels, requires option R&S RTH-K3)
"7 V Supply"	7 V (for LIN channels, requires option R&S RTH-K3)
"12 V Supply"	12 V (for LIN channels, requires option R&S RTH-K3)
"18 V Supply"	18 V (for LIN channels, requires option R&S RTH-K3)

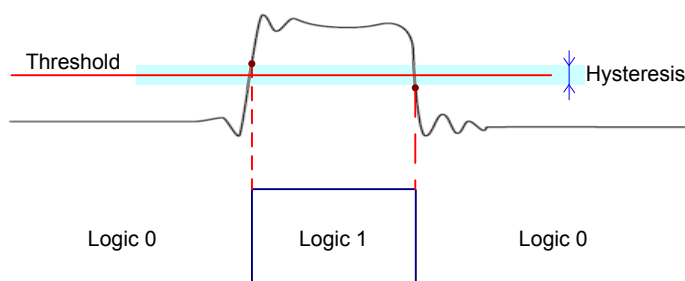
Remote command:

[LOGic:GROup<m>:TECHnology](#) on page 470

[LOGic:GROup<m>:USER](#) on page 471

### Hysteresis

Hysteresis avoids the change of signal states due to noise oscillation around the threshold level. Set a small hysteresis for clean signals, and large hysteresis for noisy signals.



Remote command:

[LOGic:GROup<m>:HYSTeresis](#) on page 472

### Deskew

Enables deskewing.

Deskew compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

### Select Channel, Deskew

You can set the deskew for all channels of a logic probe at once, or for each logic channel separately.

Select the channel and enter the deskew value in "Deskew".

Remote command:

`LOGic:CHANnel<m>:DESKew` on page 472

#### **Set all Deskews to Zero**

Resets all deskew values to zero.

## 9.2 Triggering on Logic Channels

Each digital channel can be used as trigger source. Using the pattern trigger, you can trigger on logical combinations of analog and digital channels. Additionally, you can define a trigger holdoff time.

If you trigger on logic channels, the threshold is used as trigger level. The "Trigger Level" setting is not available.

The following trigger types are available if the trigger source is a logic channel:

- Edge
- Glitch
- Width
- Pattern: the pattern can use all active logic channels
- State: the pattern can use all active logic channels
- Data2Clock: only the clock can be a logic channel.
- Serial pattern: clock and data source can be logic channels.
- Timeout
- Interval
- Window

All trigger types except for edge, glitch and width require option R&S RTH-K19.

For analysis of serial protocols, you configure the protocol using logic channels as sources, and trigger on trigger type "Bus". For details, see the chapter describing the relevant bus.

## 9.3 Analyzing Logic Channels

The main analysis tools for logic channels are serial protocol analysis (BUS), and the pattern and state triggers.

Furthermore, you can zoom into the display (ZOOM).

To measure logic channels, you can use automatic and cursor measurements as usual. The following measurement types are available:

- Period
- Frequency



- Positive and negative pulse width
- Positive and negative duty cycle
- Delay (only automatic measurements)
- Phase (only automatic measurements)
- Mean
- Positive and negative pulse count
- Rising and falling edge count

See also [Chapter 3.2, "Automatic Measurements"](#), on page 76 and [Chapter 3.3, "Cursor Measurements"](#), on page 82.

You can also export the waveform data: FILE > "Waveforms"

## 10 Frequency Counter (R&S RTH-K33)

The frequency counter is only available if the counter mode option R&S RTH-K33 is installed.

The R&S RTH measures frequencies in various ways:

- You can use the automatic measurement function in scope mode.
- The FFT analysis mode converts the data into the frequency domain, providing a spectrum of the input signal (see [Chapter 5.1, "FFT Mode"](#), on page 104). During FFT analysis, the frequency resolution is restricted by the selected data acquisition settings (channel bandwidth, frequency span, and time scale).
- To determine the frequency of an input signal accurately without changing the data acquisition settings, the R&S RTH is equipped with a signal counter function. The signal counter counts the zero crossings of the input signal (thus the term *signal counter*) and derives the precise frequency value.

The R&S RTH counter mode option provides two separate counters. One counter can be used as a reference for the second one, so that the deviation from the reference value can be compensated for and the frequency becomes more accurate. Alternatively, both counters can measure different input signals.

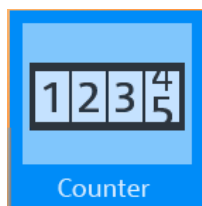
Using the data logger, you can also store a series of frequency values measured by the counter over time.

### 10.1 Accessing the Counter Mode


1. Press the MODE key.



2. Select "Counter".




## 10.2 Display and Control

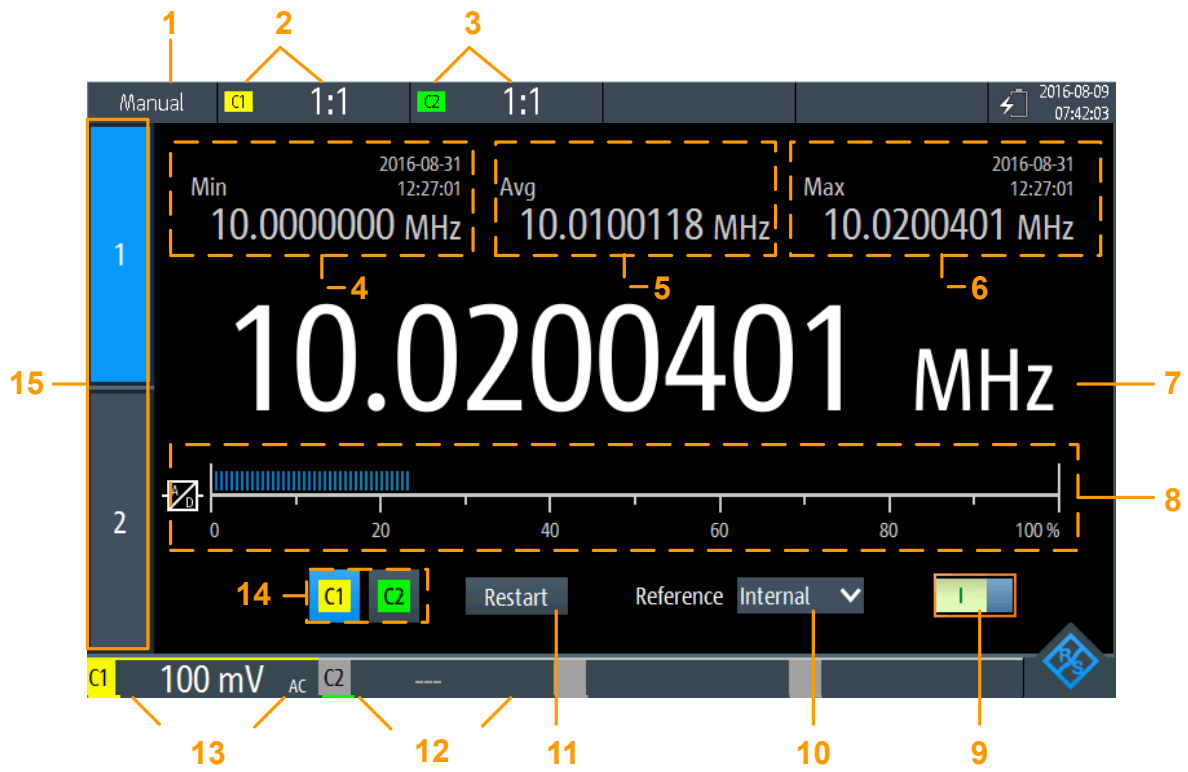

**Figure 10-1: Display for basic counter**

- 1 = Measurement state. "Manual": running measurement with manual range; "Hold": stopped measurement
- 2 = Vertical settings for channel 1 (incl. "Probe Setting")
- 3 = Vertical settings for channel 2 (incl. "Probe Setting")
- 4 = Minimum frequency and timestamp
- 5 = Average frequency
- 6 = Maximum frequency and timestamp
- 7 = Currently measured frequency
- 8 = Bargraph indicating the load level of the A/D converter for the selected measurement range; for values  $\geq 100\%$ , an overload warning is displayed; for optimal results the load level should be above 20 %;
- 9 = Counter on/off switch
- 10 = Used reference (Internal or Counter 2)
- 11 = Restarts the measurement and resets all values
- 12+13 = Measurement ranges of active channels
- 14 = Channel input selection
- 15 = Counter selection

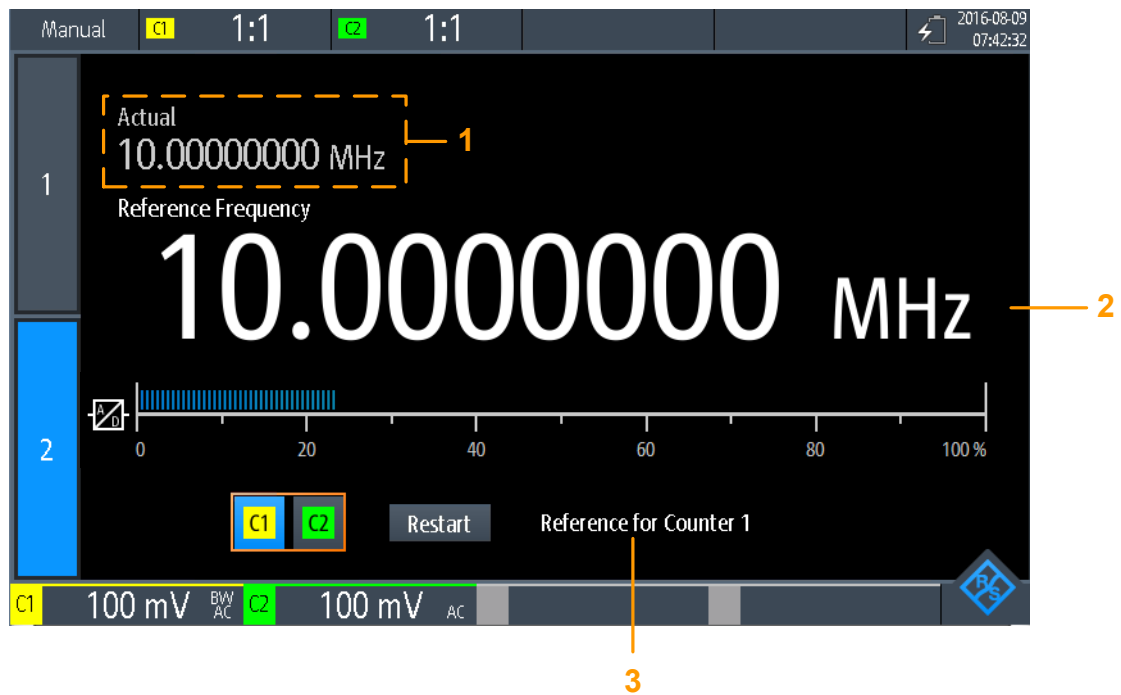

**Figure 10-2: Display for reference counter**

- 1 = Measured frequency at basic counter
- 2 = Measured frequency at reference counter (used as a reference frequency for basic counter)
- 3 = Counter usage

If both counters are active, you can display both measured counter frequencies at the same time. When both counter results are displayed simultaneously, only the measured frequencies and the load bargraphs are displayed. Statistics or additional settings are not available.

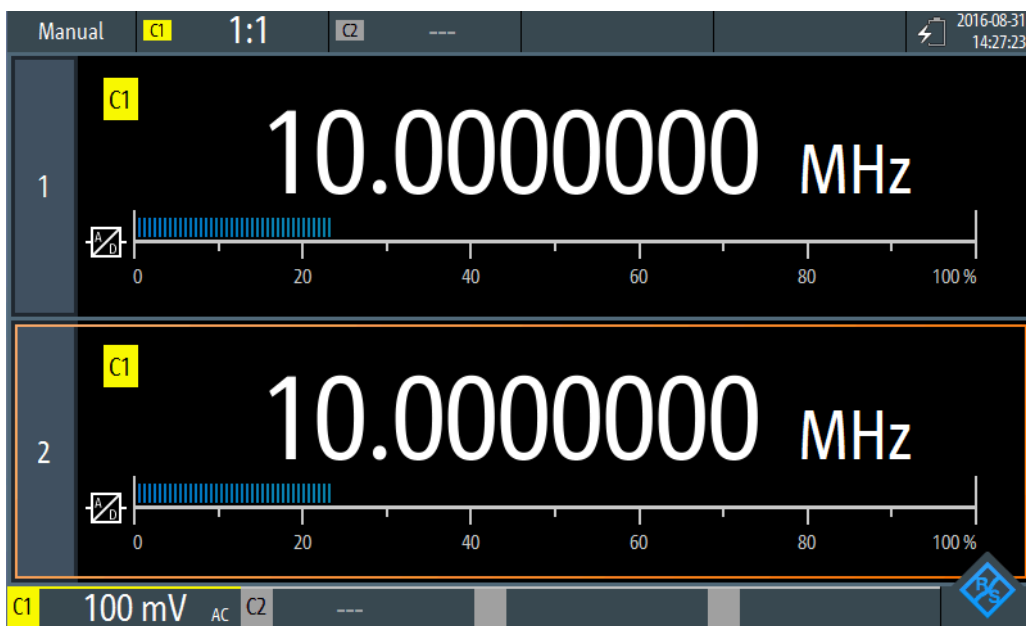




Figure 10-3: Display for two counters simultaneously

1. To display both counters, tap the currently highlighted counter selection tab.
2. To return to a single counter display, tap one of the counter selection tabs.

In counter mode, the keys behave slightly different from scope mode:

- The vertical RANGE and POS keys adjust the measurement range.
- The MEAS key opens the "Counter" menu.
- The following keys work as usual: FILE, , , PRESET, MODE, BACK.
- All other keys do not work.

Measurement Mode.....	244
Current Result.....	245
Minimum.....	245
Maximum.....	245
Average.....	245

**Measurement Mode**

Tap the setting to switch between continuous measurement ("MANUAL") and a single measurement ("HOLD"). This has the same effect as selecting the TRIGGER RUN STOP key.

For a single measurement, the continuous measurement is stopped and the most recent value is displayed.

During continuous measurements, the most recent value is preserved and displayed, while the oldest values are overwritten.

**Note:** The statistical values are not reset when the measurement is stopped. They are only reset after you manually select [Restart](#).

Remote command:

[COUNTER<m>:SENSe:TRIGger:MODE](#) on page 395

[COUNTER<m>:INITiate](#) on page 393

[COUNTER<m>:ABORt](#) on page 390

### Current Result

The currently measured counter frequency.

Remote command:

[COUNTER<m>:READ?](#) on page 394

[COUNTER<m>:FETCh?](#) on page 392

[COUNTER<m>:MEASure:FREQuency?](#) on page 393

### Minimum

The minimum of all measured counter frequencies since statistics were last restarted.

Remote command:

[COUNTER<m>:CALCulate:AVERage:MINimum?](#) on page 391

[COUNTER<m>:CALCulate:AVERage:ALL?](#) on page 390

### Maximum

The maximum of all measured counter frequencies since statistics were last restarted.

Remote command:

[COUNTER<m>:CALCulate:AVERage:MAXimum?](#) on page 391

[COUNTER<m>:CALCulate:AVERage:ALL?](#) on page 390

### Average

The average of all measured counter frequencies since statistics were last restarted.

Remote command:

[COUNTER<m>:CALCulate:AVERage:AVERage?](#) on page 390

[COUNTER<m>:CALCulate:AVERage:ALL?](#) on page 390

## 10.3 Performing a Counter Measurement

### To perform a basic counter measurement without a reference

1. Before you can perform a counter measurement, adjust the waveforms by editing the vertical, horizontal, trigger and acquisition settings.

For details see:

- [Chapter 2.2, "Vertical Setup"](#), on page 38
- [Chapter 2.3, "Horizontal Setup"](#), on page 42
- [Chapter 2.5, "Trigger"](#), on page 46
- [Chapter 2.4, "Acquisition Control"](#), on page 44

2. To adjust the instrument settings to the current input signal automatically, press AUTOSET.

3. Select the "Counter" mode.
4. Select the channel to be used as input for the counter.
5. Activate the first (basic) counter.  
A continuous measurement starts and the signal counter indicates the measured frequency. With each new measurement, the statistical values are updated.
6. To start and stop a counter measurement, press the RUN STOP key.



7. Optionally, activate a second basic counter.
  - a) Select the second counter tab.
  - b) Select the input channel for the counter.
  - c) Activate the counter.
  - d) Tap the second counter tab again to display both counter results simultaneously.

#### To perform a counter measurement with a second counter as a reference

1. Before you can perform a counter measurement, adjust the waveforms by editing the vertical, horizontal, trigger and acquisition settings.  
For details see:
  - [Chapter 2.2, "Vertical Setup"](#), on page 38
  - [Chapter 2.3, "Horizontal Setup"](#), on page 42
  - [Chapter 2.5, "Trigger"](#), on page 46
  - [Chapter 2.4, "Acquisition Control"](#), on page 44
2. To adjust the instrument settings to the current input signal automatically, press AUTOSET.
3. Select the "Counter" mode.
4. Select the "Counter" menu.
5. Select the channel to be used as input for the basic counter.
6. Select "Reference": "Counter 2".
7. Define the (nominal) "Reference Frequency" to be assigned to the value measured on counter 2.
8. Activate the first (basic) counter.  
A continuous measurement starts and the signal counter indicates the measured frequency. With each new measurement, the statistical values are updated. The second counter is also activated automatically.
9. Tap "Select Counter": "2".
10. Select the input channel for the reference counter 2. Make sure the selected channel provides a precise signal with the specified reference frequency.

If the measured reference frequency deviates extremely from the specified frequency, a warning is displayed.

11. Select "Restart" to reset the statistical values and start a new measurement with the reference frequency.

The deviation of the nominal frequency to the measured frequency is internally removed from the measured frequency. The display indicates the accurate frequency of the input signal.

12. Optionally, tap the second counter tab again to display both counter results simultaneously.
13. To start and stop a counter measurement, press the RUN STOP key.



## 10.4 Counter Settings

**Access:** "Counter" menu

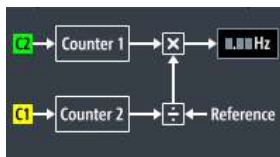
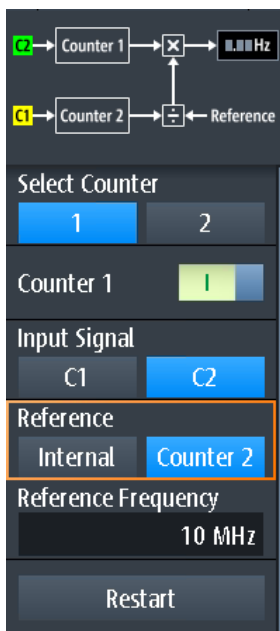


Additional settings for vertical scaling are available for Counter mode and directly accessible via the "Counter" menu. For a description see:

- ["Channel Index"](#) on page 39
- ["Probe Setting"](#) on page 40
- ["Bandwidth"](#) on page 40

Furthermore, the logger function can be used to store counter values, see [Chapter 7, "Data Logging"](#), on page 149.





The diagram at the top of the "Counter" menu indicates how the data will be processed using the current settings.

Select Counter.....	248
Counter 1 / 2 State.....	248
Input Signal.....	248
Reference.....	249
Restart.....	249

**Select Counter**

Selects the counter to be configured.

Remote command:

Suffix for COUNTER, see [Chapter 14.9, "Counter Mode \(R&S RTH-K33\)"](#), on page 389

**Counter 1 / 2 State**

Activates or deactivates the basic counter.

Remote command:

COUNTER<m>:SENSe:STATe on page 395

**Input Signal**

Selects one of the channels as the input for the counter measurement.

Remote command:

COUNTER<m>:SENSe:SOURce on page 395

**Reference**

Selects the reference to be used for the counter.

"Counter 1 / 2" The measured value of the other counter is used as a reference. Specify the nominal "Reference Frequency" for counter 2. The deviation of the nominal frequency to the measured reference frequency is internally removed from the measured frequency of counter 1.

"Internal" An internal reference is used to determine the counter frequency.

Remote command:

[COUNter<m>:SENSe:REFerence:STATe](#) on page 394

[COUNter<m>:SENSe:REFerence:VALue](#) on page 395

**Restart**

Resets all statistical values and starts a new counter measurement.

Remote command:

[COUNter<m>:CALCulate:AVERage:CLEar](#) on page 390

[COUNter<m>:INITiate](#) on page 393

# 11 Documenting Results


- ▶ To access export and data functions, press the FILE key.



- ▶ To configure screenshots, press and hold the  key until the menu opens.

The R&S RTH can store various data to files for further analysis and reporting:

- [Instrument Settings](#)
- [Waveforms](#)
- [Export of Logger Records](#)
- [Screenshots](#)
- Harmonic results (see [Chapter 5.3, "Harmonics Measurement \(Option R&S RTH-K34\)"](#), on page 126).

You can also combine these data and save it to file by pressing the  key: [Quick Save with OneTouch](#).

To check the storage devices and manage the data files, the [Filesystem Tools](#) menu provides various functions.

## 11.1 Using USB Flash Drive

You can connect a USB flash drive on the right side of the instrument. If a USB flash drive is connected, all screenshots and result data are written to this external device by default. Instrument settings are saved on the instrument, but you can store them to the USB flash drive as well.

1. To check the status of the USB flash drive, press the FILE key.  
The connection status is shown on the top of the menu.



2. To remove the USB flash drive from the instrument, tap "Eject USB Drive" in the "File" menu.
3. To check the file system on the USB flash drive for errors, tap "Filesystem Tools" > "Check USB Drive".



## 11.2 Filesystem Tools

Access: FILE > "Filesystem Tools"

The "Filesystem Tools" help you to check the storage devices and manage the data files.

**Internal SD Card Status**

Shows the status of the internal SD card.

**Check Internal SD Drive**

Checks the file system on the SD card for errors.

**USB Drive Status**

Shows the status of the USB flash drive: "Usable", "Safe to remove", or "Not available".

See also: [Chapter 11.1, "Using USB Flash Drive"](#), on page 250.

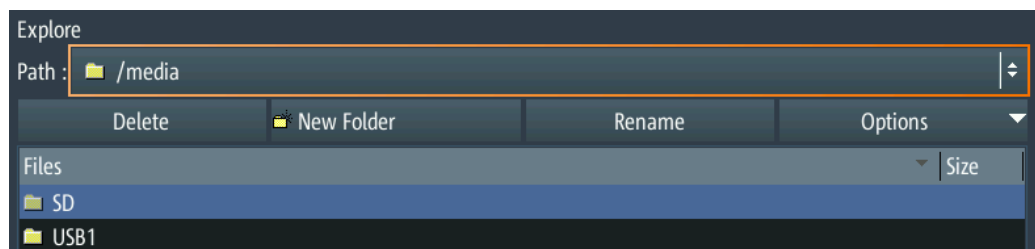
**Check USB Drive**

Checks the file system on the USB flash drive for errors.


See [Chapter 11.1, "Using USB Flash Drive"](#), on page 250.

**Browse Filesystem**

Opens a file explorer, where you can check the files on the SD card and on the USB flash drive. You can rename and delete files, and create folders. Some options help to navigate and select files.

**Filesystem Info**

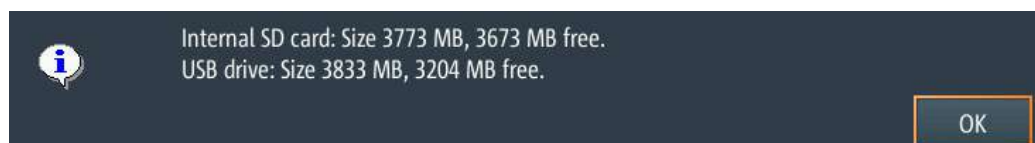Shows the overall and free space that is available on the connected storage devices.



## 11.3 Instrument Settings

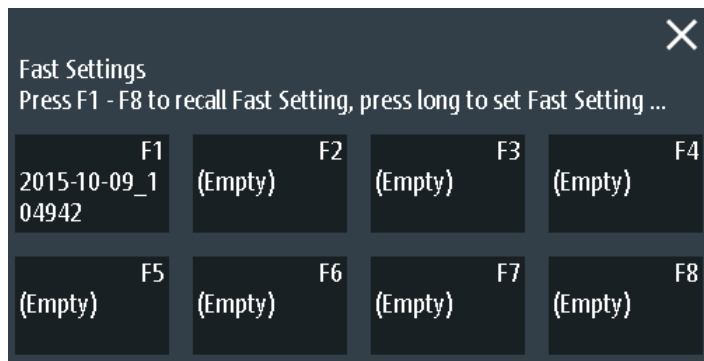
To repeat measurements or tests at different times or perform similar measurements with different test data, you can save the used configuration settings for later use. Furthermore, it can be helpful to refer to the configuration settings of a particular measurement when analyzing the results. Therefore, you can easily save the complete measurement configuration including the display settings.

The R&S RTH provides two ways to store the measurement configuration:

- Save as fast setting
- Save as saveset

### 11.3.1 Using Fast Settings

The R&S RTH has 8 slots to save and load often used configuration settings very quickly.



#### To save the current setting as fast setting

1. Press the SHIFT key.
2. Tap and hold one of the storage slots F1...F8.  
The online keyboard opens.
3. Type the settings name and tap ↵.  
The configuration settings are saved to the slot.

#### To load a fast setting

1. Press the SHIFT key.
2. Tap the storage slot that holds the required configuration.  
The settings are loaded.

Alternatively, you can save and load fast settings in the "File" menu: FILE > "Settings" > "Fast Settings".

### 11.3.2 Saving and Loading Savesets

You can save and reload an unlimited number of configuration setups. By default, the settings are stored on the microSD card in the following directory:

```
media/SD/Rohde-Schwarz/RTH/SaveSets
```

The storage location can be changed. The file format is XML.

#### To save the current settings in a saveset

1. Press the FILE key.
2. Tap "Settings".
3. The current storage location is shown in "Setting Directory".
  - To store the file under a default name in the specified directory, tap "Save Setting".
  - To store the file in another directory and/or with a user-defined filename, tap "Save Setting As". Select the path, directory, and enter the filename.

#### To load and display a saveset

1. Press the FILE key.
2. Tap "Settings".
3. The current storage location is shown in "Setting Directory".
  - To load a file from the specified directory, tap "Load Setting".
  - To load a file from another directory, tap "Setting Directory" and change the directory. Tap "Load Setting".
4. Select the file to be loaded.

#### Description of settings



**Load Setting**

Opens the specified directory. Tap the file to be loaded.

**Save Setting**

Saves the settings to the specified directory with a default filename. The filename pattern is: <filename base>\_<date>\_<time>.xml.

**Save Setting As**

Opens a file selection dialog. Navigate to the target directory and enter the filename. Tap "Save" to store the file.

**Setting Directory**

Sets the directory to which the settings are stored with the "Save Setting" function.


**Filename Base**

Defines the first part of the filename. The complete filename pattern is:  
<filename base>\_<date>\_<time>.xml.

## 11.4 Waveforms

Analog channel and math waveforms can be saved in several ways:

- As reference waveforms for later use on the instrument: "Ref" menu. See: [Chapter 3.5, "Reference Waveforms"](#), on page 88
- In CSV file on a USB flash drive or internal SD card for further analysis using other applications: FILE > "Waveforms". This way is described in the current chapter.

If you want to save many waveforms, you can assign the function to the  key. See: [Chapter 11.6, "Quick Save with OneTouch"](#), on page 261.

### 11.4.1 Exporting Waveforms to File

The waveform export provides the following possibilities:

- Store either one waveform or all active waveforms.
- Include time values.
- Option R&S RTH-K15: Save history data.
- Option R&S RTH-B1: Save logic channels.

If a USB flash drive is attached, the file is stored there. Otherwise, the file is stored in the `Export` folder on the microSD card.

1. Activate the waveforms that you want to export.
2. Press the FILE key.
3. Select "Waveforms".



4. Tap "Select Waveform" and select one waveform for export, or select all active waveforms.
5. Select the "File Format"
6. Check the "Waveform Directory", the "Filename Base", and the "CSV Column Delimiter". Adjust if necessary.
7. If you need time information for analysis, enable "Store with Time".
8. If you want to save history data, enable "Save History".
9. Tap "Save Waveform".

All export settings are described in [Chapter 11.4.2, "Waveform Export Settings"](#), on page 256.

## 11.4.2 Waveform Export Settings

Access: FILE > "Waveforms"



### Select Waveform

Select the waveform to be exported. You can export:

- A single analog channel or math waveform
- All active digital channels
- All active waveforms at once

Remote command:

[EXPort:WAVeform:SOURce](#) on page 474

[EXPort:WAVeform:MULTichannel](#) on page 475

**Save History**

This function is only available if option R&S RTH-K15 is installed. It includes the waveform history in the data export. If acquisition is running, enabling "Save History" stops the acquisition. History data is always saved in "Compressed CSV" files.

For details, see [Chapter 3.7.4, "Exporting History Data"](#), on page 97

**File Format**

Selects the format of the export file.

"CSV"	Comma-separated values (CSV) text file, the waveform is stored in a table. The columns are separated by commas or another delimiter. For each sample, one line is written. Values are listed in scientific notation. You can convert the comma-separated text to columns.
"Compressed CSV"	ZIP file that contains one or more CSV files. This format reduces the file size.

Remote command:

[EXPort:WAVeform:NAME](#) on page 474

**Save Waveform / Save Waveform As**

Save the waveform data. The functions are available if the instrument is in a waveform mode ("Scope", "XY", "Mask", "Roll", "Mask").

"Save Waveform"	Saves the file in the defined "Waveform Directory" using the auto-naming pattern.
"Save Waveform As"	Opens a file explorer where you can select the directory and enter the filename.

Remote command:

[EXPort:WAVeform:SAVE](#) on page 476

**Waveform Directory**

Defines the directory where the waveform files are stored. If a USB flash drive is connected, the instrument stores the data to this external device by default.

Remote command:

[EXPort:WAVeform:NAME](#) on page 474

**Filename Base**

Defines the first part of the filename. The complete filename pattern is:

```
<filename base>_<date>_<time>.csv|zip.
```

Remote command:

[EXPort:WAVeform:NAME](#) on page 474

**Store with Time**

Includes horizontal values in the export data (time values).

Remote command:

[EXPort:WAVeform:INCXvalues](#) on page 475

### CSV Column Delimiter

Selects the column delimiter for CSV files. You need to know the delimiter when you convert the CSV text to columns in a spreadsheet.

## 11.4.3 Waveform Export Files

Waveform data is stored in CSV or compressed CSV format.

A CSV file is a comma-separated values (CSV) text file, the waveform is stored in a table. The columns are separated by commas or another delimiter. For each sample, one line is written. Values are listed in scientific notation. You can convert the comma-separated text to columns.

### 11.4.3.1 Content of Waveform Files

The first lines of the file contain header data, for example, time scale, vertical scale, vertical and horizontal positions. Header data is required to interpret the waveform data, and to analyze the data values of the data file.

Model	RTH1002										
SerialNumber											
Firmware Version	'1.20.3.2'										
Timestamp											
Waveform Type	ANALOG		Waveform Type	ANALOG		Waveform Type	DIGITAL				
Acquisition Mode	SAMPLE										
Horizontal Unit	s		Horizontal Unit	s		Horizontal Unit	s				
Horizontal Scale	5,00E-08		Horizontal Scale	5,00E-08		Horizontal Scale	5,00E-08				
Horizontal Position	0		Horizontal Position	0		Horizontal Position	0				
Reference Point	50%		Reference Point	50%		Reference Point	50%				
Sample Interval	4,00E-10		Sample Interval	4,00E-10		Sample Interval	6,67E-06				
Record Length	1250		Record Length	1250		Record Length	750				
Probe Setting	1:1'	20:1'									
Vertical Unit	V	V	Vertical Unit	V/div		Vertical Unit					
Vertical Scale	0.02	1	Vertical Scale			Threshold	1.4	1.4	1.4	1.4	
Vertical Position	0	0									
Vertical Offset	0	0									
	CH1	CH2		MATH<-C1>		D7	D6	D5	D4		
	0.000627	0.0471		-0.000627		0	0	0	0	0	
	-0.00157	-0.0471		0.00157		0	0	0	0	0	
	-0.00314	-0.0471		0.00314		0	0	0	0	0	
	-0.00439	-0.0471		0.00439		0	0	0	0	0	
	-0.00533	-0.0471		0.00533		0	0	0	0	0	
	-0.00659	-0.0471		0.00659		1	1	1	1	1	
	-0.00784	-0.0471		0.00784		1	1	1	1	1	
	-0.00847	-0.0471		0.00847		1	1	1	1	1	

**Figure 11-1: Waveform data file with voltage values, text converted to columns**

By default, only Y-values are stored. You can include the time values in the file.

Model	RTH1002									
SerialNumber										
Firmware Version	'1.20.3.2'									
Timestamp										
Waveform Type	ANALOG			Waveform Type	ANALOG	Waveform Type	DIGITAL			
Acquisition Mode	SAMPLE									
Horizontal Unit	s			Horizontal Unit	s	Horizontal Unit	s			
Horizontal Scale	5.00E-08			Horizontal Scale	5.00E-08	Horizontal Scale	5.00E-08			
Horizontal Position	0			Horizontal Position	0	Horizontal Position	0			
Reference Point	50%			Reference Point	50%	Reference Point	50%			
Sample Interval	4.00E-10			Sample Interval	4.00E-10	Sample Interval	6.67E-10			
Record Length	1250			Record Length	1250	Record Length	750			
Probe Setting	'1:1'	'20:1'								
Vertical Unit	V	V		Vertical Unit	V/div	Vertical Unit				
Vertical Scale	0.02	1		Vertical Scale		Threshold	1.4	1.4	1.4	1.4
Vertical Position	0	0								
Vertical Offset	0	0								
TIME	CH1	CH2		TIME	MATH<<-C1>	TIME	D7	D6	D5	D4
-2.50E-07	0.000627	0.0471		-2.50E-07	-0.000627	-2.50E-07	0	0	0	0
-2.50E-07	-0.00157	-0.0471		-2.50E-07	0.00157	-2.49E-07	0	0	0	0
-2.49E-07	-0.00314	-0.0471		-2.49E-07	0.00314	-2.49E-07	0	0	0	0
-2.49E-07	-0.00439	-0.0471		-2.49E-07	0.00439	-2.48E-07	0	0	0	0
-2.48E-07	-0.00533	-0.0471		-2.48E-07	0.00533	-2.47E-07	0	0	0	0
-2.48E-07	-0.00659	-0.0471		-2.48E-07	0.00659	-2.47E-07	1	1	1	1
-2.48E-07	-0.00784	-0.0471		-2.48E-07	0.00784	-2.46E-07	1	1	1	1
-2.47E-07	-0.00847	-0.0471		-2.47E-07	0.00847	-2.45E-07	1	1	1	1

Figure 11-2: Waveform data file with voltage and time values, text converted to columns

If the acquisition mode is envelope or peak detect, two values (minimum and maximum) are written for each sample. The file contains two columns for each active analog channel.

Model	RTH1002									
SerialNumber										
Firmware Version	'1.30.1.11_Beta'									
Timestamp										
Waveform Type	ANALOG			Waveform Type	ANALOG					
Acquisition Mode	ENVELOPE									
Horizontal Unit	s			Horizontal Unit	s					
Horizontal Scale	1.00E-07			Horizontal Scale	1.00E-07					
Horizontal Position	1.06E-22			Horizontal Position	1.06E-22					
Reference Point	50%			Reference Point	50%					
Sample Interval	4.00E-10			Sample Interval	4.00E-10					
Record Length	2500			Record Length	2500					
Probe Setting	'1:1'	'1:1'	'20:1'	'20:1'						
Vertical Unit	V	V	V	V	Vertical Unit	V/div				
Vertical Scale	0.05	0.05	0.04	0.04	Vertical Scale					
Vertical Position	0	0	0	0						
Vertical Offset	0	0	0	0						
	CH1 MAX	CH1 MIN	CH2 MAX	CH2 MIN	MATH<<-C1>					
	0.0243	-0.0251	-0.0295	-0.0696	-0.0243					
	0.0259	-0.0227	0.0696	0.0307	-0.0259					
	0.0275	-0.022	0.0709	0.0295	-0.0275					
	0.029	-0.0212	0.0696	0.0307	-0.029					
	0.0298	-0.0196	0.0696	0.0289	-0.0298					
	0.0314	-0.0196	0.0696	0.0295	-0.0314					
	0.0322	-0.018	0.0696	0.0301	-0.0322					

Figure 11-3: Waveform data file with two voltage values per sample, acquisition mode is envelope

### 11.4.3.2 Header Data

The header lines contain the following properties:

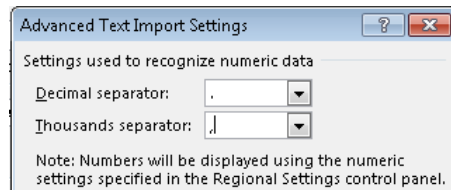
Value	Description
Timestamp	Only for history export
Waveform Type	ANALOG for analog channel signals and math waveforms, DIGITAL for logic signals
Acquisition Mode	Acquisition mode that has been used: sample, peak detect, high resolution, average, envelope. If peak detect or envelope is set, two values (minimum and maximum) are written for each sample. Only for analog channels.
Horizontal Unit	s, second
Horizontal Scale	In s/div
Horizontal Position	Distance of the trigger point from the reference point.
Reference Point	Position in the diagram: left = 10%, middle = 50%, and right = 90%
Sample Interval	Time between two samples
Record Length	Number of samples, corresponds to the number of data lines in the file
Probe Setting	Attenuation factor of the connected probe, only for analog channels.
Vertical Unit	V or A
Vertical Scale	In V/div or A/div, only for analog channels and math waveforms.
Vertical Position	In divisions, only for analog channels
Vertical Offset	In V or A, only for analog channels
Threshold	Only for digital channels

### 11.4.3.3 Converting CSV to Excel Files

If you open an exported CSV file in Excel or another spreadsheet, all data is written in one column. The value delimiter is usually a comma, but you can select another delimiter in the export settings. As an example, the following procedure describes text conversion to columns in Excel. Other spreadsheet applications provide similar features. Make sure to select the correct text delimiter, decimal separator and thousands separator.

1. Open the CSV file in Excel.
2. Click the column header "A" to select all data.
3. On the "Data" ribbon, click "Text to Columns".
4. Select the data type "Delimited".  
Click "Next".
5. Select the delimiter that you have used in the export file (usually a comma).

- Click "Next".
- Click "Advanced".
  - Select the point as decimal separator and the comma as thousands separator.




- Click "Finish".

## 11.5 Logger Records

See [Chapter 7.6, "Export of Logger Records"](#), on page 160.

## 11.6 Quick Save with OneTouch

The  key initiates one or more assigned saving actions. By default, the key saves a screenshot.

If OneTouch is enabled, you can assign the following actions to the  key:



- Save a screenshot
- Save waveforms
- Save harmonic measurement results (requires option R&S RTH-K34)
- Save spectrum analysis results (requires option R&S RTH-K18)
- Save settings
- Add a comment to the saved file.

Access: FILE > "one touch", or "Screenshot" menu > "one touch"



### One touch

Switches the function of the  key:

- If OneTouch is disabled, the  key saves a screenshot of the current display.
- If OneTouch is enabled, the  key can also save waveform data and settings in addition to the screenshot.

### Save OneTouch

Saves the selected data to a ZIP file.

### OneTouch Directory

Defines the directory where the OneTouch ZIP files are stored. If a USB flash drive is connected, the instrument stores the data to this external device by default.

### Screenshot, Waveform, Setting

Select the data that you want to include in the OneTouch file.

### Comment

If enabled, you can enter a comment when you save a OneTouch file. The comment is written to a text file, which is included in the ZIP file. Furthermore, the first 10 characters of the comment are added to the ZIP filename.

### Filename Base

Defines the first part of the filename. The complete filename pattern is:


```
<filename base>_<date>_<time>_<comment10ch>.zip.
```

## 11.7 Screenshots


You can create and save screenshots of the current display of your waveforms and measurement results. If a USB flash device is connected to the R&S RTH, the instrument saves the screenshot to the USB flash drive. Otherwise, the screenshots are saved on the microSD card.



To save the current display in a screenshot:

1. Press the FILE key.
2. Disable "One touch".
3. Press the  key each time when you want to save a screenshot.

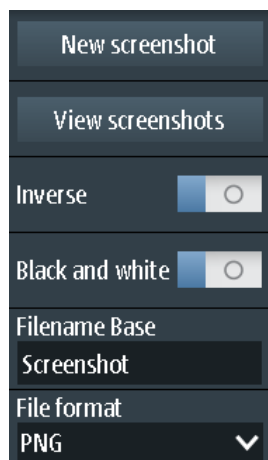
To configure the screenshots:

- ▶ Press and hold the  key until the menu opens, or open the "Screenshot" menu using the "Menu" button.

You can also view all saved screenshots directly on the instrument.

### 11.7.1 Screenshot Settings

Access: "Screenshot" menu



#### **New screenshot**

Saves the current display in a new screenshot.

Remote command:

[HCOPY:IMMEDIATE](#) on page 479

#### **View screenshots**

Displays the last saved screenshot. You can browse all screenshots that are saved.

#### **Inverse**

Inverts the colors of the output, i.e. a dark waveform is printed on a white background.



Remote command:

[HCOPY:INVerse](#) on page 479

### **Black and White**

Creates a black and white screenshot.

Remote command:

[HCOPY:COLor](#) on page 479

### **Filename base**

Defines the prefix of the file name. By default, the filename has the prefix "Screenshot\_".

Remote command:

[MMEMoRY:NAME](#) on page 479

### **File format**

Defines the format of the screenshot file. The following formats are available:

- PNG: Portable Network Graphics is a graphic format with lossless data compression.
- JPG: compressed file format, compression according to to JPEG standard
- BMP: BitMaP is an uncompressed format, files are large and saving might take some time.
- TIFF: Tagged Image File Format, often used in publishing companies and print processing.

Remote command:


[HCOPY:LANGuage](#) on page 479

## 12 General Instrument Setup

The general instrument settings are available in all operating modes.

### 12.1 Resetting the Instrument

Reset is helpful if the instrument is in undefined condition and cannot be operated.


- ▶ To switch off the instrument and reset the hardware, press the  power key for 5 seconds.
- ▶ To restore the factory settings, hold down the PRESET key during the boot process.

### 12.2 Disabling the Touchscreen

If you use the instrument in an environment with immissions considerably higher than specified, the immissions can affect the touch sensitivity of the screen. In this case, operate the instrument using the keys and the wheel and disable the touchscreen.

- ▶ To disable the touchscreen, press the SHIFT key for 2 seconds.

### 12.3 Selfalignment

Access:  or "Setup" menu > "Selfalignment"

The self-alignment aligns the data from several input channels vertically and horizontally to synchronize the timebases, amplitudes and positions.

The R&S RTH1002 provides an additional, separate self-alignment of the meter inputs.

The self-alignment aligns the data from several input channels vertically and horizontally to synchronize the timebases, amplitudes and positions.

Recommendation on performing the self-alignment:

- When putting the instrument into operation for the first time
- After a firmware update
- Once a week
- When major temperature changes occur (> 5°)

**NOTICE****Preparing the instrument for self-alignment**

Make sure that the instrument has been running and warming up before you start the self-alignment. The minimum warm-up time is indicated in the data sheet.

Before the self-alignment, remove all probes, leads, and other connected lines from the instrument input.

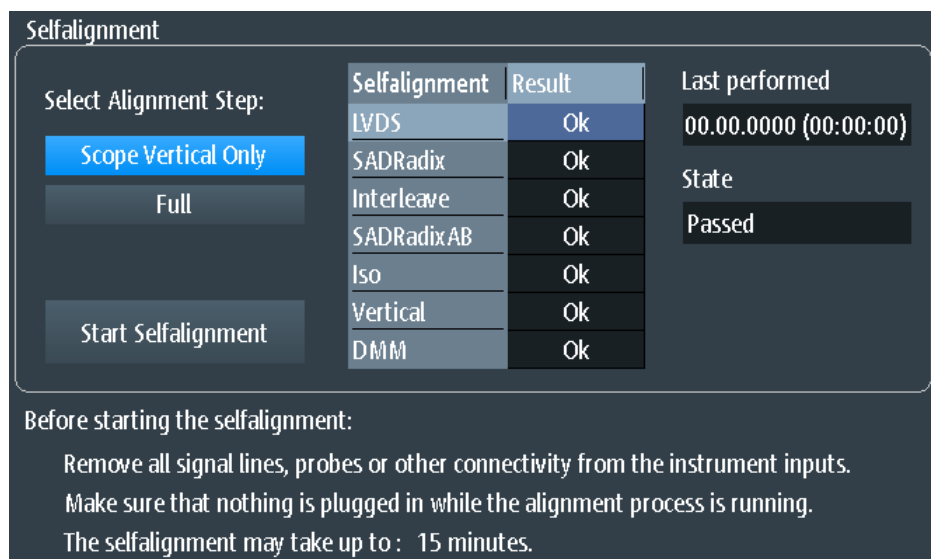


Figure 12-1: Self-alignment in scope mode

- ▶ To start, tap "Start Selfalignment".

The alignment can take up to 15 minutes. The results are shown in the "Selfalignment" dialog box.

**R&S RTH1002: Self-alignment of DMM inputs**

If the instrument is in "Meter" mode, you can choose to align all inputs, or only the meter inputs. The self-alignment of the meter inputs takes up to 30 seconds, while the complete self-alignment takes up to 15 minutes.

**Selfalignment**

Select Alignment Step:

**DMM Only**

Full

Start Selfalignment

Selfalignment	Result
LVDS	Ok
SADRadix	Ok
Interleave	Ok
SADRadixAB	Ok
Iso	Ok
Vertical	Ok
DMM	Ok

Last performed  
00.00.0000 (00:00:00)

State  
Passed

Before starting the selfalignment:  
Remove all signal lines, probes or other connectivity from the instrument inputs.  
Make sure that nothing is plugged in while the alignment process is running.  
The selfalignment may take up to : 30 seconds.

## 12.4 Setting the Date, Time and Language

The instrument has a date and time clock. You can adjust the clock to the local time, and you can select the display language. Supported languages are listed in the data sheet. The help is provided in English.

A reboot of the instrument is not necessary.

### Set date and time



### Set display language



#### Description of settings

##### **User Interface Language**

Select the language in which the functions and messages are displayed. Supported languages are listed in the data sheet. The help is provided in English.

The instrument changes the language after a few seconds, a reboot is not required.

##### **Time**

Set the local time in the following order: hours / minutes / seconds.

Remote command:

[SYSTem:TIME](#) on page 486


##### **Date**

Set the date in the following order: year / month / day.

Remote command:

[SYSTem:DATE](#) on page 485

## 12.5 Instrument Settings

Access:  or "Setup" menu

**Enable Touch**

Switches the touch functionality of the screen on or off. Alternatively, you can press the SHIFT key for 2 seconds.

If you use the instrument in an environment with immissions considerably higher than specified, the immissions can affect the touch sensitivity of the screen. In this case, operate the instrument using the keys and the wheel and disable the touchscreen.

Remote command:

`DISPlay:MOUS` on page 487

**Selfalignment**

See [Chapter 12.3, "Selfalignment"](#), on page 265.

**Selftest**

The self-test checks the hardware of the instrument. It is intended for service tasks.

**USB/LAN**

See [Chapter 13.1, "LAN Connection"](#), on page 276 and [Chapter 13.2, "USB connection"](#), on page 278.

**Wireless LAN**

See [Chapter 13.3, "Wireless LAN Connection \(Option R&S RTH-K200/200US\)"](#), on page 278.

**Time and Date**

See [Chapter 12.4, "Setting the Date, Time and Language"](#), on page 267.

**User Interface Language**

See [Chapter 12.4, "Setting the Date, Time and Language"](#), on page 267.

**Options**

See [Chapter 12.7, "Options"](#), on page 271

**Maintenance**

The "Device Info" tab provides service information for your R&S RTH. If you need support, you may be asked to provide this information. Here you can also read the "Open Source Acknowledgment", which provides verbatim license text of open source software that is used in the instrument's firmware.

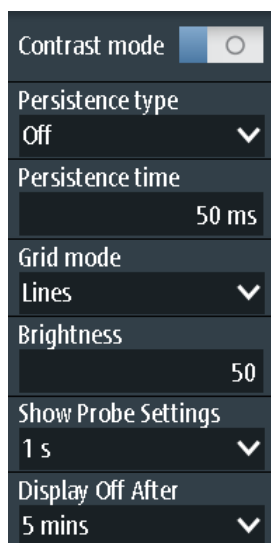
The "Service" tab allows the service personnel to enter a password that activates further service functions.

**Firmware Update**

See [Chapter 12.8, "Updating the Firmware"](#), on page 274.

## 12.6 Display Settings

Access: "Display" menu

**Contrast Mode**

If enabled, the waveforms are displayed in black color on white background.

Remote command:

`DISPlay:CONTRast` on page 487

**Persistence Type**

Defines how long every new data point remains on the screen.

"Off, Last Acq" Deactivates persistence and displays the last acquisition.

"Off, Multiple Acq"	Deactivates persistence and displays multiple acquisitions.
"Time"	Data points remain on the screen for the duration defined with <a href="#">Persistence Time</a> .
"Infinite"	Data points remain on the screen infinitely until persistence is set to "Off, Multiple Acq".

Remote command:

`DISPlay:PERSiStence[:TYPE]` on page 486

#### **Persistence Time**

User-defined persistence time if "Persistence Type" is "Time". Each new data point remains on the screen for the duration defined here.

Remote command:

`DISPlay:PERSiStence:TIME` on page 487

#### **Grid Mode**

Defines the grid display. A grid helps you identify the position of specific data points.

"Off"	No grid is shown.
"Dots"	Dots mark the intersections of the gridlines.
"Lines"	Displays the grid as horizontal and vertical lines.

#### **Brightness**

Changes the brightness of the touchscreen.

#### **Show Probe Settings**

Defines how long the probe settings of active channels are shown when you press a channel key. The settings are shown on the top of the display.

The probe settings are always shown as long as the "Vertical" menu is open.

#### **Display Off After**

Defines when the display switches off if it is not used. Switching off the display saves energy and prolongs the battery's operating time.

## 12.7 Options

All options are activated by license keys. No additional installation or hardware change is required.



#### **Unregistered licenses**

Unregistered licenses are not assigned to a particular instrument. The instrument accepts only registered licenses. If your license is delivered unregistered, use the online tool R&S License Manager to register the license for your instrument. The registration of a permanent license is irreversible, so ensure that you register it for the correct instrument. The address of the tool is <https://extranet.rohde-schwarz.com/service>.



The "Active options" tab provides information on installed software options. Here you can install new options or deactivate existing options using license keys.

Active options			Inactive options	Deactivated options
Description	Activation type	Valid until		
K1 I2C/SPI Trigger & Decode	Permanent			
K2 UART/RS232 Trigger & Decode	Permanent			
B1 Mixed-Signal-Opt. 250 MHz	Permanent			
B242 200 MHz Option, RTH1004	Permanent			
K19 Advanced Trigger	Permanent			
K200 Wireless LAN	Permanent			

Required information to order an option		Install a new option
Material number	1317.5000K04	<input type="text" value="Enter new option key"/> <input type="button" value="Install from file ..."/>
Serial number	900079	
Device ID	1317.5000K04-900079-Fw	

The "Inactive options" tab lists all deactivated and expired options.


Active options			Inactive options	Deactivated options
Description	Activation type	Valid until	Remark	
K200 Wireless LAN	Permanent	-	deactivated	

The "Deactivated options" tab shows all deactivated options with their deactivation information and provides a function to export the deactivation response. The response is required by the R&S License Manager.


Active options	Inactive options	Deactivated options
Description	Key	Response
K200 Wireless LAN	010263902420031714993030926	04690C3456E8886B

Export deactivation response ...

### 12.7.1 Activating Options

Consult your sales representative and provide the material number, serial number, and the device ID of your instrument to get a license key. You find this information in  > "Options" > "Active options".

The license key is provided in written form or in a file. Unregistered licenses must be registered in the R&S License Manager before they can be activated on the instrument.

1. If you received the option key in a file, save the file to a USB flash drive, and connect the drive to the R&S RTH.
2. Press the  key.
3. Select "Options", and select the "Active options" tab.

Active options		Inactive options	Deactivated options
Description	Activation type	Valid until	
K1 I2C/SPI Trigger & Decode	Permanent		
K2 UART/RS232 Trigger & Decode	Permanent		
B1 Mixed-Signal-Opt. 250 MHz	Permanent		
B242 200 MHz Option, RTH1004	Permanent		
K19 Advanced Trigger	Permanent		
K200 Wireless LAN	Permanent		


Required information to order an option		Install a new option
Material number	1317.5000K04	Enter new option key
Serial number	900079	
Device ID	1317.5000K04-900079-Fw	Install from file ...

- If you received a key in written form, enter the key in the "Enter new option key" field.  
If you received a key in digital form as a file, tap "Install from file", select path /media/USB1, and select the option key file.
- If you want to activate several options, repeat step 3 for each option.
- Restart the instrument.

## 12.8 Updating the Firmware

Your instrument is delivered with the latest firmware version. Firmware updates are provided on the Internet at [www.rohde-schwarz.com/product/rth.html](http://www.rohde-schwarz.com/product/rth.html) > "Downloads" > "Firmware". Along with the firmware file, you find the Release Notes describing the improvements and modifications.

Make sure to update the firmware if a new version is available.

- Download the firmware installation file RTH\*.rsi, and save it to a USB flash drive.
- Connect the USB flash drive to the USB connector on the right panel of the instrument.
- Press .
- Scroll down the menu and tap "Open File" under "Firmware Update".
- Select the firmware file.  
If you cannot see the RTH\*.rsi file, select the path /media/USB1, and the folder that contains the file.
- Tap "Select".

7. Tap "Yes".

The firmware update starts. Wait until the update has finished. The instrument restarts automatically.


## 13 Network Connections

This chapter describes the setup of network connections.


 
There are several ways to connect the R&S RTH to a computer:

- Connect the instrument to a local area network (LAN), usually the company network. For this connection, ethernet technology is used.  
LAN connection is used for remote operation using the web interface option R&S RTH-K201, for remote control using SCPI commands, and for data transfer.
- Connect the instrument directly to a computer using USB.  
The direct USB connection is used for remote control using SCPI commands.
- Connect the instrument to the wireless LAN (requires option R&S RTH-K200).  
You can operate the instrument remotely using a web browser on the computer or mobile device.

### 13.1 LAN Connection

1. Connect the LAN cable to the LAN connector on the right panel of the instrument.
2. Press the  key.
3. Select "USB/LAN".
4. Select "Interface" = "Ethernet". By default, DHCP is used and all address information is assigned automatically.
5. Note the IP address, which is required to address the instrument in the network.

### Description of settings

Interface	Ethernet 
Status	Ready (Eth. connected)
Hostname	RTH-900079
DHCP	
IP Address (DHCP)	10.113.1.159
Subnet mask (DHCP)	255.255.252.0
Gateway (DHCP)	10.113.0.1
DNS Server (DHCP)	10.0.2.166
MAC Address	00:90:B8:1D:E4:70

#### Interface

Select LAN or USB connection.

#### Status

Shows the connection status.

#### Hostname

Shows the computer name of the instrument.

In a LAN that uses a Domain Name System server (DNS server), each computer or instrument can be accessed using a unique name instead of the IP address. The DNS server translates the host name to the IP address. The host name is useful when a DHCP server is used, as a new IP address is assigned each time the instrument is restarted.

The default name is RTH-<serial\_number>. You can change the name, but make sure that the name is unique in the LAN.

#### DHCP

Enables dynamic TCP/IP configuration using the Dynamic Host Configuration Protocol (DHCP). If DHCP is on, all address information is assigned automatically. Disable DHCP if the network does not support this protocol.

#### IP Address, Subnet mask, Gateway, DNS Server

Shows the IP address and other address information for LAN connection.

If the network supports DHCP, the DHCP server assigns these parameters. It is safe to establish a connection to the LAN without any previous instrument configuration.

If DHCP is not supported, enter the address information manually (static address).


**Note:** Risk of network errors. Connection errors can affect the entire network. If your network does not support DHCP, or if you disable DHCP, make sure to assign valid address information before connecting the instrument to the LAN. To obtain a valid IP address, subnet mask, and gateway, contact your network administrator.

#### MAC Address

Shows the media access control address (MAC address), a physical address and a unique identifier of the instrument.

## 13.2 USB connection

The USB device connector is intended to connect a computer directly to the instrument. You need a VISA communication tool installed on the computer to control the instrument using remote commands.

1. Connect a USB cable to the USB mini-B connector on the right panel of the instrument, and to a computer.
2. Press the  key.
3. Select "USB/LAN".
4. Select "Interface" = "USB".  
The instrument shows the connection status.
5. When the computer detects the connected instrument, the drivers are automatically installed, and a message is displayed.  
The drivers are IVI drivers
6. Open the Device Manager on the computer and check if the connected instrument is shown.

## 13.3 Wireless LAN Connection (Option R&S RTH-K200/200US)

Using the wireless LAN option R&S RTH-K200/200US, you can control your instrument with a portable device. Thus, you can perform dangerous measurements without risk.

When the instrument is connected to the portable device, the waveform display and user interface of the R&S RTH are directly available in the web browser. All settings can be changed in the browser, no software installation is required.


There are two ways to connect via wireless LAN:

- Usually, the R&S RTH is the access point and you set up connection on the portable device.
- The R&S RTH is the client that connects to a router or access point.




As any other wireless LAN connection, also the WLAN connection between the R&S RTH and the mobile device can be disturbed by various influences, for example, interfering signals.


#### To enable wireless LAN

1. Press the  key.
2. Tap "Wireless LAN".
3. Only for option R&S RTH-K200: Select the "Country", where you use the instrument.  
The list contains all countries where the wireless LAN option has been approved. You also can find the list in the data sheet.
4. Enable "Wireless State".  
Now you can connect the instrument.

#### To use the instrument as access point

1. Press the  key.
2. Tap "Wireless LAN".
3. Only for option R&S RTH-K200: Select the "Country", where you use the instrument.  
The list contains all countries where the wireless LAN option has been approved. You also can find the list in the data sheet.
4. Select "Wireless Mode" = "Access Point" in the "Wireless LAN" menu.
5. If you connect for the first time, change the default "Passphrase". You can also change the identifier of the instrument, the "SSID".
6. Enable "Wireless State".
7. On your portable device, set up the connection to the instrument. Select the SSID, and enter the passphrase.  
The detailed procedure is described in the documentation of your portable device.

#### To use the instrument as client

1. Press the  key.
2. Tap "Wireless LAN".
3. Only for option R&S RTH-K200: Select the "Country", where you use the instrument.



The list contains all countries where the wireless LAN option has been approved. You also can find the list in the data sheet.

4. Select "Wireless Mode" = "Client" in the "Wireless LAN" menu.
5. Enable "Wireless State".  
The "Choose Access Point" window opens.
6. Tap the "SSID" of the required router.
7. Enter the password of the required router in "Passphrase".  
The connection status is shown in "Status"

### Description of settings



#### Country

Select the country, where you use the wireless LAN. The list contains all countries where the wireless LAN option has been approved.

Only available in option R&S RTH-K200.

#### Wireless State

Enables or disables wireless LAN access.

#### Wireless Mode

Selects the wireless LAN function of the instrument. It can serve as access point or as client.

Remote command:

[SYSTem:COMMunicate:WLAN:MODE](#) on page 487

#### SSID

Shows the wireless LAN identifier of the instrument. You can change the identifier.

**Passphrase**

Shows the wireless LAN password of the instrument. You can change the password.

**Status**

Shows the connection status and activities.

**IP Address**

Shows the IP address of the instrument. You need this address to set up connection on the portable device.

**MAC Address**

Shows the media access control address (MAC address), a physical address and unique identifier of the instrument.

## 13.4 Web Interface (Option R&S RTH-K201)

If the R&S RTH is connected to a computer via LAN or WLAN (with option R&S RTH-K200/200US), you can operate the instrument from the computer. No additional tools are required, you need only a web browser that supports HTML5. Thus, you can use your smartphone or tablet to operate the oscilloscope remotely.

1. Open a web browser on the computer or mobile device.
2. Type the instrument's host name or IP address in the address field of the browser, for example, *http://10.133.10.203*.

The instrument's homepage is shown.

Using the web interface, you can:

- Display a screenshot of the current instrument display.
- Operate the instrument using the menus on the emulated display. This view is designed for small devices, for example, smartphones.
- Operate the instrument using the emulated front panel. You see a live image of the instrument. You can use the keys, the wheel and the menus in the same way as directly on the instrument.
- Organize the data that is saved on the instrument. You can download files to the computer, upload files to the instrument, delete and rename files, and create folders.



The instrument is connected to the Web interface using http. Encrypted access using https is not available. The usual risks of unsecured web connection exist also to the connection of the R&S RTH.

## 14 Remote Control Commands

### 14.1 Conventions used in Command Description

Note the following conventions used in the remote command descriptions:

- Command usage**  
 If not specified otherwise, commands can be used both for setting and for querying parameters.  
 If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- Parameter usage**  
 If not specified otherwise, a parameter can be used to set a value and it is the result of a query.  
 Parameters required only for setting are indicated as **Setting parameters**.  
 Parameters required only to refine a query are indicated as **Query parameters**.  
 Parameters that are only returned as the result of a query are indicated as **Return values**.
- Conformity**  
 Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S RTH follow the SCPI syntax rules.
- Asynchronous commands**  
 A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- Reset values (\*RST)**  
 Default parameter values that are used directly after resetting the instrument (\*RST command) are indicated as **\*RST** values, if available.
- Default unit**  
 This is the unit used for numeric values if no other unit is provided with the parameter.

### 14.2 Mode

---

**OP[:MODE]** <OperationMode>

Sets the operating mode of the instrument.

**Parameters:**

<OperationMode>    YT | XY | MASK | ROLL | METer | FFT | LOGGer | COUNter |  
                           PROToCol | HARMonic | SPECtrum  
 \*RST:                YT (scope mode)

## 14.3 Waveform Setup

- [Automatic Setup](#).....283
- [Vertical Setup](#).....283
- [Horizontal Setup](#).....288
- [Acquisition Control](#).....289
- [Trigger](#).....291

### 14.3.1 Automatic Setup

---

#### AUToscale

Performs an autoset in scope mode.

**Usage:**                      Event

### 14.3.2 Vertical Setup

The channel suffix <m> selects the channel for which the command is executed. The number of channels depends on the instrument type. The R&S RTH1004 has 4 channels, the suffix values are 1 | 2 | 3 | 4. The R&S RTH1002 has 2 channels, the suffix values are 1 | 2.



Set the attenuation factor of the probe manually on the display when you attach the probe: "Vertical" > "Probe Setting". There is no remote command for probe setup. Make sure to set the attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.

---

<a href="#">CHANnel&lt;m&gt;:STATe</a> .....	283
<a href="#">CHANnel&lt;m&gt;:SCALE</a> .....	284
<a href="#">CHANnel&lt;m&gt;:RANGE</a> .....	284
<a href="#">CHANnel&lt;m&gt;:POSition</a> .....	284
<a href="#">CHANnel&lt;m&gt;:OFFSet</a> .....	285
<a href="#">CHANnel&lt;m&gt;:COUPling</a> .....	285
<a href="#">CHANnel&lt;m&gt;:BANDwidth</a> .....	285
<a href="#">CHANnel&lt;m&gt;:DESKew</a> .....	286
<a href="#">CHANnel&lt;m&gt;:THReshold:TECHnology</a> .....	286
<a href="#">CHANnel&lt;m&gt;:THReshold:USER</a> .....	287
<a href="#">CHANnel&lt;m&gt;:THReshold:THReshold?</a> .....	287
<a href="#">CHANnel&lt;m&gt;:THReshold:FINDlevel</a> .....	288

---

#### CHANnel<m>:STATe <State>

Switches the channel signal on or off.

**Suffix:**  
 <m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**  
 <State> ON | OFF  
 \*RST: OFF

#### **CHANnel<m>:SCALE <Scale>**

Sets the vertical scale (vertical sensitivity) of the indicated waveform.

**Suffix:**  
 <m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**  
 <Scale> Scale value, given in Volts per division  
 Range: 2E-3 to 100  
 Increment: 1E-3  
 \*RST: 0.05  
 Default unit: V/div

#### **CHANnel<m>:RANGe <Range>**

Sets the voltage range across the 8 vertical divisions of the diagram. Use the command alternatively to [CHANnel<m>:SCALE](#).

**Suffix:**  
 <m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**  
 <Range> Voltage range value  
 Range: 0 to 800E+3  
 Increment: 10E-6  
 \*RST: 0  
 Default unit: V

#### **CHANnel<m>:POSition <Position>**

Moves the selected signal up or down in the diagram. The position is a graphical setting given in divisions, while the offset sets a voltage.

**Suffix:**  
 <m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**  
 <Position> Position value, given in divisions.  
 Range: -4 to 4  
 Increment: 0.5  
 \*RST: 0  
 Default unit: div

**CHANnel<m>:OFFSet <Offset>**

Sets an offset voltage that is added to correct an offset-affected signal. The value is included in measurement results. The signal is shifted in relation to the ground level by the offset value. Negative offset values move the waveform down, positive values move it up.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**

<Offset> Range: -400 to 400  
 Increment: 0.5  
 \*RST: 0  
 Default unit: V

**CHANnel<m>:COUPling <Coupling>**

Selects the connection of the indicated channel.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**

<Coupling> DCLimit | ACLimit

**DCLimit**

The signal passes the input unchanged.

**ACLimit**

A high-pass filter removes the DC offset voltage from the input signal if the DC component of a signal is of no interest.

\*RST: DCLimit

**CHANnel<m>:BANDwidth <BandwidthLimit>**

Selects the bandwidth limit for the indicated channel.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**

<BandwidthLimit> FULL | B350 | B200 | B100 | B60 | B50 | B40 | B20 | B10 | B5 | B4 | B2 | B1 | B5HK | B4HK | B2HK | B1HK | B50K | B40K | B20K | B10K | B5K | B4K | B2K | B1K

**FULL**

At full bandwidth, all frequencies in the specified range are acquired and displayed.

**B350 | B200 | B100 | B60 | B50 | B40 | B20 | B10 | B5 | B4 | B2 | B1**

Limit to 350 MHz, 200 MHz, 100 MHz, 60 MHz,...., respectively.

**B5HK | B4HK | B2HK | B1HK | B50K | B40K | B20K | B10K | B5K | B4K | B2K | B1K**

Limit to 500 kHz, 400 kHz,...., respectively.

\*RST: FULL

**CHANnel<m>:DESKew <Deskew>**

Sets a delay for the selected channel.

Deskew compensates delay differences between channels caused by the different length of cables, probes, and other sources.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**

<Deskew> Deskew value  
 Range: -100E-9 to 100E-9  
 Increment: 800E-12  
 \*RST: 0  
 Default unit: s

**CHANnel<m>:THReshold:TECHnology <ThresholdType>**

Sets the threshold value for digitization of analog signals. If the signal value is higher than the threshold, the signal state is high (1 or true for the boolean logic). Otherwise, the signal state is considered low (0 or false) if the signal value is below the threshold.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**

<ThresholdType> TTL | ECL | CMOS | CAN | GND | LIN7vsupply | LIN12vsupply | LIN18vsupply | USER

**TTL**

1.4 V

**ECL**

-1.3 V

**CMOS**

2.5 V

**GND**

0 V (for CAN channels, requires option R&S RTH-K3)

**CAN**

2 V (for CAN channels, requires option R&S RTH-K3)

**LIN7vsupply | LIN12vsupply | LIN18vsupply**

7 V / 12 V / 18 V (for LIN channels, requires option R&S RTH-K3)

**USER**

Set the value with `CHANnel<m>:THReshold:USER`.

\*RST: TTL

**CHANnel<m>:THReshold:USER <ThresholdValue>**

Set an individual threshold value if `CHANnel<m>:THReshold:TECHnology` is set to USER.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Parameters:**

<ThresholdValue> Range: -400 to 400  
Increment: 1E-3  
\*RST: 1.4  
Default unit: V

**CHANnel<m>:THReshold:THReshold?**

Returns the threshold value.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<Level> Range: -10 to 10  
Increment: 1E-3  
\*RST: 0  
Default unit: V

**Usage:** Query only



**CHANnel<m>:THReshold:FINDlevel**

The instrument sets the threshold for the selected channel.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Usage:** Event

**14.3.3 Horizontal Setup**

<a href="#">TIMebase:SCALE</a> .....	288
<a href="#">TIMebase:RANGe</a> .....	288
<a href="#">TIMebase:HORizontal:POSition</a> .....	288
<a href="#">TIMebase:REFerence</a> .....	289
<a href="#">ACQuire:POINts:ARATe?</a> .....	289

**TIMebase:SCALE <Scale>**

Sets the time scale of the horizontal axis for all signals.

**Parameters:**

<Scale> Range: 1E-9 to 500  
 Increment: Steps 1, 2, 5 (1, 2, 5, 10, 20, 50, 100, 200, 500...)  
 \*RST: 100E-9  
 Default unit: s/div

**TIMebase:RANGe <AcquisitionTime>**

Sets the acquisition time, the timerange across the 10 horizontal divisions of the diagram. Use the command alternatively to [TIMebase:SCALE](#).

**Parameters:**

<AcquisitionTime> Range: 10E-9 to 5000  
 Increment: Steps 1, 2, 5 (1, 2, 5, 10, 20, 50, 100, 200, 500...)  
 \*RST: 1E-6  
 Default unit: s

**TIMebase:HORizontal:POSition <Position>**

Sets the horizontal position of the trigger point in relation to the reference point.

See also: "[Horizontal Position](#)" on page 43

**Parameters:**

<Position> Range: Depends on the time scale, see table below.  
 Increment: 0.1  
 \*RST: 0  
 Default unit: s

Time scale	Min./max. horizontal position
1 ns/div to 100 µs/div	±2 s
200 µs/div to 2 s/div	<i>Time scale * 20000</i>
5 s/div – 500 s/div	100000 s

**TIMEbase:REFerence** <ReferencePoint>

Defines the time reference point in the diagram.

**Parameters:**

<ReferencePoint> Position of the reference point in percent of the screen width.  
 Available values are:  
 10: on the left side of the screen  
 50: in the middle of the screen  
 90: on the right side  
 \*RST: 50  
 Default unit: %

**ACQUIRE:POINTS:ARATE?**

Returns the number of recorded analog waveform points per second.

**Return values:**

<ADCSampleRate> Range: 1.25E+9 to 5E+9  
 Increment: 1  
 \*RST: 1.25E+9  
 Default unit: Sa/s

**Usage:** Query only

**14.3.4 Acquisition Control**

RUN..... 289  
 STOP..... 290  
 ACQUIRE:MODE..... 290  
 ACQUIRE:AVERage:COUNT..... 290  
 ACQUIRE:ARESet:IMMediate..... 290  
 ACQUIRE:POINTS[:VALue]?..... 291  
 ACQUIRE:RESolution?..... 291

**RUN**

Starts the continuous acquisition.

**Usage:** Event

---

**STOP**

Stops the running acquisition.

**Usage:**                   Event

---

**ACQUIRE:MODE** <AcquisitionMode>

Defines how the waveform is built from the captured samples.

**Parameters:**

<AcquisitionMode>   SAMPLE | PDETECT | HRESOLUTION | AVERAGE | ENVELOPE

**SAMPLE**

One of n samples in a sample interval is recorded as waveform point, the other samples are discarded.

**PDETECT**

The minimum and the maximum of n samples are recorded as waveform points, the other samples are discarded.

**HRESOLUTION**

The average of n captured sample points is recorded as one waveform point.

**AVERAGE**

The average is calculated from the data of the current acquisition and a number of acquisitions before. The number of acquisitions for average calculation is defined with **ACQUIRE: AVERAGE:COUNT**.

**ENVELOPE**

The minimum and maximum values in an sample interval over a number of acquisitions are saved. The most extreme values of all acquisitions build the envelope.

\*RST:           SAMPLE

---

**ACQUIRE:AVERAGE:COUNT** <NoOfAves>

Sets the number of waveforms used to calculate the average waveform.

**Parameters:**

<NoOfAves>           Range:       2 to 8192  
                          Increment: 2<sup>N</sup> (N = 1 .. 13)  
                          \*RST:       2

---

**ACQUIRE:ARESET:IMMEDIATE**

Restarts the envelope and average calculation.

**Usage:**                   Event

**ACQUIRE:POINTS[:VALUE]?**

Returns the record length, number of captured waveform samples before interpolation.

**Return values:**

<RecordLength>      Range:      1 to 4294967295  
                          Increment:    1  
                          \*RST:        1  
                          Default unit: Sa

**Usage:**                      Query only

**ACQUIRE:RESOLUTION?**

Returns the resolution, the time between two waveform samples.

**Return values:**

<ResolutionPP>      Range:      1E-12 to 1E+12  
                          Increment:    1E-12  
                          \*RST:        0  
                          Default unit: s

**Usage:**                      Query only

**14.3.5 Trigger**

• <a href="#">General Trigger Settings</a> .....	291
• <a href="#">Edge Trigger</a> .....	295
• <a href="#">Glitch Trigger</a> .....	295
• <a href="#">Width Trigger</a> .....	296
• <a href="#">Video/TV Trigger</a> .....	298
• <a href="#">External Trigger (R&amp;S RTH1002)</a> .....	301
• <a href="#">Pattern Trigger (R&amp;S RTH-K19)</a> .....	302
• <a href="#">State Trigger (R&amp;S RTH-K19)</a> .....	304
• <a href="#">Runt Trigger (R&amp;S RTH-K19)</a> .....	305
• <a href="#">Slew Rate Trigger (R&amp;S RTH-K19)</a> .....	308
• <a href="#">Data2Clock Trigger (R&amp;S RTH-K19)</a> .....	310
• <a href="#">Serial Pattern Trigger (R&amp;S RTH-K19)</a> .....	311
• <a href="#">Timeout Trigger (R&amp;S RTH-K19)</a> .....	313
• <a href="#">Interval Trigger (R&amp;S RTH-K19)</a> .....	313
• <a href="#">Window Trigger (R&amp;S RTH-K19)</a> .....	315

**14.3.5.1 General Trigger Settings**

See also: [Chapter 2.5.1, "General Trigger Settings"](#), on page 47

<a href="#">TRIGger:MODE</a> .....	292
<a href="#">TRIGger:SOURce</a> .....	292
<a href="#">TRIGger:TYPE</a> .....	292
<a href="#">TRIGger:LEVel&lt;m&gt;:VALue</a> .....	293

TRIGger:HOLDoff:MODE.....	293
TRIGger:HOLDoff:TIME.....	294
TRIGger:HOLDoff:EVENTs.....	294
TRIGger:HOLDoff:MIN.....	294
TRIGger:HOLDoff:MAX.....	294
TRIGger:MNR.....	295

---

### TRIGger:MODE <Mode>

The trigger mode determines the behavior of the instrument if no trigger occurs, and also the number of acquired waveforms when a trigger occurs.

#### Parameters:

<Mode>                    AUTO | NORMAl | SINGle

#### **AUTO**

The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence.

#### **NORMAl**

The instrument acquires waveforms continuously, each time when a trigger occurs.

#### **SINGle**

When a trigger occurs, the instrument acquires one waveform.

\*RST:            AUTO

---

### TRIGger:SOURce <Source>

Selects the trigger source, the waveform on which the trigger condition is checked.

#### Parameters:

<Source>                    C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7

Logic channels D0..D7 require option R&S RTH-B1. For video, runt, slew rate and window trigger, only analog channels are available.

\*RST:            C1

---

### TRIGger:TYPE <Type>

Selects the trigger type, the event type that defines the trigger point.

**Parameters:**

<Type> EDGE | GLITch | WIDTH | TV | PATtern | STATe | RUNT | SLEWrate | DATatoclock | SERPattern | TIMEout | INTerval | WINDow | PROTOcol

**EDGE | GLITch | WIDTH | TV**

Standard trigger types

**PATtern | STATe | RUNT | SLEWrate | DATatoclock | SER-Pattern | TIMEout | INTerval | WINDow**

Require option R&S RTH-K19

**PROTOcol**

Requires option R&S RTH-K1 and/or R&S RTH-K2

\*RST: EDGE

**TRIGger:LEVel<m>:VALue <Level>**

Sets the trigger level voltage. The command is relevant for all trigger types that require one trigger level.

**Suffix:**

<m> 1..21  
 Indicates the trigger source:  
 1..4: analog channels 1 to 4  
 8..15: digital channels D0 to D7  
 all others: not available

**Parameters:**

<Level> Range: -10 to 10  
 Increment: 1E-3  
 \*RST: 0  
 Default unit: V

**TRIGger:HOLDoff:MODE <Mode>**

Selects the method to define the holdoff.

**Parameters:**

<Mode>	OFF   TIME   RANDom   EVENts
	<b>OFF</b> No holdoff
	<b>TIME</b> Defines the holdoff as a time period. The next trigger occurs only after a time has passed, which is defined with <code>TRIGger:HOLDoFF:TIME</code> .
	<b>RANDom</b> Defines the holdoff as a random time limited by <code>TRIGger:HOLDoFF:MIN</code> and <code>TRIGger:HOLDoFF:MAX</code> . For each acquisition, the instrument selects a new random holdoff time from the specified range.
	<b>EVENts</b> Defines the holdoff as a number of trigger events, which is defined with <code>TRIGger:HOLDoFF:EVENts</code> .
*RST:	OFF

**TRIGger:HOLDoFF:TIME** <Time>

Sets the time that has to pass at least until the next trigger occurs. The command takes effect if `TRIGger:MODE` is set to `TIME`.

**Parameters:**

<Time>	Range: 8E-9 to 10
	Increment: 200E-6
	*RST: 1E-3
	Default unit: s

**TRIGger:HOLDoFF:EVENts** <Events>

Sets the number of triggers to be skipped until the next trigger occurs. The command takes effect if `TRIGger:MODE` is set to `EVENts`.

**Parameters:**

<Events>	Range: 1 to 1000000000
	Increment: 10
	*RST: 1

**TRIGger:HOLDoFF:MIN** <RandomMinTime>**TRIGger:HOLDoFF:MAX** <RandomMaxTime>

Set the time limits for random holdoff time. For each acquisition, the instrument selects a new random holdoff time from the specified range.

**Parameters:**

<RandomMinTime> Range: 8E-9 to 10  
 <RandomMaxTime> Increment: 200E-6  
 \*RST: 2E-3  
 Default unit: s

**TRIGger:MNR** <MoreNoiseReject>

Enables a hysteresis to avoid unwanted trigger events caused by noise oscillation around the trigger level.

**Parameters:**

<MoreNoiseReject> ON | OFF  
 \*RST: OFF

**14.3.5.2 Edge Trigger****TRIGger:EDGE:SLOPe** <Slope>

Sets the edge to be triggered on.

**Parameters:**

<Slope> POSitive | NEGative | EITHer  
 POSitive = rising edge  
 NEGative = falling edge  
 EITHer = rising and falling edge  
 \*RST: POSitive

**14.3.5.3 Glitch Trigger**

See also: [Chapter 2.5.3, "Glitch Trigger"](#), on page 51

<a href="#">TRIGger:GLITch:POLarity</a> .....	295
<a href="#">TRIGger:GLITch:RANGe</a> .....	296
<a href="#">TRIGger:GLITch:WIDTh</a> .....	296

**TRIGger:GLITch:POLarity** <Polarity>

Sets the pulse polarity, that is the direction of the first pulse slope. You can trigger on:

- Positive going pulses. The width is defined from the rising to the falling edge.
- Negative going pulses. The width is defined from the falling to the rising edge.
- Both positive and negative going pulses

**Parameters:**

<Polarity> POSitive | NEGative | EITHer  
 \*RST: POSitive



**TRIGger:GLITch:RANGe** <Condition>

Selects the glitches to be identified: shorter or longer than the width specified with `TRIGger:GLITch:WIDTh`.

**Parameters:**

<Condition>            LONGer | SHORter  
\*RST:            LONGer

**TRIGger:GLITch:WIDTh** <Duration>

Sets the pulse width of the glitch.

**Parameters:**

<Duration>            Range:        800E-12 to 10000  
                          Increment:    100E-9  
\*RST:            5E-9  
Default unit: s

**14.3.5.4 Width Trigger**

See also [Chapter 2.5.4, "Width Trigger"](#), on page 52.

<code>TRIGger:WIDTh:POLarity</code> .....	296
<code>TRIGger:WIDTh:RANGe</code> .....	296
<code>TRIGger:WIDTh:WIDTh</code> .....	297
<code>TRIGger:WIDTh:DELTA</code> .....	297
<code>TRIGger:WIDTh:MAX</code> .....	297
<code>TRIGger:WIDTh:MIN</code> .....	298

**TRIGger:WIDTh:POLarity** <Polarity>

Sets the pulse polarity, that is the direction of the first pulse slope. You can trigger on:

- Positive going pulses. The width is defined from the rising to the falling edge.
- Negative going pulses. The width is defined from the falling to the rising edge.
- Both positive and negative going pulses

**Parameters:**

<Polarity>            POSitive | NEGative | EITHer  
\*RST:            POSitive

**TRIGger:WIDTh:RANGe** <Condition>

Defines how the measured pulse width is compared with the given limit(s).

**Parameters:**

<Condition> LONGer | SHORter | EQUal | NEQual | WITHin | OUTSide

**LONGer | SHORter**

Triggers on pulses shorter or longer than a width set using [TRIGger:WIDTh:WIDTh](#).

**EQUal | NEQual**

Triggers on pulses equal or not equal a given width that is set using [TRIGger:WIDTh:WIDTh](#). In addition, a tolerance can be set around the specified width using [TRIGger:WIDTh:DELTA](#).

**WITHin | OUTSide**

Triggers on pulses inside or outside a given range. The range is set using [TRIGger:WIDTh:MIN](#) and [TRIGger:WIDTh:MAX](#).

\*RST: LONGer

**TRIGger:WIDTh:WIDTh <Duration>**

Sets the width for comparison ranges EQUal, UNEQual, SHORter, and LONGer.

See [TRIGger:WIDTh:RANGe](#) on page 296

**Parameters:**

<Duration> Range: 800E-12 to 10000  
 Increment: 100E-9  
 \*RST: 5E-9  
 Default unit: s

**TRIGger:WIDTh:DELTA <Tolerance>**

Sets a range  $\Delta t$  to the specified width, which is defined using [TRIGger:WIDTh:WIDTh](#).

**Parameters:**

<Tolerance> Range: 0 to 5000  
 Increment: 500E-12  
 \*RST: 0  
 Default unit: s

**TRIGger:WIDTh:MAX <MaxDuration>**

Sets the upper limit for the pulse width if [TRIGger:WIDTh:RANGe](#) is set to WITHin or OUTSide.

**Parameters:**

<MaxDuration> Range: 800E-12 to 10000  
 Increment: 100E-9  
 \*RST: 5E-9  
 Default unit: s

**TRIGger:WIDTh:MIN** <MinDuration>

Sets the lower limit for the pulse width if **TRIGger:WIDTh:RANGe** is set to **WIDHIn** or **OUTSide**.

**Parameters:**

<MinDuration>            Range:        800E-12 to 10000  
                                  Increment:    100E-9  
                                  \*RST:        5E-9  
                                  Default unit: s

**14.3.5.5 Video/TV Trigger**

The standards PAL, PAL-M, NTSC and SECAM are available in the instrument firm-ware. All other standards and custom signals require the advanced trigger option (R&S RTH-K19).

TRIGger:TV:STANdard.....	298
TRIGger:TV:POLarity.....	299
TRIGger:TV:MODE.....	299
TRIGger:TV:LINE.....	300
TRIGger:TV:LFIeld.....	300
TRIGger:TV:CUSTom:STYPe.....	300
TRIGger:TV:CUSTom:LDURation.....	301
TRIGger:TV:CUSTom:SDURation.....	301
TRIGger:TV:CUSTom:SCANmode.....	301

**TRIGger:TV:STANdard** <Standard>

Selects the TV standard or **CUSTom** for user-defined signals.

**Parameters:**

&lt;Standard&gt;

PAL | PALM | NTSC | SECam | P480L60HZ | P576L50HZ |  
 P720L30HZ | P720L50HZ | P720L60HZ | I1080L50HZ |  
 I1080L60HZ | P1080L24HZ | P1080L24HZSF | P1080L25HZ |  
 P1080L30HZ | P1080L50HZ | P1080L60HZ | CUSTom

**PAL | PALM | NTSC | SECam**

Standards delivered with the instrument firmware.

**PxxxxLyyHZ**

HDTV standards using progressive scanning (P). xxxx indicates the number of active lines, yy is the frame rate.

Triggering on HDTV standards requires option R&S RTH-K19.

**IxxxxLxxHZ**

HDTV standards using interlaced scanning (I). xxxx indicates the number of active lines, yy is the field rate.

**P1080L24HZSF**

1080p/24sF is a HDTV standard using progressive segmented frame scanning.

**CUSTom**

Used for signals of other video systems, for example, medical displays, video monitors, and security cameras. Requires option R&S RTH-K19.

\*RST: PAL

**TRIGger:TV:POLarity** <Polarity>

Sets the polarity of the signal. Note that the sync pulse has the opposite polarity, for example, a positive signal has a negative sync pulse.

**Parameters:**

&lt;Polarity&gt;

POSitive | NEGative

\*RST: POSitive

**TRIGger:TV:MODE** <Mode>

Selects the lines or fields on which the instrument triggers. Available modes depend on the scanning system of the selected standard.

**Parameters:**

<Mode> ALL | ODD | EVEN | ALINe | LINE

**ALL**

All fields: Triggers on the first video line of the frame (progressive scanning) or field (interlaced scanning), for example, to find amplitude differences between the fields.

**ODD | EVEN**

Odd fields / even fields: Triggers on the first video line of the odd or even field. These modes are available for interlaced scanning (PAL, PAL-M, SECAM, NTSC, 1080i) and progressive segmented frame scanning (1080p/24sF). They can be used, for example, to analyze the components of a video signal.

**ALINe**

All lines: Triggers on the line start of all video lines, for example, to find maximum video levels.

**LINE**

Triggers on a specified line. Specify the line number using [TRIGger:TV:LINE](#).

\*RST: ALL

**TRIGger:TV:LINE** <LineNumber>

Sets the number of the line to be triggered on if [TRIGger:TV:MODE](#) is LINE.

Usually the lines of the frame are counted, beginning from the frame start.

For NTSC signals, the lines are counted per field, not per frame. Therefore, you have to set the odd or even field using [TRIGger:TV:LField](#), and the line number in the field.

**Parameters:**

<LineNumber> Range: 1 to 3000  
Increment: 1  
\*RST: 1

**TRIGger:TV:LField** <LineField>

Line field (odd or even) used as reference for counting the video lines. Used by the NTSC standard.

**Parameters:**

<LineField> FIELD1 | FIELD2  
\*RST: FIELD1

**TRIGger:TV:CUSTom:STYPe** <SyncPulseType>

Sets the type of the sync pulse, either bi-level sync pulse (usually used in SDTV signals), or tri-level sync pulse (used in HDTV signals).

**Parameters:**

<SyncPulseType> BIlevel | TRILevel  
 \*RST: BIlevel

**TRIGger:TV:CUSTom:LDURation** <LineDuration>

Sets the duration of a single video line, the time between two successive sync pulses.

**Parameters:**

<LineDuration> Range: 5E-6 to 200E-6  
 Increment: 100E-9  
 \*RST: 64E-6  
 Default unit: s

**TRIGger:TV:CUSTom:SDURation** <SyncPulseDuration>

Sets the width of the sync pulse.

**Parameters:**

<SyncPulseDuration> Range: 100E-9 to 100E-6  
 Increment: 100E-9  
 \*RST: 4.7E-6  
 Default unit: s

**TRIGger:TV:CUSTom:SCANmode** <ScanMode>

Sets the scanning system.

For details, see "Scan" on page 58.

**Parameters:**

<ScanMode> INTERlaced | PROGressive | SEGmented  
 \*RST: INTERlaced

**14.3.5.6 External Trigger (R&S RTH1002)**

TRIGger:EXTernal:LEVel.....301

TRIGger:EXTernal:SLOPe.....302

**TRIGger:EXTernal:LEVel** <Level>

Sets the trigger voltage level.

**Parameters:**

<Level> Range: -10 to 10  
 Increment: 1E-3  
 \*RST: 0  
 Default unit: V

**TRIGger:EXTernal:SLOPe** <Slope>

Sets the edge direction for the trigger. You can trigger on the rising edge, the falling edge, or riding and falling edges of the external signal.

**Parameters:**

<Slope>                    POSitive | NEGative | EITHer  
\*RST:                    POSitive

**14.3.5.7 Pattern Trigger (R&S RTH-K19)**

See also [Chapter 2.5.7, "Pattern Trigger \(R&S RTH-K19\)"](#), on page 59.

TRIGger:PATtern:STATe[:CHANnel<m>].....	302
TRIGger:PATtern:STATe:COMBination.....	302
TRIGger:PATtern:WIDTh:RANGe.....	303
TRIGger:PATtern:TIMeout[:TIME].....	303
TRIGger:PATtern:WIDTh[:WIDTh].....	303
TRIGger:PATtern:WIDTh:DELTA.....	304
TRIGger:PATtern:WIDTh:MINWidth.....	304
TRIGger:PATtern:WIDTh:MAXWidth.....	304

**TRIGger:PATtern:STATe[:CHANnel<m>]** <State>

Sets the state of each input channel. The channel is specified by the channel suffix:

The logical combination of the channel states is defined by [TRIGger:PATtern:STATe:COMBination](#).

**Suffix:**

<m>                    1..4: analog channel 1 to 4  
                          8..15: digital channels D0 to D7

**Parameters:**

<State>                    ONE | ZERO | DONTcare

**ONE**

The signal value is above the defined threshold.

**ZERO**

The signal value is below the defined threshold.

**DONTcare**

The signal state does not matter.

\*RST:                    DONTcare

**TRIGger:PATtern:STATe:COMBination** <ChCombination>

Sets the logical combination for all active channels. The required state of each channel is defined by [TRIGger:STATe:CHANnel<m>](#).

**Parameters:**

<ChCombination>    AND | OR  
                           \*RST:        AND

**TRIGger:PATtern:WIDTh:RANGe** <Condition>

Adds additional time limitation to the pattern defined by `TRIGger:PATtern:STATe[:CHANnel<m>]` and `TRIGger:PATtern:STATe:COMBination`.

**Parameters:**

<Condition>        ANY | TIMEout | LONGer | SHORter | EQUal | NEQual |  
                           WITHin | OUTSide

**ANY**

Triggers on all runts fulfilling the level condition, without time limitation.

Triggers if the signals match the pattern definition for a minimum time, which is specified by `TRIGger:PATtern:TIMEout[:TIME]`.

**LONGer | SHORter**

Triggers on pulses shorter or longer than a runt width that is defined by `TRIGger:RUNT:WIDTh`.

**EQUal | NEQual**

Triggers pulses with a width equal or unequal to a given width and an optional tolerance defined by `TRIGger:RUNT:WIDTh` and `Runt Width`

**WITHin | OUTSide**

Triggers on pulses inside or outside a given range. The range is defined by ..

\*RST:        LONGer

**TRIGger:PATtern:TIMEout[:TIME]** <Time>

Sets a minimum time during which the signals match the pattern definition defined by `TRIGger:PATtern:STATe[:CHANnel<m>]` and `TRIGger:PATtern:STATe:COMBination`.

The command is required if `TRIGger:PATtern:WIDTh:RANGe` is set to TIMEout.

**Parameters:**

<Time>            Range:        100E-12 to 10000  
                           Increment:  100E-9  
                           \*RST:        5E-9  
                           Default unit: s

**TRIGger:PATtern:WIDTh[:WIDTh]** <Duration>

Sets the width for comparison ranges LONGer, SHORter, EQUal and NEQual.



See [TRIGger:PATtern:WIDTh:RANGe](#) on page 303.

**Parameters:**

<Duration>                    Range:        800E-12 to 10000  
                                   Increment: 100E-9  
                                   \*RST:        5E-9  
                                   Default unit: s

**TRIGger:PATtern:WIDTh:DELTA** <Tolerance>

Sets a range  $\Delta t$  to the pattern width that is defined by [TRIGger:PATtern:WIDTh\[:WIDTh\]](#).

**Parameters:**

<Tolerance>                    Range:        0 to 5000  
                                   Increment: 500E-12  
                                   \*RST:        0  
                                   Default unit: s

**TRIGger:PATtern:WIDTh:MINWidth** <MinDuration>

Sets the lower time limit of the pattern match for range conditions WITHin and OUT-Side.

**Parameters:**

<MinDuration>                Range:        800E-12 to 10000  
                                   Increment: 100E-9  
                                   \*RST:        5E-9  
                                   Default unit: s

**TRIGger:PATtern:WIDTh:MAXWidth** <MaxDuration>

Sets the upper time limit of the pattern match for range conditions WITHin and OUT-Side.

**Parameters:**

<MaxDuration>                Range:        800E-12 to 10000  
                                   Increment: 100E-9  
                                   \*RST:        5E-9  
                                   Default unit: s

**14.3.5.8 State Trigger (R&S RTH-K19)**

See also [Chapter 2.5.8, "State Trigger \(R&S RTH-K19\)"](#), on page 61.

[TRIGger:STATe:CHANnel<m>](#)..... 305  
[TRIGger:STATe:COMBination](#).....305  
[TRIGger:STATe:CSOource\[:VALue\]](#)..... 305  
[TRIGger:STATe:CSOource:EDGE](#).....305

---

**TRIGger:STATe:CHANnel<m> <State>**

Sets the state of each input channel. The channel is specified by the channel suffix:

The logical combination of the channel states is defined by [TRIGger:STATe:COMBination](#).

**Suffix:**

<m>                    1..4: analog channel 1 to 4  
                         8..15: digital channels D0 to D7

**Parameters:**

<State>                ONE | ZERO | DONTcare

**ONE**

The signal value is above the defined threshold.

**ZERO**

The signal value is below the defined threshold.

**DONTcare**

The signal state does not matter.

\*RST:                DONTcare

---

**TRIGger:STATe:COMBination <ChCombination>**

Sets the logical combination for all active channels. The required state of each channel is defined by [TRIGger:PATtern:STATe\[:CHANnel<m>\]](#).

**Parameters:**

<ChCombination>    AND | OR

\*RST:                AND

---

**TRIGger:STATe:CSOource[:VALue] <Source>**

Sets the input channel of the clock signal.

**Parameters:**

<Source>             C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7

\*RST:                C1

---

**TRIGger:STATe:CSOource:EDGE <Slope>**

Sets the edge of the clock at which the instrument checks the signal states.

**Parameters:**

<Slope>              POSitive | NEGative | EITHER

\*RST:                POSitive

---

#### 14.3.5.9 Runt Trigger (R&S RTH-K19)

See also [Chapter 2.5.9, "Runt Trigger \(R&S RTH-K19\)"](#), on page 62.

TRIGger:LEVel<m>:RUNT:LOWer.....306  
 TRIGger:LEVel<m>:RUNT:UPPer..... 306  
 TRIGger:RUNT:POLarity..... 306  
 TRIGger:RUNT:RANGe.....306  
 TRIGger:RUNT:WIDTh.....307  
 TRIGger:RUNT:DELTa.....307  
 TRIGger:RUNT:MINWidth.....307  
 TRIGger:RUNT:MAXWidth.....308

**TRIGger:LEVel<m>:RUNT:LOWer <LowerLevel>**

**TRIGger:LEVel<m>:RUNT:UPPer <UpperLevel>**

Set the upper and lower levels that limit the runt.

**Suffix:**

<m> 1..4  
 Indicates the trigger source: analog channel 1 to 4

**Parameters:**

<LowerLevel> Range: -10 to 10  
 <UpperLevel> Increment: 1E-3  
 \*RST: 0  
 Default unit: V

**TRIGger:RUNT:POLarity <Polarity>**

Sets the pulse polarity, that is the direction of the first pulse slope. You can trigger on:

- Positive going pulses. The width is defined from the rising to the falling edge.
- Negative going pulses. The width is defined from the falling to the rising edge.
- Both positive and negative going pulses

**Parameters:**

<Polarity> POSitive | NEGative | EITHER  
 \*RST: POSitive

**TRIGger:RUNT:RANGe <Condition>**

Defines an additional time limit of the runt pulse.

**Parameters:**

<Condition>	ANY   LONGer   SHORter   EQUal   NEQual   WITHin   OUTSide
	<b>ANY</b> Triggers on all runts fulfilling the level condition, without time limitation.
	<b>LONGer   SHORter</b> Defines a minimum time during which the signals match the pattern definition. The minimum time is defined by
	<b>EQUal   NEQual</b> Triggers on pulses equal or not equal a given runt width that is set using <code>TRIGger:RUNT:WIDTH</code> . In addition, a tolerance can be set around the specified width using <code>TRIGger:RUNT:DELTA</code> .
	<b>WITHin   OUTSide</b> Triggers on pulses inside or outside a given range. The range is set using ... and ....
	*RST: LONGer

**TRIGger:RUNT:WIDTH** <Duration>

Sets the width for comparison ranges EQUal, UNEQual, SHORter, and LONGer.

See `TRIGger:WIDTH:RANGE`.

**Parameters:**

<Duration>	Range: 800E-12 to 10000
	Increment: 100E-9
	*RST: 5E-9
	Default unit: s

**TRIGger:RUNT:DELTA** <Tolerance>

Sets a range  $\Delta t$  to the specified width, which is defined using `TRIGger:RUNT:WIDTH`.

**Parameters:**

<Tolerance>	Range: 0 to 5000
	Increment: 500E-12
	*RST: 0
	Default unit: s

**TRIGger:RUNT:MINWidth** <MinDuration>

Sets the lower time limit of the runt for comparisons WITHin and OUTSide.

**Parameters:**

<MinDuration>	Range: 800E-12 to 10000
	Increment: 100E-9
	*RST: 5E-9
	Default unit: s

**TRIGger:RUNT:MAXWidth** <MaxDuration>

Sets the upper time limit of the runt for comparisons WITHin and OUTSide.

**Parameters:**

<MaxDuration>      Range:      800E-12 to 10000  
                          Increment: 100E-9  
                          \*RST:      5E-9  
                          Default unit: s

**14.3.5.10 Slew Rate Trigger (R&S RTH-K19)**

See also [Chapter 2.5.10, "Slew Rate Trigger \(R&S RTH-K19\)"](#), on page 64.

TRIGger:LEVel<m>:SLEW:LOWer.....	308
TRIGger:LEVel<m>:SLEW:UPPer.....	308
TRIGger:SLEW:SLOPe.....	308
TRIGger:SLEW:RANGe.....	308
TRIGger:SLEW:RATE.....	309
TRIGger:SLEW:DELTA.....	309
TRIGger:SLEW:MINWidth.....	309
TRIGger:SLEW:MAXWidth.....	310

**TRIGger:LEVel<m>:SLEW:LOWer** <Level>**TRIGger:LEVel<m>:SLEW:UPPer** <Level>

Set the upper and lower voltage thresholds, respectively. The time measurement starts when the signal crosses the first trigger level - the upper or lower level depending on the selected slope - and stops when the signal crosses the second level.

**Suffix:**

<m>                      1..4  
                          Indicates the trigger source: analog channel 1 to 4

**Parameters:**

<Level>                Range:      -10 to 10  
                          Increment: 1E-3  
                          \*RST:      0  
                          Default unit: V

**TRIGger:SLEW:SLOPe** <Slope>

Sets the edge direction for the trigger.

**Parameters:**

<Slope>                POSitive | NEGative | EITHer  
                          \*RST:      POSitive

**TRIGger:SLEW:RANGe** <Condition>

Defines the time limits of the slew rate.

**Parameters:**

<Condition> LONGer | SHORter | EQUal | NEQual | WITHin | OUTSide

**LONGer | SHORter**  
Triggers on pulses shorter or longer than a runt width that is set using [TRIGger:SLEW:RATE](#).

**EQUal | NEQual**  
Triggers on pulses equal or not equal a given runt width that is set using [TRIGger:SLEW:RATE](#). In addition, a tolerance can be set around the specified width using [TRIGger:RUNT:DELTA](#).

**WITHin | OUTSide**  
Triggers on pulses inside or outside a given range. The range is set using ... and ....

\*RST: LONGer

---

**TRIGger:SLEW:RATE** <Duration>

Sets the slew rate for comparison ranges EQUal, UNEQual, SHORter, and LONGer.

See [TRIGger:SLEW:RANGe](#).

**Parameters:**

<Duration> Range: 800E-12 to 10000  
Increment: 100E-9  
\*RST: 5E-9  
Default unit: s

---

**TRIGger:SLEW:DELTA** <Tolerance>

Sets a range  $\Delta t$  to the specified slew rate, which is defined using [TRIGger:SLEW:RATE](#).

**Parameters:**

<Tolerance> Range: 0 to 5000  
Increment: 500E-12  
\*RST: 0  
Default unit: s

---

**TRIGger:SLEW:MINWidth** <MinDuration>

Sets the lower time limit of the transition time for comparisons WITHin and OUTSide.

**Parameters:**

<MinDuration> Range: 800E-12 to 10000  
Increment: 100E-9  
\*RST: 5E-9  
Default unit: s

**TRIGger:SLEW:MAXWidth** <MaxDuration>

Sets the upper time limit of the transition time for comparisons WITHin and OUTSide.

**Parameters:**

<MaxDuration>      Range:      800E-12 to 10000  
                          Increment: 100E-9  
                          \*RST:      5E-9  
                          Default unit: s

**14.3.5.11 Data2Clock Trigger (R&S RTH-K19)**

See also [Chapter 2.5.11, "Data2Clock Trigger \(R&S RTH-K19\)"](#), on page 65.

TRIGger:DATatoclock:DSOURCE[:VALue].....	310
TRIGger:DATatoclock:CSOURCE[:VALue].....	310
TRIGger:DATatoclock:CSOURCE:EDGE.....	310
TRIGger:DATatoclock:CONDition.....	310
TRIGger:DATatoclock:HTIME.....	311
TRIGger:DATatoclock:STIME.....	311

**TRIGger:DATatoclock:DSOURCE[:VALue]** <Source>

Selects the input channel of the data signal.

**Parameters:**

<Source>              C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
                          \*RST:      C1

**TRIGger:DATatoclock:CSOURCE[:VALue]** <Source>

Selects the input channel of the clock signal.

**Parameters:**

<Source>              C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
                          \*RST:      C1

**TRIGger:DATatoclock:CSOURCE:EDGE** <Slope>

Sets the edge of the clock signal: rising (POSitive), falling (NEGative), or both edges (EITHer). The time reference point for the setup and hold time is the crossing point of the clock edge and the trigger level.

**Parameters:**

<Slope>              POSitive | NEGative | EITHer  
                          \*RST:      POSitive

**TRIGger:DATatoclock:CONDition** <TrigCondition>

Selects how a violation of the setup and hold time is handled.

**Parameters:**

<TrigCondition> VIOLation | OK  
**VIOLation**  
 Triggers on a violation of the setup or hold time  
**OK**  
 Triggers if setup and hold time keep the limits.  
 \*RST: VIOLation

**TRIGger:DATatoclock:HTIME** <HoldTime>

Sets the minimum time after the clock edge while the data signal must stay steady.  
 The hold time can be negative. In this case, the setup time has to be positive. The setup time is defined by [TRIGger:DATatoclock:STIME](#).

**Parameters:**

<HoldTime> Range: -124E-9 to 124E-9  
 Increment: 1E-9  
 \*RST: 1E-9  
 Default unit: s

**TRIGger:DATatoclock:STIME** <SetupTime>

Sets the minimum time before the clock edge while the data signal must stay steady.  
 The setup time can be negative. In this case, the hold time has to be positive. The setup time is defined by [TRIGger:DATatoclock:HTIME](#).

**Parameters:**

<SetupTime> Range: -124E-9 to 124E-9  
 Increment: 1E-9  
 \*RST: 1E-9  
 Default unit: s

**14.3.5.12 Serial Pattern Trigger (R&S RTH-K19)**

[TRIGger:SPATtern:DSource\[:VALue\]](#)..... 311  
[TRIGger:SPATtern:CSource\[:VALue\]](#)..... 312  
[TRIGger:SPATtern:CSource:EDGE](#).....312  
[TRIGger:SPATtern:CSource:FIRStedge](#)..... 312  
[TRIGger:SPATtern:ORDer](#).....312  
[TRIGger:SPATtern:PATtern](#)..... 312

**TRIGger:SPATtern:DSource[:VALue]** <Source>

Selects the input channel of the data signal.

**Parameters:**

<Source> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 \*RST: C1



---

**TRIGger:SPATtern:CSource[:VALue] <Source>**

Sets the input channel of the clock signal.

**Parameters:**

<Source> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
\*RST: C1

---

**TRIGger:SPATtern:CSource:EDGE <Slope>**

Sets the edge at which the data value is sampled.

**Parameters:**

<Slope> POSitive | NEGative | EITHer  
**POSitive**  
Rising edge  
**NEGative**  
Falling edge  
**EITHer**  
Rising and falling edges are considered (double data rate).  
At double data rate, the edge at which the first bit of the pattern is sampled is defined by [TRIGger:SPATtern:CSource:FIRStedge](#).  
\*RST: POSitive

---

**TRIGger:SPATtern:CSource:FIRStedge <FirstClockEdge>**

Sets the edge at which the first bit of the pattern is sampled.

The command is required if [TRIGger:SPATtern:CSource:EDGE](#) is set to `Either` (double data rate).

**Parameters:**

<FirstClockEdge> POSitive | NEGative | EITHer  
\*RST: POSitive

---

**TRIGger:SPATtern:ORDER <BitOrder>**

Defines if the data words start with MSBF (most significant bit first) or LSBF (least significant bit first).

**Parameters:**

<BitOrder> LSBF | MSBF  
\*RST: MSBF

---

**TRIGger:SPATtern:PATtern <Pattern>**

Defines the serial pattern to be triggered on.

**Parameters:**

<Pattern> String that contains the pattern in binary format. The parameter accepts the bit value X (don't care).

**Example:**

```
TRIGger:SPATtern:PATtern '11001100'
TRIGger:SPATtern:PATtern '110011XX'
```

**14.3.5.13 Timeout Trigger (R&S RTH-K19)**

TRIGger:TIMEout:RANGe..... 313  
 TRIGger:TIMEout:TIME..... 313

---

**TRIGger:TIMEout:RANGe <TimeoutMode>**

Selects the relation of the signal level to the trigger level, which is specified with `TRIGger:LEVel<m>:VALue`

**Parameters:**

<TimeoutMode> HIGH | LOW | EITHer  
 \*RST: HIGH

---

**TRIGger:TIMEout:TIME <Time>**

Sets the time limit for the timeout at which the instrument triggers.

**Parameters:**

<Time> Range: 100E-12 to 10000  
 Increment: 100E-9  
 \*RST: 5E-9  
 Default unit: s

**14.3.5.14 Interval Trigger (R&S RTH-K19)**

TRIGger:INTerval:SLOPe..... 313  
 TRIGger:INTerval:RANGe.....314  
 TRIGger:INTerval:WIDTh.....314  
 TRIGger:INTerval:DELTA.....314  
 TRIGger:INTerval:MINWidth.....314  
 TRIGger:INTerval:MAXWidth..... 315

---

**TRIGger:INTerval:SLOPe <Slope>**

Sets the edge direction for the trigger. You can analyze the interval between positive edges or between negative edges.

**Parameters:**

<Slope> POSitive | NEGative  
 \*RST: POSitive

**TRIGger:INTerval:RANGe** <Condition>

Defines how the time range of an interval is defined.

**Parameters:**

<Condition> LONGer | SHORter | EQUal | NEQual | WITHin | OUTSide

**LONGer | SHORter**

Triggers on intervals shorter or longer than an interval that is set using `TRIGger:INTerval:WIDTh`.

**EQUal | NEQual**

Triggers on intervals equal or not equal a given interval width that is set using `TRIGger:INTerval:WIDTh`. In addition, a tolerance can be set around the specified width using `TRIGger:INTerval:DELTA`.

**WITHin | OUTSide**

Triggers on intervals inside or outside a given range. The range is set using ... and ....

\*RST: LONGer

**TRIGger:INTerval:WIDTh** <Duration>

Sets the time between two pulses for comparisons EQUal, UNEQual, SHORter, and LONGer.

**Parameters:**

<Duration> Range: 800E-12 to 10000  
Increment: 100E-9  
\*RST: 5E-9  
Default unit: s

**TRIGger:INTerval:DELTA** <Tolerance>

Sets a range  $\Delta t$  to the specified width, which is defined using `TRIGger:INTerval:WIDTh`. The command is relevant for comparisons EQUal and UNEQual.

**Parameters:**

<Tolerance> Range: 0 to 5000  
Increment: 500E-12  
\*RST: 0  
Default unit: s

**TRIGger:INTerval:MINWidth** <MinDuration>

Sets the lower time limit of the interval for comparisons WITHin and OUTSide.

**Parameters:**

<MinDuration>      Range:      800E-12 to 10000  
 Increment: 100E-9  
 \*RST:      5E-9  
 Default unit: s

**TRIGger:INTerval:MAXWidth <MaxDuration>**

Sets the upper time limit of the interval for comparisons WITHin and OUTSide.

**Parameters:**

<MaxDuration>      Range:      800E-12 to 10000  
 Increment: 100E-9  
 \*RST:      5E-9  
 Default unit: s

**14.3.5.15 Window Trigger (R&S RTH-K19)**

TRIGger:LEVel<m>:WINDow:LOWer..... 315  
 TRIGger:LEVel<m>:WINDow:UPPer..... 315  
 TRIGger:WINDow:TIME..... 315  
 TRIGger:WINDow:RANGe..... 316  
 TRIGger:WINDow:WIDTh..... 316  
 TRIGger:WINDow:DELTA..... 317  
 TRIGger:WINDow:MINWidth..... 317  
 TRIGger:WINDow:MAXWidth..... 317

**TRIGger:LEVel<m>:WINDow:LOWer <Level>**

**TRIGger:LEVel<m>:WINDow:UPPer <Level>**

Set the upper and lower voltage thresholds for the window trigger, respectively. The trigger levels are the vertical window limits.

**Suffix:**

<m>                      1..4  
 Indicates the trigger source: analog channel 1 to 4

**Parameters:**

<Level>                Range:      -10 to 10  
 Increment: 1E-3  
 \*RST:      0  
 Default unit: V

**TRIGger:WINDow:TIME <Condition>**

Selects how the time limit of the window is defined.

**Parameters:**

<Condition> LONGer | SHORter | EQUal | NEQual | WITHin | OUTSide

**LONGer | SHORter**  
Triggers if the signal crosses the upper or lower level after/before the time "Width" defined by `TRIGger:WINDow:WIDTh`

**EQUal | NEQual**  
Triggers if the signal stays inside or outside the vertical window limits for a time equal/unequal to "Width"  $\pm$ "Tolerance" defined by `TRIGger:WINDow:WIDTh` and `TRIGger:WINDow:DELTA`.

**WITHin**  
Triggers if the signal stays inside or outside the vertical window limits for a time  $\geq$ "Min Width" AND  $\leq$  "Max Width".

**OUTSide**  
Triggers if the signal stays inside or outside the vertical window limits for a time  $<$  "Min Width" OR  $>$  "Max Width".

\*RST: LONGer

**TRIGger:WINDow:RANGe** <LevelRangeMode>

Selects how the signal run is compared with the window:

**Parameters:**

<LevelRangeMode> ENTer | EXIT | WITHin | OUTSide

**ENTer | EXIT**  
Triggers when the signal crosses the upper or lower level and thus enters/leaves the window made up of these two levels which are defined by `TRIGger:LEVel<m>:WINDow:UPPer` and `TRIGger:LEVel<m>:WINDow:LOWer`

**WITHin | OUTSide**  
Triggers if the signal stays between/above the upper and lower level for a specified time. The time is defined by `TRIGger:WINDow:TIME`

\*RST: ENTer

**TRIGger:WINDow:WIDTh** <Duration>

Sets the width for comparison ranges LONGer, SHORter, EQUal, NEQual.

See `TRIGger:WINDow:TIME` on page 315.

**Parameters:**

<Duration> Range: 800E-12 to 10000  
Increment: 100E-9  
\*RST: 5E-9  
Default unit: s

**TRIGger:WINDow:DELTA** <Tolerance>

Sets a range  $\Delta t$  to the specified width, which is defined using [TRIGger:WINDow:WIDTh](#).

**Parameters:**

<Tolerance>            Range:     0 to 5000  
                           Increment: 500E-12  
                           \*RST:     0  
                           Default unit: s

**TRIGger:WINDow:MINWidth** <MinDuration>

Sets the lower time limit of the stay inside or outside the window (comparisons WITHin and OUTSide).

**Parameters:**

<MinDuration>        Range:     800E-12 to 10000  
                           Increment: 100E-9  
                           \*RST:     5E-9  
                           Default unit: s

**TRIGger:WINDow:MAXWidth** <MaxDuration>

Sets the upper time limit of the stay inside or outside the window (comparisons WITHin and OUTSide).

**Parameters:**

<MaxDuration>        Range:     800E-12 to 10000  
                           Increment: 100E-9  
                           \*RST:     5E-9  
                           Default unit: s

## 14.4 Waveform Analysis

### 14.4.1 Zoom

See also [Chapter 3.1, "Zoom"](#), on page 74.

<a href="#">ZOOM:ENABle</a> .....	317
<a href="#">ZOOM:SCALe</a> .....	318
<a href="#">ZOOM:POSition</a> .....	318

**ZOOM:ENABle** <Enabled>

Enables or disables the zoom.

**Parameters:**

<Enabled> ON | OFF  
 \*RST: OFF

**ZOOM:SCALE** <Scale>

Sets the time scale of the zoomed waveform.

Depending on the recording time not all horizontal scales are available. This is due to the fact that, the zoom is always displaying a complete curve.

**Parameters:**

<Scale> Range: 1E-12 to 500  
 Increment: 1E-12  
 \*RST: 100E-9  
 Default unit: s

**ZOOM:POSition** <Position>

Sets the center position of the zoomed area in relation to the trigger point.

**Parameters:**

<Position> Range: -500 to 500  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: s

## 14.4.2 Automatic Measurements

In remote commands for automatic measurements, the suffix <m> defines the measurement index. You can perform up to four different measurements simultaneously.

- [Measurement Settings](#)..... 318
- [Measurement Results](#)..... 320

### 14.4.2.1 Measurement Settings

<a href="#">MEASurement&lt;m&gt;:ENABLE</a> .....	318
<a href="#">MEASurement&lt;m&gt;:SOURce</a> .....	319
<a href="#">MEASurement&lt;m&gt;:TYPE</a> .....	319
<a href="#">MEASurement&lt;m&gt;:AOFF</a> .....	320
<a href="#">MEASurement&lt;m&gt;:DELay:SLOPe</a> .....	320

**MEASurement<m>:ENABLE** <State>

Enables or disables the measurement.

**Suffix:**

<m> 1..4

**Parameters:**

<State> ON | OFF  
 \*RST: OFF

**MEASurement<m>:SOURce** <Source>, [<Source2>]

Defines the waveform to be measured. For delay, phase, and power measurements, 2 sources are required.

The sources can be any active input signal, math or reference waveform. Available source waveforms depend on the measurement type, see [Chapter 3.2.3, "Measurement Types"](#), on page 77.

**Suffix:**

<m> 1..4

**Parameters:**

<Source> C1 | C2 | C3 | C4 | M1 | R | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 <Source2> C1 | C2 | C3 | C4 | M1 | R | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7

**MEASurement<m>:TYPE** <Type>

Selects the measurement type. For a detailed description, see [Chapter 3.2.3, "Measurement Types"](#), on page 77.

**Suffix:**

<m> 1..4

**Parameters:**

<Type> PERiod | FREQuency | RTIME | FTIME | PPULse | NPULse | PDCYcle | NDCYcle | DELay | PHASe | MEAN | RMS | CREST | STDDev | MINimum | MAXimum | PKPK | BASelevel | TOPLevel | AMPLitude | OVRShoot | PREShoot | AC | DC | ACDC | PPCount | NPCount | RECount | FECount | PWRP | PWRS | PWRQ | PWRFactor  
 \*RST: MINimum

RTIME	Rise time	PREShoot	Preshoot
FTIME	Fall time	PPCount	Positive pulse count
PPULse	Positive pulse width	NPCount	Negative pulse count
NPULse	Negative pulse width	RECount	Rising edge count
PDCYcle	Positive duty cycle	FECount	Falling edge count
NDCYcle	Negative duty cycle	PWRP	Active power
STDDev	Standard deviation	PWRS	Apparent power
PKPK	Peak to peak	PWRQ	Reactive power
OVRShoot	Overshoot	PWRFactor	Power factor



---

**MEASurement<m>:AOFF**

Disables all active measurements.

**Suffix:**

<m> 1..4  
The suffix is irrelevant.

**Usage:** Event

---

**MEASurement<m>:DELay:SLOPe <Slope>**

Sets the slope for the delay measurement type.

**Suffix:**

<m> 1..4

**Parameters:**

<Slope> POSitive | NEGative | EITHer

**POSitive**

Delay between the first rising edge of each source waveform.

**NEGative**

Delay between the first falling edge of each source waveform.

**EITHer**

Delay between the first edge of each source waveform, no matter if it is rising or falling.

\*RST: POSitive

#### 14.4.2.2 Measurement Results

---

**MEASurement<m>:RESult:ACTual?**

Returns the result of the indicated measurement.

**Suffix:**

<m> 1..4

**Return values:**

<Result> Range: -100E+24 to 100E+24  
Increment: 100E-12  
\*RST: 0

**Usage:** Query only

---

**MEASurement<m>:RESult:LIMit?**

Indicates whether the measurement results are inside the measurement range, or outside (clipping).

**Suffix:**

<m> 1..4

**Return values:**

<ResultLimit>      INSide | OVERflow | UNDeRflow | OVUNflow  
 \*RST:              INSide

**Usage:**              Query only

### 14.4.3 Cursor Measurements

The following commands are required for common R&S RTH cursor measurements. Special commands are available for Spectrum mode, see [Chapter 14.6.2.2, "Cursor Measurements in Spectrum Mode"](#), on page 342.

- [Cursor Settings](#)..... 321
- [Cursor Measurement Results](#)..... 323

#### 14.4.3.1 Cursor Settings

<a href="#">CURSor:STATe</a> .....	321
<a href="#">CURSor:FUNcTion</a> .....	321
<a href="#">CURSor:SOURce</a> .....	321
<a href="#">CURSor:COUPling</a> .....	322
<a href="#">CURSor:SCPLing</a> .....	322
<a href="#">CURSor:SCReen</a> .....	322
<a href="#">CURSor:MEASurement&lt;m&gt;:TYPE</a> .....	322

---

**CURSor:STATe** <State>

Enables or disables the cursor measurement.

**Parameters:**

<State>              ON | OFF  
 \*RST:              OFF

---

**CURSor:FUNcTion** <Type>

Defines the type of the cursor measurement.

**Parameters:**

<Type>              VERTical | HORizontal | TRACking | MEASure  
 See [Chapter 3.3.2, "Cursor Types and Results"](#), on page 83.  
 \*RST:              VERTical

---

**CURSor:SOURce** <Source>

Defines the source on which the cursor measurement is performed. The source setting is not relevant for the vertical cursor type.

**Parameters:**

<Source> C1 | C2 | C3 | C4 | M1 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 \*RST: C1

**CURSor:COUPLing** <Coupling>

Couples the cursor lines so that the distance between the two lines remains the same if one cursor is moved.

**Parameters:**

<Coupling> ON | OFF  
 \*RST: OFF

**CURSor:SCPLing** <ScaleCoupling>

If ON, the position of the cursor lines is adjusted if the vertical or horizontal scales are changed. If OFF, the cursor lines remain on their position on the display if the scaling is changed.

**Parameters:**

<ScaleCoupling> ON | OFF  
 \*RST: OFF

**CURSor:SCReen**

Sets the cursors to a default position on the screen.

**Usage:** Event

**CURSor:MEASurement<m>:TYPE** <Type>

Sets the automatic measurements to be performed on the source waveform between the cursor lines. The setting is only available if [CURSor:FUNction](#) is set to [MEASure](#).

**Suffix:**

<m> 1..2  
 Defines the measurement index. Two simultaneous cursor measurements can be performed.

**Parameters:**

<Type> PERiod | FREQuency | RTIME | FTIME | PPULse | NPULse |  
 PDCYcle | NDCYcle | MEAN | RMS | CREST | STDDev |  
 MINimum | MAXimum | PKPK | BASelevel | TOPLevel |  
 AMPLitude | OVRShoot | PREShoot | AC | DC | ACDC |  
 PPCount | NPCount | RECount | FECount  
 See [MEASurement<m>:TYPE](#) on page 319.  
 \*RST: MINimum

### 14.4.3.2 Cursor Measurement Results

CURSor:TDELta?	323
CURSor:ITDelta?	323
CURSor:X1Position	323
CURSor:X2Position	323
CURSor:DELTA?	323
CURSor:Y1Position	324
CURSor:Y2Position	324
CURSor:Y1AMplitude?	324
CURSor:Y2AMplitude?	324
CURSor:MEASurement<m>:RESult:ACTual?	324
CURSor:MEASurement<m>:RESult:LIMit?	324

---

#### CURSor:TDELta?

Returns the time difference  $\Delta$  between to vertical cursor lines.

##### Return values:

<ResultDeltaT>      Range:      -100E+24 to 100E+24  
                              \*RST:        0

**Usage:**                Query only

---

#### CURSor:ITDelta?

Returns the inverse value of time difference between to vertical cursor lines  $1/\Delta$ .

##### Return values:

<ResultDeltaTInv>    Range:      -100E+24 to 100E+24  
                              Increment: 0  
                              \*RST:        0

**Usage:**                Query only

---

#### CURSor:X1Position <UserX1>

#### CURSor:X2Position <UserX2>

Set the horizontal positions t1 and t2 (time) of the vertical cursor lines.

##### Parameters:

<UserX1>, <UserX2> Range:      -100E+24 to 100E+24  
                              Increment: 100E-12  
                              \*RST:        0  
                              Default unit: s

---

#### CURSor:DELTA?

Returns the absolute value of the difference between the positions of horizontal cursor lines  $\Delta y$ .

**Return values:**

<ResultDelta> Range: -100E+24 to 100E+24  
 \*RST: 0

**Usage:** Query only

**CURSor:Y1Position <UserY1>****CURSor:Y2Position <UserY2>**

Set the vertical positions y1 and y2 of the horizontal cursor lines.

**Parameters:**

<UserY1>, <UserY2> Range: -100E+24 to 100E+24  
 Increment: 100E-6  
 \*RST: 0  
 Default unit: V

**CURSor:Y1AMplitude?****CURSor:Y2AMplitude?**

Return the vertical values of the crossing points between the tracking cursors and the source waveform.

**Return values:**

<ResultAmplitude1> Range: -100E+24 to 100E+24  
 <ResultAmplitude2> \*RST: 0

**Usage:** Query only

**CURSor:MEASurement<m>:RESult:ACTual?**

Returns the result of the indicated cursor measurement.

**Suffix:**

<m> 1..2  
 Defines the measurement index. Two simultaneous cursor measurements can be performed.

**Return values:**

<Result> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0

**Usage:** Query only

**CURSor:MEASurement<m>:RESult:LIMit?**

Indicates whether the measurement results are inside the measurement range, or outside (clipping).

**Suffix:**  
 <m> 1..2  
 Defines the measurement index. Two simultaneous cursor measurements can be performed.

**Return values:**  
 <ResultLimit> INSide | OVERflow | UNDErflow | OVUNflow  
 \*RST: INSide

**Usage:** Query only

### 14.4.4 Math Waveforms

#### 14.4.4.1 Math Settings

CALCulate:MATH:STATe.....325  
 CALCulate:MATH[:EXPRession][:DEFine]..... 325  
 CALCulate:MATH:VERTical:SCALE..... 326  
 CALCulate:MATH:VERTical:RANGe..... 326  
 CALCulate:MATH:VERTical:POSition..... 326

---

**CALCulate:MATH:STATe** <State>

Enables or disables the math channel.

**Parameters:**  
 <State> ON | OFF

**Usage:** SCPI confirmed

---

**CALCulate:MATH[:EXPRession][:DEFine]** <ExprDefinition>

Sets the operation to calculate a math waveform.

**Parameters:**  
 <ExprDefinition> String that defines the operation. x is the channel number of source 1, y the channel number of source 2.  
 Addition: 'Cx+Cy'  
 Subtraction: 'Cx-Cy'  
 Multiplication: 'Cx\*Cy'  
 Inverse: '-Cx'  
 Absolute value: 'Abs(Cx)'  
 Square: 'Pow(Cx)'

**Example:** CALC:MATH:EXPR:DEF 'C1-C2'  
 Subtracts the values of CH2 from the values of CH1.  
 CALC:MATH:EXPR:DEF 'Pow(C1)'  
 Squares the values of CH1.

**Usage:** SCPI confirmed

---

**CALCulate:MATH:VERTical:SCALE** <Scale>

Sets the vertical scale (vertical sensitivity) of the math waveform.

**Parameters:**

<Scale>                      Scale value, in V/div.

**Usage:**                      SCPI confirmed

---

**CALCulate:MATH:VERTical:RANGE** <Position>

Sets the voltage range across the 8 vertical divisions of the diagram. Use the command alternatively to [CALCulate:MATH:VERTical:SCALE](#).

**Parameters:**

<Position>                      Voltage value of the range

**Usage:**                      SCPI confirmed

---

**CALCulate:MATH:VERTical:POSition** <Position>

Moves the math waveform or down in the diagram.

**Parameters:**

<Position>                      Position value, given in divisions.

**Usage:**                      SCPI confirmed

---

## 14.4.5 Reference Waveforms

<a href="#">REFCurve:SOURce</a> .....	326
<a href="#">REFCurve:UPDate</a> .....	326
<a href="#">REFCurve:STATe</a> .....	327
<a href="#">REFCurve:POSition</a> .....	327
<a href="#">REFCurve:NAME</a> .....	327
<a href="#">REFCurve:SAVE</a> .....	327
<a href="#">REFCurve:OPEN</a> .....	327
<a href="#">REFCurve:DELeTe</a> .....	327

---

**REFCurve:SOURce** <Source>

Selects the waveform to be taken as reference waveform.

**Parameters:**

<Source>                      C1 | C2 | C3 | C4 | M1  
                                    \*RST:        C1

---

**REFCurve:UPDate**

Creates the reference waveform from the source waveform.

**Usage:** Event

---

#### **REFCurve:STaTe** <State>

Activates or deactivates the reference waveform.

**Parameters:**

<State> ON | OFF

---

#### **REFCurve:POSition** <Position>

Sets the vertical position of the reference waveform.

**Parameters:**

<Position> Default unit: DIV

---

#### **REFCurve:NAME** <Name>

Defines the path, file name and file format of the reference waveform file.

The default path is C:/Users/<user>/Rohde-Schwarz/RTH/ReferenceCurves.

**Parameters:**

<Name> String

**Example:**

```
:REFCurve:NAME 'C:/Users/user1/Rohde-Schwarz/RTH/ReferenceCurves/reference00'
```

---

#### **REFCurve:SAVE**

Saves the reference waveform. The target file is specified using [REFCurve:NAME](#).

**Usage:** Event

---

#### **REFCurve:OPEN**

Loads a stored reference waveform from the specified file. The file is specified using [REFCurve:NAME](#).

**Usage:** Event

---

#### **REFCurve:DELeTe**

Deletes a stored reference waveform file. The file is specified using [REFCurve:NAME](#).

**Usage:** Event

### 14.4.6 History (Option R&S RTH-K15)

In `CHANnel:HISTory` commands, the channel suffix is irrelevant, omit it.



See also: [Chapter 3.7, "History \(Option R&S RTH-K15\)"](#), on page 93

CHANnel<m>:HISTory[:STATe].....	328
CHANnel<m>:HISTory:NSEGments.....	328
CHANnel<m>:HISTory:TPACq.....	328
ACQuire:AVAIlable?.....	329
CHANnel<m>:HISTory:START.....	329
CHANnel<m>:HISTory:STOP.....	329
CHANnel<m>:HISTory:CURRent.....	329
CHANnel<m>:HISTory:PLAY.....	330
CHANnel<m>:HISTory:REPLay.....	330
CHANnel<m>:HISTory:TSABsolute?.....	330
CHANnel<m>:HISTory:TSDate?.....	330
CHANnel<m>:HISTory:TSRRelative?.....	331

---

### CHANnel<m>:HISTory[:STATe] <State>

Enables or disables the history function.

#### Suffix:

<m>                      Suffix is irrelevant, omit it.

#### Parameters:

<State>                      ON | OFF  
                                  \*RST:        OFF

---

### CHANnel<m>:HISTory:NSEGments <Depth>

Sets the approximate number of waveforms to be stored.

See also ["Number of Segments"](#) on page 94.

#### Suffix:

<m>                      Suffix is irrelevant, omit it.

#### Parameters:

<Depth>                      LOW | MEDium | HIGH  
                                  \*RST:        LOW

---

### CHANnel<m>:HISTory:TPACq <PlayerSpeed>

Defines how fast the history player shows the stored waveforms.

#### Suffix:

<m>                      Suffix is irrelevant, omit it.

#### Parameters:

<PlayerSpeed>                      AUTO | SLOW | MEDium | FAST  
                                  \*RST:        AUTO

**ACQUIRE:AVAILABLE?**

Shows the number of segments that are stored in the history.

**Return values:**

<AvailableAcqs>      Range:      0 to 5000  
                                  Increment: 1  
                                  \*RST:      0

**Usage:**                      Query only

**CHANNEL<m>:HISTORY:START <StartAcqIdx>**

Sets the index of the first (older) history segment that you want to see in the history player. To query the number of available segments, use [ACQUIRE:AVAILABLE?](#)

**Suffix:**

<m>                              Suffix is irrelevant, omit it.

**Parameters:**

<StartAcqIdx>              Range:      -4999 to 0  
                                  Increment: 1  
                                  \*RST:      0

**CHANNEL<m>:HISTORY:STOP <StopAcqIdx>**

Sets the index of the last (newer) history segment that you want to see in the history player. To query the number of available segments, use [ACQUIRE:AVAILABLE?](#). The newest segment has always the index "0". Older segments have a negative index.

**Suffix:**

<m>                              Suffix is irrelevant, omit it.

**Parameters:**

<StopAcqIdx>              Range:      -4999 to 0  
                                  Increment: 1  
                                  \*RST:      0

**Example:**

```
CHANNEL:START -199
CHANNEL:STOP -100
```

The segments 101 (index -100) to 200 (index -199) in the history player.

**CHANNEL<m>:HISTORY:CURRENT <CurrAcqIdx>**

Accesses a particular segment in the memory to display it. The query returns the index of the segment that is shown.

To determine the number of stored segments, use [ACQUIRE:AVAILABLE?](#)

**Suffix:**

<m>                              Suffix is irrelevant, omit it.

**Parameters:**

<CurrAcqIdx> History index: the newest segment has the index "0", older segments have a negative index: -(n-1), .... -1 , 0  
n is the number of acquired segments.

Range: 0 to -(n-1)  
Increment: 1  
\*RST: 0

**CHANnel<m>:HISTory:PLAY**

Starts and stops the playback of the history segments.

**Suffix:**

<m> Suffix is irrelevant, omit it.

**Example:**

CHANnel:HISTory:PLAY; \*OPC

See also [Chapter B, "Command Sequence and Synchronization"](#), on page 498.

**Usage:**

Event  
Asynchronous command

**CHANnel<m>:HISTory:REPLay <AutoRepeat>**

If set to ON, the playback of the selected history segments repeats automatically.

**Suffix:**

<m> Suffix is irrelevant, omit it.

**Parameters:**

<AutoRepeat> ON | OFF  
\*RST: OFF

**CHANnel<m>:HISTory:TSABsolute?**

Returns the absolute daytime of the current segment ([CHANnel<m>:HISTory:CURRent](#)).

**Suffix:**

<m> Suffix is irrelevant, omit it.

**Return values:**

<TimeStampAbsTime>String containing the time and unit.

**Usage:**

Query only

**CHANnel<m>:HISTory:TSDate?**

Returns the date of the current segment ([CHANnel<m>:HISTory:CURRent](#)).

**Suffix:**

<m> Suffix is irrelevant, omit it.

**Return values:**

<TimeStampAbsData>String with date of the current acquisition (absolute time)

**Usage:** Query only

**CHANnel<m>:HISTory:TSRelative?**

Returns the relative time of the current segment - the time difference to the newest segment (index = 0).

See also [CHANnel<m>:HISTory:CURRent](#).

**Suffix:**

<m> Suffix is irrelevant, omit it.

**Return values:**

<TimeStampRel> String containing the relative time in seconds.

**Usage:** Query only

## 14.5 Mask Testing

### 14.5.1 Mask Definition

The suffix <m> selects the mask channel for which the command is executed. The number of channels depends on the instrument type. The R&S RTH1004 has 5 mask channels, the suffix values are 1 | 2 | 3 | 4 | 5. The R&S RTH1002 has 3 mask channels, the suffix values are 1 | 2 | 5. Suffix 5 is used for the mask on a math waveform.

<a href="#">MASK:CHANnel&lt;m&gt;:STATe</a> .....	331
<a href="#">MASK:CHANnel&lt;m&gt;:PROPerties:XWIDth</a> .....	331
<a href="#">MASK:CHANnel&lt;m&gt;:PROPerties:YWIDth</a> .....	332
<a href="#">MASK:CHANnel&lt;m&gt;:CREatemask</a> .....	332

**MASK:CHANnel<m>:STATe <State>**

Turns the selected mask on or off.

**Suffix:**

<m> 1|2|5 (RTH1002) , 1..5 (RTH1004)

**Parameters:**

<State> ON | OFF  
\*RST: OFF

**MASK:CHANnel<m>:PROPerties:XWIDth <WidthX>**

Changes the width of the selected mask in horizontal direction.

**Suffix:**

<m> 1|2|5 (RTH1002) , 1..5 (RTH1004)

**Parameters:**

<WidthX> Range: 0 to 10  
 Increment: 0.01  
 \*RST: 0.05  
 Default unit: div

**MASK:CHANnel<m>:PROPerties:YWIDTH <WidthY>**

Changes the width of the selected mask in vertical direction.

**Suffix:**

<m> 1|2|5 (RTH1002) , 1..5 (RTH1004)

**Parameters:**

<WidthY> Range: 0 to 8  
 Increment: 0.01  
 \*RST: 0.1  
 Default unit: div

**MASK:CHANnel<m>:CREatemask**

Creates a mask from the envelope waveform of the selected waveform with the defined width in x and y direction.

**Suffix:**

<m> 1|2|5 (RTH1002) , 1..5 (RTH1004)

**Usage:**

Event

**14.5.2 Mask Test**

MASK:ONViolation[:SElection].....	332
MASK:RST.....	333
MASK[:TESTstate]?	333
MASK:CHANnel<m>:RESult:FAIL:PERCentage?	333
MASK:CHANnel<m>:RESult:FAIL[:COUNt]?	333
MASK:CHANnel<m>:RESult:PASS:PERCentage?	334
MASK:CHANnel<m>:RESult:PASS[:COUNt]?	334
MASK:CHANnel<m>:RESult:TOTL[:COUNt]?	334
MASK:ELAPsedtime:TOTal?	334
MASK:ELAPsedtime[:SECS]?	335

**MASK:ONViolation[:SElection] <SelectedActions>**

Defines the action to be executed if a violation occurs.

**Parameters:**

<SelectedActions> NONE | STOP | BEEP | BPSTop  
 \*RST: NONE

**MASK:RST**

Sets the counters of passed and failed acquisitions to Zero.

**Usage:** Event

**MASK[:TESTstate]?**

Returns the state of the mask test.

**Return values:**

<TestState> NOMask | IDLE | RUNNing

**NOMask**

No mask is active and no testing possible.

**IDLE**

Mask test has been stopped or not yet started.

**RUNNing**

Test ist running.

\*RST: NOMask

**Usage:** Query only

**MASK:CHANnel<m>:RESult:FAIL:PERCentage?**

Returns the percentage share of failed acquisitions.

**Suffix:**

<m> 1|2|5 (RTH1002) , 1..5 (RTH1004)

**Return values:**

<ResultFailed> Range: 0 to 100  
 Increment: 0.1  
 \*RST: 0  
 Default unit: %

**Usage:** Query only

**MASK:CHANnel<m>:RESult:FAIL[:COUNT]?**

Returns the number of failed acquisitions.

**Suffix:**

<m> 1|2|5 (RTH1002) , 1..5 (RTH1004)

**Return values:**

<ResultFailed>      Range:     0 to 0  
                          Increment:  1  
                          \*RST:     0

**Usage:**                Query only

**MASK:CHANnel<m>:RESult:PASS:PERcentage?**

Returns the percentage share of passed acquisitions.

**Suffix:**

<m>                      1|2|5 (RTH1002) , 1..5 (RTH1004)

**Return values:**

<PassedPercentage> Range:     0 to 100  
                          Increment:  0.1  
                          \*RST:     0  
                          Default unit: %

**Usage:**                Query only

**MASK:CHANnel<m>:RESult:PASS[:COUNT]?**

Returns the number of passed acquisitions.

**Suffix:**

<m>                      1|2|5 (RTH1002) , 1..5 (RTH1004)

**Return values:**

<ResultPassed>      Range:     0 to 0  
                          Increment:  1  
                          \*RST:     0

**Usage:**                Query only

**MASK:CHANnel<m>:RESult:TOTL[:COUNT]?**

Returns the number of tested acquisitions.

**Suffix:**

<m>                      1|2|5 (RTH1002) , 1..5 (RTH1004)

**Return values:**

<ResultTotal>        Range:     0 to 0  
                          Increment:  1  
                          \*RST:     0

**Usage:**                Query only

**MASK:ELAPsedtime:TOTal? <Day>, <Hour>, <Min>, <Sec>**

Returns the test duration.

**Query parameters:**

<Day>	Test time in days.
<Hour>	Test time in hours.
<Min>	Test time in minutes.
<Sec>	Test time in seconds.

**Return values:**

<ZSec>	Test time in deciseconds.
--------	---------------------------

**Usage:** Query only

**MASK:ELAPsedtime[:SECS]?**

Returns the test duration in seconds.

**Return values:**

<Sec>	Time in seconds
-------	-----------------

**Usage:** Query only

## 14.6 Spectrum Analysis

- [FFT Mode](#).....335
- [Spectrum Mode \(R&S RTH-K18\)](#).....338
- [Harmonic Mode \(R&S RTH-B34\)](#).....350

### 14.6.1 FFT Mode

To activate FFT mode, use `OP FFT` (see `OP [:MODE]` on page 282).

<a href="#">SPECTrum:SOURce</a> .....	335
<a href="#">SPECTrum:FREQuency:BANDwidth[:RESolution][:VALue]</a> .....	336
<a href="#">SPECTrum:FREQuency:CENTer</a> .....	336
<a href="#">SPECTrum:FREQuency:HORizontal:SCALe</a> .....	336
<a href="#">SPECTrum:FREQuency:MAGNitude:SCALe</a> .....	336
<a href="#">SPECTrum:FREQuency:SAMPle?</a> .....	337
<a href="#">SPECTrum:FREQuency:SPAN:MODE</a> .....	337
<a href="#">SPECTrum:FREQuency:SPAN[:VALue]</a> .....	337
<a href="#">SPECTrum:FREQuency:START</a> .....	337
<a href="#">SPECTrum:FREQuency:STOP</a> .....	338
<a href="#">SPECTrum:FREQuency:WINDow:FACTor?</a> .....	338
<a href="#">SPECTrum:FREQuency:WINDow:TYPE</a> .....	338

**SPECTrum:SOURce <Source>**

Selects the channel for which the captured data is analyzed in FFT mode.



**Parameters:**

<Source> C1 | C2 | C3 | C4  
 \*RST: C1

**SPECTrum:FREQUency:BANDwidth[:RESolution][:VALue]**

Queries or defines the used resolution bandwidth. The value depends on the [SPECTrum:FREQUency:SPAN:MODE](#) and [CHANnel<m>:BANDwidth](#) parameters.

In FFT mode, this command is query only.

**Parameters:**

<RBW> Range: 1 to 50E+9  
 Increment: 1E+6  
 \*RST: 500E+3  
 Default unit: Hz

**SPECTrum:FREQUency:CENTer <HorizCenter>**

Queries or defines the used center frequency. The value depends on the [SPECTrum:FREQUency:SPAN:MODE](#) and [CHANnel<m>:BANDwidth](#) parameters.

In FFT mode, this command is query-only.

**Parameters:**

<HorizCenter> Range: 500 to 500E+6  
 Increment: 10  
 \*RST: 250E+6  
 Default unit: Hz

**SPECTrum:FREQUency:HORIZontal:SCALE <Scaling>**

Defines the scaling method for the frequency (x-)axis of the spectrum display.

**Parameters:**

<Scaling> LINear | LOGarithmic  
 \*RST: LINear

**SPECTrum:FREQUency:MAGNitude:SCALE <MagnitudeUnit>**

Queries or defines the scale unit for the amplitude range (y-axis) in the spectrum display.

In FFT mode, this command is query-only.

**Parameters:**

<MagnitudeUnit> DBM | DBV | DBA  
 \*RST: DBM

**SPECTrum:FREQuency:SAMPlE?**

Queries the sample rate with which FFT analysis is performed. This command is only available in FFT mode.

**Return values:**

<FFTSmpFreq>      Range:      1 to 10E+9  
                          Increment: 10  
                          \*RST:        1  
                          Default unit: Hz

**Usage:**                      Query only

**SPECTrum:FREQuency:SPAN:MODE <Mode>**

Defines how many values are analyzed by a single FFT, and thus the frequency resolution.

**Parameters:**

<Mode>                      NARRow | MAX  
                                  **NARRow**  
                                  8k values analyzed per FFT; time scale ≥ 100 ms/div  
                                  **MAX**  
                                  64k values analyzed per FFT; time scale ≥ 1 us/div  
                                  \*RST:        MAX

**SPECTrum:FREQuency:SPAN[:VALue] <HorizontalSpan>**

Queries or defines the used span, that is: how many values are analyzed by a single FFT.

In FFT mode, this command is query-only.

**Parameters:**

<HorizontalSpan>      8E+6 | 64E+6  
                                  Range:        1000 to 500E+6  
                                  Increment: 10  
                                  \*RST:        500E+6  
                                  Default unit: Hz

**SPECTrum:FREQuency:STARt <HorizontalStart>**

Queries or defines the start frequency of the used span. The value depends on the [SPECTrum:FREQuency:SPAN:MODE](#) and [CHANnel<m>:BANDwidth](#) parameters.

In FFT mode, this command is query-only.

**Parameters:**

<HorizontalStart> Range: 0 to 499.999E+6  
 Increment: 10  
 \*RST: 0  
 Default unit: Hz

**SPECTrum:FREQUENCY:STOP** <HorizontalStop>

Queries or defines the stop frequency of the used span. The value depends on the [SPECTrum:FREQUENCY:SPAN:MODE](#) and [CHANnel<m>:BANDwidth](#) parameters.

In FFT mode, this command is query-only.

**Parameters:**

<HorizontalStop> Range: 1000 to 500E+6  
 Increment: 10  
 \*RST: 500E+6  
 Default unit: Hz

**SPECTrum:FREQUENCY:WINDOW:FACTOR?**

Queries the window factor used for FFT analysis.

**Return values:**

<WindowFactor> Range: 0.89 to 3.84  
 Increment: 0.1  
 \*RST: 1.44

**Usage:** Query only

**SPECTrum:FREQUENCY:WINDOW:TYPE** <WindowType>

Determines the window function used for FFT analysis. See [Table 5-1](#) for details.

**Parameters:**

<WindowType> RECTangular | FLATtop | HAMMING | HANN | BLACKman  
 \*RST: HANN

## 14.6.2 Spectrum Mode (R&S RTH-K18)

To activate Spectrum mode, use `OP SPEC` (see [OP\[:MODE\]](#) on page 282).

The commands described here are specific to the Spectrum mode and require the R&S RTH-K18 option to be installed.

In addition, the following commands from the FFT mode (integrated in the base unit) are also supported:

- [SPECTrum:SOURce](#) on page 335
- [SPECTrum:FREQUENCY:HORIZontal:SCALE](#) on page 336
- [SPECTrum:FREQUENCY:CENTER](#) on page 336

- `SPECTrum:FREQuency:SPAN[:VALue]` on page 337
- `SPECTrum:FREQuency:WINDow:TYPE` on page 338
- `SPECTrum:FREQuency:MAGNitude:SCALE` on page 336

**Commands specific to the Spectrum mode:**

- [Configuring the Measurement](#)..... 339
- [Cursor Measurements in Spectrum Mode](#)..... 342
- [Markers in Spectrum Mode](#)..... 345
- [Exporting Spectrum Analysis Results](#)..... 349

**14.6.2.1 Configuring the Measurement**

`SPECTrum:MODE?`..... 339

`SPECTrum:FREQuency:AVERAge:COUNT`..... 339

`SPECTrum:FREQuency:BANDwidth[:RESolution]:AUTO`..... 340

`SPECTrum:FREQuency:BANDwidth[:RESolution]:RATio`..... 340

`SPECTrum:FREQuency:FULLspan`..... 340

`SPECTrum:FREQuency:MAGNitude:REFerence[:VALue]`..... 340

`SPECTrum:FREQuency:POSition`..... 341

`SPECTrum:FREQuency:SCALE`..... 341

`SPECTrum:WAVEform:AVERAge[:ENABLE]`..... 341

`SPECTrum:WAVEform:MAXimum[:ENABLE]`..... 342

`SPECTrum:WAVEform:MINimum[:ENABLE]`..... 342

`SPECTrum:WAVEform:SPECTrum[:ENABLE]`..... 342

`SPECTrum:FREQuency:RESet`..... 342

**SPECTrum:MODE?**

Queries the most recently activated spectrum analysis mode.

**Return values:**

<Mode>                    FFT | SPECTrum  
 \*RST:                    FFT

**Usage:**                    Query only

**SPECTrum:FREQuency:AVERAge:COUNT <NoOfAvs>**

Defines the number of measurements to average for the average trace (see [SPECTrum:WAVEform:AVERAge\[:ENABLE\]](#) on page 341).

**Parameters:**

<NoOfAvs>                Range:        2 to 1024  
                               Increment:    2  
                               \*RST:        64

**SPECTrum:FREQuency:BANDwidth[:RESolution]:AUTO <State>**

If enabled, the optimal resolution bandwidth is determined automatically by the spectrum application according to the frequency span and selected window type.

If disabled, the RBW is set according to the ratio defined by `SPECTrum:FREQuency:BANDwidth[:RESolution]:RATio` on page 340.

**Parameters:**

<State>                    ON | OFF  
\*RST:                    ON

**SPECTrum:FREQuency:BANDwidth[:RESolution]:RATio <RBWRatio>**

Determines the resolution of the spectrum, that is: the minimum distance between two distinguishable frequencies.

If you change the span, the RBW is automatically adjusted to the minimum or maximum allowed value, if necessary.

In FFT mode, this command is read-only.

**Parameters:**

<RBWRatio>                R10 | R20 | R50 | R100 | R200 | R500 | R1K  
**R10**  
Corresponds to the "RBW:Span Ratio" setting "1:10" in manual operation.  
**R1K**  
Corresponds to the "RBW:Span Ratio" setting "1:1000" in manual operation.  
\*RST:                    R200

**SPECTrum:FREQuency:FULLspan**

This command is only available in Spectrum mode. It sets the displayed frequency range to the entire measured span.

**Usage:**                    Event

**SPECTrum:FREQuency:MAGNitude:REFerence[:VALue] <RefLevel>**

Defines the expected maximum input signal level. Signal levels above this value may not be measured correctly. The reference level is also used as the maximum on the y-axis.

This command is only available in Spectrum mode.

**Parameters:**

<RefLevel>            Range:     -160 to 160  
                          Increment:  1  
                          \*RST:     0  
                          Default unit: dB

**SPECTrum:FREQuency:POSition** <Frequency>

Configures the position of the spectrum within the vertical diagram grid. Changing this value has the same effect as using the POS keys on the instrument.

Note that this command contains the keyword FREQuency for compatibility reasons. In effect, it changes the level position in the spectrum diagram.

**Parameters:**

<Frequency>            Defines the number of divisions in the vertical grid that the spectrum is moved up (positive value) or down (negative value).  
                          Range:     -4 to 4  
                          Increment: 0.5  
                          \*RST:     2  
                          Default unit: none

**SPECTrum:FREQuency:SCALE** <VerticalScale>

Configures the scale of the **y**-axis of the spectrum, which is indicated in the channel settings beneath the spectrum diagram. Changing this value has the same effect as using the RANGE keys on the instrument.

Note that this command contains the keyword FREQuency for compatibility reasons. In effect, it changes the level scaling in the spectrum diagram.

**Parameters:**

<VerticalScale>        Defines the level range displayed in one division of the vertical grid.  
                          Range:     0.5 to 40  
                          Increment: 0.1  
                          \*RST:     10  
                          Default unit: dB

**Usage:**                Asynchronous command

**SPECTrum:WAVEform:AVERage[:ENABLE]** <State>

Displays the averaged spectrum trace. The number of traces to average is defined using [SPECTrum:FREQuency:AVERage:COUNT](#) on page 339.

**Parameters:**

<State>                 ON | OFF  
                          \*RST:     OFF

**SPECTrum:WAVeform:MAXimum[:ENABLE] <State>**

Displays the "Max Hold" spectrum trace.

**Parameters:**

<State>                    ON | OFF  
 \*RST:                    OFF

**SPECTrum:WAVeform:MINimum[:ENABLE] <State>**

Displays the "Min Hold" spectrum trace.

**Parameters:**

<State>                    ON | OFF  
 \*RST:                    OFF

**SPECTrum:WAVeform:SPECTrum[:ENABLE] <State>**

Displays the clear/write spectrum trace.

**Parameters:**

<State>                    ON | OFF  
 \*RST:                    ON

**SPECTrum:FREQuency:RESet**

Clears the results for previous measurements used in statistical evaluation (see [SPECTrum:WAVeform:AVERage\[:ENABLE\]](#), [SPECTrum:WAVeform:MAXimum\[:ENABLE\]](#), [SPECTrum:WAVeform:MINimum\[:ENABLE\]](#) and [SPECTrum:FREQuency:AVERage:COUNT](#) on page 339).

**Usage:**                    Event

**14.6.2.2 Cursor Measurements in Spectrum Mode**

Special cursor commands are available for the Spectrum mode.

<a href="#">SPECTrum:CURSor&lt;m&gt;:STATe</a> .....	342
<a href="#">SPECTrum:CURSor&lt;m&gt;:SOURce</a> .....	343
<a href="#">SPECTrum:CURSor&lt;m&gt;:COUPLing</a> .....	343
<a href="#">SPECTrum:CURSor&lt;m&gt;:SCPLing</a> .....	343
<a href="#">SPECTrum:CURSor&lt;m&gt;:FREQuency[:VALue]</a> .....	344
<a href="#">SPECTrum:CURSor&lt;m&gt;:FREQuency:DELTA?</a> .....	344
<a href="#">SPECTrum:CURSor&lt;m&gt;:LEVel[:VALue]?</a> .....	344
<a href="#">SPECTrum:CURSor&lt;m&gt;:LEVel:DELTA?</a> .....	344
<a href="#">SPECTrum:CURSor&lt;m&gt;:SCReen</a> .....	345

**SPECTrum:CURSor<m>:STATe <State>**

Enables or disables the spectrum cursor measurement.

**Suffix:**

&lt;m&gt; 1..2

**Parameters:**<State> ON | OFF  
\*RST: OFF**SPECTrum:CURSor<m>:SOURce <TraceSource>**

Selects the trace on which the cursors are placed. Only active traces are available.

See:

- [SPECTrum:WAVEform:MAXimum\[:ENABLE\]](#) on page 342
- [SPECTrum:WAVEform:MINimum\[:ENABLE\]](#) on page 342
- [SPECTrum:WAVEform:SPECTrum\[:ENABLE\]](#) on page 342
- [SPECTrum:WAVEform:AVERAge\[:ENABLE\]](#) on page 341

**Suffix:**

&lt;m&gt; 1..2

**Parameters:**<TraceSource> SPECTrum | MAXimum | MINimum | AVERAge  
\*RST: SPECTrum**SPECTrum:CURSor<m>:COUPling <State>**

Couples the cursor lines so that the distance between the two lines remains the same if one cursor is moved.

**Suffix:**<m> 1..2  
irrelevant**Parameters:**<State> ON | OFF  
\*RST: OFF**SPECTrum:CURSor<m>:SCPLing <State>**

If enabled, the position of the cursor lines is adjusted if the vertical or horizontal scales are changed. The cursor lines keep their relative position to the waveform.

If disabled, the cursor lines remain on their position on the display if the scaling is changed.

**Suffix:**

&lt;m&gt; 1..2

**Parameters:**<State> ON | OFF  
\*RST: ON



---

**SPECTrum:CURSor<m>:FREQUency[:VALue] <Frequency>**

Queries the frequency at the specified cursor.

**Suffix:**

<m> 1..2

**Parameters:**

<Frequency> Range: 0 to 500E+6  
Increment: 10  
\*RST: 100E+6  
Default unit: Hz

---

**SPECTrum:CURSor<m>:FREQUency:DELTA?**

Queries the difference between the measured frequencies at both cursors.

**Suffix:**

<m> 1..2  
irrelevant

**Return values:**

<FrequencyDelta> Range: -500E+6 to 500E+6  
Increment: 10  
\*RST: 300E+6  
Default unit: Hz

**Usage:** Query only

---

**SPECTrum:CURSor<m>:LEVel[:VALue]?**

Queries the measured level at the specified cursor.

**Suffix:**

<m> 1..2

**Return values:**

<Level> Range: -260 to 260  
Increment: 1  
\*RST: 0  
Default unit: dB

**Usage:** Query only

---

**SPECTrum:CURSor<m>:LEVel:DELTA?**

Queries the difference in the measured levels for both cursors.

**Suffix:**

<m> 1..2  
irrelevant

**Return values:**

<LevelDelta>      Range:      -520 to 520  
                          Increment: 1  
                          \*RST:      0  
                          Default unit: dB

**Usage:**              Query only

**SPECTrum:CURSor<m>:SCReen**

Sets the cursors to a default position on the screen.

**Suffix:**

<m>                      1..2

**Usage:**              Event

**14.6.2.3 Markers in Spectrum Mode**

Special marker commands are available for the Spectrum mode.

SPECTrum:MARKer[:STATe].....	345
SPECTrum:MARKer:COUNT.....	345
SPECTrum:MARKer:SOURce.....	346
SPECTrum:MARKer:SETup:DISTance.....	346
SPECTrum:MARKer:SETup:EXCURsion.....	346
SPECTrum:MARKer:SETup:MLeVel.....	346
SPECTrum:MARKer:RCOunt?.....	347
SPECTrum:MARKer:RESult<m>:FREQuency[:VALue]?.....	347
SPECTrum:MARKer:RESult<m>:FREQuency:DELTA?.....	347
SPECTrum:MARKer:RESult<m>:LEVel[:VALue]?.....	348
SPECTrum:MARKer:RESult<m>:LEVel:DELTA?.....	348
SPECTrum:MARKer:RMARker:FREQuency?.....	348
SPECTrum:MARKer:RMARker:VALue?.....	349

**SPECTrum:MARKer[:STATe] <State>**

If enabled, a peak search is performed on the current spectrum results.

**Parameters:**

<State>                      ON | OFF  
                          \*RST:      OFF

**SPECTrum:MARKer:COUNT <NumberOfMarkers>**

Defines the number of markers used to indicate peaks in the spectrum results. With 3 active markers, the 3 peak values in the spectrum are indicated.

**Parameters:**

<NumberOfMarkers> Range: 1 to 15  
 Increment: 1  
 \*RST: 3

**SPECTrum:MARKer:SOURce** <TraceSource>

Determines the trace used for the peak search.

**Parameters:**

<TraceSource> SPECTrum | MAXimum | MINimum | AVERage  
 \*RST: SPECTrum

**SPECTrum:MARKer:SETup:DISTance** <Distance>

Defines a minimum distance between two frequencies that must be exceeded in order to detect individual peaks.

**Parameters:**

<Distance> Range: 0 to 500E+6  
 Increment: 10  
 \*RST: 1E+6  
 Default unit: Hz

**SPECTrum:MARKer:SETup:EXCursion** <Excursion>

Defines a relative threshold, the minimum level value by which the waveform must rise or fall to be considered a peak. To avoid identifying noise peaks, enter a peak excursion value that is higher than the noise levels.

See also "[Peak excursion](#)" on page 120.

**Parameters:**

<Excursion> Range: 0 to 260  
 Increment: 1  
 \*RST: 10  
 Default unit: dB

**SPECTrum:MARKer:SETup:MLEVEL** <Threshold>

Defines an absolute level threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

**Parameters:**

<Threshold> Range: -260 to 260  
 Increment: 1  
 \*RST: -40  
 Default unit: dB

---

**SPECTrum:MARKer:RCOunt?**

Queries the number of markers for which peaks were actually detected during the peak search. Note that the number of markers is restricted by the [SPECTrum:MARKer:COUnT](#) command.

**Return values:**

<NumberOfResults> Range: 0 to 15  
Increment: 1  
\*RST: 0

**Usage:** Query only

---

**SPECTrum:MARKer:RESult<m>:FREQUency[:VALue]?**

Queries the frequency of the specified marker.

**Suffix:**

<m> 1 to 15  
Number of the marker. The maximum number depends on how many markers were selected and how many peaks were detected (see [SPECTrum:MARKer:RCOunt?](#) on page 347).

**Return values:**

<Frequency> Range: -10E+9 to 10E+9  
Increment: 10  
\*RST: 10E+6  
Default unit: Hz

**Usage:** Query only

---

**SPECTrum:MARKer:RESult<m>:FREQUency:DELTA?**

Queries the frequency difference between the reference marker and the specified marker.

**Suffix:**

<m> 1 to 15  
Marker; maximum depends on active markers and detected peaks (see [SPECTrum:MARKer:COUnT](#) and [SPECTrum:MARKer:RCOunt?](#))

**Return values:**

<FrequencyDelta> Range: -10E+9 to 10E+9  
Increment: 10  
\*RST: 10E+6  
Default unit: Hz

**Usage:** Query only

**SPECTrum:MARKer:RESult<m>:LEVel[:VALue]?**

Queries the power level of the specified marker in relation to the reference marker (see [SPECTrum:MARKer:RMARker:VALue?](#) on page 349).

**Suffix:**

<m> 1 to 15  
Number of the marker. The maximum number depends on how many markers were selected and how many peaks were detected (see [SPECTrum:MARKer:RCOunt?](#) on page 347).

**Return values:**

<Level> Range: -260 to 260  
Increment: 1  
\*RST: 0  
Default unit: dB

**Usage:** Query only

**SPECTrum:MARKer:RESult<m>:LEVel:DELTA?**

Queries the level difference between the reference marker and the specified marker.

**Suffix:**

<m> 1 to 15  
Marker; maximum depends on active markers and detected peaks (see [SPECTrum:MARKer:COUnT](#) and [SPECTrum:MARKer:RCOunt?](#))

**Return values:**

<LevelDelta> Range: -520 to 520  
Increment: 1  
\*RST: 0  
Default unit: dB

**Usage:** Query only

**SPECTrum:MARKer:RMARker:FREQUency?**

Queries the frequency of the reference marker. The reference marker is the one with the highest level.

**Return values:**

<Frequency> Range: -10E+9 to 10E+9  
Increment: 10  
\*RST: 10E+6  
Default unit: Hz

**Usage:** Query only

**SPECTrum:MARKer:RMARker:VALue?**

Queries the measured level at the reference marker.

**Return values:**

<Level>                    Range:        -260 to 260  
                               Increment:    1  
                               \*RST:        0  
                               Default unit: dB

**Usage:**                    Query only

**14.6.2.4 Exporting Spectrum Analysis Results**

You can export the spectrum results to a file, similar to waveforms (see [Chapter 14.13](#), "Documenting Results", on page 473).

<a href="#">SPECTrum:EXPort:NAME</a> .....	349
<a href="#">SPECTrum:EXPort:SAVE</a> .....	349
<a href="#">SPECTrum:EXPort:INCXvalues</a> .....	349

**SPECTrum:EXPort:NAME <Name>**

Defines the file name, file format and path to save the spectrum measurement results.

**Parameters:**

<Name>                    String with path and file name with extension `.csv`.

**SPECTrum:EXPort:SAVE**

Saves the results of the spectrum measurement to the file specified using [SPECTrum:EXPort:NAME](#).

For a description of the file format see [Chapter 5.2.9](#), "Spectrum Results Export File Format", on page 125.

**Example:**

```
SPECTrum:EXPort:NAME 'SpectrumResults'
SPECTrum:EXPort:SAVE
SPECTrum:EXPort:NAME?
//Result: /media/SD/Rohde-Schwarz/RTH/Export/SpectrumResults.csv
```

**Usage:**                    Event

**SPECTrum:EXPort:INCXvalues <State>**

Includes the frequency values in the stored results.

**Parameters:**

<State>                    ON | OFF  
                               \*RST:        ON

### 14.6.3 Harmonic Mode (R&S RTH-B34)

To activate Harmonic mode, use `OP HARM` (see `OP [ :MODE]` on page 282).

The following commands are only available if the Harmonic Analysis option R&S RTH-B34 is installed.

- [Configuring Harmonic Measurements](#).....350
- [Retrieving and Exporting Harmonic Results](#)..... 354

#### 14.6.3.1 Configuring Harmonic Measurements

<a href="#">HARMonic:AVERage</a> .....	350
<a href="#">HARMonic:CLEar</a> .....	350
<a href="#">HARMonic:DISPlay:TYPE</a> .....	350
<a href="#">HARMonic:DISPlay:USER</a> .....	351
<a href="#">HARMonic:FUNDamental:CURRent?</a> .....	351
<a href="#">HARMonic:FUNDamental:TYPE</a> .....	351
<a href="#">HARMonic:FUNDamental:USER</a> .....	352
<a href="#">HARMonic:LIMits:CURRent?</a> .....	352
<a href="#">HARMonic:LIMits:LOAD</a> .....	352
<a href="#">HARMonic:LIMits:NAME</a> .....	353
<a href="#">HARMonic:LIMits:TYPE</a> .....	353
<a href="#">HARMonic:SCALE</a> .....	353
<a href="#">HARMonic:STATistic</a> .....	353
<a href="#">HARMonic:THDType</a> .....	354

---

#### **HARMonic:AVERage** <Average>

Determines the number of measurements for which the results are averaged. By default, no averaging is performed.

##### **Parameters:**

<Average>           OFF | AV2 | AV4 | AV8 | AV16 | AV32  
 \*RST:                OFF

---

#### **HARMonic:CLEar**

Clears the results for previous measurements used in statistical evaluation (see [HARMonic:AVERage](#) on page 350 and [HARMonic:STATistic](#) on page 353).

**Usage:**            Event

---

#### **HARMonic:DISPlay:TYPE** <Selection>

Determines the number of harmonics to be displayed in the bargraph.

Note that this setting only affects the graphical result display; it has no effect on the selection of harmonics for which results are provided during a file export (manually or via remote command). For that purpose, use [HARMonic:LIMits:TYPE](#) on page 353.

Harmonics that were previously eliminated by the `HARMonic:LIMits:TYPE` command cannot be displayed.

**Parameters:**

<Selection> ALL | EVEN | ODD | ODD3 | ODN3 | USER

**ODD3**

All harmonics with an odd-numbered order that is a multiple of 3

**ODN3**

All harmonics with an odd-numbered order that cannot be divided by 3

**USER**

Selects a user-defined number of harmonics. Define the number of harmonics using the `HARMonic:DISPlay:USER` command.

\*RST: ALL

**HARMonic:DISPlay:USER** <MaxHarmonics>

Determines the maximum number of harmonics to be displayed in the bargraph. This command requires a preceding `HARM:DISP:TYPE USER` command.

Note that this setting only affects the graphical result display; it has no effect on the selection of harmonics for which results are provided during a file export (manually or via remote command). For that purpose, use `HARMonic:LIMits:TYPE` on page 353.

Harmonics that are eliminated by the `HARMonic:LIMits:TYPE` command cannot be displayed.

**Parameters:**

<MaxHarmonics> Range: 1 to 64  
Increment: 1  
\*RST: 10

**Example:**

```
HARM:DISP:TYPE USER
HARM:DISP:USER 25
Displays the first 25 harmonics.
```

**HARMonic:FUNDamental:CURRENT?****Return values:**

<CurrFreq> Range: 10 to 1000  
Increment: 0.01  
\*RST: 50  
Default unit: Hz

**Usage:** Query only

**HARMonic:FUNDamental:TYPE** <Fundamental>

Defines the basis of the harmonics measurement. Harmonics are determined as multiples of this frequency.



**Parameters:**

<Fundamental> F50 | F60 | F400 | USER

**F50**  
50 Hz

**F60**  
60 Hz

**F400**  
400 Hz

**USER**  
User-defined frequency; define the frequency using [HARMonic:FUNDamental:USER](#)  
[FUNDamental:USER](#)

\*RST: F50

**Example:**

```
HARMonic:FUNDamental:TYPE USER
HARMonic:FUNDamental:USER 123
HARMonic:FUNDamental:CURRENT?
//Result: 123
```

**HARMonic:FUNDamental:USER <UserFrequency>**

Defines the user-defined fundamental frequency for [HARMonic:FUNDamental:TYPE USER](#):

**Parameters:**

<UserFrequency> Range: 10 to 1000  
Increment: 0.1  
\*RST: 50  
Default unit: Hz

**Example:**

```
HARMonic:FUNDamental:TYPE USER
HARMonic:FUNDamental:USER 123
HARMonic:FUNDamental:CURRENT?
//Result: 123
```

**HARMonic:LIMits:CURRENT?****Return values:**

<Current>

**Usage:** Query only

**HARMonic:LIMits:LOAD**

Loads the file selected by [HARMonic:LIMits:NAME](#) on page 353.

**Example:**

```
HARM:LIM:NAME
'/media/SD/Rohde-Schwarz/RTH/Harmonic/LimitExample.csv'
HARM:LIM:LOAD
```

**Usage:** Event

---

**HARMonic:LIMits:NAME** <FileName>**Parameters:**

<FileName> String containing the path and name of the user-defined configuration file to be loaded.

**Example:**

```
HARM:LIM:NAME
'/media/SD/Rohde-Schwarz/RTH/Harmonic/LimitExample.csv'
HARM:LIM:LOAD
```

---

**HARMonic:LIMits:TYPE** <Type>

Defines the type of limit check to be performed.

**Parameters:**

<Type> NONE | EN50160 | USER

**NONE**

No limit check is performed.

**EN50160**

Limits are checked according to the predefined values in the EN50160 standard.

**USER**

Limits are checked according to the values in a user-defined file (see [HARMonic:LIMits:LOAD](#) on page 352). For details on the required file format see [Chapter 5.3.6.1, "Limit File Format"](#), on page 135.

\*RST: NONE

---

**HARMonic:SCALe** <Unit>

Switches the scale for the measured harmonic levels between logarithmic (db) and linear (percent). The values are relative to the level measured for the fundamental frequency, or to the level measured for the entire signal, depending on the selected THD type (see [HARMonic:THDType](#) on page 354).

**Parameters:**

<Unit> PERCent | DB

\*RST: DB

---

**HARMonic:STATistic** <Type>

By default, the numeric results indicate the currently measured values. Optionally, you can switch to the minimum or maximum values.

**Parameters:**

<Type> CURRent | MIN | MAX

\*RST: CURRent

**HARMonic:THDType** <THDType>

**Parameters:**

<THDType> THDF | THDR

**THDF**

The RMS amplitude (voltage or current) of the harmonics relative to the RMS amplitude of the fundamental component

**THDR**

The RMS amplitude of the harmonics relative to the RMS amplitude of the input signal

\*RST: THDF

**14.6.3.2 Retrieving and Exporting Harmonic Results**

You can export the harmonic results to a file, similar to waveforms (see [Chapter 14.13](#), "Documenting Results", on page 473).

HARMonic:EXPort:NAME.....	354
HARMonic:EXPort:SAVE.....	355
HARMonic:RESult<m>:CLIPping?.....	355
HARMonic:RESult<m>:FRQMissing?.....	355
HARMonic:RESult<m>:FUNDamental?.....	356
HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MAXimum?.....	356
HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MINimum?.....	356
HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude[:CURRent]?.....	356
HARMonic:RESult<m>:HARMonics<n>:LIMCheck?.....	356
HARMonic:RESult<m>:HARMonics<n>:LIMit?.....	357
HARMonic:RESult<m>:HARMonics<n>:LIMViolation?.....	357
HARMonic:RESult<m>:HARMonics<n>:PHASe?.....	358
HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MAXimum?.....	359
HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MINimum?.....	359
HARMonic:RESult<m>:HARMonics<n>:RELMagnitude[:CURRent]?.....	359
HARMonic:RESult<m>:HARMonics<n>[:FREQUency]?.....	359
HARMonic:RESult<m>:LIMViolation?.....	359
HARMonic:RESult<m>:NOHarmonics?.....	360
HARMonic:RESult<m>:NOResults?.....	360
HARMonic:RESult<m>:RMS:MAXimum?.....	360
HARMonic:RESult<m>:RMS:MINimum?.....	360
HARMonic:RESult<m>:RMS[:CURRent]?.....	360
HARMonic:RESult<m>:THD:MAXimum?.....	361
HARMonic:RESult<m>:THD:MINimum?.....	361
HARMonic:RESult<m>:THD[:CURRent]?.....	361

**HARMonic:EXPort:NAME** <Name>

Defines the file name, file format and path to save the harmonic measurement results.

**Parameters:**

<Name> String with path and file name with extension `.csv`.

---

**HARMonic:EXPort:SAVE**

Saves the results of the harmonic measurement to the file specified using [HARMonic:EXPort:NAME](#).

**Example:**

```
HARMonic:EXPort:NAME 'HarmonicResults'
HARMonic:EXPort:SAVE
HARMonic:EXPort:NAME?
//Result: /media/SD/Rohde-Schwarz/RTH/Export/HarmonicResults.csv
```

**Usage:** Event

---

**HARMonic:RESult<m>:CLIPping?**

Indicates whether clipping has occurred, that is: the amplitudes exceed the currently defined amplitude range.

**Suffix:**  
<m> 1|2 (RTH1002) , 1..4 (RTH1004)  
Input channel

**Return values:**  
<State> ON | OFF

**ON**  
Clipping has occurred, increase the amplitude range (see [CHANnel<m>:RANGe](#) on page 284).

**OFF**  
No clipping has occurred, the current measurement settings are suitable.

\*RST: OFF

**Usage:** Query only

---

**HARMonic:RESult<m>:FRQMissing?**

Queries whether the fundamental frequency was detected in the input signal or not. If the specified frequency  $\pm 10\%$  is not detected in the signal, the measurement is invalid.

**Suffix:**  
<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**  
<State> ON | OFF

**OFF**  
The fundamental frequency was not detected, the measurement is invalid. Define the correct frequency of the input signal.

**ON**  
The fundamental frequency was detected, the measurement is valid.

\*RST: OFF

**Usage:** Query only

#### **HARMonic:RESult<m>:FUNDamental?**

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<Frequency> Range: 9 to 1005  
 Increment: 10E-6  
 \*RST: 0  
 Default unit: Hz

**Usage:** Query only

#### **HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MAXimum?**

#### **HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MINimum?**

#### **HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude[:CURRent]?**

Returns the currently measured, minimum or maximum power level of the selected harmonic.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

<n> 1..64  
 Order of harmonic (possibly restricted, see [HARMonic:RESult<m>:NOHarmonics?](#))

**Return values:**

<AbsMagnitude>

**Usage:** Query only

#### **HARMonic:RESult<m>:HARMonics<n>:LIMCheck?**

Queries whether a limit is defined for the specified harmonic (either by the EN50160 standard or by a user-defined configuration file). Only if a limit value is defined, a limit check is performed for the harmonic.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

<n> 1..64  
 Order of harmonic (possibly restricted, see [HARMonic:RESult<m>:NOHarmonics?](#))

**Return values:**

&lt;State&gt; ON | OFF

**ON**

A limit is specified and a limit check will be performed.

**OFF**

No limit is specified, so no limit check will be performed for the harmonic.

**Example:**

```
HARM:LIM:TYPE EN50160
HARM:RES1:HARM2:LIMC?
//Result: 1
HARM:RES1:HARM2:LIM?
//Result: 2%
HARM:RES1:HARM2:LIMV?
//Result: 0
```

**Usage:**

Query only

**HARMOinic:RESult<m>:HARMOinics<n>:LIMit?**

Queries the limit defined for the specified harmonic.

Note: Only if a limit value is defined, a limit check is performed for the harmonic (see [HARMOinic:RESult<m>:HARMOinics<n>:LIMCheck?](#) on page 356).

**Suffix:**

&lt;m&gt; 1|2 (RTH1002) , 1..4 (RTH1004)

&lt;n&gt; 1..64

Order of harmonic (possibly restricted, see [HARMOinic:RESult<m>:NOHarmonics?](#))**Return values:**

&lt;Limit&gt; percentage

**Example:**

```
HARM:LIM:TYPE EN50160
HARM:RES1:HARM2:LIMC?
//Result: 1
HARM:RES1:HARM2:LIM?
//Result: 2%
HARM:RES1:HARM2:LIMV?
//Result: 0
```

**Usage:**

Query only

**HARMOinic:RESult<m>:HARMOinics<n>:LIMViolation?**

Queries whether the calculated level for the specified harmonic exceeds the defined.

Note: Only if a limit value is defined, a limit check is performed for the harmonic (see [HARMOinic:RESult<m>:HARMOinics<n>:LIMCheck?](#) on page 356).

Tip: To query the result of the limit check for the entire signal, use [HARMonic:RESult<m>:LIMViolation?](#) on page 359.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

<n> 1..64  
Order of harmonic (possibly restricted, see [HARMonic:RESult<m>:NOHarmonics?](#))

**Return values:**

<State> ON | OFF

**ON**

A limit violation occurred - the limit was exceeded.

**OFF**

No limit violation occurred.

**Example:**

```
HARM:LIM:TYPE EN50160
HARM:RES1:HARM2:LIMC?
//Result: 1
//The EN50160 defines a limit of 2% for the
//second order harmonic.
HARM:RES1:HARM2:LIM?
//Result: 2
HARM:RES1:HARM2:LIMV?
//Result: 1
//The calculated value exceeds the defined
// limit for the second harmonic.
HARM:RES1:LIMV?
//Result: 1
//Since the limit check for the second harmonic
// failed, the limit check for the entire
// signal failed.
```

**Usage:** Query only

**HARMonic:RESult<m>:HARMonics<n>:PHASe?**

Queries the calculated phase value for the specified harmonic.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

<n> 1..64  
Order of harmonic (possibly restricted, see [HARMonic:RESult<m>:NOHarmonics?](#))

**Return values:**

<Phase> Default unit: degrees

**Usage:** Query only

**HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MAXimum?****HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MINimum?****HARMonic:RESult<m>:HARMonics<n>:RELMagnitude[:CURRent]?**

Returns the currently measured, minimum or maximum power level of the selected harmonic, relative to the power level of the fundamental frequency.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

<n> 1..64  
Order of harmonic (possibly restricted, see [HARMonic:RESult<m>:NOHarmonics?](#))

**Return values:**

<RelMagnitude> Default unit: %

**Usage:** Query only

**HARMonic:RESult<m>:HARMonics<n>[:FREQUENCY]?**

Queries the determined frequency value for the specified harmonic.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

<n> 1..64  
Order of harmonic (possibly restricted, see [HARMonic:RESult<m>:NOHarmonics?](#))

**Return values:**

<Frequency> Default unit: Hz

**Usage:** Query only

**HARMonic:RESult<m>:LIMViolation?**

Queries the result of the limit check for all harmonics. If a single harmonic violates its defined limit, the limit check for the entire signal fails.

Note: Only if a limit value is defined, a limit check is performed for the harmonic (see [HARMonic:RESult<m>:HARMonics<n>:LIMCheck?](#) on page 356).

Tip: To query the result of the limit check for an individual harmonic, use [HARMonic:RESult<m>:HARMonics<n>:LIMViolation?](#) on page 357.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)



**Return values:**

<State> ON | OFF

**ON**  
A limit violation occurred for at least one harmonic - the limit check for the signal failed.

**OFF**  
No limit violations occurred. The limit check was passed.

\*RST: OFF

**Usage:** Query only

**HARMonic:RESult<m>:NOHarmonics?**

Returns the number of harmonics for which results are displayed. The maximum number of 64 harmonics may be restricted due to the [HARMonic:LIMits:TYPE](#) command.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<NoSelection> Range: 1 to 64  
Increment: 1  
\*RST: 64

**Usage:** Query only

**HARMonic:RESult<m>:NOResults?**

Returns the number of results included in averaging or statistics calculations. Invalid measurements are not included.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<NoResults> Range: 0 to 4000000000  
Increment: 1  
\*RST: 0

**Usage:** Query only

**HARMonic:RESult<m>:RMS:MAXimum?****HARMonic:RESult<m>:RMS:MINimum?****HARMonic:RESult<m>:RMS[:CURRent]?**

Returns the currently calculated, minimum, or maximum root mean square of the power in the entire signal, that is: for all harmonics and the fundamental frequency.

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<RMS>                    Range:     0 to 100E+3  
                               Increment: 1E-12  
                               \*RST:     0

**Usage:**                    Query only

**HARMonic:RESult<m>:THD:MAXimum?**

**HARMonic:RESult<m>:THD:MINimum?**

**HARMonic:RESult<m>:THD[:CURRent]?**

Returns the currently calculated, minimum, or maximum THD (total harmonic distortion), that is: the RMS of the amplitude of the harmonics. Which value the THD is set in relation to depends on the [HARMonic:THDType](#) command.

**Suffix:**

<m>                            1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<THD>                        Range:     0 to 1000  
                               Increment: 0.1  
                               \*RST:     0  
                               Default unit: %

**Example:**

HARM:THDT THDF

HARM:RES1:THD?

Returns the RMS amplitude (voltage or current) of the harmonics relative to the RMS amplitude of the fundamental component.

**Usage:**                    Query only

## 14.7 Digital Multimeter (R&S RTH1002)

- [Activating the Multimeter mode](#).....361
- [Measurement Configuration](#).....362
- [Relative Measurements](#)..... 369
- [Measurement Control](#).....371
- [Results](#)..... 373

### 14.7.1 Activating the Multimeter mode

To activate the DMM, use `OP METer`.

**OP[:MODE] <OperationMode>**

Sets the operating mode of the instrument.

**Parameters:**

<OperationMode> YT | XY | MASK | ROLL | METer | FFT | LOGGer | COUNter |  
 PROTOcol | HARMonic | SPECtrum  
 \*RST: YT (scope mode)

**14.7.2 Measurement Configuration**

The instrument sets most configuration settings automatically. For most measurement types, the measurement range is the only parameter that can be set. For temperature measurements, specific settings are required.

The instrument can adjust the measurement range if autoranging is configured for a measurement. Otherwise, you can set a fixed measurement range.

To set a fixed measurement range, you can use several commands:

- `METer:CONFigure:<function>`  
 Configures the specified measurement including the measurement range.  
 See [Chapter 14.7.2.1, "METer:CONFigure Commands"](#), on page 362.
- `METer:SENSe:<function>:RANGe:UPPER`  
 Sets the measurement range and turns off autoranging.  
 See [Chapter 14.7.2.2, "METer:SENSe:<function>:RANGe:UPPER Commands"](#), on page 365.
- `METer:MEASure:<function>`  
 Configures the specified measurement including the measurement range, starts the measurement, and returns the result.

To enable autoranging, you can use the following commands:

- `METer:SENSe:<function>:RANGe:AUTO`  
 Enables or disables the autoranging. See [Chapter 14.7.2.3, "METer:SENSe:<function>:RANGe:AUTO Commands"](#), on page 367.
- `METer:CONFigure:<function> 'AUTO'`  
 See [Chapter 14.7.2.1, "METer:CONFigure Commands"](#), on page 362.

The configuration commands are described in the following chapters:

- [METer:CONFigure Commands](#).....362
- [METer:SENSe:<function>:RANGe:UPPER Commands](#).....365
- [METer:SENSe:<function>:RANGe:AUTO Commands](#).....367
- [AC+DC Current and Voltage Measurements](#).....368
- [Temperature Measurements](#).....368

**14.7.2.1 METer:CONFigure Commands**

`METer:CONFigure:<function>` commands set all internal measurement parameters for the specified measurement. For most measurements, it also sets the measurement range.

To set the range to minimum, maximum, or default value, use the following parameters:

- `METer:CONFigure:<function> MIN`

- METer:CONFigure:<function> MAX
- METer:CONFigure:<function> DEF

For some measurements, you can also set the auto range:  
 METer:CONFigure:<function> 'AUTO'. Note that 'AUTO' is a string parameter.  
 Alternatively, you can use the METer:SENSe:<function>:RANGE:AUTO commands.

The METer:CONFigure:<function> commands are only for configuration. To activate a measurement, use METer:SENSe:FUNCTion.

METer:CONFigure:VALue? returns the active measurement and range.

To read the result, use METer<m>:READ? or METer<m>:FETCh?.

METer:CONFigure:CONTInuity.....	363
METer:CONFigure:DIODE.....	363
METer:CONFigure:TEMPerature.....	363
METer:CONFigure:CAPacitance.....	363
METer:CONFigure:CURRent:AC.....	364
METer:CONFigure:CURRent:DC.....	364
METer:CONFigure:FREQuency.....	364
METer:CONFigure:RESistance.....	364
METer:CONFigure:VOLTagE:AC.....	364
METer:CONFigure:VOLTagE:DC.....	364

---

**METer:CONFigure:CONTInuity**  
**METer:CONFigure:DIODE**  
**METer:CONFigure:TEMPerature**

Configures the specified measurement. The instrument sets a fixed range.

**Usage:**                      Event

---

**METer:CONFigure:CAPacitance**

Sets the internal parameters and configures the range for capacitance measurements.

**Parameters:**

<Range>                      <numeric value> | 'AUTO' | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 10 nF|100 nF| 1 µF|10 µF|100 µF|1 mF|10 mF.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range:            10 nF to 10 mF  
 \*RST:            10 nF

**Usage:**                      Setting only

**METer:CONFigure:CURRent:AC****METer:CONFigure:CURRent:DC**

Sets the internal parameters and configures the range for current measurements.

You need an external shunt resistor or I/U converter for current measurement.

**Parameters:**

<Range> <numeric value> | 'AUTO' | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 A|10 A|100 A|1000 A.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: A

**Usage:** Setting only

**METer:CONFigure:FREQuency**

Configures the frequency measurement and sets voltage autoranging.

To set a fixed voltage range, use [METer:SENSe:FREQuency:VOLTage:RANGe:UPPer](#).

**Usage:** Event

**METer:CONFigure:RESistance**

Sets the internal parameters and configures the range for resistance measurements.

**Parameters:**

<Range> <numeric value> | 'AUTO' | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 k $\Omega$ |10 k $\Omega$ |100 k $\Omega$ |1 M $\Omega$ |10 M $\Omega$ |100 M $\Omega$ .

You can enter any value between the minimum and maximum value. The instrument sets the next suitable range.

Range: 1 kOhm to 100 MOhm

\*RST: AUTO

**Usage:** Setting only

**METer:CONFigure:VOLTage:AC****METer:CONFigure:VOLTage:DC**

Sets the internal parameters and configures the range for voltage measurements.

**Parameters:**

&lt;Range&gt;

&lt;numeric value&gt; | 'AUTO' | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 V|10 V|100 V|1000 V.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: V

**Usage:**

Setting only

**14.7.2.2 METer:SENSe:<function>:RANGe:UPPER Commands**

METer:SENSe:<function>:RANGe:UPPER commands set the measurement range and turn off autoranging. You can use these commands in addition to METer:CONFigure commands if you want to change only the range.

METer:SENSe:CAPacitance:RANGe:UPPer.....	365
METer:SENSe:CURRent:AC:RANGe:UPPer.....	365
METer:SENSe:CURRent:DC:RANGe:UPPer.....	365
METer:SENSe:FREQuency:VOLTagE:RANGe:UPPer.....	366
METer:SENSe:RESistance:RANGe:UPPer.....	366
METer:SENSe:VOLTagE:AC:RANGe:UPPer.....	366
METer:SENSe:VOLTagE:DC:RANGe:UPPer.....	366

**METer:SENSe:CAPacitance:RANGe:UPPer <Range>**

Sets a fixed range for capacitance measurements and turns off auto ranging.

**Parameters:**

&lt;Range&gt;

&lt;numeric value&gt; | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 10 nF|100 nF|1 µF|10 µF|100 µF|1 mF|10 mF.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 10 nF to 10 mF

\*RST: 10 nF

**METer:SENSe:CURRent:AC:RANGe:UPPer <Range>****METer:SENSe:CURRent:DC:RANGe:UPPer <Range>**

Sets a fixed current range and turns off auto ranging.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 A|10 A|100 A|1000 A.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: A

**METer:SENSe:FREQuency:VOLTage:RANGe:UPPer** <Range>

Sets a fixed voltage range for frequency measurements and turns off auto ranging.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 V|10 V|100 V|1 kV.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: V

**METer:SENSe:RESistance:RANGe:UPPer** <Range>

Sets a fixed range for resistance measurements and turns off auto ranging.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 k $\Omega$ |10 k $\Omega$ |100 k $\Omega$ |1 M $\Omega$ |10 M $\Omega$ |100 M $\Omega$ .

You can enter any value between the minimum and maximum value. The instrument sets the next suitable range.

Range: 1 kOhm to 100 MOhm

\*RST: 1 kOhm

**METer:SENSe:VOLTage:AC:RANGe:UPPer** <Range>

**METer:SENSe:VOLTage:DC:RANGe:UPPer** <Range>

Sets a fixed voltage range and turns off auto ranging.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 V|10 V|100 V|1000 V.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: V

**14.7.2.3 METer:SENSe:<function>:RANGe:AUTO Commands**

METer:SENSe:<function>:RANGe:AUTO commands turn autoranging on or off. For some measurements, you can also use the METer:CONFigure:<function> command, see [Chapter 14.7.2.1, "METer:CONFigure Commands"](#), on page 362.

METer:SENSe:CAPacitance:RANGe:AUTO.....	367
METer:SENSe:CURRent:AC:RANGe:AUTO.....	367
METer:SENSe:CURRent:DC:RANGe:AUTO.....	367
METer:SENSe:FREQuency:VOLTag:e:RANGe:AUTO.....	367
METer:SENSe:RESistance:RANGe:AUTO.....	367
METer:SENSe:VOLTag:e:AC:RANGe:AUTO.....	367
METer:SENSe:VOLTag:e:DC:RANGe:AUTO.....	367

**METer:SENSe:CAPacitance:RANGe:AUTO <State>**

**METer:SENSe:CURRent:AC:RANGe:AUTO <State>**

**METer:SENSe:CURRent:DC:RANGe:AUTO <State>**

**METer:SENSe:FREQuency:VOLTag:e:RANGe:AUTO <State>**

**METer:SENSe:RESistance:RANGe:AUTO <State>**

**METer:SENSe:VOLTag:e:AC:RANGe:AUTO <State>**

**METer:SENSe:VOLTag:e:DC:RANGe:AUTO <State>**

Disables or enables the autoranging for the specified measurement.

The query always returns OFF or ON.

**Parameters:**

<State> OFF | ON | ONCE

**OFF | ON**

0 | 1 are not supported.

**ONCE**

Performs an immediate autorange and then turns off the autoranging.

**Example:**

```
METer:SENSe:VOLTag:e:DC:RANGe:AUTO ONCE
```

```
METer:SENSe:VOLTag:e:DC:RANGe:AUTO?
```

```
<-- OFF
```



#### 14.7.2.4 AC+DC Current and Voltage Measurements

METer<m>:SENSe:CURRent:AC:COUPling.....	368
METer<m>:SENSe:VOLTagE:AC:COUPling.....	368

---

**METer<m>:SENSe:CURRent:AC:COUPling <Coupling>**

**METer<m>:SENSe:VOLTagE:AC:COUPling <Coupling>**

Enables AC+DC measurements.

**Suffix:**

<m>                      1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Parameters:**

<CoupVoltageMeas> DCLimit | ACLimit

**DCLimit**

Enables AC+DC measurement.

**ACLimit**

Enables AC measurement.

\*RST:            DCLimit

**Example:**

Configure and perform AC+DC current measurement with range 100 A:

```
:METer:CONFigure:CURRent:AC 100
:METer:SENSe:FUNCTion 'CURR:AC'
:METer:CONFigure:VALue?
<-- "CURR:AC 100"
:METer:SENSe:CURRent:AC:COUPling DCL
:METer:READ?
<-- 0.035906488794
```

Configure and perform AC voltage measurement with range 10 V:

```
:METer:CONFigure:VAOLTagE:AC 10
:METer:SENSe:FUNCTion 'VOLT:AC'
:METer:CONFigure:VALue?
<-- "VOLT:AC 10"
:METer:SENSe:CURRent:AC:COUPling ACL
:METer:READ?
<-- 0.030006488794
```

#### 14.7.2.5 Temperature Measurements

METer:UNIT:TEMPerature.....	368
METer:SENSe:TEMPerature:TRANsductor:RTD:TYPE.....	369

---

**METer:UNIT:TEMPerature <Unit>**

Sets the unit for temperature measurements.

**Parameters:**  
 <Unit> C | F | K

---

**METer:SENSe:TEMPerature:TRANsductor:RTD:TYPE <Unit>**

Sets the adapter type for temperature measurements.

**Parameters:**  
 <Unit> PT100 | PT500

### 14.7.3 Relative Measurements

To perform relative measurements, set the relevant `METer:SENSe:<function>:NULL:STATe` command to ON. By default, the reference value is 0. Alternatively, you can use `METer<m>:SENSe:RELative:STATe`.

To change the reference value, use the `METer:SENSe:<function>:NULL:VALue` command.

<code>METer:SENSe:CAPacitance:NULL:STATe</code> .....	369
<code>METer:SENSe:CURRent:AC:NULL:STATe</code> .....	369
<code>METer:SENSe:CURRent:DC:NULL:STATe</code> .....	369
<code>METer:SENSe:RESistance:NULL:STATe</code> .....	369
<code>METer:SENSe:TEMPerature:NULL:STATe</code> .....	369
<code>METer:SENSe:VOLTage:AC:NULL:STATe</code> .....	369
<code>METer:SENSe:VOLTage:DC:NULL:STATe</code> .....	369
<code>METer&lt;m&gt;:SENSe:NULL:STATe</code> .....	370
<code>METer&lt;m&gt;:SENSe:RELative:STATe</code> .....	370
<code>METer:SENSe:CAPacitance:NULL:VALue</code> .....	370
<code>METer:SENSe:CURRent:AC:NULL:VALue</code> .....	370
<code>METer:SENSe:CURRent:DC:NULL:VALue</code> .....	370
<code>METer:SENSe:VOLTage:AC:NULL:VALue</code> .....	370
<code>METer:SENSe:VOLTage:DC:NULL:VALue</code> .....	370
<code>METer:SENSe:RESistance:NULL:VALue</code> .....	371
<code>METer:SENSe:TEMPerature:NULL:VALue</code> .....	371
<code>METer&lt;m&gt;:SENSe:NULL:VALU</code> .....	371

- 
- METer:SENSe:CAPacitance:NULL:STATe <State>**
  - METer:SENSe:CURRent:AC:NULL:STATe <State>**
  - METer:SENSe:CURRent:DC:NULL:STATe <State>**
  - METer:SENSe:RESistance:NULL:STATe <State>**
  - METer:SENSe:TEMPerature:NULL:STATe <State>**
  - METer:SENSe:VOLTage:AC:NULL:STATe <State>**
  - METer:SENSe:VOLTage:DC:NULL:STATe <State>**

Enables or disables the relative measurement. The reference value is defined using the appropriate `METer:SENSe:<function>:NULL:VALue` command.

**Parameters:**

<State> OFF | ON  
 \*RST: OFF

**METer<m>:SENSe:NULL:STATe** <SetRelative>

**METer<m>:SENSe:RELative:STATe** <SetRelative>

Enables or disables the relative measurement for the currently active measurement type.

Relative measurements are not available for diode, continuity, and frequency measurements.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Parameters:**

<SetRelative> ON | OFF  
 ON = 1, OFF = 0  
 \*RST: OFF

**METer:SENSe:CAPacitance:NULL:VALue** <ReferenceValue>

Sets the reference value for capacitance measurements. The measurement result is the difference of the measured sample and the reference value.

The value takes effect if relative measurement is on, see [METer:SENSe:CAPacitance:NULL:STATe](#).

**Parameters:**

<ReferenceValue> Range: +/- (1.1 \* measurement range)  
 \*RST: 0  
 Default unit: F

**METer:SENSe:CURRent:AC:NULL:VALue** <ReferenceValue>

**METer:SENSe:CURRent:DC:NULL:VALue** <ReferenceValue>

**METer:SENSe:VOLTage:AC:NULL:VALue** <ReferenceValue>

**METer:SENSe:VOLTage:DC:NULL:VALue** <ReferenceValue>

Sets the reference value for relative measurements. The measurement result is the difference of the measured sample and the reference value.

The value takes effect if relative measurement is on, see [METer:SENSe:<function>:NULL:STATe](#).

**Parameters:**

<ReferenceValue> Range: +/- (1.1 \* measurement range)  
 \*RST: 0  
 Default unit: V (VOLTage) | A (CURRent)

**METer:SENSe:RESistance:NULL:VALue** <ReferenceValue>

Sets the reference value for resistance measurements. The measurement result is the difference of the measured sample and the reference value.

The value takes effect if relative measurement is on, see [METer:SENSe:RESistance:NULL:STATe](#).

**Parameters:**

<ReferenceValue>    Range:        +/- (1.1 \* measurement range)  
                           \*RST:         0  
                           Default unit: Ohm

**METer:SENSe:TEMPerature:NULL:VALue** <ReferenceValue>

Sets the reference value for temperature measurements. The measurement result is the difference of the measured sample and the reference value.

The value takes effect if relative measurement is on, see [METer:SENSe:TEMPerature:NULL:STATe](#).

**Parameters:**

<ReferenceValue>    Range:        -200 to 850  
                           \*RST:         0  
                           Default unit: To define the unit, use METer:UNIT:TEMPerature.

**METer<m>:SENSe:NULL:VALU** <ReferenceValue>

Sets the reference value for the currently active measurement type.

Relative measurements are not available for diode, continuity, and frequency measurements.

**Suffix:**

<m>                    1..4  
                           R&S RTH1002: always 1, omit the suffix  
                           R&S RTH1004: Selects the voltmeter.

**Parameters:**

<ReferenceValue>    Range:        +/- (1.1 \* measurement range)  
                           Default unit: Depends on the measurement type

**14.7.4 Measurement Control**

<a href="#">METer:SENSe:FUNcTion</a> .....	372
<a href="#">METer:CONFigure:VALue?</a> .....	372
<a href="#">METer&lt;m&gt;:TRIGger:MODE</a> .....	372
<a href="#">METer&lt;m&gt;:ABORT</a> .....	373

**METer:SENSe:FUNction** <MeasType>

Sets the measurement type and activates it. All measurement attributes of the previous function (range, resolution, etc.) are remembered. If you return to the previous function, the measurement attributes are restored.

Changing the measurement type disables scaling, limit testing, histogram, statistics, and trend chart data collection: `CALC:<function>:STAT` is set `OFF`.

**Setting parameters:**

<MeasType> 'CAPacitance | CONTinuity | CURRent:AC | CURRent[:DC] |  
CURRent:AD | DIODE | FREQuency | RESistance |  
TEMPerature | VOLTage:AC | VOLTage[:DC] | VOLTage:AD'  
String parameter  
\*RST: VOLTage [:DC]

**Example:** `MET:SENS:FUNC "VOLT:AC"`  
`MET:CONF:VAL?`  
`<--"VOLT:AC 1"`

**Usage:** Setting only

**METer:CONFigure:VALue?**

Returns the actual measurement type (short form) and the range.

**Return values:**

<Configuration> String parameter

**Example:** `MET:CONF:VAL?`  
`<--"VOLT:DC 100"`  
The DMM is set to DC voltage measurement and range 100 V.

**Usage:** Query only

**METer<m>:TRIGger:MODE** <TriggerMode>

Defines how long the instrument measures. To start the measurement again, use `RUN` or the appropriate `METer<m>:MEASure:<function>` command.

**Suffix:**

<m> 1..4  
R&S RTH1002: always 1, omit the suffix  
R&S RTH1004: Selects the voltmeter.

**Parameters:**

<TriggerMode> AUTO | SINGle  
**AUTO**  
The instrument performs continuous measurements.  
**SINGle**  
The instrument performs a single measurement.  
\*RST: AUTO

---

**METer<m>:ABORt**

Stops the running measurement.

**Suffix:**

<m> 1..4  
R&S RTH1002: always 1, omit the suffix  
R&S RTH1004: Selects the voltmeter.

**Usage:** Event

## 14.7.5 Results

- [Reading Values](#).....373
- [METer:MEASure Commands](#).....374
- [Statistics](#).....376

### 14.7.5.1 Reading Values

After configuration and selection of the active measurement, you can read the result values.

[METer<m>:INITiate](#).....373  
[METer<m>:READ?](#)..... 373  
[METer<m>:FETCh?](#)..... 374

---

**METer<m>:INITiate**

Resets the hardware and all statistical values, performs a single measurement and ends in hold mode.

**Suffix:**

<m> 1..4

**Usage:** Event

---

**METer<m>:READ?**

Starts a new measurement, returns the current measurement result and stays in run mode.

**Suffix:**

<m> 1..4  
R&S RTH1002: always 1, omit the suffix  
R&S RTH1004: Selects the voltmeter.

**Return values:**

<Meter result>

**Usage:** Query only

**METer<m>:FETCh?**

Returns the currently measured value.

Use this command after `METer<m>:INITiate`.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Result> Range: -100E+24 to 100E+24  
 Increment: 0  
 \*RST: 0  
 Default unit: V

**Example:**

```
METer:INITiate
METer:FETCh?
<-- 999.98564109
```

**Usage:** Query only

**14.7.5.2 METer:MEASure Commands**

Sending a `METer:MEASure:<function>?` command is the same as sending the `METer:CONFigure:<function>` command followed immediately by a `READ?` command.

<code>METer:MEASure:CONTinuity?</code> .....	374
<code>METer:MEASure:DIODE?</code> .....	374
<code>METer:MEASure:FREQuency?</code> .....	374
<code>METer:MEASure:TEMPerature?</code> .....	374
<code>METer:MEASure:CAPacitance?</code> .....	375
<code>METer:MEASure:CURREnt:AC?</code> .....	375
<code>METer:MEASure:CURREnt:DC?</code> .....	375
<code>METer:MEASure:RESistance?</code> .....	375
<code>METer:MEASure:VOLTage:AC?</code> .....	375
<code>METer:MEASure:VOLTage:DC?</code> .....	375

**METer:MEASure:CONTinuity?****METer:MEASure:DIODE?****METer:MEASure:FREQuency?****METer:MEASure:TEMPerature?**

Configures the measurement and returns the result.

**Return values:**

<Range>

**Usage:** Query only

---

**METer:MEASure:CAPacitance?** [<ExpectedValue>]

Configures the capacitance measurement and returns the result.

**Query parameters:**

[<ExpectedValue>] <numeric value> | MIN | MAX | DEF | 'AUTO'

Optional parameter, expected measurement result or range. The instrument sets the appropriate measurement range.

See: [METer:CONFigure:CAPacitance](#).

**Return values:**

<Result> Numeric value

**Usage:** Query only

---

**METer:MEASure:CURRent:AC?** [<ExpectedValue>]**METer:MEASure:CURRent:DC?** [<ExpectedValue>]

Configures the current measurement and returns the result.

**Query parameters:**

[<ExpectedValue>] <numeric value> | MIN | MAX | DEF | 'AUTO'

Optional parameter, expected measurement result or range. The instrument sets the appropriate measurement range.

See: [METer:CONFigure:CURRent:DC](#).

**Return values:**

<Result> Numeric value

**Example:** :METer:MEASure:CURRent:DC? 15  
<-- 13.4907681509

**Usage:** Query only

---

**METer:MEASure:RESistance?** [<ExpectedValue>]

Configures the resistance measurement and returns the result.

**Query parameters:**

[<ExpectedValue>] <numeric value> | MIN | MAX | DEF | 'AUTO'

Optional parameter, expected measurement result or range. The instrument sets the appropriate measurement range.

See: [METer:CONFigure:RESistance](#).

**Return values:**

<Result> Numeric value

**Usage:** Query only

---

**METer:MEASure:VOLTage:AC?** [<ExpectedValue>]**METer:MEASure:VOLTage:DC?** [<ExpectedValue>]

Configures the voltage measurement and returns the result.



**Query parameters:**

[<ExpectedValue>] <numeric value> | MIN | MAX | DEF | 'AUTO'

Optional parameter, expected measurement result or range. The instrument sets the appropriate measurement range.

See: [METer:CONFigure:VOLTagE:DC](#).

**Return values:**

<Result> Numeric value

**Example:**

```
:METer:MEASure:VOLTagE:DC? 5
```

```
<-- 3.4907681509
```

**Usage:**

Query only

**14.7.5.3 Statistics**

Before you can get statistical results, configure the measurement and select the measurement to be performed using [METer:SENSe:FUNctIon](#).

<a href="#">METer&lt;m&gt;:CALCulate:AVERage:AVERage?</a> .....	376
<a href="#">METer&lt;m&gt;:CALCulate:AVERage:MINimum?</a> .....	376
<a href="#">METer&lt;m&gt;:CALCulate:AVERage:MAXimum?</a> .....	377
<a href="#">METer&lt;m&gt;:CALCulate:AVERage:CLEar</a> .....	377

**METer<m>:CALCulate:AVERage:AVERage?**

Returns the mean value of the measurement series.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Average> Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: V

**Usage:**

Query only

**METer<m>:CALCulate:AVERage:MINimum?**

Returns the minimum value of the measurement series.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Minimum>            Range:     -100E+24 to 100E+24  
                          Increment: 1E-12  
                          \*RST:     0  
                          Default unit: V

**Usage:**                Query only

**METer<m>:CALCulate:AVERage:MAXimum?**

Returns the maximum value of the measurement series.

**Suffix:**

<m>                      1..4  
                          R&S RTH1002: always 1, omit the suffix  
                          R&S RTH1004: Selects the voltmeter.

**Return values:**

<Maximum>            Range:     -100E+24 to 100E+24  
                          Increment: 1E-12  
                          \*RST:     0  
                          Default unit: V

**Usage:**                Query only

**METer<m>:CALCulate:AVERage:CLEar**

Deletes all statistical values.

Statistics are also deleted if:

- The measurement function changes (METer:SENSe:FUNction).
- \*RST
- SYSTem:PRESet

**Suffix:**

<m>                      1..4  
                          R&S RTH1002: always 1, omit the suffix  
                          R&S RTH1004: Selects the voltmeter.

**Usage:**                Event

## 14.8 Voltmeter (R&S RTH1004)

- [Activating the Voltmeter](#)..... 378
- [Measurement Configuration](#)..... 378
- [Relative Measurements](#)..... 382
- [Measurement Control](#)..... 384
- [Results](#)..... 386

### 14.8.1 Activating the Voltmeter

---

**METer<m>:SENSE:STATe** <State>

Activates the voltmeter measurement.

**Suffix:**

<m> 1..4  
Selects the voltmeter.

**Parameters:**

<State> ON | OFF  
\*RST: OFF

### 14.8.2 Measurement Configuration

The only parameter that can be set is the measurement range. All other settings are automatically adjusted by the instrument.

To set a fixed measurement range, you can use several commands:

- **METer<m>:CONFigure:<function>**  
Configures the specified measurement including the measurement range.  
See [Chapter 14.8.2.2, "METer<m>:CONFigure Commands"](#), on page 379.
- **METer<m>:SENSE:<function>:RANGE:UPPER**  
Sets the measurement range.  
See [Chapter 14.8.2.3, "METer<m>:SENSE:<function>:RANGE:UPPER Commands"](#), on page 380.
- **METer<m>:MEASure:<function>**  
Configures the specified measurement including the measurement range, starts the measurement, and returns the result.

The configuration commands are described in the following chapters:

- [General Configuration](#)..... 378
- [METer<m>:CONFigure Commands](#)..... 379
- [METer<m>:SENSE:<function>:RANGE:UPPER Commands](#)..... 380
- [AC+DC Current and Voltage Measurements](#)..... 381

#### 14.8.2.1 General Configuration

---

**METer<m>:SENSE:SOURce** <InputChannel>

Selects the input channel to be measured by the specified voltmeter.

**Suffix:**

<m> 1..4  
Selects the voltmeter.

**Parameters:**

<InputChannel> C1 | C2 | C3 | C4  
\*RST: C1

**METer<m>:SENSe:RANGe <MeterRangeUI>**

Sets the measurement range of the input channel that is measured by the meter.

**Suffix:**

<m> 1..4  
Selects the voltmeter.

**Parameters:**

<MeterRangeUI> Range: The range depends on the selected measurement type. For values, see the appropriate METer:CONFigure:<function> command.

**14.8.2.2 METer<m>:CONFigure Commands**

METer:CONFigure:<function> commands set all internal measurement parameters for the specified measurement, and also the measurement range.

To set the range to minimum, maximum, or default value, use the following parameters:

- METer<m>:CONFigure:<function> MIN
- METer<m>:CONFigure:<function> MAX
- METer<m>:CONFigure:<function> DEF

The METer<m>:CONFigure:<function> commands are only for configuration. To activate a measurement, use METer<m>:SENSe:FUNCTion on page 384.

METer<m>:CONFigure:VALue? returns the active measurement and range.

To read the result, use METer<m>:READ? or METer<m>:FETCh?.

METer<m>:CONFigure:CURRent:AC.....	379
METer<m>:CONFigure:CURRent:DC.....	379
METer<m>:CONFigure:VOLTag:AC.....	380
METer<m>:CONFigure:VOLTag:DC.....	380

**METer<m>:CONFigure:CURRent:AC****METer<m>:CONFigure:CURRent:DC**

Sets the internal parameters and configures the range for current measurements.

You need an external shunt resistor or I/U converter for current measurement.

**Suffix:**

<m> 1..4  
Selects the voltmeter.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 A|10 A|100 A|1000 A.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: A

**Usage:** Setting only

**METer<m>:CONFigure:VOLTage:AC**

**METer<m>:CONFigure:VOLTage:DC**

Sets the internal parameters and configures the range for voltage measurements.

**Suffix:**

<m> 1..4  
Selects the voltmeter.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

**<numeric value>**

The instrument has fixed measurement ranges: 1 V|10 V|100 V|1000 V.

You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.

Range: 1 to 1000

\*RST: 1

Default unit: V

**Usage:** Setting only

**14.8.2.3 METer<m>:SENSe:<function>:RANGe:UPPER Commands**

METer<m>:SENSe:<function>:RANGe:UPPER commands set the measurement range. You can use these commands in addition to METer<m>:CONFigure commands if you want to change only the range.

METer<m>:SENSe:CURRent:AC:RANGe:UPPer.....	380
METer<m>:SENSe:CURRent:DC:RANGe:UPPer.....	380
METer<m>:SENSe:VOLTage:AC:RANGe:UPPer.....	381
METer<m>:SENSe:VOLTage:DC:RANGe:UPPer.....	381

**METer<m>:SENSe:CURRent:AC:RANGe:UPPer <Range>**

**METer<m>:SENSe:CURRent:DC:RANGe:UPPer <Range>**

Sets a fixed current range.

**Suffix:**

<m> 1..4  
 Selects the voltmeter.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF  
**<numeric value>**  
 The instrument has fixed measurement ranges: 1 A|10 A|100 A|1000 A.  
 You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.  
 Range: 1 to 1000  
 \*RST: 1  
 Default unit: A

**METer<m>:SENSe:VOLTage:AC:RANGe:UPPer <Range>**

**METer<m>:SENSe:VOLTage:DC:RANGe:UPPer <Range>**

Sets a fixed voltage range.

**Suffix:**

<m> 1..4  
 Selects the voltmeter.

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF  
**<numeric value>**  
 The instrument has fixed measurement ranges: 1 V|10 V|100 V|1000 V.  
 You can enter any value between the minimum and maximum value. The instrument uses the next suitable range.  
 Range: 1 to 1000  
 \*RST: 1  
 Default unit: V

**14.8.2.4 AC+DC Current and Voltage Measurements**

METer<m>:SENSe:CURRent:AC:COUPling..... 381  
 METer<m>:SENSe:VOLTage:AC:COUPling..... 381

**METer<m>:SENSe:CURRent:AC:COUPling <Coupling>**

**METer<m>:SENSe:VOLTage:AC:COUPling <Coupling>**

Enables AC+DC measurements.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Parameters:**

<CoupleVoltageMeas> DCLimit | ACLimit

**DCLimit**

Enables AC+DC measurement.

**ACLimit**

Enables AC measurement.

\*RST: DCLimit

**Example:**

Configure and perform AC+DC current measurement with range 100 A:

```
:METer:CONFigure:CURRent:AC 100
:METer:SENSe:FUNcTION 'CURR:AC'
:METer:CONFigure:VALue?
<-- "CURR:AC 100"
:METer:SENSe:CURRent:AC:COUPLing DCL
:METer:READ?
<-- 0.035906488794
```

Configure and perform AC voltage measurement with range 10 V:

```
:METer:CONFigure:VAOLTage:AC 10
:METer:SENSe:FUNcTION 'VOLT:AC'
:METer:CONFigure:VALue?
<-- "VOLT:AC 10"
:METer:SENSe:CURRent:AC:COUPLing ACL
:METer:READ?
<-- 0.030006488794
```

### 14.8.3 Relative Measurements

To perform relative measurements, set the relevant

METer<m>:SENSe:<function>:NULL:STATe command to ON. By default, the reference value is 0. Alternatively, you can use METer<m>:SENSe:RELative:STATe.

To change the reference value, use the

METer<m>:SENSe:<function>:NULL:VALue command.

METer<m>:SENSe:CURRent:AC:NULL:STATe.....	383
METer<m>:SENSe:CURRent:DC:NULL:STATe.....	383
METer<m>:SENSe:VOLTagE:AC:NULL:STATe.....	383
METer<m>:SENSe:VOLTagE:DC:NULL:STATe.....	383
METer<m>:SENSe:NULL:STATe.....	383
METer<m>:SENSe:RELative:STATe.....	383
METer<m>:SENSe:CURRent:AC:NULL:VALue.....	383
METer<m>:SENSe:CURRent:DC:NULL:VALue.....	383
METer<m>:SENSe:VOLTagE:AC:NULL:VALue.....	383
METer<m>:SENSe:VOLTagE:DC:NULL:VALue.....	383
METer<m>:SENSe:NULL:VALU.....	384

---

**METer<m>:SENSe:CURRent:AC:NULL:STATe** <State>  
**METer<m>:SENSe:CURRent:DC:NULL:STATe** <State>  
**METer<m>:SENSe:VOLTage:AC:NULL:STATe** <State>  
**METer<m>:SENSe:VOLTage:DC:NULL:STATe** <State>

Enables or disables the relative measurement. The reference value is defined using [METer:SENSe:<function>:NULL:VALue](#)

**Suffix:**

<m> 1..4  
 Selects the voltmeter.

**Parameters:**

<State> OFF | ON  
 \*RST: OFF

---

**METer<m>:SENSe:NULL:STATe** <SetRelative>  
**METer<m>:SENSe:RELative:STATe** <SetRelative>

Enables or disables the relative measurement for the currently active measurement type.

Relative measurements are not available for diode, continuity, and frequency measurements.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Parameters:**

<SetRelative> ON | OFF  
 ON = 1, OFF = 0  
 \*RST: OFF

---

**METer<m>:SENSe:CURRent:AC:NULL:VALue** <ReferenceValue>  
**METer<m>:SENSe:CURRent:DC:NULL:VALue** <ReferenceValue>  
**METer<m>:SENSe:VOLTage:AC:NULL:VALue** <ReferenceValue>  
**METer<m>:SENSe:VOLTage:DC:NULL:VALue** <ReferenceValue>

Sets the reference value for relative measurements. The measurement result is the difference of the measured sample and the reference value.

The value takes effect if relative measurement is on, see [METer<m>:SENSe:VOLTage:DC:NULL:STATe](#).

**Suffix:**

<m> 1..4  
 Selects the voltmeter.



**Parameters:**

<ReferenceValue> Range: +/- (1.1 \* measurement range)  
 \*RST: 0  
 Default unit: V (VOLTage) | A (CURRent)

**METer<m>:SENSe:NULL:VALU <ReferenceValue>**

Sets the reference value for the currently active measurement type.

Relative measurements are not available for diode, continuity, and frequency measurements.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Parameters:**

<ReferenceValue> Range: +/- (1.1 \* measurement range)  
 Default unit: Depends on the measurement type

**14.8.4 Measurement Control**

METer<m>:SENSe:FUNCTION.....	384
METer<m>:CONFigure:VALue?.....	385
METer<m>:TRIGger:MODE.....	385
METer<m>:ABORt.....	385

**METer<m>:SENSe:FUNCTION <MeasType>**

Sets the measurement type for the selected meter. All measurement attributes of the previous function (range, resolution, etc.) are remembered. If you return to the previous function, the measurement attributes are restored.

Changing the measurement type disables scaling, limit testing, histogram, statistics, and trend chart data collection: CALC:<function>:STAT is set OFF.

**Suffix:**

<m> 1..4  
 Selects the voltmeter.

**Setting parameters:**

<MeasType> 'VOLTage:AC | VOLTage[:DC] | VOLTage:AD'  
 String parameter  
 \*RST: VOLTage [:DC]

**Example:**

```
MET2:SENS:FUNC "VOLT:AC"
MET2:CONF:VAL?
<--"VOLT:AC 1"
```

Sets the second voltmeter to AC voltage measurement.

**Usage:**

Setting only

---

**METer<m>:CONFigure:VALue?**

Returns the actual measurement type (short form) and the range.

**Suffix:**

<m> 1..4  
Selects the voltmeter.

**Return values:**

<Configuration> String parameter

**Example:**

```
MET:CONF:VAL?
<-- "VOLT:DC 100"
```

The first voltmeter is set to DC voltage measurement and range 100 V.

**Usage:** Query only

---

**METer<m>:TRIGger:MODE <TriggerMode>**

Defines how long the instrument measures. To start the measurement again, use RUN or the appropriate METer<m>:MEASure:<function> command.

**Suffix:**

<m> 1..4  
R&S RTH1002: always 1, omit the suffix  
R&S RTH1004: Selects the voltmeter.

**Parameters:**

<TriggerMode> AUTO | SINGLE

**AUTO**

The instrument performs continuous measurements.

**SINGLE**

The instrument performs a single measurement.

\*RST: AUTO

---

**METer<m>:ABORt**

Stops the running measurement.

**Suffix:**

<m> 1..4  
R&S RTH1002: always 1, omit the suffix  
R&S RTH1004: Selects the voltmeter.

**Usage:** Event

---

## 14.8.5 Results

- [Reading Values](#).....386
- [METer:MEASure Commands](#).....387
- [Statistics](#).....388

### 14.8.5.1 Reading Values

<a href="#">METer&lt;m&gt;:INITiate</a> .....	386
<a href="#">METer&lt;m&gt;:READ?</a> .....	386
<a href="#">METer&lt;m&gt;:FETCh?</a> .....	386

---

#### METer<m>:INITiate

Resets the hardware and all statistical values, performs a single measurement and ends in hold mode.

**Suffix:**

<m> 1..4

**Usage:** Event

---

#### METer<m>:READ?

Starts a new measurement, returns the current measurement result and stays in run mode.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Meter result>

**Usage:** Query only

---

#### METer<m>:FETCh?

Returns the currently measured value.

Use this command after [METer<m>:INITiate](#).

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Result>            Range:     -100E+24 to 100E+24  
                       Increment: 0  
                       \*RST:     0  
                       Default unit: V

**Example:**

```
MEter:INITiate
MEter:FETCh?
<-- 999.98564109
```

**Usage:**            Query only

**14.8.5.2 METer:MEASure Commands**

Sending a `MEter:MEASure:<function>?` command is the same as sending the `MEter:CONFigure:<function>` command followed immediately by a `READ?` command.

<code>MEter&lt;m&gt;:MEASure:CURRent:AC?</code> .....	387
<code>MEter&lt;m&gt;:MEASure:CURRent:DC?</code> .....	387
<code>MEter&lt;m&gt;:MEASure:VOLTage:AC?</code> .....	387
<code>MEter&lt;m&gt;:MEASure:VOLTage:DC?</code> .....	387

---

**MEter<m>:MEASure:CURRent:AC? [<ExpectedValue>]**

**MEter<m>:MEASure:CURRent:DC? [<ExpectedValue>]**

Configures the current measurement and returns the result.

**Suffix:**

<m>                    1..4  
                           Selects the voltmeter.

**Query parameters:**

[<ExpectedValue>]    <numeric value> | MIN | MAX | DEF

Optional parameter, expected measurement result or range. The instrument sets the appropriate measurement range.

See: [MEter<m>:CONFigure:CURRent:DC](#).

**Return values:**

<Result>            Numeric value

**Usage:**            Query only

---

**MEter<m>:MEASure:VOLTage:AC? [<ExpectedValue>]**

**MEter<m>:MEASure:VOLTage:DC? [<ExpectedValue>]**

Configures the voltage measurement and returns the result.

**Suffix:**

<m>                    1..4  
                           Selects the voltmeter.

**Query parameters:**

[<ExpectedValue>] <numeric value> | MIN | MAX | DEF

Optional parameter, expected measurement result or range. The instrument sets the appropriate measurement range.

See: [METer<m>:CONFIgure:VOLTagE:DC](#).

**Return values:**

<Result> Numeric value

**Usage:** Query only

**14.8.5.3 Statistics**

Before you can get statistical results, configure the measurement and select the measurement to be performed using [METer<m>:SENSe:FUNcTion](#).

<a href="#">METer&lt;m&gt;:CALCulate:AVERage:AVERage?</a> .....	388
<a href="#">METer&lt;m&gt;:CALCulate:AVERage:MINimum?</a> .....	388
<a href="#">METer&lt;m&gt;:CALCulate:AVERage:MAXimum?</a> .....	389
<a href="#">METer&lt;m&gt;:CALCulate:AVERage:CLEar</a> .....	389

**METer<m>:CALCulate:AVERage:AVERage?**

Returns the mean value of the measurement series.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Average> Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: V

**Usage:** Query only

**METer<m>:CALCulate:AVERage:MINimum?**

Returns the minimum value of the measurement series.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Minimum> Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: V

**Usage:** Query only

---

#### **METer<m>:CALCulate:AVERage:MAXimum?**

Returns the maximum value of the measurement series.

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Return values:**

<Maximum> Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: V

**Usage:** Query only

---

#### **METer<m>:CALCulate:AVERage:CLEar**

Deletes all statistical values.

Statistics are also deleted if:

- The measurement function changes (METer:SENSE:FUNCTION).
- \*RST
- SYSTem:PRESet

**Suffix:**

<m> 1..4  
 R&S RTH1002: always 1, omit the suffix  
 R&S RTH1004: Selects the voltmeter.

**Usage:** Event

## 14.9 Counter Mode (R&S RTH-K33)

COUNter<m>:ABORt.....	390
COUNter<m>:CALCulate:AVERage:ALL?.....	390
COUNter<m>:CALCulate:AVERage:AVERage?.....	390
COUNter<m>:CALCulate:AVERage:CLEar.....	390
COUNter<m>:CALCulate:AVERage:COUNt:CURRent?.....	391
COUNter<m>:CALCulate:AVERage:MAXimum?.....	391
COUNter<m>:CALCulate:AVERage:MINimum?.....	391
COUNter<m>:CONFigure:FREQuency.....	392
COUNter<m>:CONFigure:VALue?.....	392
COUNter<m>:FETCh?.....	392
COUNter<m>:INITiate.....	393
COUNter<m>:MEASure:FREQuency?.....	393

COUNter<m>:READ?	394
COUNter<m>:SENSe:FUNcTion	394
COUNter<m>:SENSe:RANGe	394
COUNter<m>:SENSe:REFerence:STATe	394
COUNter<m>:SENSe:REFerence:VALue	395
COUNter<m>:SENSe:SOURce	395
COUNter<m>:SENSe:STATe	395
COUNter<m>:SENSe:TRIGger:MODE	395

---

### COUNter<m>:ABORT

Aborts a running measurement and switches to single measurement mode.

**Suffix:**

<m> 1..2

**Usage:** Event

---

### COUNter<m>:CALCulate:AVERage:ALL?

Queries the statistical results of all measured counter frequencies since statistics were last restarted.

**Suffix:**

<m> 1..2

**Return values:**

<All statistics> Minimum, average, maximum value

**Usage:** Query only

---

### COUNter<m>:CALCulate:AVERage:AVERage?

Queries the average of all measured counter frequencies since statistics were last restarted.

**Suffix:**

<m> 1..2

**Return values:**

<Average> Average measured value  
 Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: Hz

**Usage:** Query only

---

### COUNter<m>:CALCulate:AVERage:CLEar

Resets all statistical values.

**Suffix:**  
 <m> 1..2

**Usage:** Event

**COUNter<m>:CALCulate:AVERAge:COUNT:CURRent?**

Returns the number of counter frequencies included in the averaging process.

**Suffix:**  
 <m> 1..2

**Return values:**  
 <NumberOfValues> Range: 0 to 4294967295  
 Increment: 1  
 \*RST: 0

**Usage:** Query only

**COUNter<m>:CALCulate:AVERAge:MAXimum?**

Queries the maximum of all measured counter frequencies since statistics were last restarted.

**Suffix:**  
 <m> 1..2

**Return values:**  
 <Maximum> Average measured value  
 Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: Hz

**Usage:** Query only

**COUNter<m>:CALCulate:AVERAge:MINimum?**

Queries the minimum of all measured counter frequencies since statistics were last restarted.

**Suffix:**  
 <m> 1..2

**Return values:**  
 <Minimum> Average measured value  
 Range: -100E+24 to 100E+24  
 Increment: 1E-12  
 \*RST: 0  
 Default unit: Hz

**Usage:** Query only



**COUNter<m>:CONFigure:FREQuency <Range>**

This command sets all measurement parameters and trigger parameters to default values for frequency measurements.

Note: this command can be executed at any time, even if the counter is not yet activated. The parameters are stored internally and used when the counter is activated.

**Suffix:**

<m> 1..2

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

Defines the measurement range of the input signal for the counter. If probes are connected, the MIN | MAX | DEF values are adapted accordingly.

**<numeric value>**

Power range in V. If necessary, the next higher range is selected.

**MIN**

100 mV

**MAX**

300 V

**DEF**

100 mV

**Usage:** Setting only

**COUNter<m>:CONFigure:VALue?**

Returns the current configuration for the counter measurement defined by the most recent `COUNter<m>:CONFigure:FREQuency` or `COUNter<m>:MEASure:FREQuency?` command.

**Suffix:**

<m> 1..2

**Return values:**

<ConfigString> String containing the current measurement function (FREQ) and the defined measurement range of the used input channel.

**Example:**

```
COUN1:CONF:VAL?
//Result: 'FREQ 3V'
```

**Usage:** Query only

**COUNter<m>:FETCh?**

Queries the currently measured value.

**Suffix:**

<m> 1..2

**Return values:**

<ResultActual> Measured value  
 Range: -100E+24 to 100E+24  
 Increment: 0  
 \*RST: 0  
 Default unit: Hz

**Usage:** Query only

**COUNter<m>:INITiate**

Resets the hardware and all statistical values, performs a single measurement and ends in hold mode.

**Suffix:**

<m> 1..2

**Usage:** Event

**COUNter<m>:MEASure:FREQuency? <Range>**

This command sets all measurement parameters and trigger parameters to default values for frequency measurements, then immediately triggers a counter measurement and returns the result.

This command corresponds to the commands `COUNter<m>:CONFigure:FREQuency` + `COUNter<m>:FETCh?`

**Suffix:**

<m> 1..2

**Parameters:**

<Range> <numeric value> | MIN | MAX | DEF

Defines the measurement range of the input signal for the counter. If probes are connected, the MIN | MAX | DEF values are adapted accordingly.

**<numeric value>**

Power range in V. If necessary, the next higher range is selected.

**MIN**

100 mV

**MAX**

300 V

**DEF**

100 mV

**Return values:**

<Counter result> Measured frequency

**Usage:** Query only

---

**COUNter<m>:READ?**

Starts a new measurement, returns the current measurement result and stays in run mode.

**Suffix:**

<m> 1..2

**Return values:**

<Counter result> Measured frequency

**Usage:** Query only

---

**COUNter<m>:SENSe:FUNctIon [<Function>]**

Selects the input channel for the counter.

**Suffix:**

<m> 1..2

**Parameters:**

<Function> 'FREQ 1' | 'FREQ 2' | 'FREQ 3' | 'FREQ 4'  
Depends on available channels.

---

**COUNter<m>:SENSe:RANGe <MeterRangeUI>**

This command defines the measurement range.

**Suffix:**

<m> 1..2

**Parameters:**

<MeterRangeUI> Range: 0.1 to 300  
Increment: 0.1  
\*RST: 0.1

---

**COUNter<m>:SENSe:REFerence:STATe <ReferenceSource>**

Selects the reference to be used for the counter.

**Suffix:**

<m> 1..2

**Parameters:**

<ReferenceSource> INTernal | EXTernal

**EXTernal**

The measured value of counter 2 is used as a reference. Specify the nominal reference frequency for counter 2 using

`COUNTer<m>:SENSe:REFerence:VALue`.

**INTernal**

An internal reference is used to determine the counter frequency.

\*RST: INTernal

**COUNTer<m>:SENSe:REFerence:VALue <RefFreq>**

Defines the nominal frequency value to be used as a reference for counter 2.

**Suffix:**

<m> 1..2

**Parameters:**

<RefFreq> Range: 10 to 500E+6  
 Increment: 1  
 \*RST: 10E+6  
 Default unit: Hz

**COUNTer<m>:SENSe:SOURce <InputChannel>**

Selects the channel used for input for the selected counter.

**Suffix:**

<m> 1..2

**Parameters:**

<InputChannel> C1 | C2 | C3 | C4  
 \*RST: C1

**COUNTer<m>:SENSe:STATe <State>**

Activates or deactivates the counter.

**Suffix:**

<m> 1..2

**Parameters:**

<State> ON | OFF  
 \*RST: OFF

**COUNTer<m>:SENSe:TRIGger:MODE <TriggerMode>**

Determines the measurement mode.

**Suffix:**  
 <m> 1..2

**Parameters:**  
 <TriggerMode> AUTO | SINGle

**AUTO**  
 Continuous measurement; the most recent value is preserved and displayed, while the oldest value are overwritten

**SINGle**  
 Single measurement; the continuous measurement is stopped and the most recent value is preserved.

\*RST: AUTO

## 14.10 Data Logging

- [Logger Settings](#)..... 396
- [Scaling](#)..... 399
- [Cursor in Logger Mode](#)..... 401
- [Zoom in Logger mode](#)..... 403
- [Logger Statistics](#) ..... 404
- [Logger Records](#)..... 408

### 14.10.1 Logger Settings

<a href="#">LOGGer:SOURce</a> .....	396
<a href="#">LOGGer:TIMEbase:SRATe</a> .....	397
<a href="#">LOGGer:TIMEbase:SCALE</a> .....	397
<a href="#">LOGGer:SLOT:CURRent</a> .....	397
<a href="#">LOGGer:SLOT:SLOT&lt;m&gt;:NAME</a> .....	397
<a href="#">LOGGer:SLOT:SLOT&lt;m&gt;:HASData?</a> .....	398
<a href="#">LOGGer:SLOT:SLOT&lt;m&gt;:START?</a> .....	398
<a href="#">LOGGer:SLOT:LOAD</a> .....	398
<a href="#">LOGGer:SLOT:CLEAr</a> .....	398
<a href="#">LOGGer:ACLR</a> .....	399

---

#### LOGGer:SOURce <Source>

Sets the logger source.

Before you can change the logger source, stop the measurement.

**Parameters:**  
 <Source> SCOPe | METer | COUNter

SCOPe: an active automatic measurement is required.  
 METer | COUNter: The selected measurement must be active, but not running.

**LOGGer:TIMEbase:SRATe** <NextSampleRate>

Sets the number of samples per second.

**Parameters:**

<NextSampleRate> SA1 | SA2 | SA5 | SA10  
\*RST: SA1

**LOGGer:TIMEbase:SCALE** <NextHorizScale>

Selects the horizontal scale of the logged data.

**Parameters:**

<NextHorizScale> AUTO | S1 | S2 | S4 | S5 | S10 | S20 | S40 | M1 | M2 | M4 | M5 |  
M10 | M20 | M40 | H1 | H2 | H4 | H5 | H10 | H20 | D1 | D2 | D4  
**S1 | S2 | S4 | S5 | S10 | S20 | S40**  
Seconds per division  
**M1 | M2 | M4 | M5 | M10 | M20 | M40**  
Minutes per division  
**H1 | H2 | H4 | H5 | H10 | H20**  
Hours per division  
**D1 | D2 | D4**  
Days per division  
\*RST: AUTO

**LOGGer:SLOT:CURRent** <SelectedSlot>

Selects one of the 10 memory slots to store the data during the logging. It is possible to change the slot during recording. This command shows the slot number that is selected in the menu.

**Parameters:**

<SelectedSlot> SLOT1 | SLOT2 | SLOT3 | SLOT4 | SLOT5 | SLOT6 | SLOT7 |  
SLOT8 | SLOT9 | SLOT10  
\*RST: SLOT1

**LOGGer:SLOT:SLOT<m>:NAME** <Name>

Sets an optional slot name to describe the logged data.

**Suffix:**

<m> 1..10  
Slot number

**Parameters:**

<Name> String parameter, name of the slot. The maximum length of the name is 20 characters.

**Firmware/Software:** FW 1.60 and higher

---

**LOGGer:SLOT:SLOT<m>:HASData?**

Queries if the slot has data.

**Suffix:**

<m>                    1..10  
                         Slot number

**Return values:**

<HasData>            1 | 0  
                         1: data available  
                         0: slot is empty  
                         \*RST:        0

**Usage:**                Query only

**Firmware/Software:** FW 1.60 and higher

---

**LOGGer:SLOT:SLOT<m>:START? <Year>, <Month>, <Day>, <Hour>, <Min>, <Sec>**

Returns the start time of the logger record. If the slot is empty, the command returns an error.

**Suffix:**

<m>                    1..10  
                         Slot number

**Query parameters:**

<Year>, <Month>,    Date and time of the slot start  
<Day>, <Hour>,  
<Min>, <Sec>,  
<ZSec>

**Usage:**                Query only

**Firmware/Software:** FW 1.60 and higher

---

**LOGGer:SLOT:LOAD**

Loads the logger record of a slot, and activates the slot. The slot is defined using [LOGGer:SLOT:CURRent](#).

**Usage:**                Event

---

**LOGGer:SLOT:CLEar**

Deletes the log data of a slot. The slot is defined using [LOGGer:SLOT:CURRent](#).

Only possible while logging is stopped.

**Usage:**                Event

**LOGGer:ACLR**

Deletes the log data of all slots. Only possible while logging is stopped.

**Usage:** Event

**14.10.2 Scaling**

LOGGer:AUToset.....	399
LOGGer:MEASurement<m>:VERTical:AUTO.....	399
LOGGer:MEASurement<m>:VERTical:UPPer.....	399
LOGGer:MEASurement<m>:VERTical:LOWer.....	399
LOGGer:MEASurement<m>:VERTical:DEViation.....	400
LOGGer:MEASurement<m>:VERTical:MEAN.....	400

**LOGGer:AUToset**

Sets all logger channels to automatic scaling.

**Usage:** Event

**Firmware/Software:** FW 1.60 and higher

**LOGGer:MEASurement<m>:VERTical:AUTO [<State>]**

Enables or disables the vertical auto scaling for the specified logger channel.

Using the command without parameter performs auto scaling once, without changing the state.

**Suffix:**

<m> 1..4  
Logger channel

**Parameters:**

<State> ON | OFF  
\*RST: ON

**Example:**

```
LOGGer:MEASurement1:VERTical:AUTO 0 //sets manual scaling for ch1
LOGGer:MEASurement1:VERTical:AUTO //autoscales logger channel 1
LOGGer:MEASurement1:VERTical:AUTO?
<-- 0 //state is unchanged (off)
```

**Firmware/Software:** FW 1.60 and higher

**LOGGer:MEASurement<m>:VERTical:UPPer <Upper>, [<Lower>]****LOGGer:MEASurement<m>:VERTical:LOWer <Lower>, [<Upper>]**

Set the upper and lower range limits for the specified logger channel. The values must differ. You can set both values using only one of the commands (see examples). The query returns the mandatory parameter.



The commands disable the vertical auto scaling.

**Suffix:**

<m> 1..4  
Logger channel

**Parameters:**

<Lower> Lower range limit

**Setting parameters:**

<Upper> Upper range limit

**Example:**

Set the lower value to -1 and the upper value to +1 using both commands:

```
LOGGer:MEASurement1:VERTical:LOWer -1
LOGGer:MEASurement1:VERTical:UPPer +1
```

**Example:**

Set the lower value to -1 and the upper value to +1 using one command:

```
LOGGer:MEASurement1:VERTical:LOWer -1, +1
//or
LOGGer:MEASurement1:VERTical:UPPer +1, -1
```

**Firmware/Software:** FW 1.60 and higher

**LOGGer:MEASurement<m>:VERTical:DEVIation <Deviation>**

Sets the distance between the lower range and the mean value and between the upper range and the mean value.

The command disables the vertical auto scaling.

See also: [LOGGer:MEASurement<m>:VERTical:MEAN](#).

**Suffix:**

<m> 1..4  
Logger channel

**Parameters:**

<Deviation> Absolute difference between mean value and upper/lower range  
Range: 1E-15 to 100E+24  
Increment: 1  
\*RST: 0.707

**Firmware/Software:** FW 1.60 and higher

**LOGGer:MEASurement<m>:VERTical:MEAN <Mean>, [<Deviation>]**

Sets the mean value of the scaling range. In addition, you can set the deviation. The query returns the mean value.

The command disables the vertical auto scaling.

Use this command if you want to define the range based on the mean value and the standard deviation, see `LOGGer:MEASurement<m>:RESult:MEAN?` and `LOGGer:MEASurement<m>:RESult:STDDev?` on page 406.

**Suffix:**

<m> 1..4  
Logger channel

**Parameters:**

<Mean> Middle value between the upper and lower scaling value.

**Setting parameters:**

<Deviation> Absolute difference between mean value and upper/lower scaling value

**Example:**

```
LOGGer:MEASurement1:VERTical:MEAN 10, 1
```

Sets the mean value to 10, and the deviation to 1. Thus, the upper range is  $10 + 1 = 11$ , and the lower range is  $10 - 1 = 9$ .

**Firmware/Software:** FW 1.60 and higher

## 14.10.3 Cursor in Logger Mode

### 14.10.3.1 Cursor Settings

<code>LOGGer:CURSor[:STATe]</code> .....	401
<code>LOGGer:CURSor:TYPE</code> .....	401
<code>LOGGer:CURSor:SCPLing</code> .....	402
<code>LOGGer:CURSor:COUPling</code> .....	402
<code>LOGGer:CURSor:SCReen</code> .....	402

---

#### `LOGGer:CURSor[:STATe]` <Enabled>

Enables or disables the logger cursor measurement.

**Parameters:**

<Enabled> ON | OFF  
\*RST: OFF

---

#### `LOGGer:CURSor:TYPE` <Value>

If data logging is running for more than 2 days and 7 hours, the logger compresses 4 logging values into a minimum, average and maximum value. The command defines which of these values are measured at the cursor position.

For logging periods shorter than 2 days and 7 hours, the command is not relevant.

**Parameters:**

<Value> MINimum | AVERage | MAXimum  
\*RST: AVERage

**LOGGer:CURSor:SCPLing** <TrackScaling>

If ON, the position of the cursor lines is adjusted when the horizontal scale is changed. If OFF, the cursor lines remain on their position on the display when the scaling is changed.

**Parameters:**

<TrackScaling>      ON | OFF  
\*RST:                OFF

**LOGGer:CURSor:COUPLing** <Coupling>

Couples the cursor lines so that the distance between the two lines remains the same when one cursor is moved.

**Parameters:**

<Coupling>            ON | OFF  
\*RST:                OFF

**LOGGer:CURSor:SCReen**

Sets the cursors to a default position on the screen.

**Usage:**                Event

**14.10.3.2 Cursor Results**

LOGGer:CURSor<m>:RESult<n>[:AMPLitude]?	402
LOGGer:CURSor:RESult<n>:DELTA?	403
LOGGer:CURSor<m>:POSition	403
LOGGer:CURSor:TDELta?	403

**LOGGer:CURSor<m>:RESult<n>[:AMPLitude]?**

Returns the measured value at the specified cursor line (y1 and y2 on the result display).

**Suffix:**

<m>                      1..2  
                             Specifies the cursor line.

<n>                      1..4  
                             Specifies the measurement. You can log the results of up to four active measurements.

**Return values:**

<Yvalue>                Measurement value

**Usage:**                Query only

**LOGGer:CURSor:RESult<n>:DELta?**

Returns the difference of the measured values at cursor line 1 and cursor line 2 ( $\Delta y$  on the result display).

**Suffix:**

<n> 1..4  
Specifies the measurement. You can log the results of up to four active measurements.

**Return values:**

<ResultDelta> Absolute value of the result difference.

**Usage:** Query only

**LOGGer:CURSor<m>:POSition**

Returns or sets the timestamp (absolute time) of the specified cursor line (t1 and t2 on the result display).

**Suffix:**

<m> 1..2  
Specifies the cursor line.

**Parameters:**

<Time> List of values:  
<Year>, <Month>, <Day>, <Hour>, <Minute>, <Second>, <TenthsOfSecond>  
Year, month, day, hour, minute, second, tenth of a second, for example 2015, 10, 29, 16, 10, 22, 2

**LOGGer:CURSor:TDELta?**

Returns the time difference of the cursor lines (t1 and t2 on the result display).

**Return values:**

<DeltaTime> List of values:  
<Day>; <Hour>; <Minute>; <Second>; <TenthsOfSecond>  
Days, hours, minutes, seconds, tenth of a second, for example 1, 9, 10, 22, 5

**Usage:** Query only

**14.10.4 Zoom in Logger mode**

LOGGer:ZOOM:ENABLE.....	404
LOGGer:ZOOM:SCALE.....	404
LOGGer:ZOOM:POSition.....	404

**LOGGer:ZOOM:ENABLe** <Zoom Enabled>

Enables or disables the logger zoom.

**Parameters:**

<Zoom Enabled>      ON | OFF  
 \*RST:                OFF

**LOGGer:ZOOM:SCALe** <Zoom Scale>

Sets the time scale of the zoomed waveform.

**Parameters:**

<Zoom Scale>            AUTO | S1 | S2 | S4 | S5 | S10 | S20 | S40 | M1 | M2 | M4 | M5 |  
 M10 | M20 | M40 | H1 | H2 | H4 | H5 | H10 | H20 | D1 | D2 | D4

**LOGGer:ZOOM:POSition** <Time>

Sets or returns the position of the left edge of the zoomed area in relation to the left side of the display.

**Return values:**

<Time>                    List of values:  
 <Year>, <Month>, <Day>, <Hour>, <Minute>, <Second>,  
 <TenthsOfSecond>  
 Year, month, day, hour, minute, second, tenth of a second, for  
 example 2016, 10, 29, 16, 10, 22, 2

**Example:**                After 5 hours of logging, you want to see the first sample in the zoom. Therefore, you enter the start time as zoom position. If you scale the zoom, the start position remains.

### 14.10.5 Logger Statistics

The suffix <m> specifies the measurement that is logged.

LOGGer:RECOrding:STARt?	405
LOGGer:RECOrding:TOTal?	405
LOGGer:MEASurement<m>:RESult:CURRentsampl?	405
LOGGer:MEASurement<m>:RESult:MAXimum:POSition?	405
LOGGer:MEASurement<m>:RESult:MAXimum:VALue?	405
LOGGer:MEASurement<m>:RESult:MINimum:POSition?	406
LOGGer:MEASurement<m>:RESult:MINimum:VALue?	406
LOGGer:MEASurement<m>:RESult:MEAN?	406
LOGGer:MEASurement<m>:RESult:STDDev?	406
LOGGer:MEASurement<m>:ENABled?	407
LOGGer:MEASurement<m>:TYPE?	407
LOGGer:MEASurement<m>:SOURce?	407

---

**LOGGer:RECOrding:STARt?**

Returns the absolute start time of the current logging session.

**Return values:**

<StartTime>            Year, month, day, hour, minute, second, tenth of a second, for example 2015, 10, 29, 16, 10, 22, 2

**Usage:**                    Query only

---

**LOGGer:RECOrding:TOTAl?**

Returns the total duration of the current logging session.

**Return values:**

<Time>                    List of values:  
                             <Days>, <Hours>, <Minutes>, <Seconds>,  
                             <TenthsOfSecond>  
                             For example: 1, 1, 42, 32, 2

**Usage:**                    Query only

---

**LOGGer:MEASurement<m>:RESult:CURRentsampl?**

Returns the actual logging value of the selected measurement.

**Suffix:**

<m>                        1..4

**Return values:**

<CurrentSample>        Range:        -100E+24 to 100E+24  
                             Increment: 100E-12  
                             \*RST:        0

**Usage:**                    Query only

---

**LOGGer:MEASurement<m>:RESult:MAXimum:POSition?**

Returns the time stamp of the maximum logging value of the selected measurement.

**Suffix:**

<m>                        1..4

**Return values:**

<TimeOfMax>

**Usage:**                    Query only

---

**LOGGer:MEASurement<m>:RESult:MAXimum:VALue?**

Returns the maximum logging value of the selected measurement.

**Suffix:**

&lt;m&gt; 1..4

**Return values:**

<Maximum> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0

**Usage:** Query only**LOGGer:MEASurement<m>:RESult:MINimum:POSition?**

Returns the time stamp of the minimum logging value of the selected measurement.

**Suffix:**

&lt;m&gt; 1..4

**Return values:**

&lt;TimeOfMin&gt;

**Usage:** Query only**LOGGer:MEASurement<m>:RESult:MINimum:VALue?**

Returns the minimum logging value of the selected measurement.

**Suffix:**

&lt;m&gt; 1..4

**Return values:**

<Minimum> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0

**Usage:** Query only**LOGGer:MEASurement<m>:RESult:MEAN?**

Returns the mean logging value of the selected measurement.

**Suffix:**

&lt;m&gt; 1..4

**Return values:**

<Average> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0

**Usage:** Query only**LOGGer:MEASurement<m>:RESult:STDDev?**

Returns the standard deviation value of the selected measurement.

**Suffix:**  
 <m> 1..4

**Return values:**  
 <StdDeviation> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0

**Usage:** Query only

**LOGGer:MEASurement<m>:ENABLEd?**

Returns the measurement state of scope and meter measurements.

**Suffix:**  
 <m> 1..4

**Return values:**  
 <Enabled> ON | OFF  
 \*RST: OFF

**Usage:** Query only

**LOGGer:MEASurement<m>:TYPE?**

Returns the measurement type of the selected measurement.

**Suffix:**  
 <m> 1..4

**Return values:**  
 <Type> See [MEASurement<m>:TYPE](#) on page 319.

**Usage:** Query only

**LOGGer:MEASurement<m>:SOURce?**

Returns the source channel of the selected measurement.

**Suffix:**  
 <m> 1..4

**Return values:**  
 <Source> C1 | C2 | C3 | C4 | M1 | R1 | XY | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 <Source2> C1 | C2 | C3 | C4 | M1 | R1 | XY | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7

**Example:**  
 LOGGer:MEASurement4:SOURce?  
 <-- C2,C1  
 Measurement 4 is a delay measurement on source 1 = C2 and source 2 = C1

**Usage:** Query only



## 14.10.6 Logger Records

You can export the data of an active slot to a file, in CSV or MAT format. See also: [Chapter 7.6, "Export of Logger Records"](#), on page 160.

<a href="#">LOGGer:SLOT:ACTive?</a> .....	408
<a href="#">LOGGer:SLOT:EXPort:NAME</a> .....	408
<a href="#">LOGGer:SLOT:EXPort:SAVE</a> .....	408

---

### LOGGer:SLOT:ACTive?

Returns the active, loaded slot. In stop mode, the loaded (active) slot and selected (current) slot can differ. In run mode, the slots are the same, and this command shows the same as [LOGGer:SLOT:CURRent](#).

#### Return values:

```
<LoadedSlot>          SLOT1 | SLOT2 | SLOT3 | SLOT4 | SLOT5 | SLOT6 | SLOT7 |
                      SLOT8 | SLOT9 | SLOT10
                      *RST:   SLOT1
```

**Usage:** Query only

---

### LOGGer:SLOT:EXPort:NAME <Name>

Sets the file name, file format and path to save the logger record.

#### Parameters:

```
<Name>                String with path and file name with extension .csv or .mat.
```

---

### LOGGer:SLOT:EXPort:SAVE

Saves the logger record of the active slot to the file specified with [LOGGer:SLOT:EXPort:NAME](#). The active slot is queried with [LOGGer:SLOT:ACTive?](#).

#### Example:

```
RUN
LOGGer:SLOT:CURRent SLOT2
STOP
LOGGer:SLOT:ACTive?
<-- SLOT2
LOGGer:SLOT:EXPort:NAME '/media/USB1/SLOT2.MAT'
LOGGer:SLOT:EXPort:SAVE
```

**Usage:** Event

## 14.11 Protocol Analysis

• <a href="#">General Protocol Settings</a> .....	409
• <a href="#">I2C (Option R&amp;S RTH-K1)</a> .....	409
• <a href="#">SPI (Option R&amp;S RTH-K1)</a> .....	420

- [UART/RS-232/RS-422/RS-485 \(Option R&S RTH-K2\)](#)..... 427
- [CAN \(Option R&S RTH-K3/R&S RTH-K9\)](#).....433
- [LIN \(Option R&S RTH-K3\)](#)..... 449
- [SENT \(Option R&S RTH-K10\)](#)..... 458

### 14.11.1 General Protocol Settings

- [BUS:TYPE](#)..... 409
- [BUS\[:STATe\]](#).....409
- [BUS:FORMat](#)..... 409

---

#### BUS:TYPE <Protocol>

Defines protocol type of the bus for configuration and trigger settings.

**Parameters:**

<Protocol>            I2C | SPI | UART | CAN | LIN | SENT  
 \*RST:                I2C

---

#### BUS[:STATe] <State>

Enables the decoding and the display of the serial bus data.

**Parameters:**

<State>                ON | OFF  
 \*RST:                OFF

---

#### BUS:FORMat <NumberFormat>

Sets the decoding format of the data.

**Parameters:**

<NumberFormat>    BIN | OCT | DEC | HEX | ASCii  
 \*RST:                HEX

### 14.11.2 I2C (Option R&S RTH-K1)

- [I2C Configuration Settings](#)..... 409
- [I2C Trigger](#)..... 411
- [I2C Decode Results](#)..... 413

#### 14.11.2.1 I2C Configuration Settings

- [BUS:I2C:SCL:SOURce](#).....410
- [BUS:I2C:SDA:SOURce](#)..... 410
- [BUS:I2C:TECHnology](#)..... 410

<a href="#">BUS:I2C:SCL:THReshold</a> .....	410
<a href="#">BUS:I2C:SDA:THReshold</a> .....	410
<a href="#">BUS:SETReflevels</a> .....	410

---

**BUS:I2C:SCL:SOURce** <Channel>

**BUS:I2C:SDA:SOURce** <Channel>

Set the input channels of the I2C lines.

**Parameters:**

<Channel> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7

C3 and C4: only R&S RTH1004

Digital channels are available if option R&S RTH-B1 is installed.

\*RST: C1

---

**BUS:I2C:TECHnology** <ThresholdType>

Sets the threshold values of all I2C lines as defined for various signal technologies.

**Parameters:**

<ThresholdType> TTL | ECL | CMOS | USER

**TTL**

1.4 V

**ECL**

-1.3 V

**CMOS**

2.5 V

**USER**

Set a user-defined value for each line using the

`BUS:I2C:<line>:THReshold` commands.

\*RST: TTL

**Usage:** SCPI confirmed

---

**BUS:I2C:SCL:THReshold** <ThresholdValue>

**BUS:I2C:SDA:THReshold** <ThresholdValue>

Set a user-defined threshold value for the corresponding line if `BUS:I2C:TECHnology` is set to `USER`.

**Parameters:**

<ThresholdValue> Range: -400 to 400

Increment: 1E-3

\*RST: 1.4

Default unit: V

---

**BUS:SETReflevels**

Sets the appropriate threshold or threshold for the selected serial protocol.

**Usage:** Event

### 14.11.2.2 I2C Trigger

TRIGger:I2C:MODE.....	411
TRIGger:I2C:ADNack.....	411
TRIGger:I2C:DRNack.....	411
TRIGger:I2C:DWNack.....	412
TRIGger:I2C:ACCess.....	412
TRIGger:I2C:ACONdition.....	412
TRIGger:I2C:ADDRess.....	412
TRIGger:I2C:DATA.....	412
TRIGger:I2C:DCONdition.....	413
TRIGger:I2C:DPOsition.....	413

---

#### TRIGger:I2C:MODE <TriggerType>

Selects the trigger type for I<sup>2</sup>C analysis.

##### Parameters:

<TriggerType> START | REStart | STOP | NACK | ADDRess | DATA | ADAT

NACK = Missing acknowledge bit

ADAT = combination of address and data condition

For details, see "I2C Trigger" on page 174.

\*RST: START

---

#### TRIGger:I2C:ADNack <TrigOnNoAckForAddress>

Set ON to trigger if no slave recognizes the address.

The command takes effect if TRIGger:I2C:MODE is NACK.

##### Parameters:

<TrigOnNoAckForAddress> ON | OFF

\*RST: ON

---

#### TRIGger:I2C:DRNack <NoAckDataRead>

Set ON to trigger if the end of the read process is marked when the master reads data from the slave. This Nack is sent according to the protocol definition, it is not an error.

The command takes effect if TRIGger:I2C:MODE is NACK.

##### Parameters:

<NoAckDataRead> ON | OFF

\*RST: ON

**TRIGger:I2C:DWNack** <NoAckDataWrite>

Set ON to trigger if the addressed slave does not accept the written data, and the write data acknowledge bit is missing.

The command takes effect if **TRIGger:I2C:MODE** is NACK.

**Parameters:**

<NoAckDataWrite> ON | OFF  
\*RST: ON

**TRIGger:I2C:ACCess** <ReadWriteBit>

Toggles the trigger condition between read and write access of the master. Select "Either" if the transfer direction is not relevant for the trigger condition.

The command takes effect if **TRIGger:I2C:MODE** is ADDRESS or ADAT.

**Parameters:**

<ReadWriteBit> READ | WRITE | EITHER  
\*RST: EITHER

**TRIGger:I2C:ACONdition** <Relation>

Defines how the specified serial address pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal to the pattern.

**Parameters:**

<Relation> EQUAL | NEQUAL  
\*RST: EQUAL

**TRIGger:I2C:ADDRESS** <Pattern>

Specifies the address pattern to be found, in binary format. Enter the pattern in MSB first bit order.

**Parameters:**

<Pattern> String with max. 7 or 10 characters, depending on the address length. Characters 0, 1, and X are allowed. If you define a pattern shorter than the address length, the missing LSB are filled with X.

**Example:**

TRIG:I2C:ADDR "10110"  
Sets the 7 bit address pattern 10110XX.

**TRIGger:I2C:DATA** <Pattern>

Defines the data pattern as trigger condition. Enter the words in MSB first bit order.

**Parameters:**

<Pattern> String with max. 4 bytes in binary format. Characters 0, 1, and X are allowed. If you define a pattern with incomplete byte, the missing LSB are filled with X.

**Example:**

```
TRIGger:I2C:DATA '11111111000000001111'
TRIGger:I2C:DATA?
<-- 11111111000000001111XXXX
```

**TRIGger:I2C:DCONdition <Relation>**

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired data is equal or unequal to the pattern.

**Parameters:**

<Relation>           EQUal | NEQual  
\*RST:                EQUal

**TRIGger:I2C:DPOSITION <ByteOffset>**

Sets the number of bytes before the first byte of the data pattern. These bytes are ignored.

**Parameters:**

<ByteOffset>           Range:     0 to 4095  
                          Increment: 1  
\*RST:                 0

**14.11.2.3 I2C Decode Results**

The frame suffix <m> selects the frame index for which the result is queried.

The byte suffix <n> selects the byte index for which the result is queried.

BUS:I2C:FCOunt?	414
BUS:I2C:FRAMe<m>:AACcess?	414
BUS:I2C:FRAMe<m>:ACCess?	414
BUS:I2C:FRAMe<m>:ACOMplete?	414
BUS:I2C:FRAMe<m>:ADBStart?	415
BUS:I2C:FRAMe<m>:ADDRess?	415
BUS:I2C:FRAMe<m>:ADEVice?	415
BUS:I2C:FRAMe<m>:AMODE?	415
BUS:I2C:FRAMe<m>:ASTart?	416
BUS:I2C:FRAMe<m>:BCOunt?	416
BUS:I2C:FRAMe<m>:BYTE<n>:ACCess?	416
BUS:I2C:FRAMe<m>:BYTE<n>:ACKStart?	416
BUS:I2C:FRAMe<m>:BYTE<n>:COMplete?	417
BUS:I2C:FRAMe<m>:BYTE<n>:START?	417
BUS:I2C:FRAMe<m>:BYTE<n>:VALue?	417
BUS:I2C:FRAMe<m>:DATA?	418
BUS:I2C:FRAMe<m>:RWBStart?	418

BUS:I2C:FRAME<m>:START?.....	418
BUS:I2C:FRAME<m>:STATUS?.....	418
BUS:I2C:FRAME<m>:STOP?.....	419

---

### BUS:I2C:FCOut?

Returns the number of decoded frames.

#### Return values:

<Count> Total number of decoded frames.  
 Range: 0 to 100000  
 Increment: 1  
 \*RST: 0

**Usage:** Query only

---

### BUS:I2C:FRAME<m>:AACcess?

Returns the address acknowledge bit value for the indicated frame.

#### Suffix:

<m> \*

#### Return values:

<AddressAckBit> INComplete | ACK | NACK | EITHER  
 \*RST: INComplete

**Usage:** Query only

---

### BUS:I2C:FRAME<m>:ACCess?

Returns the value of the R/W bit of the indicated frame.

#### Suffix:

<m> \*

#### Return values:

<RWBit> READ | WRITe | EITHER | UNDeFined  
 \*RST: UNDeFined

**Usage:** Query only

---

### BUS:I2C:FRAME<m>:ACOMplete?

Returns if the address is completely contained in the acquisition.

#### Suffix:

<m> \*

#### Return values:

<AddressComplete> 1 | 0  
 \*RST: OFF

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:ADBStart?**

Returns the start time of the address acknowledge bit.

**Suffix:**

<m> \*

**Return values:**

<AddressAckBitStart> Range: -100E+24 to 100E+24  
Increment: 100E-12  
\*RST: 0  
Default unit: s

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:ADDRess?**

Returns the address value of the indicated frame including the R/W bit.

**Suffix:**

<m> \*

**Return values:**

<Address> Range: 0 to 2047  
Increment: 1  
\*RST: 0

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:ADEVice?**

Returns the pure device address of the indicated frame without the R/W bit.

**Suffix:**

<m> \*

**Return values:**

<DeviceAddress> Range: 0 to 1023  
Increment: 1  
\*RST: 0

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:AMODE?**

Returns the address length.

**Suffix:**

<m> \*



**Return values:**  
 <AddressType> BIT7 | BIT10 | ANY  
 \*RST: BIT7

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:AStart?**

Returns the start time of the address for the indicated frame.

**Suffix:**  
 <m> \*

**Return values:**  
 <AddressStartTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:BCOut?**

Returns the number of bytes in the specified frame.

**Suffix:**  
 <m> \*

**Return values:**  
 <Count> Byte count

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:BYTE<n>:ACcESS?**

Returns the acknowledge bit value of the specified data byte.

**Suffix:**  
 <m> \*  
 <n> \*

**Return values:**  
 <AckBit> INComplete | ACK | NACK | EITHer  
 \*RST: INComplete

**Usage:** Query only

---

#### **BUS:I2C:FRAME<m>:BYTE<n>:ACKStart?**

Returns the start time of the acknowledge bit of the specified byte.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<AckBitStartTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only**BUS:I2C:FRAME<m>:BYTE<n>:COMPLete?**

Returns if the indicated byte is completely contained in the acquisition.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<IsComplete> 1 | 0  
 \*RST: OFF

**Usage:** Query only**BUS:I2C:FRAME<m>:BYTE<n>:START?**

Returns the start time of the specified data byte.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<StartTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only**BUS:I2C:FRAME<m>:BYTE<n>:VALue?**

Returns the data value of the specified byte.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<Value>            Range:     0 to 255  
                       Increment: 1  
                       \*RST:     0

**Usage:**            Query only

---

**BUS:I2C:FRAME<m>:DATA?**

Returns the data words of the specified frame.

**Suffix:**

<m>                    \*

**Parameters:**

<Data>                Comma-separated list of values.

**Usage:**            Query only

---

**BUS:I2C:FRAME<m>:RWBStart?**

Returns the start time of the R/W bit.

**Suffix:**

<m>                    \*

**Return values:**

<RWBitStartTime>   Range:     -100E+24 to 100E+24  
                           Increment: 100E-12  
                           \*RST:     0  
                           Default unit: s

**Usage:**            Query only

---

**BUS:I2C:FRAME<m>:START?**

Returns the start time of the specified frame.

**Suffix:**

<m>                    \*

**Return values:**

<StartTime>         Range:     -100E+24 to 100E+24  
                           Increment: 100E-12  
                           \*RST:     0  
                           Default unit: s

**Usage:**            Query only

---

**BUS:I2C:FRAME<m>:STATus?**

Returns the overall state of the frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

&lt;Status&gt; OK | VOID | ADNack | WRNack | SPERror | STERror | INSufficient

**OK**

The frame is valid.

**VOID**

The frame is empty.

**ADNack**

Missing acknowledge bit after address - no slave recognizes the address.

**WRNack**

Missing acknowledge bit after written data - the addressed slave does not accept the written data.

**SPERror**

Stop error, no stop condition found.

**STERror**

Start error, no start condition found.

**INSufficient**

The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

\*RST: OK

**Usage:**

Query only

**BUS:I2C:FRAMe<m>:STOP?**

Returns the end time of the specified frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

&lt;StopTime&gt; Range: -100E+24 to 100E+24

Increment: 100E-12

\*RST: 0

Default unit: s

**Usage:**

Query only

### 14.11.3 SPI (Option R&S RTH-K1)

#### 14.11.3.1 SPI Configuration Settings

BUS:SPI:SCLK:SOURce.....	420
BUS:SPI:SSEL:SOURce.....	420
BUS:SPI:MOSI:SOURce.....	420
BUS:SPI:MISO:SOURce.....	420
BUS:SPI:SCLK:SLOPe.....	420
BUS:SPI:SSEL:POLarity.....	420
BUS:SPI:TECHnology.....	421
BUS:SPI:SCLK:THReshold.....	421
BUS:SPI:SSEL:THReshold.....	421
BUS:SPI:MOSI:THReshold.....	421
BUS:SPI:MISO:THReshold.....	421
BUS:SETReflevels.....	421
BUS:SPI:WSIZe.....	421
BUS:SPI:ORDer.....	422
BUS:SPI:TIMeout.....	422

---

**BUS:SPI:SCLK:SOURce** <Channel>

**BUS:SPI:SSEL:SOURce** <Channel>

**BUS:SPI:MOSI:SOURce** <Channel>

**BUS:SPI:MISO:SOURce** <Channel>

Set the input channels of the SPI lines.

**Parameters:**

<Channel> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | NONE

C3 and C4: only R&S RTH1004

Dx: Digital channels are available if option R&S RTH-B1 is installed.

NONE: not available for clock line SCLK.

\*RST: C1

---

**BUS:SPI:SCLK:SLOPe** <ClockEdge>

Selects if data are sampled on the rising or falling slope of the clock. The clock slope marks the begin of a new bit.

**Parameters:**

<ClockEdge> POSitive | NEGative

\*RST: POSitive

---

**BUS:SPI:SSEL:POLarity** <ChipSelectPolarity>

Selects whether the chip select signal is high active (high = 1) or low active (low = 1).

**Parameters:**

<ChipSelectPolarity> ACTLow | ACTHigh  
 \*RST: ACTHigh

**BUS:SPI:TECHnology** <ThresholdType>

Sets the threshold values of all SPI lines as defined for various signal technologies.

**Parameters:**

<ThresholdType> TTL | ECL | CMOS | USER

**TTL**

1.4 V

**ECL**

-1.3 V

**CMOS**

2.5 V

**USER**

Set a user-defined value for each line using the  
 BUS:SPI:<line>:THReshold commands.

\*RST: TTL

**Usage:** SCPI confirmed

**BUS:SPI:SCLK:THReshold** <ThresholdValue>**BUS:SPI:SSEL:THReshold** <ThresholdValue>**BUS:SPI:MOSI:THReshold** <ThresholdValue>**BUS:SPI:MISO:THReshold** <ThresholdValue>

Set a user-defined value for the corresponding line if [BUS:SPI:TECHnology](#) is set to USER.

**Parameters:**

<ThresholdValue> Range: -400 to 400  
 Increment: 1E-3  
 \*RST: 1.4  
 Default unit: V

**BUS:SETReflevels**

Sets the appropriate threshold or threshold for the selected serial protocol.

**Usage:** Event

**BUS:SPI:WSize** <WordLength>

Sets the number of bits in a word.

**Parameters:**

<WordLength> WL4Bit | WL8Bit | WL12bit | WL16bit | WL20bit | WL24bit |  
 WL28bit | WL32bit  
 \*RST: WL8Bit

**BUS:SPI:ORder** <BitOrder>

Defines if the data of the words starts with MSB (most significant bit) or LSB (least significant bit). Results are displayed in the specified order.

**Parameters:**

<BitOrder> LSBF | MSBF  
 \*RST: MSBF

**BUS:SPI:TIMEout** <FrameTimeout>

Sets the minimum idle time between two data frames. If the time interval between the data frames is shorter, the words are part of the same frame. Within the timeout, the data and clock lines are low. A new frame begins when the timeout has expired.

Timeout is only relevant if the bus has no chip select.

**Parameters:**

<FrameTimeout> Range: 500E-9 to 1000  
 Increment: 1E-3  
 \*RST: 1E-3  
 Default unit: s

**14.11.3.2 SPI Trigger**

TRIGger:SPI:MODE.....	422
BUS:SPI:SSEL:STATe.....	423
TRIGger:SPI:DSRC.....	423
TRIGger:SPI:DATA.....	423
TRIGger:SPI:DCONDition.....	423
TRIGger:SPI:DPOSition.....	423

**TRIGger:SPI:MODE** <TriggerType>

Selects the trigger type for SPI analysis.

**Parameters:**

<TriggerType> FRST | FREN | DATA  
 FRST = frame start  
 FREN = frame end  
 DATA = data.  
 For details, see "SPI Trigger" on page 182.  
 \*RST: FRST

---

**BUS:SPI:SSEL:STATe** <UseChipSelect>

Defines if the SPI bus uses a chip select line or not.

**Parameters:**

<UseChipSelect>    ON | OFF  
\*RST:            ON

---

**TRIGger:SPI:DSRC** <DataSource>

Selects the line, on which the trigger pattern is expected.

**Parameters:**

<DataSource>        MISO | MOSI  
\*RST:            MISO

---

**TRIGger:SPI:DATA** <Pattern>

Specifies the data pattern to be found on the specified line, in binary format. Enter the words in MSB first bit order.

**Parameters:**

<Pattern>            String with max. 32 bit in binary format. Characters 0, 1, and X are allowed.

**Example:**

```
TRIGger:SPI:DATA '111000'  
TRIGger:SPI:DATA?  
<--111000  
Specifies a 6 bit pattern. Higher bits are omitted.
```

---

**TRIGger:SPI:DCONDition** <Relation>

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired data is equal or unequal to the pattern.

**Parameters:**

<Relation>            EQUal | NEQual  
\*RST:            EQUal

---

**TRIGger:SPI:DPOSition** <BitOffset>

Sets the number of bits before the first bit of the pattern. These bits are ignored. The first bit after CS or timeout is bit 0.

**Parameters:**

<BitOffset>            Range:    0 to 4095  
                          Increment: 1  
\*RST:            0

---



### 14.11.3.3 SPI Decode Results

The frame suffix <m> selects the frame index for which the result is queried.

The byte suffix <n> selects the byte index for which the result is queried.

BUS:SPI:FCOunt?	424
BUS:SPI:FRAME<m>:DATA?	424
BUS:SPI:FRAME<m>:STATus?	424
BUS:SPI:FRAME<m>:STARt?	425
BUS:SPI:FRAME<m>:STOP?	425
BUS:SPI:FRAME<m>:WCOunt?	425
BUS:SPI:FRAME<m>:WORD<n>:MISO?	426
BUS:SPI:FRAME<m>:WORD<n>:MOSI?	426
BUS:SPI:FRAME<m>:WORD<n>:STARt?	426
BUS:SPI:FRAME<m>:WORD<n>:STOP?	427

---

#### BUS:SPI:FCOunt?

Returns the number of decoded frames.

##### Return values:

<Count>	Total number of decoded frames.
	Range: 0 to 100000
	Increment: 1
	*RST: 0

**Usage:** Query only

---

#### BUS:SPI:FRAME<m>:DATA?

Returns the data words of the specified frame.

##### Suffix:

<m>	*
	Selects the frame.

##### Parameters:

<Data>	List of decimal values of data bytes
--------	--------------------------------------

##### Example:

```
BUS:SPI:FRAM3:DATA?
<-- 94,177,171,60,242,219,100,0
```

**Usage:** Query only

---

#### BUS:SPI:FRAME<m>:STATus?

Returns the overall status of the specified frame.

##### Suffix:

<m>	*
	Selects the frame.

**Return values:**

<State> OK | VOID | FRERror | INSufficient  
 VOID: The frame is empty.  
 FRERror: error in the frame.  
 INSufficient: frame is not completely contained in the acquisition. The acquired part of the frame is valid.  
 \*RST: OK

**Usage:** Query only

**BUS:SPI:FRAME<m>:START?**

Returns the start time of the specified frame.

**Suffix:**

<m> \*  
 Selects the frame.

**Return values:**

<StartTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only

**BUS:SPI:FRAME<m>:STOP?**

Returns the end time of the specified frame.

**Suffix:**

<m> \*  
 Selects the frame.

**Return values:**

<StopTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only

**BUS:SPI:FRAME<m>:WCOunt?**

Returns the number of words in the specified frame.

**Suffix:**

<m> \*  
 Selects the frame.

**Return values:**

<Count> Number of words

**Usage:** Query only

---

**BUS:SPI:FRAME<m>:WORD<n>:MISO?**

Returns the data value of the specified word on the MISO line.

**Suffix:**

<m> \*  
Selects the frame.

<n> \*  
Selects the word number.

**Return values:**

<MISOValue> Decimal value of the data word  
Range: 0 to 4294967295  
Increment: 1  
\*RST: 0

**Usage:** Query only

---

**BUS:SPI:FRAME<m>:WORD<n>:MOSI?**

Returns the data value of the specified word on the MOSI line.

**Suffix:**

<m> \*  
Selects the frame.

<n> \*  
Selects the word number.

**Return values:**

<MOSIValue> Decimal value of the data word  
Range: 0 to 4294967295  
Increment: 1  
\*RST: 0

**Usage:** Query only

---

**BUS:SPI:FRAME<m>:WORD<n>:START?**

Returns the start time of the specified data word.

**Suffix:**

<m> \*  
Selects the frame.

<n> \*  
Selects the word number.

**Return values:**

<StartTime>            Range:     -100E+24 to 100E+24  
                           Increment: 100E-12  
                           \*RST:     0  
                           Default unit: s

**Usage:**                Query only

**BUS:SPI:FRAME<m>:WORD<n>:STOP?**

Returns the end time of the specified data word.

**Suffix:**

<m>                        \*  
                               Selects the frame.

<n>                        \*  
                               Selects the word number.

**Return values:**

<StopTime>            Range:     -100E+24 to 100E+24  
                           Increment: 100E-12  
                           \*RST:     0  
                           Default unit: s

**Usage:**                Query only

**14.11.4    UART/RS-232/RS-422/RS-485 (Option R&S RTH-K2)**

- [UART Configuration](#)..... 427
- [UART Trigger](#)..... 431
- [UART Decode Results](#)..... 432

**14.11.4.1    UART Configuration**

[BUS:UART:SOURce](#)..... 428

[BUS:UART:POLarity](#)..... 428

[BUS:UART:TECHnology](#)..... 428

[BUS:UART:THReshold](#)..... 428

[BUS:SETRefllevels](#)..... 429

[BUS:UART:STDBitrate](#)..... 429

[BUS:UART:BITRate](#)..... 429

[BUS:UART:SSIZe](#)..... 429

[BUS:UART:PARity](#)..... 429

[BUS:UART:SBIT](#)..... 430

[BUS:UART:ORDer](#)..... 430

[BUS:UART:FRAMemode](#)..... 430

[BUS:UART:TOUT](#)..... 430

---

**BUS:UART:SOURce** <Channel>

Selects the input channel of the UART line.

**Parameters:**

<Channel> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
C3 and C4: only R&S RTH1004  
Digital channels are available if option R&S RTH-B1 is installed.  
\*RST: C1

---

**BUS:UART:POLarity** <Polarity>

Defines the logic states of the line. In idle high state, the idle state corresponds to a logic 1, and the start bit to a logic 0. In idle low state, the idle state corresponds to a logic 0, and the start bit to a logic 1. During idle time, no data is transmitted.

**Parameters:**

<Polarity> IDLLow | IDLHigh  
\*RST: IDLHigh

---

**BUS:UART:TECHnology** <ThresholdType>

Sets the threshold value of the UART line as defined for various signal technologies.

**Parameters:**

<ThresholdType> TTL | ECL | CMOS | USER  
**TTL**  
1.4 V  
**ECL**  
-1.3 V  
**CMOS**  
2.5 V  
**USER**  
Set a user-defined value using [BUS:UART:THReshold](#).  
\*RST: TTL

---

**BUS:UART:THReshold** <ThresholdValue>

Sets an individual threshold value for digitization of signals if [BUS:UART:TECHnology](#) is set to `USER`.

**Parameters:**

<ThresholdValue> Range: -400 to 400  
Increment: 1E-3  
\*RST: 1.4  
Default unit: V

---

**BUS:SETReflevels**

Sets the appropriate threshold or threshold for the selected serial protocol.

**Usage:** Event

---

**BUS:UART:STDBitrate** <Bitrate>

Sets the number of transmitted bits per second.

**Parameters:**

<Bitrate> BPS\_300 | BPS\_600 | BPS\_1200 | BPS\_2400 | BPS\_4800 |  
BPS\_9600 | BPS\_14400 | BPS\_19200 | BPS\_28800 |  
BPS\_38400 | BPS\_56000 | BPS\_57600 | BPS\_115200 |  
BPS\_128000 | BPS\_230400 | BPS\_460800 | BPS\_921600 |  
CUSTom

Values in bits per second.

CUSTom: Set the bit rate using [BUS:UART:BITRate](#).

\*RST: BPS\_14400

---

**BUS:UART:BITRate** <CustomBitrate>

Sets a user-defined bit rate if [BUS:UART:STDBitrate](#) is set to CUSTom.

**Parameters:**

<CustomBitrate> Range: 300 to 20000000  
Increment: 1  
\*RST: 14400  
Default unit: bps

---

**BUS:UART:SSIZE** <DataBits>

Sets the number of data bits in a word (symbol).

**Parameters:**

<DataBits> B5 | B6 | B7 | B8 | B9  
\*RST: B8

---

**BUS:UART:PARity** <Parity>

Defines the optional parity bit that is used for error detection.

**Parameters:**

<Parity> NONE | ODD | EVEN

**NONE**

No parity bit is used.

**ODD**

The parity bit is set to "1" if the number of data bits set to "1" is even.

**EVEN**

The parity bit is set to "1" if the number of data bits set to "1" is odd.

\*RST: NONE

**BUS:UART:SBIT** <StopBits>

Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

**Parameters:**

<StopBits> B1 | B15 | B2

\*RST: B1

**BUS:UART:ORDer** <BitOrder>

Defines if a word starts with MSB (most significant bit) or LSB (least significant bit). The display of the decoded signal considers this setting, results are displayed in the specified order.

**Parameters:**

<BitOrder> LSBF | MSBF

\*RST: MSBF

**BUS:UART:FRAMemode** <FrameMode>

IDLE defines frames of several words in the data stream, which are defined by a timeout between a stop bit and the next start bit. Enter the minimum timeout between two frames using [BUS:UART:TOUT](#).

**Parameters:**

<FrameMode> NONE | IDLE

\*RST: NONE

**BUS:UART:TOUT** <IdleTime>

Sets the minimum timeout between two frames if [BUS:UART:FRAMemode](#) is set to IDLE.

**Parameters:**

<IdleTime>            Range:     100E-9 to 1  
                          Increment: 1E-3  
                          \*RST:     1E-3  
                          Default unit: s

**14.11.4.2 UART Trigger**

TRIGger:UART:TYPE.....	431
TRIGger:UART:DATA.....	431
TRIGger:UART:DCondition.....	431

**TRIGger:UART:TYPE <TriggerType>**

Selects the trigger type for UART analysis.

**Parameters:**

<TriggerType>        STBT | PCKS | DATA | PRER | STPerror | BRKC  
 STBT = start bit  
 PCKS = frame start  
 PRER = parity error  
 STPerror = stop error  
 BRKC = break condition  
 DATA: : data. To set up the trigger condition, use [TRIGger:UART:DATA](#), and [TRIGger:UART:DCondition](#).  
 For details, see "UART Trigger" on page 188.  
 \*RST:            STBT

**TRIGger:UART:DATA <Pattern>**

Defines the data pattern as trigger condition. Enter the words in MSB first bit order.

**Parameters:**

<Pattern>            String with max. 8 bit in binary format. Characters 0, 1, and X are allowed.

**Example:**

```
TRIGger:UART:DATA '1x11'
TRIGger:UART:DATA?
1X11
```

**TRIGger:UART:DCondition <Relation>**

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired data is equal or unequal to the pattern.

**Parameters:**

<Relation>            EQUal | NEQUal  
 \*RST:            EQUal



### 14.11.4.3 UART Decode Results

The frame suffix <m> selects the frame index for which the result is queried.

The byte suffix <n> selects the byte index for which the result is queried.

BUS:UART:WCOunt?	432
BUS:UART:WORD<m>:STATe?	432
BUS:UART:WORD<m>:START?	432
BUS:UART:WORD<m>:STOP?	433
BUS:UART:WORD<m>:VALue?	433

---

#### BUS:UART:WCOunt?

Returns the number of decoded symbols (words).

##### Return values:

<Count>	Total number of decoded words.
	Range: 0 to 100000
	Increment: 1
	*RST: 0

**Usage:** Query only

---

#### BUS:UART:WORD<m>:STATe?

Returns the status of the specified symbol (word).

##### Suffix:

<m>	*
	Selects the word.

##### Return values:

<State>	OK   BREak   STERror   SPERror   PRERror   INSufficient
	OK: the frame is valid.
	BREak: break condition found. A start bit is not followed by a stop bit, and the data line remains at logic 0 for longer than a UART word.
	STERror: start error, no start bit found.
	SPError: stop error, no stop condition found.
	PRError: parity error, which indicates a transmission error.
	INSufficient: the frame is not completely contained in the acquisition. The acquired part of the frame is valid.
	*RST: OK

**Usage:** Query only

---

#### BUS:UART:WORD<m>:START?

Returns the start time of the specified symbol (word).

**Suffix:**  
 <m> \*  
 Selects the word.

**Return values:**  
 <StartTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only

**BUS:UART:WORD<m>:STOP?**

Returns the end time of the specified symbol (word).

**Suffix:**  
 <m> \*  
 Selects the word.

**Return values:**  
 <StopTime> Range: -100E+24 to 100E+24  
 Increment: 100E-12  
 \*RST: 0  
 Default unit: s

**Usage:** Query only

**BUS:UART:WORD<m>:VALue?**

Return the value of the specified symbol (word).

**Suffix:**  
 <m> \*  
 Selects the word.

**Return values:**  
 <Value> Decimal value  
 Range: 0 to 255  
 Increment: 1  
 \*RST: 0

**Usage:** Query only

**14.11.5 CAN (Option R&S RTH-K3/R&S RTH-K9)**

- [CAN Configuration Settings](#)..... 434
- [CAN Trigger](#)..... 437
- [CAN Decode Results](#)..... 442

### 14.11.5.1 CAN Configuration Settings

BUS:CAN:DATA:SOURce.....	434
BUS:CAN:TYPE.....	434
BUS:CAN:BITRate.....	434
BUS:CAN:TECHnology.....	435
BUS:CAN:DATA:THReshold.....	435
BUS:SETRefllevels.....	435
BUS:CAN:SAMPlepoint.....	435
BUS:CAN:FDATa:ABITRate.....	436
BUS:CAN:FDATa:ASAMPlepoint.....	436
BUS:CAN:FDATa:DBITRate.....	436
BUS:CAN:FDATa:DSAMPlepoint.....	436
BUS:CAN:FDATa:ENABLE.....	437
BUS:CAN:FDATa:PSTandard.....	437

---

#### BUS:CAN:DATA:SOURce <Channel>

Sets the input channel of the CAN line.

##### Parameters:

<Channel> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 C3 and C4: only R&S RTH1004  
 Digital channels are available if option R&S RTH-B1 is installed.  
 \*RST: C1

**Usage:** Asynchronous command

---

#### BUS:CAN:TYPE <SignalType>

Selects whether the chip select signal is high active (high = 1) or low active (low = 1).

##### Parameters:

<SignalType> CANH | CANL  
**CANH**  
 Signal is high active (high = 1).  
**CANL**  
 Signal is low active (low = 1).  
 \*RST: CANL

---

#### BUS:CAN:BITRate <CustomBitrate>

Sets the number of transmitted bits per second.

##### Parameters:

<CustomBitrate> Range: 10000 to 1000000  
 Increment: 1  
 \*RST: 50000  
 Default unit: bps

**BUS:CAN:TECHnology** <ThresholdType>**Parameters:**

<ThresholdType> TTL | ECL | CMOS | CAN | GND | LIN7vsupply | LIN12vsupply | LIN18vsupply | USER

**TTL**

1.4 V

**ECL**

-1.3 V

**CMOS**

2.5 V

**GND**

0 V (for CAN channels, requires option R&amp;S RTH-K3)

**CAN**

2 V (for CAN channels, requires option R&amp;S RTH-K3)

**LIN7vsupply | LIN12vsupply | LIN18vsupply**

7 V / 12 V / 18 V (for LIN channels, requires option R&amp;S RTH-K3)

**USER**Set the value with `CHANnel<m>:THReshold:USER`.

\*RST: CAN

**BUS:CAN:DATA:THReshold** <ThresholdValue>

Sets the threshold value for digitization of signals manually. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

This value is only considered for `BUS:CAN:TECHnology USER`

**Parameters:**

<ThresholdValue> Range: -400 to 400

Increment: 1E-3

\*RST: 1.4

Default unit: V

**BUS:SETReflevels**

Sets the appropriate threshold or threshold for the selected serial protocol.

**Usage:** Event

**BUS:CAN:SAMPlEpoint** <SamplePoint>

The sample point divides the nominal bit period into two distinct time segments. The length of the time segments is defined in time quanta according to network and node conditions during CAN development.

**Parameters:**

<SamplePoint> Range: 10 to 95  
Increment: 1  
\*RST: 75  
Default unit: %

---

**BUS:CAN:FDATa:ABITrate** <ArbCustomBitrate>

Sets the bit rate of the arbitration phase of the CAN FD bus.

The setting is available in CAN FD option R&S RTH-K9.

**Parameters:**

<ArbCustomBitrate> Range: 10000 to 1000000  
Increment: 1  
\*RST: 50000  
Default unit: bps

---

**BUS:CAN:FDATa:ASAMplepoint** <ArbSamplePoint>

The sample point divides the arbitration phase into two distinct time segments. The length of the time segments is defined in time quanta according to network and node conditions during CAN FD development.

The setting is available in CAN FD option R&S RTH-K9.

**Parameters:**

<ArbSamplePoint> Range: 10 to 95  
Increment: 1  
\*RST: 75  
Default unit: %

---

**BUS:CAN:FDATa:DBITrate** <DataCustomBitrate>

Sets the bit rate of the data phase. The data rate can be higher than the arbitration rate, but it is uniform and fixed for a given CAN FD bus.

The setting is available in CAN FD option R&S RTH-K9.

**Parameters:**

<DataCustomBitrate> Range: 10000 to 15000000  
Increment: 1  
\*RST: 50000  
Default unit: bps

---

**BUS:CAN:FDATa:DSAMplepoint** <DataSamplePoint>

The sample point divides the data phase into two distinct time segments. The length of the time segments is defined in time quanta according to network and node conditions during CAN FD development.

The setting is available in CAN FD option R&S RTH-K9.

**Parameters:**

<DataSamplePoint> Range: 10 to 95  
 Increment: 1  
 \*RST: 75  
 Default unit: %

**BUS:CAN:FDATa:ENABle** <State>

Enables the CAN FD protocol configuration. It `BUS:CAN:FDATa:ENABle` state is OFF, then the CAN protocol is selected.

The setting is available in CAN FD option R&S RTH-K9.

**Parameters:**

<State> ON | OFF

**BUS:CAN:FDATa:PSTandard** <ProtocolStandard>

Only available for CAN FD buses. Selects if the tested signal is an ISO CAN FD signal or not.

**Parameters:**

<ProtocolStandard> ISO | NISO

**ISO**

Signals are decoded according to the ISO CAN FD protocol. This protocol has an additional stuff count field before the CRC sequence.

**NISO**

Non-ISO. Signals are decoded according to the Bosch CAN FD protocol.

\*RST: ISO

### 14.11.5.2 CAN Trigger

TRIGger:CAN:ACKError.....	438
TRIGger:CAN:BITSterror.....	438
TRIGger:CAN:CRCErrror.....	438
TRIGger:CAN:DATA.....	438
TRIGger:CAN:DCONDition.....	438
TRIGger:CAN:FORMerror.....	439
TRIGger:CAN:FTYPE.....	439
TRIGger:CAN:ICONDition.....	439
TRIGger:CAN:IDENtifier.....	440
TRIGger:CAN:ITYPe.....	440
TRIGger:CAN:TYPE.....	440
TRIGger:CAN:FDATa:BRS.....	441
TRIGger:CAN:FDATa:DPOSition.....	441

TRIGger:CAN:FDATa:ESl.....	441
TRIGger:CAN:FDATa:FDf.....	442
TRIGger:CAN:FDATa:SCERror.....	442

---

#### TRIGger:CAN:ACKerror <AckError>

An acknowledgement error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the Ack slot.

##### Parameters:

<AckError>            ON | OFF  
                           \*RST:        ON

---

#### TRIGger:CAN:BITSterror <StuffBitError>

A stuff error occurs when the 6th consecutive equal bit level in the mentioned fields is detected.

##### Parameters:

<StuffBitError>        ON | OFF  
                           \*RST:        ON

---

#### TRIGger:CAN:CRCError <CrcError>

A CRC error occurs when the calculated result differs from the received value in the CRC sequence.

##### Parameters:

<CrcError>            ON | OFF  
                           \*RST:        ON

---

#### TRIGger:CAN:DATA <Pattern>

Specifies the data pattern to be found, in binary or hex format. Enter the pattern in MSB first bit order.

##### Parameters:

<Pattern>            String that contains the pattern in binary format. The parameter accepts the bit value X (don't care).

---

#### TRIGger:CAN:DCONDition <Relation>

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

##### Parameters:

<Relation>            EQUal | NEQual  
                           \*RST:        EQUal

**TRIGger:CAN:FORMerror** <FormError>

A form error occurs when a fixed-form bit field contains one or more illegal bits.

**Parameters:**

<FormError>            ON | OFF  
\*RST:            ON

**TRIGger:CAN:FTYPE** <FrameType>

CAN has several frame types which can be used as trigger condition.

For data and remote frames, the identifier format has to be set with [TRIGger:CAN:ITYPE](#).

**Parameters:**

<FrameType>            ERRor | OVERload | DATA | REMote | DOR

**ERRor**

When a node recognizes an error, it cancels transmission by sending an error frame.

The instrument triggers seven bit periods after the end of the error flag that is marked by a dominant-recessive edge.

**OVERload**

When a node needs a delay between data and/or remote frames, it sends an overload frame.

**DATA**

The data frame is the only frame for actual data transmission.

**REMote**

Remote frames are only available in the CAN protocol.

The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.

**DOR**

Data frames or remote frames initiate the transmission of data by another node. The frame format is the same as of data frames.

\*RST:            DOR

**TRIGger:CAN:ICONdition** <Relation>

Defines how the specified identifier pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

**Parameters:**

<Relation>            EQUal | NEQual  
\*RST:            EQUal



---

**TRIGger:CAN:IDENtifier** <Pattern>

Specifies the identifier pattern to be found, in binary format. Enter the pattern in MSB first bit order.

**Parameters:**

<Pattern> String that contains the pattern in binary format. The parameter accepts the bit value X (don't care).

**Example:**

```
TRIG:CAN:TYPE ID
TRIG:CAN:IDEN 001001
TRIG:CAN:ICON EQU
Triggers if the ID of the measured signal is 001001.
```

---

**TRIGger:CAN:ITYPE** <IdentifierType>

Selects the length of the identifier.

**Parameters:**

<IdentifierType> B11 | B29 | ANY

**ANY**

The ID type and ID pattern are not relevant for the trigger condition.

If the trigger type is "Identifier", the instrument triggers on any identifier in the specified frame type.

If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to trigger only on data.

\*RST: ANY

---

**TRIGger:CAN:TYPE** <TriggerType>

Depending on the selected CAN trigger type, different additional parameters are available.

**Parameters:**

&lt;TriggerType&gt;

STOF | EOF | FTYP | ID | IDDT | ERRC

**STOF**

Triggers on the stop bit of the sync field.

**EOF**

Triggers after a wakeup frame.

**FTYP**

Triggers on a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.

**ID**

Sets the trigger to a specific identifier or an identifier range. Only the 6-bit identifier without parity bits is considered, not the protected identifier.

**IDDT**

Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

**ERRC**

Identifies various errors in the frame. You can select one or more error types as the trigger condition.

\*RST: STOF

**TRIGger:CAN:FDATa:BRS** <BRSBit>

Sets the bit rate switch bit.

**Parameters:**

&lt;BRSBit&gt;

ZERO | ONE | DC

\*RST: DC

**TRIGger:CAN:FDATa:DPOSition** <ByteOffset>

Sets the byte offset, that defines the start position of the data for the data pattern comparison.

The setting is available in CAN FD option R&amp;S RTH-K9.

**Parameters:**

&lt;ByteOffset&gt;

Range: 0 to 63

Increment: 1

\*RST: 0

**TRIGger:CAN:FDATa:ESI** <ESIBit>

Sets the error state indicator bit.

**Parameters:**

<ESIBit> ZERO | ONE | DC  
 DC: do not care, bit is nor relevant.  
 \*RST: DC

**TRIGger:CAN:FDATa:FDf <FDfBit>**

Specifies the CAN FD frame format. It corresponds to the EDL bit (extended data length), which only exists in CAN FD format.

**Parameters:**

<FDfBit> ZERO | ONE | DC  
 ONE: CAN FD  
 ZERO: CAN.  
 DC: do not care, the format is not relevant.  
 \*RST: DC

**TRIGger:CAN:FDATa:SCERror <StuffCountError>**

Triggers on stuff count errors. A stuff count error occurs if the received stuff count value does not match the value calculated from the own stuff bit count.

Only relevant for CAN FD signals in ISO standard ([BUS:CAN:FDATa:PStandard](#) is set to ISO).

**Parameters:**

<StuffCountError> ON | OFF  
 \*RST: ON

**14.11.5.3 CAN Decode Results**

The frame suffix <m> selects the frame index for which the result is queried.

The byte suffix <n> selects the byte index for which the result is queried.

<a href="#">BUS:CAN:FCOunt?</a> .....	443
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:ACKValue?</a> .....	443
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:BSEPosition?</a> .....	443
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:BYTE&lt;n&gt;:STATe?</a> .....	443
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:BYTE&lt;n&gt;:VALue?</a> .....	444
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:CSValue?</a> .....	444
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:DATA?</a> .....	444
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:DLCValue?</a> .....	445
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:ACKState?</a> .....	445
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:CSState?</a> .....	445
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:DLCState?</a> .....	445
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:IDState?</a> .....	445
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:IDTYpe?</a> .....	446
<a href="#">BUS:CAN:FRAMe&lt;m&gt;:IDValue?</a> .....	446

BUS:CAN:FRAMe<m>:NDBYtes?	446
BUS:CAN:FRAMe<m>:SDATa?	446
BUS:CAN:FRAMe<m>:START?	447
BUS:CAN:FRAMe<m>:STOP?	447
BUS:CAN:FDATa:FRAMe<m>:STANdard?	447
BUS:CAN:FRAMe<m>:STATus?	447
BUS:CAN:FRAMe<m>:SYMBol?	448
BUS:CAN:FRAMe<m>:TYPE?	448

---

### BUS:CAN:FCOunt?

Returns the number of decoded frames in the acquisition.

#### Return values:

<Count>                    Range:    0 to 100000  
                                   Increment: 1  
                                   \*RST:    0

**Usage:**                    Query only

---

### BUS:CAN:FRAMe<m>:ACKValue?

Returns the value of the acknowledge slot for the selected frame.

#### Suffix:

<m>                            \*

#### Return values:

<AckValue>                Range:    0 to 1  
                                   \*RST:    0

**Usage:**                    Query only

---

### BUS:CAN:FRAMe<m>:BSEPosition?

Returns the location of a bit stuffing error.

#### Suffix:

<m>                            \*

#### Return values:

<BitStuffErrorPos>      Range:    -100E+24 to 100E+24  
                                   Increment: 100E-12  
                                   \*RST:    0  
                                   Default unit: s

**Usage:**                    Query only

---

### BUS:CAN:FRAMe<m>:BYTE<n>:STATe?

Returns the state of the specified byte.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<ByteState> OK | UNDF  
 UNDF: Undefined  
 \*RST: OK

**Usage:** Query only**BUS:CAN:FRAMe<m>:BYTE<n>:VALue?**

Returns the value of the specified byte.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<ByteValue> Range: 0 to 255  
 \*RST: 0

**Usage:** Query only**BUS:CAN:FRAMe<m>:CSValue?**

Returns the CRC sequence value of the selected frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<ChecksumValue> Range: 0 to 2097151  
 \*RST: 0

**Usage:** Query only**BUS:CAN:FRAMe<m>:DATA?**

Returns the data of the specified frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<Data> Comma-separated list of integer values. The first value is the number of bytes, followed by the values of the data bytes.

**Example:**            BUS1 : CAN : FRAMe2 : DATA?  
 --> 3,208,231,32  
 Returns the data of the second frame: the number of bytes is 3 data (first value).

**Usage:**             Query only

#### **BUS:CAN:FRAMe<m>:DLCValue?**

Returns the number of data bytes in the frame.

CAN: the number of data bytes is the data length code (DLC).

CAN FD: for DLCs > 8, the DLC and the number of data bytes are different. The DLC is defined in the standard. For example, DLC = 9 defines that the data field has 12 bytes, and DLC = 15 sets a 64 byte data field.

**Suffix:**  
 <m>                    \*  
                           Frame index

**Return values:**  
 <DataBytes>            Number of data bytes in decimal values.  
                           Range:        0 to 64  
                           \*RST:         0

**Usage:**             Query only

#### **BUS:CAN:FRAMe<m>:ACKState?**

#### **BUS:CAN:FRAMe<m>:CSState?**

#### **BUS:CAN:FRAMe<m>:DLCState?**

#### **BUS:CAN:FRAMe<m>:IDState?**

Return the states of the following parts of a message:

- ACKState: state of acknowledgement field
- CSState: state of checksum field (CRC)
- DLCState: state of data length code
- IDState: identifier state

**Suffix:**  
 <m>                    \*

**Return values:**  
 <State>                OK | UNDF  
                           UNDF: Undefined  
                           \*RST:         OK

**Usage:**             Query only

---

**BUS:CAN:FRAME<m>:IDType?**

Returns the identifier type of the selected frame, the identifier format of data and remote frames.

**Suffix:**

<m> \*

**Return values:**

<IdentifierType> ANY | B11 | B29  
B11: standard format, 11 bit  
B29: extended format, 29 bit  
\*RST: B11

**Usage:** Query only

---

**BUS:CAN:FRAME<m>:IDValue?**

Returns the identifier value of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<IdentifierValue> Range: 0 to 536870911  
\*RST: 0

**Usage:** Query only

---

**BUS:CAN:FRAME<m>:NDBytes?**

Returns the number of data bytes of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<NoOfDataBytes> Range: 0 to 64  
Increment: 1  
\*RST: 0

**Usage:** Query only

---

**BUS:CAN:FRAME<m>:SDATa?**

Returns the complete symbolic data of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<SymbolicData> String with comma-separated list of symbolic data

**Example:**

```
BUS:CAN:FRAME9:SDATa?
```

```
<-- [sym] 325 kW, 0x0A, 423 N, 174 l, Running, 90 degC, 0x06, 437 rpm
```

Returns the symbolic results of the 9th frame.

**Usage:**

Query only

**BUS:CAN:FRAME<m>:START?****BUS:CAN:FRAME<m>:STOP?**

Returns the start time and stop time of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<FrameStart> Time

<FrameStop> Range: -100E+24 to 100E+24

\*RST: 0

Default unit: s

**Usage:**

Query only

**BUS:CAN:FDATa:FRAME<m>:STANdard?**

Returns the CAN standard.

The setting is available in CAN FD option R&S RTH-K9.

**Suffix:**

<m> \*

**Return values:**

<FrameStandard> CAN | CANFd

\*RST: CAN

**Usage:**

Query only

**BUS:CAN:FRAME<m>:STATus?**

Returns the overall state of the selected frame.

**Suffix:**

<m> \*



**Return values:**

<FrameState> OK | OVLD | ERR | BTST | CRC | NOACK | SERRror | FORM | CAERror | FCERror | SCERror | SAERror | SFERror | SCAE | SCFE | INSufficient

OK: the frame is valid.  
 FORM: Fixed-bit form error  
 BTST: Bit stuffing error occurred.  
 CRC: Cyclic redundancy check failed.  
 NOACK: Acknowledge is missing.  
 CAERror: CRC error followed by an acknowledgement error (missing acknowledge)  
 FCERror: CRC error followed by a form error (wrong CRC delimiter or wrong ACK delimiter)  
 INSufficient: The frame is not contained completely in the acquisition. The acquired part of the frame is valid.

\*RST: OK

**Usage:** Query only

**BUS:CAN:FRAME<m>:SYMBOL?**

Returns the symbolic label of the specified frame if the label list is enabled.

**Suffix:**

<m> \*

**Return values:**

<Label> String with symbolic label of the identifier

**Usage:** Query only

**BUS:CAN:FRAME<m>:TYPE?**

Returns the frame type of the selected frame.

**Suffix:**

<m> \*

**Parameters:**

<FrameType>      ERRor | OVERload | DATA | REMote | DOR

**ERRor**

When a node recognizes an error, it cancels transmission by sending an error frame.

The instrument triggers seven bit periods after the end of the error flag that is marked by a dominant-recessive edge.

**OVERload**

When a node needs a delay between data and/or remote frames, it sends an overload frame.

**DATA**

The data frame is the only frame for actual data transmission.

**REMote**

Remote frames are only available in the CAN protocol.

The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.

**DOR**

Data frames or remote frames initiate the transmission of data by another node. The frame format is the same as of data frames.

\*RST:            DOR

**Usage:**            Query only

**14.11.6 LIN (Option R&S RTH-K3)**

- [LIN Configuration Settings](#)..... 449
- [LIN Trigger](#)..... 451
- [LIN Decode Results](#)..... 453

**14.11.6.1 LIN Configuration Settings**

[BUS:LIN:DATA:SOURce](#)..... 449

[BUS:LIN:POLarity](#)..... 450

[BUS:LIN:BITRate](#)..... 450

[BUS:LIN:STANdard](#)..... 450

[BUS:LIN:DATA:THReshold](#)..... 450

[BUS:LIN:TECHnology](#)..... 451

[BUS:SETReflevels](#)..... 451

---

**BUS:LIN:DATA:SOURce** <Channel>

Sets the source of the data line. All channel waveforms can be used.

**Parameters:**

<Channel> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 C3 and C4: only R&S RTH1004  
 Digital channels are available if option R&S RTH-B1 is installed.  
 \*RST: C1

**Usage:** Asynchronous command

**BUS:LIN:POLarity** <Polarity>

Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logical 1.

**Parameters:**

<Polarity> IDLLow | IDLHigh  
**IDLLow**  
 The bus is idle (state = 1) when the signal is low  
**IDLHigh**  
 The bus is idle (state = 1) when the signal is high  
 \*RST: IDLHigh

**BUS:LIN:BITRate** <CustomBitrate>

Sets the number of transmitted bits per second.

**Parameters:**

<CustomBitrate> Range: 1000 to 20000  
 Increment: 1  
 \*RST: 9600  
 Default unit: bps

**BUS:LIN:STANdard** <Standard>

Selects the version of the LIN standard that is used in the DUT. The setting mainly defines the checksum version used during decoding.

**Parameters:**

<Standard> V1X | V2X | J2602 | AUTO  
 \*RST: AUTO

**BUS:LIN:DATA:THReshold** <ThresholdValue>

Sets the threshold value for digitization of signals manually. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

This value is only considered for `BUS:LIN:TECHnology` USER

**Parameters:**

<ThresholdValue> Range: -400 to 400  
 Increment: 1E-3  
 \*RST: 1.4  
 Default unit: V

**BUS:LIN:TECHnology** <ThresholdType>

Sets the threshold value for digitization of signals according to the specified technology. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

To set a user-defined threshold, select **USER** and define the value using **BUS:LIN:DATA:THReshold** on page 450.

**Parameters:**

<ThresholdType> TTL | ECL | CMOS | CAN | GND | LIN7vsupply | LIN12vsupply | LIN18vsupply | USER

**CMOS**  
2.5 V

**LIN7vsupply | LIN12vsupply | LIN18vsupply**  
7 V / 12 V / 18 V

**USER**  
Set the value with **BUS:LIN:DATA:THReshold**.

\*RST: TTL

**BUS:SETReflevels**

Sets the appropriate threshold or threshold for the selected serial protocol.

**Usage:** Event

**14.11.6.2 LIN Trigger**

TRIGger:LIN:CHKSError	451
TRIGger:LIN:DATA	452
TRIGger:LIN:DCONDition	452
TRIGger:LIN:ICONDition	452
TRIGger:LIN:IDENtifier	452
TRIGger:LIN:IPERror	453
TRIGger:LIN:SYERror	453
TRIGger:LIN:TYPE	453

**TRIGger:LIN:CHKSError** <ChecksumError>

Triggers on a checksum error if **TRIGger:LIN:TYPE** is set to ERRC

**Parameters:**

<ChecksumError> ON | OFF  
 \*RST: ON

**TRIGger:LIN:DATA** <Pattern>

Defines the data pattern as trigger condition. Enter the words in MSB first bit order.

**Parameters:**

<Pattern> String with max. 4 bytes in binary format. Characters 0, 1, and X are allowed. If you define a pattern with incomplete byte, the missing LSB are filled with X.

**Example:**

```
TRIG:LIN:TYPE IDDT
TRIG:LIN:IDEN 001001
TRIG:LIN:ICON EQU
TRIG:LIN:DCON EQU
TRIG:LIN:DATA '11111111000000001111'
TRIG:LIN:DATA?
<-- 11111111000000001111XXXX
Triggers when the id '001001' and the data
'11111111000000001111' is detected in the measured signal
```

**TRIGger:LIN:DCONdition** <Relation>

Defines how the specified data pattern is compared with the acquired signal.

**Parameters:**

<Relation> EQUal | NEQual  
 \*RST: EQUal

**TRIGger:LIN:ICONdition** <Relation>

Defines how the specified identifier pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

**Parameters:**

<Relation> EQUal | NEQual  
 \*RST: EQUal

**TRIGger:LIN:IDENtifier** <Pattern>

Specifies the identifier pattern to be found, in binary format. Enter the pattern in MSB first bit order.

**Parameters:**

<Pattern> String with max. 7 characters. Characters 0, 1, and X are allowed. If you define a pattern shorter than the pattern length, the missing LSB are filled with X.

**Example:**

```
TRIG:LIN:TYPE ID
TRIG:LIN:IDEN 001001
TRIG:LIN:ICON EQU
Triggers if the ID of the measured signal is 001001.
```

---

#### TRIGger:LIN:IPERror <ParityError>

Triggers on a parity error if `TRIGger:LIN:TYPE` is set to `ERRC`

##### Parameters:

```
<ParityError>      ON | OFF
*RST:              ON
```

---

#### TRIGger:LIN:SYERror <SyncError>

Triggers on a synchronization error if `TRIGger:LIN:TYPE` is set to `ERRC`

##### Parameters:

```
<SyncError>       ON | OFF
*RST:              ON
```

---

#### TRIGger:LIN:TYPE <TriggerType>

##### Parameters:

```
<TriggerType>    SYNC | WKFR | ERRC | ID | IDDT
```

**SYNC**  
Triggers on the stop bit of the sync field.

**WKFR**  
Triggers after a wakeup frame.

**ERRC**  
Identifies various errors in the frame. You can select one or more error types as the trigger condition.

**ID**  
Sets the trigger to a specific identifier or an identifier range.

**IDDT**  
Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

```
*RST:            SYNC
```

### 14.11.6.3 LIN Decode Results

The frame suffix `<m>` selects the frame index for which the result is queried.

The byte suffix `<n>` selects the byte index for which the result is queried.

BUS:LIN:FCOunt?.....	454
BUS:LIN:FRAME<m>:BYTE<n>:STATe?.....	454
BUS:LIN:FRAME<m>:BYTE<n>:VALue?.....	454
BUS:LIN:FRAME<m>:CSSTate?.....	455
BUS:LIN:FRAME<m>:CSVAlue?.....	455
BUS:LIN:FRAME<m>:DATA?.....	455
BUS:LIN:FRAME<m>:IDPVAlue?.....	456
BUS:LIN:FRAME<m>:IDSTate?.....	456
BUS:LIN:FRAME<m>:IDVAlue?.....	456
BUS:LIN:FRAME<m>:START?.....	457
BUS:LIN:FRAME<m>:STOP?.....	457
BUS:LIN:FRAME<m>:STATus?.....	457
BUS:LIN:FRAME<m>:SYMBol?.....	457
BUS:LIN:FRAME<m>:SYSTate?.....	458

---

### BUS:LIN:FCOunt?

Returns the number of decoded frames in the acquisition.

#### Return values:

<Count>	Range:	0 to 100000
	Increment:	1
	*RST:	0

**Usage:** Query only

---

### BUS:LIN:FRAME<m>:BYTE<n>:STATe?

Returns the state of the specified byte.

#### Suffix:

<m>	*
<n>	*

#### Return values:

<ByteState>	OK   STERror   SPERror   UVAL   NOEXists   INSufficient
	STERror: start error
	SPERror: stop error
	UVAL: unexpected value
	NOEXists: byte does not exist
	INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.
	*RST: OK

**Usage:** Query only

---

### BUS:LIN:FRAME<m>:BYTE<n>:VALue?

Returns the value of the specified byte.

**Suffix:**

&lt;m&gt; \*

&lt;n&gt; \*

**Return values:**

<ByteValue> Range: 0 to 255  
 \*RST: 0

**Usage:** Query only**BUS:LIN:FRAME<m>:CSState?**

Returns the checksum state of the specified frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<ChecksumState> OK | STERror | SPERror | UVAL | NOEXists | INSufficient  
 STERror: start error  
 SPERror: stop error  
 UVAL: unexpected value  
 NOEXists: byte does not exist  
 INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.  
 \*RST: OK

**Usage:** Query only**BUS:LIN:FRAME<m>:CSValue?**

Returns the checksum value of the specified frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<ChecksumValue> Range: 0 to 255  
 \*RST: 0

**Usage:** Query only**BUS:LIN:FRAME<m>:DATA?**

Returns the data bytes of the specified frame.

**Suffix:**

&lt;m&gt; \*



**Return values:**

<Data> Comma-separated list of integer values (N, D1, D2,..., DN). N is the number of bytes in the frame, and D1...DN are the values of the bytes.

**Example:**

```
BUS:LIN:FRAME4:DATA?
<-- 4,118,39,71,123
```

**Usage:**

Query only

**BUS:LIN:FRAME<m>:IDPValue?**

Returns the value of the identifier parity bits of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<IdentifierParity> Range: 0 to 3  
\*RST: 0

**Usage:**

Query only

**BUS:LIN:FRAME<m>:IDState?**

Returns the identifier state of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<IdentifierState> OK | STERror | SPERror | PRERror | UVAL | NOEXists |  
INSufficient

STERror: start error

SPERror: stop error

PRERror: parity error

UVAL: unexpected value

NOEXists: byte does not exist

INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.

\*RST: OK

**Usage:**

Query only

**BUS:LIN:FRAME<m>:IDValue?**

Returns the identifier value of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<IdentifierValue>      Range:      0 to 63  
                                  \*RST:        0

**Usage:**                      Query only

**BUS:LIN:FRAME<m>:START?****BUS:LIN:FRAME<m>:STOP?**

Returns the start time and stop time of the selected frame, respectively.

**Suffix:**

<m>                              \*

**Return values:**

<FrameStart>              Range:      -100E+24 to 100E+24  
 <FrameStop>              Increment: 100E-12  
                                  \*RST:        0  
                                  Default unit: s

**Usage:**                      Query only

**BUS:LIN:FRAME<m>:STATus?**

Returns the overall state of the selected frame.

**Suffix:**

<m>                              \*

**Return values:**

<FrameState>              OK | WAKeup | SYERror | PRERror | CHCKsum | CPERror |  
 INSufficient  
 CHCKsum: checksum error  
 PRERror: parity error in identifier  
 SYERror: synchronization error  
 WAKeup: the frame is a wakeup frame  
 CPERror: parity error and checksum error  
 INSufficient: the frame is not completely contained in the acquisition. The decoded part of the frame is valid.  
 \*RST:                      OK

**Usage:**                      Query only

**BUS:LIN:FRAME<m>:SYMBol?**

Returns the symbolic label of the specified frame if the label list is enabled.

**Suffix:**

<m>                              \*

**Return values:**

<Label>                      String with symbolic name of the identifier

**Example:** BUS:LIN:FRAMe2:SYMBol?  
Response: Temperature

**Usage:** Query only

#### BUS:LIN:FRAMe<m>:SYSTate?

Returns the synchronization state of the frame.

**Suffix:**  
<m> \*

**Return values:**  
<FrameSyncState> OK | STERror | SPERror | PRERror | UVAL | NOEXists | INSufficient

**OK**  
The frame is valid.

**SPERror**  
Stop error, no stop condition found

**STERror**  
Start error, no start condition found

**PRERror**  
Parity error, which indicates a transmission error

**UVAL**  
Unexpected value

**NOEXists**  
Byte does not exist

**INSufficient**  
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

\*RST: OK

**Usage:** Query only

### 14.11.7 SENT (Option R&S RTH-K10)

- [SENT Configuration Settings](#)..... 458
- [SENT Trigger](#)..... 461
- [SENT Decode Results](#)..... 464

#### 14.11.7.1 SENT Configuration Settings

BUS:SENT:CLKPeriod.....	459
BUS:SENT:CLKTolerance.....	459
BUS:SENT:CRCCMethod.....	459
BUS:SENT:CRCVersioN.....	459
BUS:SENT:DATA:SOURce.....	460
BUS:SENT:DATA:THReshold.....	460

BUS:SENT:DNIBbles.....	460
BUS:SENT:PPFLength.....	460
BUS:SENT:PPULse.....	460
BUS:SENT:SFORmat.....	461
BUS:SENT:TECHnology.....	461
BUS:SENT:RDSL.....	461

---

#### **BUS:SENT:CLKPeriod** <ClockPeriod>

Sets the nominal clock period (clock tick).

##### **Parameters:**

<ClockPeriod>      Range:      1E-6 to 100E-6  
                          Increment: 1E-6  
                          \*RST:      3E-6  
                          Default unit: s

---

#### **BUS:SENT:CLKTolerance** <ClockTolerance>

Sets a tolerated deviation of the clock signal.

##### **Parameters:**

<ClockTolerance>    Range:      0 to 25  
                          Increment: 1  
                          \*RST:      20  
                          Default unit: %

---

#### **BUS:SENT:CRCMETHOD** <CRCCalculation>

Selects the calculation method for the CRC checksum.

##### **Parameters:**

<CRCCalculation>    SAEJ | TLE  
                          SAEJ: according to the standard  
                          TLE: according to the computing method for TLE\_4998X sensors.  
                          \*RST:      SAEJ

---

#### **BUS:SENT:CRCVersion** <CRCVersion>

Selects the calculation method for the cyclic redundancy check (CRC).

##### **Parameters:**

<CRCVersion>      V2010 | LEGA  
                          LEGAcy: method used up to 2010  
                          V2010: current method  
                          \*RST:      V2010

---

**BUS:SENT:DATA:SOURce** <Channel>

Sets the source of the data line. All channel waveforms can be used.

**Parameters:**

<Channel> C1 | C2 | C3 | C4 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
C3 and C4: only R&S RTH1004  
Digital channels are available if option R&S RTH-B1 is installed.  
\*RST: C1

**Usage:** Asynchronous command

---

**BUS:SENT:DATA:THReshold** <ThresholdValue>

Sets the threshold value for digitization of signals manually. If the signal value is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low.

This value is only considered for [BUS:SENT:TECHnology](#) on page 461 USER.

**Parameters:**

<ThresholdValue> Range: -400 to 400  
Increment: 1E-3  
\*RST: 1.4  
Default unit: V

---

**BUS:SENT:DNIBbles** <DataNibbles>

Sets the number of data nibbles for a transmission sequence.

**Parameters:**

<DataNibbles> Range: 1 to 6  
Increment: 1  
\*RST: 3

---

**BUS:SENT:PPFLength** <FrameLength>

Defines a constant transmission sequence length. To select the fixed sequence length, set [BUS:SENT:PPULse](#) to PPFL.

**Parameters:**

<FrameLength> Range: 104 to 922  
Increment: 1  
\*RST: 128

---

**BUS:SENT:PPULse** <PausePulse>

Determines if a pause pulse is part of the SENT transmission sequence.

**Parameters:**

<PausePulse> NPP | PP | PPFL

**PP**

Transmits the message with a fixed pulse length, automatically calculated.

**NPP**

Transmits the SENT message without pause pulse.

**PPFL**

Transmits the pause pulse with a user-defined frame length to obtain a transmission sequence with constant length.

\*RST: NPP

**BUS:SENT:SFORmat** <Format>

Selects the serial message format.

**Parameters:**

<Format> NONE | SHORt | ENHanced

SHORt = Short serial message.

ENHanced = Enhanced serial message.

NONE = Single transmission sequence.

\*RST: NONE

**BUS:SENT:TECHnology** <ThresholdType>

Sets the threshold values as defined for various signal technologies.

**Parameters:**

<ThresholdType> CMOS | USER

\*RST: USER

**BUS:SENT:RDSL** <Display>

Selects the display table view mode for the SENT protocol.

**Parameters:**

<Display> TRSQ | SMSG

TRSQ: fast channel

SMSG: slow channel

\*RST: TRSQ

**14.11.7.2 SENT Trigger**

TRIGger:SENT:TYPE.....	462
TRIGger:SENT:DATA.....	462
TRIGger:SENT:DCONDition.....	462
TRIGger:SENT:ICONDition.....	462

TRIGger:SENT:IDENtifier.....	463
TRIGger:SENT:SCONdition.....	463
TRIGger:SENT:STATus.....	463
TRIGger:SENT:FCRCerror.....	463
TRIGger:SENT:IRFLength.....	463
TRIGger:SENT:PPERioderror.....	464
TRIGger:SENT:PULSeerror.....	464
TRIGger:SENT:SCRCerror.....	464

---

### TRIGger:SENT:TYPE <TriggerType>

Sets the SENT trigger type.

#### Parameters:

<TriggerType>	STOF   STAT   STDA   ID   IDDT   ERRC
	STOF:
	STAT: fast status
	STDA: fast status and data
	ID: slow Identifier
	IDDT: slow Identifier and data
	ERRC: error condition
*RST:	STOF

---

### TRIGger:SENT:DATA <Pattern>

Defines the data pattern as trigger condition. Enter the words in MSB first bit order.

#### Parameters:

<Pattern>	String with max. 4 bytes in binary format. Characters 0, 1, and X are allowed. If you define a pattern with incomplete byte, the missing LSB are filled with X.
-----------	---

---

### TRIGger:SENT:DCONDITION <Relation>

Defines how the specified data pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

#### Parameters:

<Relation>	UNUSed   EQUal   NEQual   LTHan   LETHan   GTHan   GETHan   INRange   OORange
*RST:	EQUal

---

### TRIGger:SENT:ICONdition <Relation>

Defines how the specified identifier pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

**Parameters:**

<Relation>            UNUSed | EQUal | NEQual | LTHan | LETHan | GTHan |  
 GETHan | INRange | OORange  
 \*RST:            EQUal

**TRIGger:SENT:IDENTifier** <Pattern>

Specifies the identifier pattern to be found, in binary format. Enter the pattern in MSB first bit order.

**Parameters:**

<Pattern>            String with max. 7 characters. Characters 0, 1, and X are  
 allowed. If you define a pattern shorter than the pattern length,  
 the missing LSB are filled with X.

**TRIGger:SENT:SCONdition** <Relation>

Defines how the specified status pattern is compared with the acquired signal. The instrument triggers if the acquired address is equal or unequal the defined pattern.

**Parameters:**

<Relation>            UNUSed | EQUal | NEQual | LTHan | LETHan | GTHan |  
 GETHan | INRange | OORange  
 \*RST:            EQUal

**TRIGger:SENT:STATus** <Pattern>

Defines the status pattern as trigger condition. Enter the words in MSB first bit order.

**Parameters:**

<Pattern>

**TRIGger:SENT:FCRCerror** <FastCRCErr>

Triggers on a detected CRC error in the transmission sequences of the fast channel. The CRC length is 4 bits.

**Parameters:**

<FastCRCErr>        ON | OFF  
 \*RST:            ON

**TRIGger:SENT:IRFLength** <FrameLengthError>

Triggers on frame length errors in transmission sequences, if `BUS:SENT:PPULse` is set to `PPFL`. A frame length error occurs, when the total length of the transmission sequence (including pause pulse) does not match the frame length set with `BUS:SENT:PPFLength`.



**Parameters:**

<FrameLengthError> ON | OFF  
 \*RST: ON

**TRIGger:SENT:PPERioderror** <PulsePeriodError>

Triggers on an error in the calibration/sync pulse in transmission sequences of the fast channel.

**Parameters:**

<PulsePeriodError> ON | OFF  
 \*RST: ON

**TRIGger:SENT:PULSeerror** <SyncPulseError>

Triggers on a synchronization/calibration pulse error in transmission sequences of the fast channel.

**Parameters:**

<SyncPulseError> ON | OFF  
 \*RST: ON

**TRIGger:SENT:SCRCerror** <SlowCRCErrror>

Triggers on a detected CRC error in serial messages of the slow channel. The CRC length is 4 bits for short serial messages, and 6 bit of enhanced serial messages.

**Parameters:**

<SlowCRCErrror> ON | OFF  
 \*RST: ON

**14.11.7.3 SENT Decode Results**

The frame suffix <m> selects the frame index for which the result is queried.

The byte suffix <n> selects the byte index for which the result is queried.

BUS:SENT:FCOut?	465
BUS:SENT:FRAMe<m>:CSValue?	465
BUS:SENT:FRAMe<m>:DATA?	465
BUS:SENT:FRAMe<m>:DStatus?	465
BUS:SENT:FRAMe<m>:IDTYpe?	466
BUS:SENT:FRAMe<m>:IDValue?	466
BUS:SENT:FRAMe<m>:NIBBle<n>:STATe?	466
BUS:SENT:FRAMe<m>:NIBBle<n>:VALue?	467
BUS:SENT:FRAMe<m>:PAPTicks?	467
BUS:SENT:FRAMe<m>:SCOM?	467
BUS:SENT:FRAMe<m>:SDATa?	468
BUS:SENT:FRAMe<m>:STARt?	468

BUS:SENT:FRAME<m>:STATus?	468
BUS:SENT:FRAME<m>:STOP?	468
BUS:SENT:FRAME<m>:SYMBOL?	469
BUS:SENT:FRAME<m>:SYNCDuration?	469
BUS:SENT:FRAME<m>:TYPE?	469

---

### BUS:SENT:FCOunt?

Returns the number of decoded frames.

#### Return values:

<Count> Total number of decoded frames.  
 Range: 0 to 100000  
 Increment: 1  
 \*RST: 0

**Usage:** Query only

---

### BUS:SENT:FRAME<m>:CSValue?

Returns the CRC sequence value of the selected frame.

#### Suffix:

<m> \*

#### Return values:

<ChecksumValue> The values below – range, increment and reset – are decimal values.  
 Range: 0 to 63  
 Increment: 1  
 \*RST: 0

**Usage:** Query only

---

### BUS:SENT:FRAME<m>:DATA?

Returns the data of the specified frame.

#### Suffix:

<m> \*

**Example:** BUS:SENT:FRAME4:DATA?  
 <-- 4,3,15,11,9

**Usage:** Query only

---

### BUS:SENT:FRAME<m>:DStatus?

Returns the status of the frame.

#### Suffix:

<m> \*

**Return values:**

<FrameState> OK | TMSE | SDIF | CRC | PAUSE | NEG | TMSE | SCERror | SPERror | SNERror | CPERror | CNERror | PNERror | SCPE | SCNE | SPNE | CPNE | SCPN | SLENgth | NLENgth | INSufficient  
 \*RST: OK

**Usage:** Query only

**BUS:SENT:FRAME<m>:IDType?**

Returns the identifier type of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<FrameIdentifierType>NONE | B4 | B8  
 B4: standard format, 4 bit  
 B8: extended format, 8 bit  
 \*RST: B4

**Usage:** Query only

**BUS:SENT:FRAME<m>:IDValue?**

Returns the identifier value of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<IdentifierValue> The values below – range, increment and reset – are decimal values.  
 Range: 0 to 255  
 Increment: 1  
 \*RST: 0

**Usage:** Query only

**BUS:SENT:FRAME<m>:NIBBLE<n>:STATE?**

Returns the state of the specified nibble.

**Suffix:**

<m> \*

<n> \*

**Return values:**

<FrameNibbleState> OK | UNDF

UNDF = Undefined

\*RST: OK

**Usage:** Query only

**BUS:SENT:FRAME<m>:NIBBLE<n>:VALue?**

Returns the value of the specified nibble.

**Suffix:**

<m> \*

<n> \*

**Return values:**

<FrameNibbleValue> The values below – range, increment and reset – are decimal values.

Range: 0 to 15

Increment: 1

\*RST: 0

**Usage:** Query only

**BUS:SENT:FRAME<m>:PAPTicks?**

Returns the number of the pulse pause clock ticks.

**Suffix:**

<m> \*

**Return values:**

<PausePulseTicks> Range: 12 to 768

Increment: 1

\*RST: 12

**Usage:** Query only

**BUS:SENT:FRAME<m>:SCOM?**

Returns the value of the status/communication pulse.

**Suffix:**

<m> \*

**Return values:**

<StatusCommunication> Range: 0 to 0

Increment: 1

\*RST: 0

**Usage:** Query only

---

**BUS:SENT:FRAME<m>:SDATa?**

Returns the symbolic data of the frame.

**Suffix:**

<m> \*

**Return values:**

<SymbolicData> Comma-separated list of values. The first value is the number of bytes, followed by the decoded data bytes.

**Usage:** Query only

---

**BUS:SENT:FRAME<m>:START?**

Returns the start time of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<FrameStart> Range: -100E+24 to 100E+24  
Increment: 100E-12  
\*RST: 0  
Default unit: s

**Usage:** Query only

---

**BUS:SENT:FRAME<m>:STATus?**

Returns the overall state of the selected frame.

**Suffix:**

<m> \*

**Return values:**

<FrameState> OK | SYNC | PULSe | CRC | IRFL | FORM | INSufficient  
OK: The frame is valid.  
SYNC: Synchronization error occurred.  
PULSe: Pulse error occurred.  
CRC: Cyclic redundancy check failed.  
IRFL: Irregular frame length error occurred.  
FORM: Format error occurred.  
INSufficient: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.  
\*RST: OK

**Usage:** Query only

---

**BUS:SENT:FRAME<m>:STOP?**

Returns the stop time of the selected frame.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<FrameStop>      Range:      -100E+24 to 100E+24  
                          Increment: 100E-12  
                          \*RST:      0  
                          Default unit: s

**Usage:**              Query only**BUS:SENT:FRAME<m>:SYMBOL?**

Returns the symbolic label of the specified frame if the label list is enabled.

**Suffix:**

&lt;m&gt; \*

**Return values:**

&lt;Translation&gt;      String with symbolic label of the identifier.

**Example:**

BUS:SENT:FRAME:SYMBOL?  
 Response: Air Temperature

**Usage:**              Query only**BUS:SENT:FRAME<m>:SYNCduration?**

Returns the time of the synchronization pulse.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<SyncDuration>      Range:      28E-6 to 8.4E-3  
                          Increment: 1E-6  
                          \*RST:      168E-6  
                          Default unit: s

**Usage:**              Query only**BUS:SENT:FRAME<m>:TYPE?**

Returns the type of SENT message.

**Suffix:**

&lt;m&gt; \*

**Return values:**

<FrameType> TRSQ | SMSG | EMSG  
 TRSQ = transmission sequence  
 SMSG = short serial message  
 EMSG = enhanced serial message  
 \*RST: TRSQ

**Usage:** Query only

## 14.12 Logic Analyzer (R&S RTH-B1 MSO)

LOGic:STATe.....	470
LOGic:THCoupling.....	470
LOGic:GROup<m>:TECHnology.....	470
LOGic:GROup<m>:USER.....	471
LOGic:GROup<m>:THReshold?.....	472
LOGic:GROup<m>:HYSTeresis.....	472
LOGic:CHANnel<m>:DESKew.....	472
POD:STATe?.....	473

---

### LOGic:STATe <State>

Enables or disables the logic channels.

**Parameters:**

<State> ON | OFF  
 \*RST: OFF

---

### LOGic:THCoupling <ThresCoup>

Couples the threshold and hysteresis settings for the logic channels.

If enabled, all logic channels use the same threshold and hysteresis settings.

If disabled, 2 channel groups are available, which can use different threshold and hysteresis settings: D0 - D3, and D4 - D7.

**Parameters:**

<ThresCoup> ON | OFF  
 \*RST: ON

---

### LOGic:GROup<m>:TECHnology <ThresholdType>

Sets the threshold value for the selected channel group, or for all logic channels.

**Suffix:**

<m> 1..3  
 1 = all logic channels D0 to D7  
 2 = group D0 to D3  
 3 = group D4 to D7  
 The suffix only takes effect if `LOGic:THCoupling` is OFF.

**Parameters:**

<ThresholdType> TTL | ECL | CMOS | CAN | GND | LIN7vsupply | LIN12vsupply | LIN18vsupply | USER

**TTL**  
 1.4 V

**ECL**  
 -1.3 V

**CMOS**  
 2.5 V

**GND**  
 0 V (for CAN channels, requires option R&S RTH-K3)

**CAN**  
 2 V (for CAN channels, requires option R&S RTH-K3)

**LIN7vsupply | LIN12vsupply | LIN18vsupply**  
 7 V / 12 V / 18 V (for LIN channels, requires option R&S RTH-K3)

**12 V Supply**  
 12 V (for LIN channels, requires option R&S RTH-K3)

**18 V Supply**  
 18 V (for LIN channels, requires option R&S RTH-K3)

**USER**  
 Set the value with `LOGic:GROup<m>:USER`.

\*RST: TTL

---

**LOGic:GROup<m>:USER <ThresholdValue>**

Sets the threshold value if `LOGic:GROup<m>:TECHnology` is set to USER.

**Suffix:**

<m> 1..3  
 1 = all logic channels D0 to D7  
 2 = group D0 to D3  
 3 = group D4 to D7  
 The suffix only takes effect if `LOGic:THCoupling` is OFF.

**Parameters:**

<ThresholdValue> Range: -400 to 400  
 Increment: 1E-3  
 \*RST: 1.4  
 Default unit: V



**LOGic:GROup<m>:THReshold?**

Returns the current threshold value.

**Suffix:**

<m> 1..3  
 1 = all logic channels D0 to D7  
 2 = group D0 to D3  
 3= group D4 to D7

**Return values:**

<Level> Range: -10 to 10  
 Increment: 1E-3  
 \*RST: 0  
 Default unit: V

**Usage:** Query only

**LOGic:GROup<m>:HYSTeresis <Hysteresis>**

Hysteresis avoids the change of signal states due to noise oscillation around the threshold level. Set a small hysteresis for clean signals, and large hysteresis for noisy signals.

**Suffix:**

<m> 1..3  
 1 = all logic channels D0 to D7  
 2 = group D0 to D3  
 3= group D4 to D7  
 The suffix only takes effect if **LOGic:THCoupling** is OFF.

**Parameters:**

<Hysteresis> SMALL | MEDIUM | LARGE  
 \*RST: MEDIUM

**LOGic:CHANnel<m>:DESKew <Value>**

Sets the deskew for all channels of a logic probe at once, or for each logic channel separately.

**Suffix:**

<m> 1..9  
 1..8: logic channels 0 to 7  
 9: all logic channels

**Parameters:**

<Value> Range: -100E-9 to 100E-9  
 Increment: 800E-12  
 \*RST: 0  
 Default unit: s

**Example:**

```

LOGic:CHANnel9:DESKew 0.00000001
LOGic:CHANnel8:DESKew 0.00000002
LOGic:CHANnel1:DESKew?
<-- 1e-08
LOGic:CHANnel8:DESKew?
<-- 2e-08

```

---

### POD:STATe?

Returns the connection state of the logic probe.

#### Return values:

```

<PODConnected>  ON | OFF
                  *RST:  OFF

```

**Usage:** Query only

## 14.13 Documenting Results

### 14.13.1 Export of Waveform Data to File

The commands described in this chapter write the sample data of active waveforms to one or more CSV files.

The resulting files are described in [Chapter 11.4.3, "Waveform Export Files"](#), on page 258.



To export the results of a harmonics measurement, see [Chapter 14.6.3.2, "Retrieving and Exporting Harmonic Results"](#), on page 354.

#### Example: Saving a single waveform with time values

The example program saves the data of channel 1 to a file on the SD card. Voltage and time values are saved. Then the data is read and deleted.

```

:EXPort:WAVEform:NAME '/media/SD/Waveform.csv'
:EXPort:WAVEform:SOURce C1
:EXPort:WAVEform:INCXvalues 1 // include time values
:EXPort:WAVEform:DLOGging 0 // without history
:EXPort:WAVEform:SAVE ;*OPC
:MMEMory:DATA? '/media/SD/Waveform.csv'
:MMEMory:DELeTe '/media/SD/Waveform.csv';*OPC

```

**Example: Saving all active waveforms with time values**

The example program saves the voltage and time values of all active analog, digital and math waveforms. Then the data is read and deleted.

```
:EXPort:WAVeform:NAME '/media/SD/Multiwfm.csv'
:EXPort:WAVeform:MULTichannel 1
:EXPort:WAVeform:INCXvalues 1 // include time values
:EXPort:WAVeform:DLOGging 0 // without history
:EXPort:WAVeform:SAVE ;*OPC
:MMEMory:DATA? '/media/SD/Multiwfm.csv'
:MMEMory:DELeTe '/media/SD/Multiwfm.csv';*OPC
```

**Example: Saving history data of channel 1, without time values**

The example program saves the history data of selected segments to a file on the SD card. Then the data is read and deleted.

```
:EXPort:WAVeform:NAME '/media/SD/WaveformHistory.zip'
:EXPort:WAVeform:SOURce C1
:EXPort:WAVeform:INCXvalues 0 // no time values
:EXPort:WAVeform:DLOGging 1 // include history
:CHANnel1:HISTory:START -77 // select segment range (optional)
:CHANnel1:HISTory:STOP -5
:EXPort:WAVeform:SAVE ;*OPC
:MMEMory:DATA? '/media/SD/WaveformHistory.zip'
:MMEMory:DELeTe '/media/SD/WaveformHistory.zip';*OPC
```

EXPort:WAVeform:NAME.....	474
EXPort:WAVeform:SOURce.....	474
EXPort:WAVeform:MULTichannel.....	475
EXPort:WAVeform:INCXvalues.....	475
EXPort:WAVeform:DLOGging.....	475
EXPort:WAVeform:SAVE.....	476

**EXPort:WAVeform:NAME <Name>**

Sets the file name, file format and path to save the waveform to.

**Parameters:**

<Name> String with path and file name with extension .csv or .zip.

**Example:**

```
EXPort:WAVeform:NAME
'/media/SD/Export/Export_Ch2.csv'
EXPort:WAVeform:SAVE
Saves the waveform data to Export/Export_Ch2.csv on the
SD card.
```

**EXPort:WAVeform:SOURce <Source>**

Selects the waveform to be exported if `EXPort:WAVeform:MULTichannel` is OFF.

**Parameters:**

<Source> C1 | C2 | C3 | C4 | M1 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7  
 D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7: All active logic channels are saved, not matter which Dx is specified in the command.  
 \*RST: C1

**EXPort:WAVeform:MULTichannel** <MultiChExport>

If ON, all active waveforms (analog, digital and math) are exported.

If OFF, select the waveform for export with `EXPort:WAVeform:SOURce`.

**Parameters:**

<MultiChExport> ON | OFF  
 ON = 1, and OFF = 0  
 \*RST: ON

**Example:** See [Example "Saving all active waveforms with time values"](#) on page 474.

**EXPort:WAVeform:INCXvalues** <IncHorValues>

Includes horizontal values in the export data (time values).

**Parameters:**

<IncHorValues> ON | OFF  
 ON = 1, and OFF = 0  
 \*RST: OFF

**Example:** See [Example "Saving a single waveform with time values"](#) on page 473.

**EXPort:WAVeform:DLOGging** <DataLogging>

The command requires option R&S RTH-K15. History must be enabled before using the command (`CHAN:HIST:STAT ON`).

The command includes the history data in the export files. If acquisition is running, the command stops the acquisition.

History data is always saved in a zip file (compressed csv), see also [Chapter 3.7.4, "Exporting History Data"](#), on page 97.

You can select a range of history segments with `CHANnel<m>:HISTory:START` and `CHANnel<m>:HISTory:STOP`.

**Parameters:**

<DataLogging> ON | OFF  
 ON = 1, and OFF = 0  
 \*RST: OFF

**Example:** See [Example "Saving history data of channel 1, without time values"](#) on page 474.

---

### EXPort:WAVeform:SAVE

Saves the waveform(s) to the file specified with `EXPort:WAVeform:NAME`.

**Example:** See [Example "Saving a single waveform with time values"](#) on page 473.

**Usage:** Event

## 14.13.2 Transfer of Waveform Data

### Data conversion of integer values if `FORMat:DATA INT,16` is used

To convert INT16 data to physical quantities, e.g. voltages, use the following formulas:

$$\text{PhysicalQuantity} = (\text{Value\_ADC} * \text{ConversionFactor}) + \text{VerticalOffset}_{\text{eff}}$$

$$\text{ConversionFactor} = \text{VerticalScale} * \text{VerticalDivisionCount} / \text{NofQuantisationLevels}$$

$$\text{VerticalOffset}_{\text{eff}} = \text{VerticalOffset} - \text{VerticalPosition} * \text{VerticalScale}$$

**Table 14-1: Data conversion example**

VerticalScale	0.05 V/div
VerticalOffset	0.1 V
VerticalPosition	1 div
NofQuantisationLevels	255 * 256
VerticalDivisionCount	8
Value_ADC	-61
ConversionFactor	$0.05 * 8 / (255 * 256) = 0.000006127451 \text{ V}$
VerticalOffset <sub>eff</sub>	$0.1 - 1 * 0.05 = 0.05 \text{ V}$
Voltage	$(-61 * 0.000006127451 \text{ V}) + 0.05 \text{ V} = -0.32 \text{ mV}$

The values are read with `CHANnel<m>:DATA[:VALues]?`.

To get the vertical scale, position and offset, you can use the appropriate commands:

- `CHANnel<m>:SCALE` on page 284
- `CHANnel<m>:POSITION` on page 284
- `CHANnel<m>:OFFSET` on page 285

You can find these values also in the data export file, see [Chapter 14.13.1, "Export of Waveform Data to File"](#), on page 473.

**FORMat[:DATA] <Format>**

Sets the data type that is used for transmission of waveform data from the instrument to the controlling computer.

Waveform data can be retrieved using the following command: [CHANnel<m>:DATA\[:VALues\]?](#) on page 478

**Parameters:**

&lt;Format&gt;

AScii | INT,16

**AScii**

Data values are returned in ASCII format as a list of comma separated values in floating point format. The length can be omitted. It is 0 which means that the instrument selects the number of digits to be returned. The query returns both values (ASC, 0).

**INT,16**

Signed integer data with length 16 bit. It defines that [CHANnel<m>:DATA\[:VALues\]?](#) returns the raw sample data of the ADC as integers. If format of the waveform data differs from the defined export format, the instrument converts the data to the required format.

The schema of the result string is as follows:

```
#41024<value1><value2>...<value n> with:
```

```
#4 = number of digits (= 4 in the example) of the following number
```

```
1024 = number of following data bytes (= 1024 in the example)
```

```
<value> = 4-byte floating point values
```

You can also set the byte order using the [FORMat:BORDER](#) command.

Data conversion is described in "[Data conversion of integer values if FORMat:DATA INT,16 is used](#)" on page 476.

```
*RST:      AScii
```

**Example:**

```
FORMat:DATA INT,16
```

```
FORMat:DATA?
```

```
<-- INT,16
```

**Usage:**

SCPI confirmed

**FORMat:BORDER <ByteOrder>**

Sets the endianness if [FORMat\[:DATA\]](#) is set to INT,16.

**Parameters:**

&lt;ByteOrder&gt;

MSBFirst | LSBFirst

LSBFirst: little endian, least significant byte first

MSBFirst: big endian, most significant byte first

```
*RST:      LSBFirst
```

**CHANnel<m>:DATA:HEADer?**

Returns the header of channel waveform data.

*Table 14-2: Header data*

Position	Meaning	Example
1	XStart in s	-5e-07 = -5 ns
2	XStop in s	5e-07 = 5 ns
3	Record length of the waveform, number of samples	2500
4	Number of values per sample interval. For most waveforms the result is 1, for peak detect and envelope waveforms it is 2. If the number is 2, the number of returned values is twice the record length.	2

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Example:**

```
CHAN1:DATA:HEAD?
-5e-07,5e-07,2500,2
CHANnel1:DATA? returns 5000 values.
```

**Usage:**

Query only  
SCPI confirmed

**CHANnel<m>:DATA[:VALues]?**

Returns the data of the channel waveform points for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

To set the data format, use [FORMat \[:DATA\]](#) on page 477

**Suffix:**

<m> 1|2 (RTH1002) , 1..4 (RTH1004)

**Return values:**

<Data> List of values according to the format

**Example:**

```
FORM ASC
CHAN2:DATA?
<--
-0.125000,-0.123016,-0.123016,-0.123016,
-0.123016,-0.123016,...
```

**Usage:**

Query only

### 14.13.3 Screenshots

The example program creates a screenshot and saves it to a file on the SD card. Then the screenshot data is read and deleted.

```

:HCOPy:LANGUage PNG
:MMEMory:NAME '/media/SD/Screenshot.png'
:HCOPy:IMMEDIATE;*OPC
:MMEMory:DATA? '/media/SD/Screenshot.png'
:MMEMory:DELEte '/media/SD/Screenshot.png';*OPC

```

HCOPy:LANGUage.....	479
HCOPy:COLor.....	479
HCOPy:INVerse.....	479
MMEMory:NAME.....	479
HCOPy:IMMEDIATE.....	479

**HCOPy:LANGUage <FileFormat>**

Defines the format of the screenshot file.

**Parameters:**

<FileFormat>           PNG | JPG | BMP | TIFF  
 \*RST:                PNG

**HCOPy:COLor <BlackWhite>**

Creates a black and white screenshot.

**Parameters:**

<BlackWhite>           ON | OFF  
 \*RST:                OFF

**HCOPy:INVerse <InverseColor>**

Inverts the colors of the output, i.e. a dark waveform is printed on a white background.

**Parameters:**

<InverseColor>        ON | OFF  
 \*RST:                OFF

**MMEMory:NAME <Filename>**

Defines the filename of the next screenshot.

**Parameters:**

<Filename>            String with the filename

**HCOPy:IMMEDIATE**

Saves the current display in a new screenshot.

**Usage:**                Event



### 14.13.4 Instrument Settings, MMEM Commands

The Mass MEMory subsystem provides commands to access the storage media and to save and reload instrument settings.

#### File and directory names

The <file\_name> and <directory\_name> parameters are strings. If no complete path is specified, the file location is relative to the current directory, queried with `MMEMory:CDIRectory?`. The file name itself may contain the period as a separator for extensions.

File and directory names can be chosen according to Windows™ conventions. All letters and numbers are allowed, as well as the special characters "\_", "^", "\$", "~", "!", "#", "%", "&", "-", "{", "}", "(", ")", "@", and "'". Reserved file names are CON, AUX, COM1, ..., COM4, LPT1, ..., LPT3, NUL and PRN.

<code>MMEMory:SAV</code> .....	480
<code>MMEMory:RCL</code> .....	480
<code>MMEMory:DATA</code> .....	481
<code>MMEMory:CDIRectory</code> .....	481
<code>MMEMory:MDIRectory</code> .....	481
<code>MMEMory:RDIRectory</code> .....	482
<code>MMEMory:DCATalog?</code> .....	482
<code>MMEMory:DCATalog:LENGth?</code> .....	483
<code>MMEMory:CATalog?</code> .....	483
<code>MMEMory:CATalog:LENGth?</code> .....	484
<code>MMEMory:COPY</code> .....	484
<code>MMEMory:MOVE</code> .....	484
<code>MMEMory:DELeTe</code> .....	485

---

#### **MMEMory:SAV** <FileDestination>

Stores the current instrument settings to the specified file.

#### Parameters:

<FileDestination> String parameter specifying path and filename of the target file. Wildcards are not allowed.

#### Example:

```
MMEM:SAV
"/media/SD/Rohde-Schwarz/RTH/SaveSets/SetupMeasA.dfl"
Saves the current instrument settings to the file
SetupMeasA.dfl located in the directory /media/SD/
Rohde-Schwarz/RTH/SaveSets/ on the microSD card.
```

**Usage:** Event

---

#### **MMEMory:RCL** <FileDestination>

Restores the instrument settings from the specified file.

**Parameters:**

<FileDestination> String parameter specifying path and filename of the settings file. Wildcards are not allowed.

**Example:**

```
MMEM:RCL
"/media/SD/Rohde-Schwarz/RTH/SaveSets/SetupMeasA.dfl"
Loads and activates the instrument settings from the file
SetupMeasA.dfl located in the directory /media/SD/
Rohde-Schwarz/RTH/SaveSets/ on the microSD card.
```

**Usage:**

Event

**MMEMory:DATA <FileName>,<Data>**

Writes data to the specified file in the current directory (MMEMory:CDIRectory), or reads the data.

**Parameters:**

<Data> 488.2 block data  
The block begins with character '#'. The next digit is the length of the length information. Then the length information digits provide the number of bytes in the binary data.

**Parameters for setting and query:**

<FileName> String parameter containing the file name

**Example:**

```
MMEM:DATA "abc.txt", #216This is the file
#2: the length information has two digits
16: the binary data has 16 bytes.
MMEM:DATA? "abc.txt"
received: This is the file
```

**MMEMory:CDIRectory <DirectoryName>**

Specifies the current directory for file access.

**Setting parameters:**

<DirectoryName> String parameter to specify the directory.

**Example:**

```
MMEM:CDIR "/media/USB1/Data";*OPC
```

**MMEMory:MDIRectory <DirectoryName>**

Creates a new directory with the specified name.

**Setting parameters:**

<DirectoryName> String parameter  
Absolute path, or path relative to the current directory.

**Example:**

```
Create directory Data on the USB flash device using absolute
path:
MMEM:MDIR "/media/USB1/Data"
```

**Usage:** Setting only

---

### **MMEMory:RDIRectory** <DirectoryName>

Deletes the specified directory.

**Note:** All subdirectories and all files in the specified directory and in the subdirectories are deleted!

You cannot delete the current directory or a superior directory. In this case, the instrument returns an execution error.

#### **Setting parameters:**

<DirectoryName> String parameter, absolute path or relative to the current directory

**Example:** MMEM:RDIR "/media/USB1/Screenshots"  
Deletes the directory `Screenshots` on the USB flash drive.

**Usage:** Setting only

---

### **MMEMory:DCATalog?** <DirectoryName>

Returns the subdirectories of the specified directory. The result corresponds to the number of strings returned by the `MMEMory:DCATalog:LENGth?` command.

#### **Query parameters:**

<DirectoryName> String parameter  
Specifies the directory.

#### **Return values:**

<FileEntry> String parameter  
List of subdirectory strings separated by commas. The current and the parent directories are also returned ("`.,,0`", "`.,.,,0`").

**Example:** Query for directories using absolute path:  
MMEM:DCAT? "/media/USB1/\*"  
received "`.,,0`", "`.,.,,0`", "`Export,,0`", "`SaveSets,,0`", "`SCREENSHOTS,,0`"  
MMEM:DCAT:LENG? "/media/USB1/\*"  
received 5

**Example:** Query for directories in the current directory:  
MMEM:CDIR "/media/USB1/"  
MMEM:DCAT? "\*" "  
received "`.,,0`", "`.,.,,0`", "`JANUARY,,0`", "`FEBRUARY,,0`"  
MMEM:DCAT:LENG? "\*" "  
received 4

**Example:** Query for directories starting with S using filter:

```
MMEM:DCAT? "/media/USB1/S*"
received "SaveSets,,0","Slots,,0"
MMEM:DCAT:LENG? "/media/USB1/S*"
received 2
```

**Usage:** Query only

### **MMEMory:DCATalog:LENGth? <DirectoryName>**

Returns the number of directories in specified directory. The result corresponds to the number of strings returned by the `MMEMory:DCATalog?` command.

#### **Query parameters:**

<DirectoryName> String parameter  
Specifies the directory.

#### **Return values:**

<FileEntryCount> Number of directories.

#### **Example:**

```
MMEMory:DCATalog:LENGth
"/media/SD/Rohde-Schwarz/RTH"
recieved: 12
```

**Usage:** Query only

### **MMEMory:CATalog? <DirectoryName>[,<Format>]**

Returns the a list of files contained in the specified directory. The result corresponds to the number of files returned by the `MMEMory:CATalog:LENGth?` command.

The list of return values has the following order:

<UsedMemory>,<FreeMemory>,<FileEntry1>,<FileEntry2>,...

#### **Query parameters:**

<DirectoryName> String parameter  
Specifies the directory. A filter can be used to list, for example, only files of a given file type.

<Format> ALL | WTIME  
ALL: Extended result including file, date, time and attributes  
WTIME: Result including file, date, time

#### **Return values:**

<UsedMemory> Total amount of storage currently used in the directory, in bytes.

<FreeMemory> Total amount of storage available in the directory, in bytes.

<FileEntry> String parameter  
All files of the directory are listed with their file name, format and size in bytes.

- Example:** Query for files in the SaveSets directory on the USB flash drive using absolute path:  
 MMEM:CAT? "/media/USB1/SaveSets/\*.\*"
   
received: 511104,8633856,"Settings\_Mon.xml,,8",
   
"Settings\_Tue.xml,,8"
- Example:** Query for files that start with Settings in a user-defined directory on the USB flash drive:  
 MMEM:CAT? "/media/USB1/Misc/Settings\*.\*"
   
received: 511104,8633856,"Settings\_160321.xml,,
   
8","Settings\_160322.xml,,8"
- Usage:** Query only

**MMEMory:CATalog:LENGth?** <DirectoryName>

Returns the number of files in the specified directory. The result corresponds to the number of files returned by the `MMEMory:CATalog?` command.

**Query parameters:**

<PathName> String parameter  
 Directory to be queried, absolute or relative path

**Return values:**

<Count> Number of files.

**Usage:** Query only

**MMEMory:COPI** <FileSource>,<FileDestination>

Copies data to another directory on the same or different storage device. The file name can be changed, too.

**Setting parameters:**

<FileSource> String parameter  
 Name and path of the file to be copied

<FileDestination> String parameter  
 Name and path of the new file. If the file already exists, it is overwritten without notice.

**Example:** MMEM:COPY "/media/SD/Rohde-Schwarz/RTH/SaveSets/Settings1.xml",
   
"/media/USB1/SaveSets/Settings1.xml"

**Usage:** Setting only

**MMEMory:MOVE** <FileSource>, <FileDestination>

Moves an existing file to a new location.

**Setting parameters:**

<FileSource> String parameter  
Path and name of the file to be moved.

<FileDestination> String parameter  
Path and name of the new file.

**Example:** `MMEM:MOVE "/media/SD/Rohde-Schwarz/RTH/SaveSets/Settings1.xml",  
"/media/USB1/SaveSets/Settings1.xml"`

**Usage:** Setting only

**MMEMory:DELeTe** <FileSource>

Removes a file from the specified directory.

**Setting parameters:**

<FileSource> String parameter  
File name and path of the file to be removed. If the path is omitted, the specified file is deleted in the current directory. Filters are not allowed.

**Example:** `MMEM:DELeTe "/media/USB1/SaveSets/Settings1.xml"`

**Usage:** Setting only

## 14.14 General Instrument Setup

- [Date and Time](#).....485
- [Display Settings](#)..... 486

### 14.14.1 Date and Time

**SYSTem:DATE** [<Year>], [<Month>], [<Day>]

**SYSTem:DATE?** [<Year>], [<Month>]

Sets the date on the instrument.

**Parameters:**

<Day> Range: 1 to 31  
Increment: 1  
\*RST: 1

**Parameters for setting and query:**

<Year> Range: 2012 to 2099  
Increment: 1  
\*RST: 2012

<Month>                    Range:     1 to 12  
                                  Increment:  1  
                                  \*RST:     1

**SYSTem:TIME** [<Hours>], [<Minutes>], [<Seconds>]

**SYSTem:TIME?** [<Hours>], [<Minutes>]

Sets the time on the instrument.

**Parameters:**

<Seconds>                  Range:     0 to 59  
                                  Increment:  1  
                                  \*RST:     1

**Parameters for setting and query:**

<Hours>                    Range:     0 to 24  
                                  Increment:  1  
                                  \*RST:     1

<Minutes>                  Range:     0 to 59  
                                  Increment:  1  
                                  \*RST:     1

### 14.14.2 Display Settings

DISPlay:PERsistence[:TYPE].....	486
DISPlay:PERsistence:TIME.....	487
DISPlay:CONTRast.....	487
DISPlay:MOUS.....	487
DISPlay:LCD.....	487

**DISPlay:PERsistence[:TYPE]** <PersistenceType>

Defines how long every new data point remains on the screen.

**Parameters:**

<PersistenceType>    OFF | OFFM | TIME | INF

**OFF**

Deactivates persistence and displays the last acquisition.

**OFFM**

Deactivates persistence and displays multiple acquisitions.

**TIME**

Data points remain on the screen for the duration defined with [DISPlay:PERsistence:TIME](#).

**INF**

Data points remain on the screen infinitely until persistence is set to OFF.

\*RST:                  OFF

**DISPlay:PERSistence:TIME** <PersistenceTime>

Sets a user-defined persistence time. The command takes effect if **DISPlay:PERSistence[:TYPE]** is set to **TIME**.

**Parameters:**

<PersistenceTime>    Range:        0.05 to 10  
                           Increment: 0.01  
                           \*RST:        0.05  
                           Default unit: s

**DISPlay:CONTRast** <ContrastMode>

If enabled, the waveforms are displayed in black color on white background.

**Parameters:**

<ContrastMode>        ON | OFF  
                           \*RST:        OFF

**DISPlay:MOUS** <EnableTouch>

Switches the touch functionality of the screen on or off.

If you use the instrument in an environment with immissions considerably higher than specified, the immissions may affect the touch sensitivity of the screen. In this case, disable the touch and operate the instrument using the keys and the wheel.

**Parameters:**

<EnableTouch>        ON | OFF  
                           \*RST:        OFF

**DISPlay:LCD** <EnableLCD>

Turns the LCD display on or off.

**Parameters:**

<EnableLCD>         ON | OFF  
                           \*RST:        OFF

## 14.15 WLAN Connection (Option R&S RTH-K200/200US)

**SYSTem:COMMunicate:WLAN:MODE** <Mode>

Selects the wireless LAN function of the instrument. It can serve as access point or as client.



**Parameters:**

&lt;Mode&gt;

ACCesspoint | CLient

\*RST: ACCesspoint

# Annex

## A SCPI Command Structure

SCPI commands consist of a header and, in most cases, one or more parameters. The header and the parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several mnemonics (keywords). Queries are formed by appending a question mark directly to the header.

The commands can be either device-specific or device-independent (common commands). Common and device-specific commands differ in their syntax.

### A.1 Syntax for Common Commands

Common (= device-independent) commands consist of a header preceded by an asterisk (\*), and possibly one or more parameters.

**Table A-1: Examples of common commands**

*RST	RESET	Resets the instrument.
*ESE	EVENT STATUS ENABLE	Sets the bits of the event status enable registers.
*ESR?	EVENT STATUS QUERY	Queries the contents of the event status register.
*IDN?	IDENTIFICATION QUERY	Queries the instrument identification string.

## A.2 Syntax for Device-Specific Commands



Not all commands used in the following examples are necessarily implemented in the instrument. For demonstration purposes only, assume the existence of the following commands for this section:

- `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`
- `FORMat:READings:DATA <type>[,<length>]`
- `HCOpy:DEvice:COLor <Boolean>`
- `HCOpy:DEvice:CMAP:COLor:RGB <red>,<green>,<blue>`
- `HCOpy[:IMMediate]`
- `HCOpy:ITEM:ALL`
- `HCOpy:ITEM:LABel <string>`
- `HCOpy:PAGE:DIMensions:QUADrant[<N>]`
- `HCOpy:PAGE:ORientation LANDscape | PORTrait`
- `HCOpy:PAGE:SCALE <numeric value>`
- `MMEMemory:COpy <file_source>,<file_destination>`
- `SENSE:BANDwidth|BWIDth[:RESolution] <numeric_value>`
- `SENSe:FREQuency:STOP <numeric value>`
- `SENSe:LIST:FREQuency <numeric_value>{,<numeric_value>}`

- [Long and short form](#)..... 490
- [Numeric Suffixes](#)..... 491
- [Optional Mnemonics](#)..... 491

### A.2.1 Long and short form

The mnemonics feature a long form and a short form. The short form is marked by upper case letters, the long form corresponds to the complete word. Either the short form or the long form can be entered; other abbreviations are not permitted.

**Example:**

`HCOpy:DEvice:COLor ON` is equivalent to `HCOP:DEV:COL ON`.



#### Case-insensitivity

Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

## A.2.2 Numeric Suffixes

If a command can be applied to multiple instances of an object, e.g. specific channels or sources, the required instances can be specified by a suffix added to the command. Numeric suffixes are indicated by angular brackets (<1...4>, <n>, <i>) and are replaced by a single value in the command. Entries without a suffix are interpreted as having the suffix 1.

### Example:

Definition: `HCOPY:PAGE:DIMensions:QUADrant [<N>]`

Command: `HCOP:PAGE:DIM:QUAD2`

This command refers to the quadrant 2.



### Different numbering in remote control

For remote control, the suffix may differ from the number of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. If the numbering differs in manual operation and remote control, it is indicated for the corresponding command.

## A.2.3 Optional Mnemonics

Some command systems permit certain mnemonics to be inserted into the header or omitted. These mnemonics are marked by square brackets in the description. The instrument must recognize the long command to comply with the SCPI standard. Some commands are considerably shortened by these optional mnemonics.

### Example:

Definition: `HCOPY[:IMMEDIATE]`

Command: `HCOP:IMM` is equivalent to `HCOP`



### Optional mnemonics with numeric suffixes

Do not omit an optional mnemonic if it includes a numeric suffix that is relevant for the effect of the command.

### Example:

Definition: `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`

Command: `DISP:MAX ON` refers to window 1.

In order to refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

`DISP:WIND2:MAX ON` refers to window 2.

## A.3 SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank).

The parameters required for each command and the allowed range of values are specified in the command description.

Allowed parameters are:

• <a href="#">Numeric Values</a> .....	492
• <a href="#">Special Numeric Values</a> .....	493
• <a href="#">Boolean Parameters</a> .....	493
• <a href="#">Text Parameters</a> .....	494
• <a href="#">Character Strings</a> .....	494
• <a href="#">Block Data</a> .....	494

### A.3.1 Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed.

#### Example:

```
SENS:FREQ:STOP 1500000 = SENS:FREQ:STOP 1.5E6
```

#### Units

For physical quantities, the unit can be entered. If the unit is missing, the basic unit is used. Allowed unit prefixes are:

- G (giga)
- MA (mega), MOHM, MHZ
- K (kilo)
- M (milli)
- U (micro)
- N (nano)

#### Example:

```
SENSe:FREQ:STOP 1.5GHz = SENSe:FREQ:STOP 1.5E9
```

Some settings allow relative values to be stated in percent. According to SCPI, this unit is represented by the PCT string.

**Example:**

```
HCOP:PAGE:SCAL 90PCT
```

**A.3.2 Special Numeric Values**

The following mnemonics are special numeric values. In the response to a query, the numeric value is provided.

- **MIN and MAX:** denote the minimum and maximum value.
- **DEF:** denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the \*RST command.
- **UP and DOWN:** increases or reduces the numeric value by one step. The step width can be specified via an allocated step command for each parameter which can be set via UP and DOWN.
- **INF and NINF:** INFinity and negative INFinity (NINF) represent the numeric values 9.9E37 or -9.9E37, respectively. INF and NINF are only sent as instrument responses.
- **NAN:** Not A Number (NAN) represents the value 9.91E37. NAN is only sent as a instrument response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

**Example:**

Setting command: `SENSe:LIST:FREQ MAXimum`

Query: `SENS:LIST:FREQ?`

Response: `3.5E9`

**Queries for special numeric values**

The numeric values associated to `MAXimum`/`MINimum`/`DEFault` can be queried by adding the corresponding mnemonic after the quotation mark.

Example: `SENSe:LIST:FREQ? MAXimum`

Returns the maximum numeric value as a result.

**A.3.3 Boolean Parameters**

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0. The numeric values are provided as the response for a query.

**Example:**

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: 1

### A.3.4 Text Parameters

Text parameters observe the syntactic rules for mnemonics, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the response to a query, the short form of the text is provided.

**Example:**

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOPY:PAGE:ORI?`

Response: LAND

### A.3.5 Character Strings

Strings must always be entered in quotation marks (' or ").

**Example:**

`HCOPY:ITEM:LABEL "Test1"`

`HCOPY:ITEM:LABEL 'Test1'`

### A.3.6 Block Data

Block data is a format which is suitable for the transmission of large amounts of data. For example, a command using a block data parameter has the following structure:

```
FORMat:READings:DATA #45168xxxxxxxx
```

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

#0 specifies a data block of indefinite length. The use of the indefinite format requires a `NL^END` message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

## A.4 Overview of Syntax Elements

The following tables provide an overview of the syntax elements and special characters.

**Table A-2: Syntax elements**

:	The colon separates the mnemonics of a command.
;	The semicolon separates two commands of a command line. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
' '	Quotation marks introduce a string and terminate it (both single and double quotation marks are possible).
#	The hash symbol introduces binary, octal, hexadecimal and block data. <ul style="list-style-type: none"> <li>• Binary: #B10110</li> <li>• Octal: #O7612</li> <li>• Hexa: #HF3A7</li> <li>• Block: #21312</li> </ul>
	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates the header from the parameters.



Table A-3: Special characters

	<p><b>Parameters</b></p> <p>A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.</p> <p>Example:</p> <p>Definition:HCOPY:PAGE:ORIENTATION LANDscape   PORTRait</p> <p>Command HCOP:PAGE:ORI LAND specifies landscape orientation</p> <p>Command HCOP:PAGE:ORI PORT specifies portrait orientation</p> <p><b>Mnemonics</b></p> <p>A selection of mnemonics with an identical effect exists for several commands. These mnemonics are indicated in the same line; they are separated by a vertical stroke. Only one of these mnemonics needs to be included in the header of the command. The effect of the command is independent of which of the mnemonics is used.</p> <p>Example:</p> <p>DefinitionSENSE:BANDwidth BWIDth[:RESolution] &lt;numeric_value&gt;</p> <p>The two following commands with identical meaning can be created:</p> <p>SENS:BAND:RES 1</p> <p>SENS:BWID:RES 1</p>
[]	<p>Mnemonics in square brackets are optional and may be inserted into the header or omitted.</p> <p>Example: HCOpy[:IMMEDIATE]</p> <p>HCOP: IMM is equivalent to HCOP</p>
{ }	<p>Parameters in curly brackets are optional and can be inserted once or several times, or omitted.</p> <p>Example: SENSE:LIST:FREQuency &lt;numeric_value&gt;{,&lt;numeric_value&gt;}</p> <p>The following are valid commands:</p> <p>SENS:LIST:FREQ 10</p> <p>SENS:LIST:FREQ 10,20</p> <p>SENS:LIST:FREQ 10,20,30,40</p>

## A.5 Structure of a Command Line

A command line may consist of one or several commands. It is terminated by one of the following:

- <New Line>
- <New Line> with EOI
- EOI together with the last data byte

Several commands in a command line must be separated by a semicolon ";".

**Example:**

```
MMEM:COPY "Test1","MeasurementXY";:HCOP:ITEM ALL
```

This command line contains two commands. The first command belongs to the MMEM system, the second command belongs to the HCOP system. If the next command belongs to a different command system, the semicolon is followed by a colon.

**Example:**

```
HCOP:ITEM ALL;:HCOP:IMM
```

This command line contains two commands. Both commands are part of the `HCOP` command system, i.e. they have one level in common.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. When abbreviating the command line, the second command begins with the level below `HCOP`. The colon after the semicolon is omitted. The abbreviated form of the command line reads as follows:

```
HCOP:ITEM ALL;IMM
```

**Example:**

```
HCOP:ITEM ALL
```

```
HCOP:IMM
```

A new command line always begins with the complete path.

## A.6 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without a header.  
**Example:** `HCOP:PAGE:ORI?`, **Response:** `LAND`
- Maximum values, minimum values and all other quantities that are requested via a special text parameter are returned as numeric values.  
**Example:** `SENSe:FREQuency:STOP? MAX`, **Response:** `3.5E9`
- Numeric values are output without a unit. Physical quantities are referred to the basic units or to the units set using the `Unit` command. The response `3.5E9` in the previous example stands for 3.5 GHz.
- Truth values (Boolean values) are returned as 0 (for OFF) and 1 (for ON).  
**Example:**  
Setting command: `HCOPy:DEV:COL ON`  
Query: `HCOPy:DEV:COL?`  
Response: `1`
- Text (character data) is returned in a short form.  
**Example:**  
Setting command: `HCOPy:PAGE:ORIENTATION LANDscape`  
Query: `HCOP:PAGE:ORI?`  
Response: `LAND`
- Invalid numerical results  
In some cases, particularly when a result consists of multiple numeric values, invalid values are returned as `9.91E37` (not a number).

## B Command Sequence and Synchronization

IEEE 488.2 defines a distinction between overlapped (asynchronous) and sequential commands:

- A sequential command finishes executing before the next command starts executing. Commands that are processed quickly are usually implemented as sequential commands.
- An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. Usually, overlapping commands take longer to process and allow the program to do other tasks while being executed. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially. This method is called synchronization between the controller and the instrument.



As a rule, send commands and queries in different program messages, i.e. in separate command lines.

Do not combine queries with commands that affect the queried value in one program message because the response to the query is not predictable.

The following messages always return correct results:

```
:CHAN:SCAL 0.01;POS 1
```

```
:CHAN:SCAL?
```

Result: 0.01 (10 mV/div)

Reason: Setting commands within one command line, even though they are implemented as sequential commands, are not necessarily serviced in the order in which they have been received.

For further information, refer to:

- [rohde-schwarz.com/rckb](http://rohde-schwarz.com/rckb): Rohde & Schwarz web page that provides information on instrument drivers and remote control.
- "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (R&S order number 0002.3536.00). The book offers detailed information on concepts and definitions of SCPI.

### B.1 Preventing Overlapping Execution

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used. All three commands cause a certain action only to be carried out after the hardware has been set. The controller can be forced to wait for the corresponding action to occur.

**Table B-1: Synchronization using \*OPC, \*OPC? and \*WAI**

Com-mand	Action	Programming the controller
*OPC	Sets the Operation Complete bit in the ESR after all previous commands have been executed.	<ul style="list-style-type: none"> <li>Setting bit 0 in the ESE</li> <li>Setting bit 5 in the SRE</li> <li>Waiting for service request (SRQ)</li> </ul>
*OPC?	Stops command processing until 1 is returned. This occurs when all pending operations are completed.	Send *OPC? directly after the command whose processing must be terminated before other commands can be executed.
*WAI	Stops further command processing until all commands sent before *WAI have been executed.	Send *WAI directly after the command whose processing must be terminated before other commands are executed.

Command synchronization using \*WAI or \*OPC? is a good choice if the overlapped command takes only little time to process. The two synchronization commands simply block overlapped execution of the command. Append the synchronization command to the overlapping command, for example:

```
SINGLE; *OPC?
```

For time consuming overlapped commands, you can allow the controller or the instrument to do other useful work while waiting for command execution. Use one of the following methods:

#### **\*OPC with a service request**

1. Set the OPC mask bit (bit no. 0) in the ESE: \*ESE 1
2. Set bit no. 5 in the SRE: \*SRE 32 to enable ESB service request.
3. Send the overlapped command with \*OPC .
4. Wait for a service request.

The service request indicates that the overlapped command has finished.

#### **\*OPC? with a service request**

1. Set bit no. 4 in the SRE: \*SRE 16 to enable MAV service request.
2. Send the overlapped command with \*OPC?.
3. Wait for a service request.

The service request indicates that the overlapped command has finished.

#### **Event status register (ESE)**

1. Set the OPC mask bit (bit no. 0) in the ESE: \*ESE 1
2. Send the overlapped command without \*OPC, \*OPC? or \*WAI.
3. Poll the operation complete state periodically (with a timer) using the sequence: \*OPC; \*ESR?

A return value (LSB) of 1 indicates that the overlapped command has finished.

## List of Commands

ACQUIRE:ARESet:IMMediate.....	290
ACQUIRE:AVAILable?.....	329
ACQUIRE:AVERAge:COUNT.....	290
ACQUIRE:MODE.....	290
ACQUIRE:POINts:ARATe?.....	289
ACQUIRE:POINts[:VALue]?.....	291
ACQUIRE:RESolution?.....	291
AUToscale.....	283
BUS:CAN:BITRate.....	434
BUS:CAN:DATA:SOURce.....	434
BUS:CAN:DATA:THReshold.....	435
BUS:CAN:FCOunt?.....	443
BUS:CAN:FDATa:ABITRate.....	436
BUS:CAN:FDATa:ASAMplepoint.....	436
BUS:CAN:FDATa:DBITRate.....	436
BUS:CAN:FDATa:DSAMplepoint.....	436
BUS:CAN:FDATa:ENABle.....	437
BUS:CAN:FDATa:FRAMe<m>:STANdard?.....	447
BUS:CAN:FDATa:PSTandard.....	437
BUS:CAN:FRAMe<m>:ACKState?.....	445
BUS:CAN:FRAMe<m>:ACKValue?.....	443
BUS:CAN:FRAMe<m>:BSEPosition?.....	443
BUS:CAN:FRAMe<m>:BYTE<n>:STATe?.....	443
BUS:CAN:FRAMe<m>:BYTE<n>:VALue?.....	444
BUS:CAN:FRAMe<m>:CSSTATe?.....	445
BUS:CAN:FRAMe<m>:CSValue?.....	444
BUS:CAN:FRAMe<m>:DATA?.....	444
BUS:CAN:FRAMe<m>:DLCState?.....	445
BUS:CAN:FRAMe<m>:DLCValue?.....	445
BUS:CAN:FRAMe<m>:IDSTATe?.....	445
BUS:CAN:FRAMe<m>:IDTYpe?.....	446
BUS:CAN:FRAMe<m>:IDValue?.....	446
BUS:CAN:FRAMe<m>:NDBYtes?.....	446
BUS:CAN:FRAMe<m>:SDATa?.....	446
BUS:CAN:FRAMe<m>:STARt?.....	447
BUS:CAN:FRAMe<m>:STATus?.....	447
BUS:CAN:FRAMe<m>:STOP?.....	447
BUS:CAN:FRAMe<m>:SYMBol?.....	448
BUS:CAN:FRAMe<m>:TYPE?.....	448
BUS:CAN:SAMPlEpoint.....	435
BUS:CAN:TECHnology.....	435
BUS:CAN:TYPE.....	434
BUS:FORMat.....	409
BUS:I2C:FCOunt?.....	414
BUS:I2C:FRAMe<m>:AACcess?.....	414
BUS:I2C:FRAMe<m>:ACcess?.....	414
BUS:I2C:FRAMe<m>:ACOMplete?.....	414

BUS:I2C:FRAMe<m>:ADBStart?.....	415
BUS:I2C:FRAMe<m>:ADDRess?.....	415
BUS:I2C:FRAMe<m>:ADEVice?.....	415
BUS:I2C:FRAMe<m>:AMODE?.....	415
BUS:I2C:FRAMe<m>:ASTart?.....	416
BUS:I2C:FRAMe<m>:BCOunt?.....	416
BUS:I2C:FRAMe<m>:BYTE<n>:ACCess?.....	416
BUS:I2C:FRAMe<m>:BYTE<n>:ACKStart?.....	416
BUS:I2C:FRAMe<m>:BYTE<n>:COMPLete?.....	417
BUS:I2C:FRAMe<m>:BYTE<n>:STARt?.....	417
BUS:I2C:FRAMe<m>:BYTE<n>:VALue?.....	417
BUS:I2C:FRAMe<m>:DATA?.....	418
BUS:I2C:FRAMe<m>:RWBStart?.....	418
BUS:I2C:FRAMe<m>:STARt?.....	418
BUS:I2C:FRAMe<m>:STATus?.....	418
BUS:I2C:FRAMe<m>:STOP?.....	419
BUS:I2C:SCL:SOURce.....	410
BUS:I2C:SCL:THReshold.....	410
BUS:I2C:SDA:SOURce.....	410
BUS:I2C:SDA:THReshold.....	410
BUS:I2C:TECHnology.....	410
BUS:LIN:BITRate.....	450
BUS:LIN:DATA:SOURce.....	449
BUS:LIN:DATA:THReshold.....	450
BUS:LIN:FCOunt?.....	454
BUS:LIN:FRAMe<m>:BYTE<n>:STATe?.....	454
BUS:LIN:FRAMe<m>:BYTE<n>:VALue?.....	454
BUS:LIN:FRAMe<m>:CSState?.....	455
BUS:LIN:FRAMe<m>:CSValue?.....	455
BUS:LIN:FRAMe<m>:DATA?.....	455
BUS:LIN:FRAMe<m>:IDPValue?.....	456
BUS:LIN:FRAMe<m>:IDState?.....	456
BUS:LIN:FRAMe<m>:IDValue?.....	456
BUS:LIN:FRAMe<m>:STARt?.....	457
BUS:LIN:FRAMe<m>:STATus?.....	457
BUS:LIN:FRAMe<m>:STOP?.....	457
BUS:LIN:FRAMe<m>:SYMBol?.....	457
BUS:LIN:FRAMe<m>:SYSTate?.....	458
BUS:LIN:POLarity.....	450
BUS:LIN:STANdard.....	450
BUS:LIN:TECHnology.....	451
BUS:SENT:CLKPeriod.....	459
BUS:SENT:CLKTolerance.....	459
BUS:SENT:CRCMethod.....	459
BUS:SENT:CRCVersion.....	459
BUS:SENT:DATA:SOURce.....	460
BUS:SENT:DATA:THReshold.....	460
BUS:SENT:DNIBbles.....	460
BUS:SENT:FCOunt?.....	465
BUS:SENT:FRAMe<m>:CSValue?.....	465

BUS:SENT:FRAMe<m>:DATA?	465
BUS:SENT:FRAMe<m>:DStatus?	465
BUS:SENT:FRAMe<m>:IDTYpe?	466
BUS:SENT:FRAMe<m>:IDVAlue?	466
BUS:SENT:FRAMe<m>:NIBBle<n>:StATe?	466
BUS:SENT:FRAMe<m>:NIBBle<n>:VALue?	467
BUS:SENT:FRAMe<m>:PAPTicks?	467
BUS:SENT:FRAMe<m>:SCOM?	467
BUS:SENT:FRAMe<m>:SDATa?	468
BUS:SENT:FRAMe<m>:StARt?	468
BUS:SENT:FRAMe<m>:StATus?	468
BUS:SENT:FRAMe<m>:StOP?	468
BUS:SENT:FRAMe<m>:SYMBol?	469
BUS:SENT:FRAMe<m>:SYNCduration?	469
BUS:SENT:FRAMe<m>:TYpe?	469
BUS:SENT:PPFLength	460
BUS:SENT:PPULse	460
BUS:SENT:RDStL	461
BUS:SENT:SFORmat	461
BUS:SENT:TECHnology	461
BUS:SETReflevels	410
BUS:SETReflevels	421
BUS:SETReflevels	429
BUS:SETReflevels	435
BUS:SETReflevels	451
BUS:SPI:FCOunt?	424
BUS:SPI:FRAMe<m>:DATA?	424
BUS:SPI:FRAMe<m>:StARt?	425
BUS:SPI:FRAMe<m>:StATus?	424
BUS:SPI:FRAMe<m>:StOP?	425
BUS:SPI:FRAMe<m>:WCCount?	425
BUS:SPI:FRAMe<m>:WORD<n>:MISO?	426
BUS:SPI:FRAMe<m>:WORD<n>:MOSI?	426
BUS:SPI:FRAMe<m>:WORD<n>:StARt?	426
BUS:SPI:FRAMe<m>:WORD<n>:StOP?	427
BUS:SPI:MISO:SOURce	420
BUS:SPI:MISO:THReshold	421
BUS:SPI:MOSI:SOURce	420
BUS:SPI:MOSI:THReshold	421
BUS:SPI:ORDer	422
BUS:SPI:SCLK:SLOPe	420
BUS:SPI:SCLK:SOURce	420
BUS:SPI:SCLK:THReshold	421
BUS:SPI:SSEL:POLarity	420
BUS:SPI:SSEL:SOURce	420
BUS:SPI:SSEL:StATe	423
BUS:SPI:SSEL:THReshold	421
BUS:SPI:TECHnology	421
BUS:SPI:TIMeout	422
BUS:SPI:WSIZe	421

BUS:TYPE.....	409
BUS:UART:BITRate.....	429
BUS:UART:FRAMemode.....	430
BUS:UART:ORDer.....	430
BUS:UART:PARity.....	429
BUS:UART:POLarity.....	428
BUS:UART:SBIT.....	430
BUS:UART:SOURce.....	428
BUS:UART:SSIZe.....	429
BUS:UART:STDBitrate.....	429
BUS:UART:TECHnology.....	428
BUS:UART:THReshold.....	428
BUS:UART:TOUT.....	430
BUS:UART:WCOunt?.....	432
BUS:UART:WORD<m>:STARt?.....	432
BUS:UART:WORD<m>:STATe?.....	432
BUS:UART:WORD<m>:STOP?.....	433
BUS:UART:WORD<m>:VALue?.....	433
BUS[:STATe].....	409
CALCulate:MATH:STATe.....	325
CALCulate:MATH:VERTical:POSition.....	326
CALCulate:MATH:VERTical:RANGe.....	326
CALCulate:MATH:VERTical:SCALe.....	326
CALCulate:MATH[:EXPRession][:DEFine].....	325
CHANnel<m>:BANDwidth.....	285
CHANnel<m>:COUPling.....	285
CHANnel<m>:DATA:HEADer?.....	478
CHANnel<m>:DATA[:VALues]?.....	478
CHANnel<m>:DESKew.....	286
CHANnel<m>:HISTory:CURRent.....	329
CHANnel<m>:HISTory:NSEGments.....	328
CHANnel<m>:HISTory:PLAY.....	330
CHANnel<m>:HISTory:REPLay.....	330
CHANnel<m>:HISTory:STARt.....	329
CHANnel<m>:HISTory:STOP.....	329
CHANnel<m>:HISTory:TPACq.....	328
CHANnel<m>:HISTory:TSABbsolute?.....	330
CHANnel<m>:HISTory:TSDate?.....	330
CHANnel<m>:HISTory:TSRelative?.....	331
CHANnel<m>:HISTory[:STATe].....	328
CHANnel<m>:OFFSet.....	285
CHANnel<m>:POSition.....	284
CHANnel<m>:RANGe.....	284
CHANnel<m>:SCALe.....	284
CHANnel<m>:STATe.....	283
CHANnel<m>:THReshold:FINDlevel.....	288
CHANnel<m>:THReshold:TECHnology.....	286
CHANnel<m>:THReshold:THReshold?.....	287
CHANnel<m>:THReshold:USER.....	287
COUNter<m>:ABORt.....	390



COUNter<m>:CALCulate:AVERage:ALL?	390
COUNter<m>:CALCulate:AVERage:AVERage?	390
COUNter<m>:CALCulate:AVERage:CLEar	390
COUNter<m>:CALCulate:AVERage:COUNt:CURRent?	391
COUNter<m>:CALCulate:AVERage:MAXimum?	391
COUNter<m>:CALCulate:AVERage:MINimum?	391
COUNter<m>:CONFigure:FREQuency	392
COUNter<m>:CONFigure:VALue?	392
COUNter<m>:FETCh?	392
COUNter<m>:INITiate	393
COUNter<m>:MEASure:FREQuency?	393
COUNter<m>:READ?	394
COUNter<m>:SENSe:FUNcTion	394
COUNter<m>:SENSe:RANGe	394
COUNter<m>:SENSe:REFerence:STATe	394
COUNter<m>:SENSe:REFerence:VALue	395
COUNter<m>:SENSe:SOURce	395
COUNter<m>:SENSe:STATe	395
COUNter<m>:SENSe:TRIGger:MODE	395
CURSor:COUPLing	322
CURSor:DELTA?	323
CURSor:FUNcTion	321
CURSor:ITDelta?	323
CURSor:MEASurement<m>:RESult:ACTual?	324
CURSor:MEASurement<m>:RESult:LIMit?	324
CURSor:MEASurement<m>:TYPE	322
CURSor:SCPLing	322
CURSor:SCReen	322
CURSor:SOURce	321
CURSor:STATe	321
CURSor:TDELTA?	323
CURSor:X1Position	323
CURSor:X2Position	323
CURSor:Y1AMplitude?	324
CURSor:Y1Position	324
CURSor:Y2AMplitude?	324
CURSor:Y2Position	324
DISPlay:CONTRast	487
DISPlay:LCD	487
DISPlay:MOUS	487
DISPlay:PERSiStence:TIME	487
DISPlay:PERSiStence[:TYPE]	486
EXPort:WAVEform:DLOGging	475
EXPort:WAVEform:INCXvalues	475
EXPort:WAVEform:MULTichannel	475
EXPort:WAVEform:NAME	474
EXPort:WAVEform:SAVE	476
EXPort:WAVEform:SOURce	474
FORMat:BORDER	477
FORMat[:DATA]	477

HARMonic:AVERAge.....	350
HARMonic:CLEar.....	350
HARMonic:DISPlay:TYPE.....	350
HARMonic:DISPlay:USER.....	351
HARMonic:EXPort:NAME.....	354
HARMonic:EXPort:SAVE.....	355
HARMonic:FUNDamental:CURRent?.....	351
HARMonic:FUNDamental:TYPE.....	351
HARMonic:FUNDamental:USER.....	352
HARMonic:LIMits:CURRent?.....	352
HARMonic:LIMits:LOAD.....	352
HARMonic:LIMits:NAME.....	353
HARMonic:LIMits:TYPE.....	353
HARMonic:RESult<m>:CLIPping?.....	355
HARMonic:RESult<m>:FRQMissing?.....	355
HARMonic:RESult<m>:FUNDamental?.....	356
HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MAXimum?.....	356
HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude:MINimum?.....	356
HARMonic:RESult<m>:HARMonics<n>:ABSMagnitude[:CURRent]?.....	356
HARMonic:RESult<m>:HARMonics<n>:LIMCheck?.....	356
HARMonic:RESult<m>:HARMonics<n>:LIMit?.....	357
HARMonic:RESult<m>:HARMonics<n>:LIMViolation?.....	357
HARMonic:RESult<m>:HARMonics<n>:PHASe?.....	358
HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MAXimum?.....	359
HARMonic:RESult<m>:HARMonics<n>:RELMagnitude:MINimum?.....	359
HARMonic:RESult<m>:HARMonics<n>:RELMagnitude[:CURRent]?.....	359
HARMonic:RESult<m>:HARMonics<n>[:FREQUENCY]?.....	359
HARMonic:RESult<m>:LIMViolation?.....	359
HARMonic:RESult<m>:NOHarmonics?.....	360
HARMonic:RESult<m>:NOResults?.....	360
HARMonic:RESult<m>:RMS:MAXimum?.....	360
HARMonic:RESult<m>:RMS:MINimum?.....	360
HARMonic:RESult<m>:RMS[:CURRent]?.....	360
HARMonic:RESult<m>:THD:MAXimum?.....	361
HARMonic:RESult<m>:THD:MINimum?.....	361
HARMonic:RESult<m>:THD[:CURRent]?.....	361
HARMonic:SCALE.....	353
HARMonic:STATistic.....	353
HARMonic:THDType.....	354
HCOPY:COLor.....	479
HCOPY:IMMEDIATE.....	479
HCOPY:INVERSE.....	479
HCOPY:LANGUage.....	479
LOGGer:ACLR.....	399
LOGGer:AUTOset.....	399
LOGGer:CURSor:COUPLing.....	402
LOGGer:CURSor:RESult<n>:DELTA?.....	403
LOGGer:CURSor:SCPLing.....	402
LOGGer:CURSor:SCReen.....	402
LOGGer:CURSor:TDELta?.....	403

LOGGer:CURSor:TYPE.....	401
LOGGer:CURSor[:STATe].....	401
LOGGer:CURSor<m>:POSition.....	403
LOGGer:CURSor<m>:RESult<n>[:AMPLitude]?.....	402
LOGGer:MEASurement<m>:ENABLEd?.....	407
LOGGer:MEASurement<m>:RESult:CURRentsampl?.....	405
LOGGer:MEASurement<m>:RESult:MAXimum:POSition?.....	405
LOGGer:MEASurement<m>:RESult:MAXimum:VALue?.....	405
LOGGer:MEASurement<m>:RESult:MEAN?.....	406
LOGGer:MEASurement<m>:RESult:MINimum:POSition?.....	406
LOGGer:MEASurement<m>:RESult:MINimum:VALue?.....	406
LOGGer:MEASurement<m>:RESult:STDDev?.....	406
LOGGer:MEASurement<m>:SOURce?.....	407
LOGGer:MEASurement<m>:TYPE?.....	407
LOGGer:MEASurement<m>:VERTical:AUTO.....	399
LOGGer:MEASurement<m>:VERTical:DEVIation.....	400
LOGGer:MEASurement<m>:VERTical:LOWer.....	399
LOGGer:MEASurement<m>:VERTical:MEAN.....	400
LOGGer:MEASurement<m>:VERTical:UPPer.....	399
LOGGer:RECOding:STARt?.....	405
LOGGer:RECOding:TOTal?.....	405
LOGGer:SLOT:ACTive?.....	408
LOGGer:SLOT:CLEar.....	398
LOGGer:SLOT:CURRent.....	397
LOGGer:SLOT:EXPort:NAME.....	408
LOGGer:SLOT:EXPort:SAVE.....	408
LOGGer:SLOT:LOAD.....	398
LOGGer:SLOT:SLOT<m>:HASData?.....	398
LOGGer:SLOT:SLOT<m>:NAME.....	397
LOGGer:SLOT:SLOT<m>:STARt?.....	398
LOGGer:SOURce.....	396
LOGGer:TIMEbase:SCALE.....	397
LOGGer:TIMEbase:SRATE.....	397
LOGGer:ZOOM:ENABLE.....	404
LOGGer:ZOOM:POSition.....	404
LOGGer:ZOOM:SCALE.....	404
LOGic:CHANnel<m>:DESKew.....	472
LOGic:GROup<m>:HYSteresis.....	472
LOGic:GROup<m>:TECHnology.....	470
LOGic:GROup<m>:THREshold?.....	472
LOGic:GROup<m>:USER.....	471
LOGic:STATe.....	470
LOGic:THCOupling.....	470
MASK:CHANnel<m>:CREatemask.....	332
MASK:CHANnel<m>:PROPerties:XWIDth.....	331
MASK:CHANnel<m>:PROPerties:YWIDth.....	332
MASK:CHANnel<m>:RESult:FAIL:PERCentage?.....	333
MASK:CHANnel<m>:RESult:FAIL[:COUNT]?.....	333
MASK:CHANnel<m>:RESult:PASS:PERCentage?.....	334
MASK:CHANnel<m>:RESult:PASS[:COUNT]?.....	334

MASK:CHANnel<m>:RESult:TOTL[:COUNT]?	334
MASK:CHANnel<m>:STATe	331
MASK:ELAPsedtime:TOTal?	334
MASK:ELAPsedtime[:SECS]?	335
MASK:ONViolation[:SELECTION]	332
MASK:RST	333
MASK[:TESTstate]?	333
MEASurement<m>:AOFF	320
MEASurement<m>:DElay:SLOPe	320
MEASurement<m>:ENABle	318
MEASurement<m>:RESult:ACTual?	320
MEASurement<m>:RESult:LIMit?	320
MEASurement<m>:SOURce	319
MEASurement<m>:TYPE	319
METer:CONFigure:CAPacitance	363
METer:CONFigure:CONTInuity	363
METer:CONFigure:CURRent:AC	364
METer:CONFigure:CURRent:DC	364
METer:CONFigure:DIODE	363
METer:CONFigure:FREQUency	364
METer:CONFigure:RESistance	364
METer:CONFigure:TEMPerature	363
METer:CONFigure:VALue?	372
METer:CONFigure:VOLTagE:AC	364
METer:CONFigure:VOLTagE:DC	364
METer:MEASure:CAPacitance?	375
METer:MEASure:CONTInuity?	374
METer:MEASure:CURRent:AC?	375
METer:MEASure:CURRent:DC?	375
METer:MEASure:DIODE?	374
METer:MEASure:FREQUency?	374
METer:MEASure:RESistance?	375
METer:MEASure:TEMPerature?	374
METer:MEASure:VOLTagE:AC?	375
METer:MEASure:VOLTagE:DC?	375
METer:SENSe:CAPacitance:NULL:STATe	369
METer:SENSe:CAPacitance:NULL:VALue	370
METer:SENSe:CAPacitance:RANGe:AUTO	367
METer:SENSe:CAPacitance:RANGe:UPPer	365
METer:SENSe:CURRent:AC:NULL:STATe	369
METer:SENSe:CURRent:AC:NULL:VALue	370
METer:SENSe:CURRent:AC:RANGe:AUTO	367
METer:SENSe:CURRent:AC:RANGe:UPPer	365
METer:SENSe:CURRent:DC:NULL:STATe	369
METer:SENSe:CURRent:DC:NULL:VALue	370
METer:SENSe:CURRent:DC:RANGe:AUTO	367
METer:SENSe:CURRent:DC:RANGe:UPPer	365
METer:SENSe:FREQUency:VOLTagE:RANGe:AUTO	367
METer:SENSe:FREQUency:VOLTagE:RANGe:UPPer	366
METer:SENSe:FUNCTion	372

METer:SENSe:RESistance:NULL:STATe.....	369
METer:SENSe:RESistance:NULL:VALue.....	371
METer:SENSe:RESistance:RANGe:AUTO.....	367
METer:SENSe:RESistance:RANGe:UPPer.....	366
METer:SENSe:TEMPerature:NULL:STATe.....	369
METer:SENSe:TEMPerature:NULL:VALue.....	371
METer:SENSe:TEMPerature:TRANsductor:RTD:TYPE.....	369
METer:SENSe:VOLTagE:AC:NULL:STATe.....	369
METer:SENSe:VOLTagE:AC:NULL:VALue.....	370
METer:SENSe:VOLTagE:AC:RANGe:AUTO.....	367
METer:SENSe:VOLTagE:AC:RANGe:UPPer.....	366
METer:SENSe:VOLTagE:DC:NULL:STATe.....	369
METer:SENSe:VOLTagE:DC:NULL:VALue.....	370
METer:SENSe:VOLTagE:DC:RANGe:AUTO.....	367
METer:SENSe:VOLTagE:DC:RANGe:UPPer.....	366
METer:UNIT:TEMPerature.....	368
METer<m>:ABORT.....	373
METer<m>:ABORT.....	385
METer<m>:CALCulate:AVERage:AVERage?.....	376
METer<m>:CALCulate:AVERage:AVERage?.....	388
METer<m>:CALCulate:AVERage:CLEar.....	377
METer<m>:CALCulate:AVERage:CLEar.....	389
METer<m>:CALCulate:AVERage:MAXimum?.....	377
METer<m>:CALCulate:AVERage:MAXimum?.....	389
METer<m>:CALCulate:AVERage:MINimum?.....	376
METer<m>:CALCulate:AVERage:MINimum?.....	388
METer<m>:CONFigure:CURRent:AC.....	379
METer<m>:CONFigure:CURRent:DC.....	379
METer<m>:CONFigure:VALue?.....	385
METer<m>:CONFigure:VOLTagE:AC.....	380
METer<m>:CONFigure:VOLTagE:DC.....	380
METer<m>:FETCh?.....	374
METer<m>:FETCh?.....	386
METer<m>:INITiate.....	373
METer<m>:INITiate.....	386
METer<m>:MEASure:CURRent:AC?.....	387
METer<m>:MEASure:CURRent:DC?.....	387
METer<m>:MEASure:VOLTagE:AC?.....	387
METer<m>:MEASure:VOLTagE:DC?.....	387
METer<m>:READ?.....	373
METer<m>:READ?.....	386
METer<m>:SENSe:CURRent:AC:COUPling.....	368
METer<m>:SENSe:CURRent:AC:COUPling.....	381
METer<m>:SENSe:CURRent:AC:NULL:STATe.....	383
METer<m>:SENSe:CURRent:AC:NULL:VALue.....	383
METer<m>:SENSe:CURRent:AC:RANGe:UPPer.....	380
METer<m>:SENSe:CURRent:DC:NULL:STATe.....	383
METer<m>:SENSe:CURRent:DC:NULL:VALue.....	383
METer<m>:SENSe:CURRent:DC:RANGe:UPPer.....	380
METer<m>:SENSe:FUNCTion.....	384

METer<m>:SENSe:NULL:STATe.....	370
METer<m>:SENSe:NULL:STATe.....	383
METer<m>:SENSe:NULL:VALU.....	371
METer<m>:SENSe:NULL:VALU.....	384
METer<m>:SENSe:RANGe.....	379
METer<m>:SENSe:RELative:STATe.....	370
METer<m>:SENSe:RELative:STATe.....	383
METer<m>:SENSe:SOURce.....	378
METer<m>:SENSe:STATe.....	378
METer<m>:SENSe:VOLTagE:AC:COUPling.....	368
METer<m>:SENSe:VOLTagE:AC:COUPling.....	381
METer<m>:SENSe:VOLTagE:AC:NULL:STATe.....	383
METer<m>:SENSe:VOLTagE:AC:NULL:VALue.....	383
METer<m>:SENSe:VOLTagE:AC:RANGe:UPPer.....	381
METer<m>:SENSe:VOLTagE:DC:NULL:STATe.....	383
METer<m>:SENSe:VOLTagE:DC:NULL:VALue.....	383
METer<m>:SENSe:VOLTagE:DC:RANGe:UPPer.....	381
METer<m>:TRIGger:MODE.....	372
METer<m>:TRIGger:MODE.....	385
MMEMory:CATalog:LENGth?.....	484
MMEMory:CATalog?.....	483
MMEMory:CDIRectory.....	481
MMEMory:COPI.....	484
MMEMory:DATA.....	481
MMEMory:DCATalog:LENGth?.....	483
MMEMory:DCATalog?.....	482
MMEMory:DELeTe.....	485
MMEMory:MDIRectory.....	481
MMEMory:MOVE.....	484
MMEMory:NAME.....	479
MMEMory:RCL.....	480
MMEMory:RDIRectory.....	482
MMEMory:SAV.....	480
OP[:MODE].....	282
OP[:MODE].....	361
POD:STATe?.....	473
REFCurve:DELeTe.....	327
REFCurve:NAME.....	327
REFCurve:OPEN.....	327
REFCurve:POSition.....	327
REFCurve:SAVE.....	327
REFCurve:SOURce.....	326
REFCurve:STATe.....	327
REFCurve:UPDate.....	326
RUN.....	289
SPECTrum:CURSor<m>:COUPling.....	343
SPECTrum:CURSor<m>:FREQUency:DELTA?.....	344
SPECTrum:CURSor<m>:FREQUency[:VALue].....	344
SPECTrum:CURSor<m>:LEVel:DELTA?.....	344
SPECTrum:CURSor<m>:LEVel[:VALue]?.....	344

SPECTrum:CURSor<m>:SCPLing.....	343
SPECTrum:CURSor<m>:SCReen.....	345
SPECTrum:CURSor<m>:SOURce.....	343
SPECTrum:CURSor<m>:STATe.....	342
SPECTrum:EXPort:INCXvalues.....	349
SPECTrum:EXPort:NAME.....	349
SPECTrum:EXPort:SAVE.....	349
SPECTrum:FREQuency:AVERAge:COUNT.....	339
SPECTrum:FREQuency:BANDwidth[:RESolution]:AUTO.....	340
SPECTrum:FREQuency:BANDwidth[:RESolution]:RATio.....	340
SPECTrum:FREQuency:BANDwidth[:RESolution][:VALue].....	336
SPECTrum:FREQuency:CENTer.....	336
SPECTrum:FREQuency:FULLspan.....	340
SPECTrum:FREQuency:HORizontal:SCALe.....	336
SPECTrum:FREQuency:MAGNitude:REFerence[:VALue].....	340
SPECTrum:FREQuency:MAGNitude:SCALe.....	336
SPECTrum:FREQuency:POSition.....	341
SPECTrum:FREQuency:RESet.....	342
SPECTrum:FREQuency:SAMPle?.....	337
SPECTrum:FREQuency:SCALe.....	341
SPECTrum:FREQuency:SPAN:MODE.....	337
SPECTrum:FREQuency:SPAN[:VALue].....	337
SPECTrum:FREQuency:STARt.....	337
SPECTrum:FREQuency:STOP.....	338
SPECTrum:FREQuency:WINDow:FACTor?.....	338
SPECTrum:FREQuency:WINDow:TYPE.....	338
SPECTrum:MARKer:COUNT.....	345
SPECTrum:MARKer:RCOunt?.....	347
SPECTrum:MARKer:RESult<m>:FREQuency:DELTA?.....	347
SPECTrum:MARKer:RESult<m>:FREQuency[:VALue]?.....	347
SPECTrum:MARKer:RESult<m>:LEVel:DELTA?.....	348
SPECTrum:MARKer:RESult<m>:LEVel[:VALue]?.....	348
SPECTrum:MARKer:RMARker:FREQuency?.....	348
SPECTrum:MARKer:RMARker:VALue?.....	349
SPECTrum:MARKer:SETup:DISTance.....	346
SPECTrum:MARKer:SETup:EXCURsion.....	346
SPECTrum:MARKer:SETup:MLEVel.....	346
SPECTrum:MARKer:SOURce.....	346
SPECTrum:MARKer[:STATe].....	345
SPECTrum:MODE?.....	339
SPECTrum:SOURce.....	335
SPECTrum:WAVeform:AVERAge[:ENABle].....	341
SPECTrum:WAVeform:MAXimum[:ENABle].....	342
SPECTrum:WAVeform:MINimum[:ENABle].....	342
SPECTrum:WAVeform:SPECTrum[:ENABle].....	342
STOP.....	290
SYSTem:COMMunicate:WLAN:MODE.....	487
SYSTem:DATE.....	485
SYSTem:TIME.....	486
TIMebase:HORizontal:POSition.....	288

TIMebase:RANGe.....	288
TIMebase:REFerence.....	289
TIMebase:SCALe.....	288
TRIGger:CAN:ACKerror.....	438
TRIGger:CAN:BITSterror.....	438
TRIGger:CAN:CRCError.....	438
TRIGger:CAN:DATA.....	438
TRIGger:CAN:DCONdition.....	438
TRIGger:CAN:FDATa:BRS.....	441
TRIGger:CAN:FDATa:DPOSition.....	441
TRIGger:CAN:FDATa:ESL.....	441
TRIGger:CAN:FDATa:FDf.....	442
TRIGger:CAN:FDATa:SCERror.....	442
TRIGger:CAN:FORMerror.....	439
TRIGger:CAN:FTYPE.....	439
TRIGger:CAN:ICONdition.....	439
TRIGger:CAN:IDENtifier.....	440
TRIGger:CAN:ITYPe.....	440
TRIGger:CAN:TYPE.....	440
TRIGger:DATatoclock:CONDItion.....	310
TRIGger:DATatoclock:CSource:EDGE.....	310
TRIGger:DATatoclock:CSource[:VALue].....	310
TRIGger:DATatoclock:DSource[:VALue].....	310
TRIGger:DATatoclock:HTIME.....	311
TRIGger:DATatoclock:STIME.....	311
TRIGger:EDGE:SLOPe.....	295
TRIGger:EXTErnal:LEVel.....	301
TRIGger:EXTErnal:SLOPe.....	302
TRIGger:GLITch:POLarity.....	295
TRIGger:GLITch:RANGe.....	296
TRIGger:GLITch:WIDTh.....	296
TRIGger:HOLDoff:EVENTs.....	294
TRIGger:HOLDoff:MAX.....	294
TRIGger:HOLDoff:MIN.....	294
TRIGger:HOLDoff:MODE.....	293
TRIGger:HOLDoff:TIME.....	294
TRIGger:I2C:ACCess.....	412
TRIGger:I2C:ACONdition.....	412
TRIGger:I2C:ADDRess.....	412
TRIGger:I2C:ADNack.....	411
TRIGger:I2C:DATA.....	412
TRIGger:I2C:DCONdition.....	413
TRIGger:I2C:DPOSition.....	413
TRIGger:I2C:DRNack.....	411
TRIGger:I2C:DWNack.....	412
TRIGger:I2C:MODE.....	411
TRIGger:INTerval:DELTA.....	314
TRIGger:INTerval:MAXWidTh.....	315
TRIGger:INTerval:MINWidTh.....	314
TRIGger:INTerval:RANGe.....	314



TRIGger:INTerval:SLOPe.....	313
TRIGger:INTerval:WIDTh.....	314
TRIGger:LEVel<m>:RUNT:LOWer.....	306
TRIGger:LEVel<m>:RUNT:UPPer.....	306
TRIGger:LEVel<m>:SLEW:LOWer.....	308
TRIGger:LEVel<m>:SLEW:UPPer.....	308
TRIGger:LEVel<m>:VALue.....	293
TRIGger:LEVel<m>:WINDow:LOWer.....	315
TRIGger:LEVel<m>:WINDow:UPPer.....	315
TRIGger:LIN:CHKSError.....	451
TRIGger:LIN:DATA.....	452
TRIGger:LIN:DCONdition.....	452
TRIGger:LIN:ICONdition.....	452
TRIGger:LIN:IDENtifier.....	452
TRIGger:LIN:IPERror.....	453
TRIGger:LIN:SYERror.....	453
TRIGger:LIN:TYPE.....	453
TRIGger:MNR.....	295
TRIGger:MODE.....	292
TRIGger:PATtern:STATe:COMBination.....	302
TRIGger:PATtern:STATe[:CHANnel<m>].....	302
TRIGger:PATtern:TIMEout[:TIME].....	303
TRIGger:PATtern:WIDTh:DELTA.....	304
TRIGger:PATtern:WIDTh:MAXWidth.....	304
TRIGger:PATtern:WIDTh:MINWidth.....	304
TRIGger:PATtern:WIDTh:RANGe.....	303
TRIGger:PATtern:WIDTh[:WIDTh].....	303
TRIGger:RUNT:DELTA.....	307
TRIGger:RUNT:MAXWidth.....	308
TRIGger:RUNT:MINWidth.....	307
TRIGger:RUNT:POLarity.....	306
TRIGger:RUNT:RANGe.....	306
TRIGger:RUNT:WIDTh.....	307
TRIGger:SENT:DATA.....	462
TRIGger:SENT:DCONdition.....	462
TRIGger:SENT:FCRCError.....	463
TRIGger:SENT:ICONdition.....	462
TRIGger:SENT:IDENtifier.....	463
TRIGger:SENT:IRFLength.....	463
TRIGger:SENT:PPERioderror.....	464
TRIGger:SENT:PULSeerror.....	464
TRIGger:SENT:SCONdition.....	463
TRIGger:SENT:SCRCError.....	464
TRIGger:SENT:STATus.....	463
TRIGger:SENT:TYPE.....	462
TRIGger:SLEW:DELTA.....	309
TRIGger:SLEW:MAXWidth.....	310
TRIGger:SLEW:MINWidth.....	309
TRIGger:SLEW:RANGe.....	308
TRIGger:SLEW:RATE.....	309

TRIGger:SLEW:SLOPe.....	308
TRIGger:SOURce.....	292
TRIGger:SPATtern:CSource:EDGE.....	312
TRIGger:SPATtern:CSource:FIRStedge.....	312
TRIGger:SPATtern:CSource[:VALue].....	312
TRIGger:SPATtern:DSource[:VALue].....	311
TRIGger:SPATtern:ORDer.....	312
TRIGger:SPATtern:PATtern.....	312
TRIGger:SPI:DATA.....	423
TRIGger:SPI:DCONDition.....	423
TRIGger:SPI:DPOSition.....	423
TRIGger:SPI:DSRC.....	423
TRIGger:SPI:MODE.....	422
TRIGger:STATe:CHANnel<m>.....	305
TRIGger:STATe:COMBination.....	305
TRIGger:STATe:CSource:EDGE.....	305
TRIGger:STATe:CSource[:VALue].....	305
TRIGger:TIMEout:RANGe.....	313
TRIGger:TIMEout:TIME.....	313
TRIGger:TV:CUSTom:LDURation.....	301
TRIGger:TV:CUSTom:SCANmode.....	301
TRIGger:TV:CUSTom:SDURation.....	301
TRIGger:TV:CUSTom:STYPe.....	300
TRIGger:TV:LFIeld.....	300
TRIGger:TV:LINE.....	300
TRIGger:TV:MODE.....	299
TRIGger:TV:POLarity.....	299
TRIGger:TV:STANDard.....	298
TRIGger:TYPE.....	292
TRIGger:UART:DATA.....	431
TRIGger:UART:DCONDition.....	431
TRIGger:UART:TYPE.....	431
TRIGger:WIDTH:DELTA.....	297
TRIGger:WIDTH:MAX.....	297
TRIGger:WIDTH:MIN.....	298
TRIGger:WIDTH:POLarity.....	296
TRIGger:WIDTH:RANGe.....	296
TRIGger:WIDTH:WIDTH.....	297
TRIGger:WINDow:DELTA.....	317
TRIGger:WINDow:MAXWidth.....	317
TRIGger:WINDow:MINWidth.....	317
TRIGger:WINDow:RANGe.....	316
TRIGger:WINDow:TIME.....	315
TRIGger:WINDow:WIDTH.....	316
ZOOM:ENABLE.....	317
ZOOM:POSition.....	318
ZOOM:SCALE.....	318