

# Programmable DC Electronic Load

PEL-2000A Series

---

**USER MANUAL**



ISO-9001 CERTIFIED MANUFACTURER

March 2018

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of the GW instek company.

The information in this manual was correct at the time of printing. However, GW instek continues to improve products and reserves the right to change specification, equipment, and maintenance procedures at any time without notice.

---

# Table of Contents

<b>SAFETY INSTRUCTIONS .....</b>	<b>6</b>
<b>GETTING STARTED.....</b>	<b>11</b>
Main Features.....	13
Series Overview .....	15
Package Contents and Accessories .....	17
Measurement Overview .....	19
Front Panel Overview.....	20
Display Overview – Mainframe .....	25
Rear Panel Overview .....	29
Front Panel Overview – Load Module .....	32
LED Display Overview – Load Module .....	35
Installation .....	38
Load Connections.....	45
Frame Link Connection .....	55
Channel Control Connection .....	57
Go/NoGo Connection.....	60
<b>OPERATING DESCRIPTION.....</b>	<b>61</b>
Operating Mode Description .....	62
Group Unit Mode .....	72
Run Program .....	74
Sequence.....	77
OCP Test Automation .....	82
Parallel Dynamic Loading .....	83
Configurations Description.....	84
Interface and System .....	94
<b>TUTORIALS .....</b>	<b>101</b>
Local loads .....	102
Single Channel Load .....	104

Parallel Load Modules .....	106
Programming.....	108
Sequences .....	110
Frame Link.....	111
Channel Control.....	113
General Configuration Options .....	115
<b>OPERATION .....</b>	<b>117</b>
Local Mode Operation .....	120
Mainframe Basic Operation .....	126
Creating a Program Sequence .....	150
Edit Sequence .....	163
OCP Test Automation .....	173
Channel Configuration .....	180
Mainframe Configuration .....	208
Interface Configuration (settings) .....	232
RS232 and USB CDC Function Check .....	238
GPIB Function Check .....	242
Saving/Recalling Channels.....	244
<b>INTERFACE.....</b>	<b>280</b>
Interface Configuration .....	281
<b>FAQ.....</b>	<b>291</b>
<b>APPENDIX.....</b>	<b>292</b>
Fuse Replacement.....	292
Firmware Update .....	293
Calibration .....	296
Range Chart.....	297
Default Settings .....	302
Specifications .....	305
Dimensions .....	315
EC Declaration of Conformity .....	318

**I**NDEX ..... 319

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow when operating the PEL-2000A series, and when keeping it in storage. Read the following before operating the PEL-2000A series to ensure your safety and to keep the PEL-2000A series in the best possible condition.

## Safety Symbols

These safety symbols may appear in this manual or on the PEL-2000A series.



Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the PEL-2000A series or to other properties.



**DANGER** High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

### General Guideline



#### CAUTION

- Do not place any heavy object on the PEL-2000A series.
- Avoid severe impact or rough handling that leads to damaging the PEL-2000A series.
- Do not discharge static electricity to the PEL-2000A series.
- Do not block or obstruct the cooling fan vent openings.
- Do not perform measurement at circuits directly connected to Mains (Note below).
- Do not disassemble the PEL-2000A series unless you are qualified as service personnel.
- The equipment is not for measurements performed for CAT II, III and IV.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The PEL-2000A series falls under category I.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

---

### Power Supply



#### WARNING

- AC Input voltage range: 100-120Vac/ 200-240Vac (90-132Vac/ 180-250Vac)  
Frequency: 47~63Hz  
Power rating: PEL-2004A: 250VA Max  
PEL-2002A: 150VA Max
  - Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.
-

Fuse



WARNING

- Fuse type: T3.15A/250V
  - Make sure the correct type of fuse is installed before power up.
  - To avoid fire, only replace the fuse with the specified type and rating.
  - Disconnect the power cord before fuse replacement.
  - Make sure the cause of a fuse blowout is fixed before replacing the fuse.
- 

Cleaning the  
PEL-2000A

- Disconnect the power cord before cleaning.
  - Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
  - Do not use chemicals or cleaners containing harsh material such as benzene, toluene, xylene, and acetone.
- 

Operation  
Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Temperature: 0°C to 40°C
- Altitude: Up to 2000m
- Transient Overvoltage on the main supply is 2500V.



(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The PEL-2000A series falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

---

#### Storage environment

- Location: Indoor
- Relative Humidity: < 80%
- Temperature: -10°C to 70°C

#### Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

## Power cord for the United Kingdom

When using the PEL-2000A series in the United Kingdom, make sure the power cord meets the following safety instructions.

---

NOTE: This lead/appliance must only be wired by competent persons

 **WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth

Blue: Neutral

Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  $\oplus$  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm<sup>2</sup> should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

# G E T T I N G   S T A R T E D

This chapter describes the features and functions of the PEL-2000A series, including the front and rear panel appearance, panel installation and connection types. Use the Tutorial section for quick access to step by step instructions on the main functions.




---

Main Features.....	13
Series Overview .....	15
Package Contents and Accessories .....	17
Measurement Overview .....	19
Front Panel Overview.....	20
Display Overview – Mainframe .....	25
Rear Panel Overview .....	29
Front Panel Overview – Load Module .....	32
LED Display Overview – Load Module .....	35
Installation .....	38
Load Module Installation.....	38
GPIB Installation.....	40
Rack Mount Installation.....	41
Channel Number.....	42
Power Up & Self Test .....	43

Load Connections .....	45
Precautions and Procedures.....	45
Remote (Sense) Connection.....	50
Single Load Connections .....	51
Parallel Load Connections .....	53
Frame Link Connection .....	55
Channel Control Connection .....	57
Go/NoGo Connection .....	60

## Main Features

---

**Description**      The PEL-2002A and PEL-2004A are multichannel programmable DC electronic load mainframes. The PEL-2002A mainframe is able to hold 2 load modules, whilst the PEL-2004A is able to hold 4. The flexible module configuration allows the mainframes to either sink multiple loads independently or large loads when used in parallel.

The PEL-2000A series support four operation modes: constant current (CC), constant voltage (CV and CV+CC), constant resistance (CR) and constant power (CP). Constant current and constant resistance mode can operate in either static or dynamic mode.

---

- Feature Overview**
- Flexible operation with removable load modules.
  - Multiple independent isolated channels.
  - High performance, up to 5 digit resolution.
  - High slew rate enabling a high response speed
  - High capacity when frame linked.
  - Different load module types can be used in the same mainframe.
  - Dedicated parallel mode.
  - Supports rack mount installation.
  - Supports frame link connections, with up to 4 slave units.
  - Color LCD display.
  - 120 different sets of programmable sequences.
  - Accurate load simulation using Sequences.
-

- 4 panel setups.
  - USB flash drive support.
- 


**Interface**

- USB
  - RS-232C
  - GPIB (optional)
-


## Series Overview

The PEL-2000A series comprises of two different Mainframes: the PEL-2002A and the PEL-2004A. The Mainframes differ by the number of load module slots that can be accommodated. The PEL-2002A has two load module slots whilst the PEL-2004A has 4. There are 4 different load module models, the PEL-2020A, PEL-2030A, PEL-2040A and PEL-2041A.

PEL-2004A Mainframe

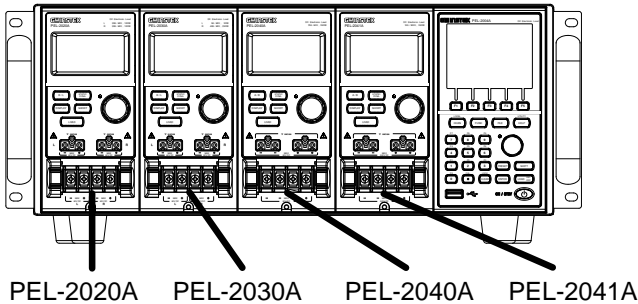

PEL-2002A Mainframe

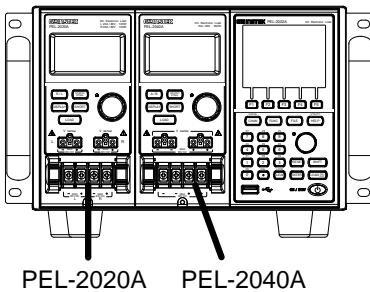

The 4 different load module models each differ in the amount of current, voltage and power and the number of channels that the load module can accommodate. The procedures in this manual will be load module model independent unless specifically stated. Below is a table showing the basic differences between each load module model. For detailed specifications, please see page 305.

Load Module	Channels	Power (W) CH L/R (low/high range)	Current (A) Range Low/High	Voltage (V)
PEL-2020A (100Wx2)	2	100/100	2/20	0-80
PEL-2030A (30/(25/250W))	2	30/(25/250)	5/4/40	0-80
PEL-2040A	1	(35/350)	7/70	0-80
PEL-2041A	1	(35/350)	1/10	0-500



## Package Contents and Accessories

The PEL-2000A electronic load has a number of standard and optional accessories that can be ordered. For more information please visit the GW Instek website at [www.gwinstek.com](http://www.gwinstek.com) or consult your authorized distributor for details.

Standard Accessories	Description
Power Cable	Mains power cable (region dependent) (18AWGx3C,125V/10A,1.8m)
CD ROM	Contains PEL-2000A series Electronic DC Load User Manual, Programming Manual and USB Driver
GTL-120	Load cables 2X red, 2X black (per load module)
GTL-121	Remote sense cables , 1X red, 1X black (per load channel)
PEL-003	3 sets for PEL-2004A; 1 set for PEL-2002A

Options	Description
PEL-2020A	Load Module
PEL-2030A	
PEL-2040A	
PEL-2041A	
PEL-001	GPIB interface (Factory installed)

Optional Accessories	Description
PEL-002	PEL-2000A Rack Mount kit (handle only)
PEL-003	Panel Cover
GTL-232	RS-232C
GTL-246	USB


GTL-248	GPIB cable
GTL-249	Frame link cable

## Measurement Overview


The PEL-2000A series has a number of different operating modes that are completely configurable. All the modes have customizable Go/NoGo limits, range limits, timers, slew rates, alarms and protection limits. For parallel loads, there is a dedicated Parallel configuration mode. To make tests, Programs and Sequences can be created.


Function	Description
Constant Current Mode (CC)	In constant current mode, the load module will sink a constant amount of current, regardless of the voltage.
Constant Voltage Mode (CV)	Under constant voltage mode, the voltage remains unchanged, regardless of the current.
Constant Resistance Mode (CR)	In constant resistance mode, the resistance load will remain unchanged as the voltage and current remain proportional.
Constant Power Mode (CP)	In constant power mode, the load module will ensure the power consumed is constant.
Programmable Sequences (Prog.)	The load module supports programming sequences. With up to 120 different memory settings in 12 programs with 10 sequences.
Sequences (Seq.)	Used to create load profiles to accurately simulate a load. Sequences can be created for each channel.
Group Unit Mode	Group Unit Mode enables the PEL-2000A series mainframes to easily use load modules (of the same type/rating) in parallel. Parallel mode is used in conjunction with CC or CR modes. CP and CV mode cannot be used with this mode.

## Front Panel Overview

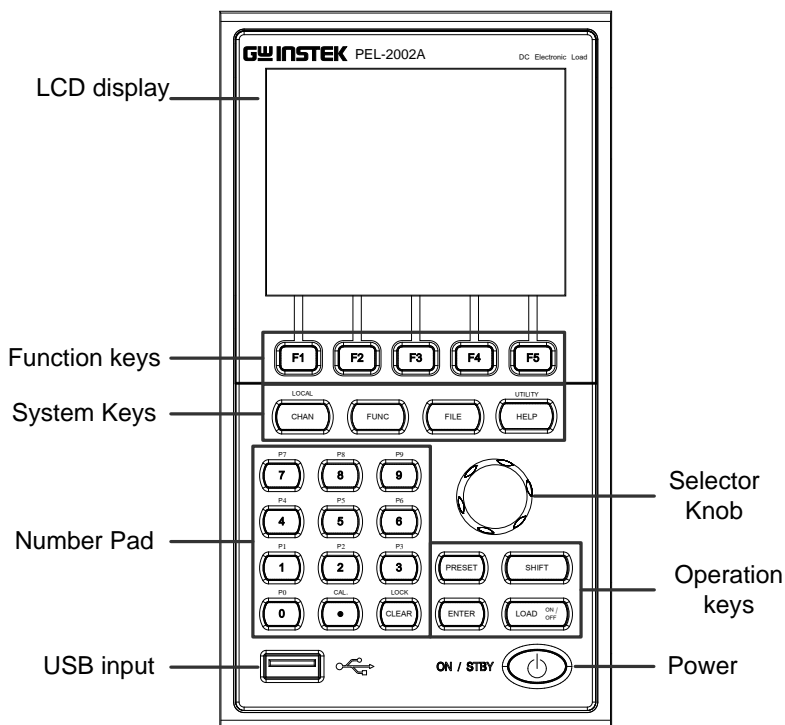


LCD display 320 by 240, TFT LCD display.

 
Function keys  Assigned to the menu functions on the bottom of the display.

System Keys  CHAN/LOCAL is used to select the load channel. Combined with the shift key, Local is used to activate local control (during remote control via the interface or frame link connections).

 
LOCAL




Brings up the Channel Menu.

 

 Used to activate local control mode during remote control via the interface




 Used to access the Program, Sequence or OCP automation menu.




Used to access the File menu.

 UTILITY




Brings up the Help menu and utility menu.

 UTILITY




 Provides help for the last function /key pressed.



Activates the Utility Menu.

Number pad

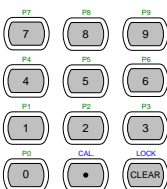

Enter numerical values, or to save/recall presets (P0-P9).

P0

 


Number values.




Preset numbers P0-P9.

CAL.



Decimal point and Calibration key

**CAL.** Decimal point.




**SHIFT** + **CAL** Activate calibration mode.





Note

Please note, calibration mode is not supported. Please see your distributor for calibration needs.

 
**LOCK**  
**CLEAR** Clears current values. Alternative function locks the keys and the Selector knob.



**LOCK**  
**CLEAR** Clears the current value.



**SHIFT** + **LOCK**  
**CLEAR** Locks all the keys and Selector knob.




USB Input




USB flash memory slot.


Selector Knob

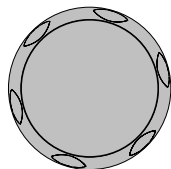

Used to select operations and to increase/decrease values.

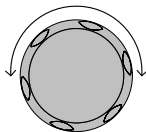

 When turned left or right moves the cursor in menus or changes the selected item or value.



When pushed down, acts as the Enter key.

Operation Keys



Saves and recalls preset settings and values.

 
When pressed in combination with the number pad, Presets P0-P9 can be recalled or saved.



Inactive




Active. Used in combination with the number pad and/or shift key.




Press to recall a channel preset

 Hold to save a channel preset




Press to recall all channel presets.

 Hold to save all channel presets.




The shift key is used to access alternate functions assigned to select keys.

   
The shift key is also used to toggle between coarse and fine control mode when used in conjunction with the selector knob to adjust parameters.




 
Inactive mode.





Active. When active the shift key can be used to access the Local and Utility menus.




Coarse control mode.

 
 +  Fine control mode

 Confirms selections.

 Turns the current load/channel on or off


 Load is currently off. (unlit)

---

 Load is currently on. (orange light)

---

**Power**

 ON / STBY  Turns the unit on or into standby mode.

ON / STBY  Standby mode.


---

ON / STBY  On.


---



## Display Overview – Mainframe

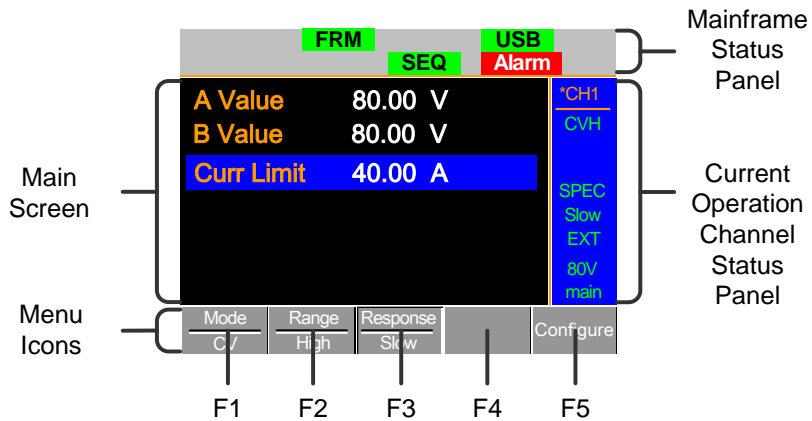

**Mainframe Status Panel** The Mainframe Status Panel displays the status of the Mainframe interface, programs and alarm status.

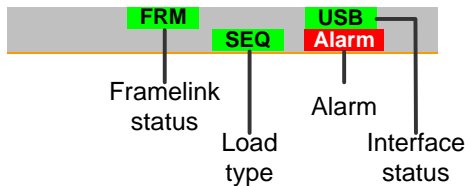


**Frame Link Status**

**FRM** (green) indicates Frame Link is turned on and that the mainframe is set as either a master (FRM) or slave (FRS) unit.

↕


**FRS** (green)

Load Type



The Load Type Icon indicates if a Sequence (SEQ) or Program (PROG) is turned on. If not then LOAD is displayed as default. When any Load type is running, their icon will turn orange.


Interface Status



The interface status icon displays which interface type is set.

Current Operation Channel Status Panel

The Current Operation Channel Status panel generally displays the status of the current channel.

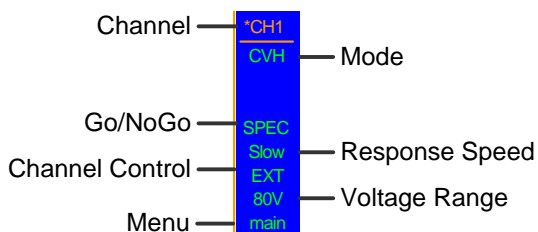

Channel CH1~ CH8 Displays the current channel.

\*CHx \* = independent mode

CHxS S = Group channels Sync mode

CHxP P = Group channels Parallel mode

Mode	Displays the current mode.	
	CCL	CC Static Low Range
	CCH	CC Static High Range
	CCDL	CC Dynamic Low Range
	CCDH	CC Dynamic High Range
	CRL	CR Static Low Range
	CRH	CR Static High Range
	CRDL	CR Dynamic Low Range
	CRDH	CR Dynamic High Range
	CVL	CV Static Low Range
	CVH	CV Static High Range
	CPL	CP Low Range
	CPH	CP High Range
Go/NoGo	SPEC	If Go/NoGo is turned on, SPEC will be displayed.
Response Speed	Slow Fast	In CV mode the response speed will be shown, Slow or Fast.
Channel Control	EXT	When Channel Control is set to External, EXT will be displayed.
Voltage Range	Displays the voltage range of the current setting.	
Menu	Shows the current menu.	

main = Chan menu  
conf = Chan→Configure menu  
s\_edit = Chan→Seq.Edit menu  
file s\_loop = File menu  
= Chan→Seq.Edit→Loop  
menu

---

Main Screen Main display screen.


---

Menu Icons F1~F5 Each Menu Icon is controlled by the F1~F5 function keys directly below.


---

## Rear Panel Overview


PEL-2004A

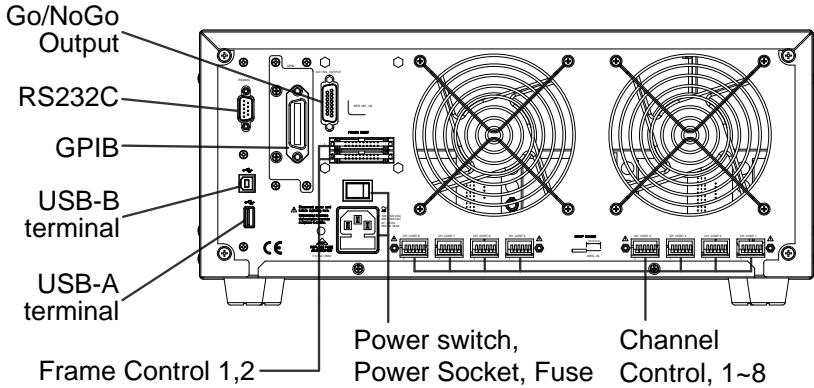

PEL-2002A

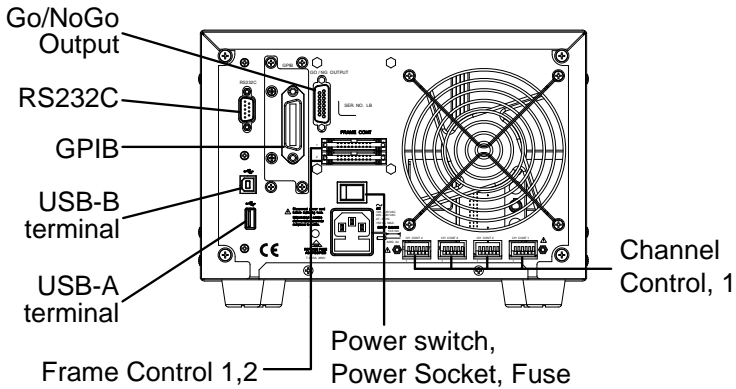


Go/NoGo  
Output

 

The Go/NoGo Output terminal outputs a pass (high)/fail (low) voltage for each channel.

See page 289, 60 for details.

RS232 port/  
GPIB port

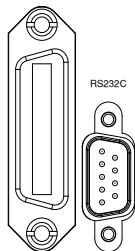


The RS232 and GPIB port is used for remote control connections.

RS-232C: DB-9 pin male

GPIB: 24-pin female

See pages 281, 282 for remote control details.

 
USB-A(host)/  
USB-B (device)  
port



The USB-B (device) port, like the RS232/GPIB port is used for remote control. The USB-A(host) port is reserved for power delivery 5V only. If USB-A (host) is used as a USB flash memory slot, the interface must not set to USB.

See page 94 for interface details.

 Frame Control  
Port



The Frame Control port is used for Frame Link connections.

Mainframes are daisy-chained together. There are two Frame control ports.

 
1: Slave

2: Master

Connection type: MIL 20-pin connector.


For details about frame link connections see page 55, 286.

Power Switch



External Power Switch

Power Socket/  
Fuse

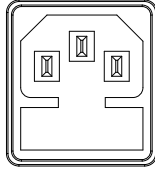

The power supply socket accepts the AC mains Voltage. The fuse holder is located below the power socket.

Power: 47~63Hz

Fuse: T3.15A/250V

For fuse replacement details see page 292.

Channel  
Control port  
(1~8)




Each channel has a dedicated Channel control port to enable external monitoring and control. The channel control port has 6 wire sockets that are screw-less and self clamping.

Required wire gauge: 24 AWG


For connection or specification details see pages 57 & 284.

## Front Panel Overview – Load Module

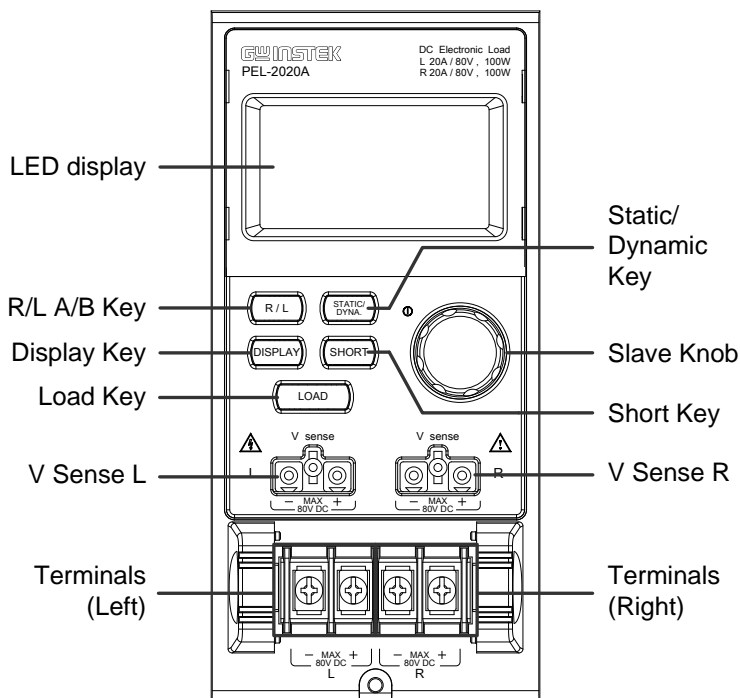

LED display      2x5 digit custom LED display.

 Right/Left Key  
or  
A/B Key



The L/R key is used to switch between the right and left load channel on a dual channel load module. The A/B key is used to switch between A&B Values for single channel load modules.

Display Key



Used to alternate the display output on the load module.

**0.0000** A      Current



**0.000** V Voltage

**0.00** W Power

 
**0.0** s Load time

Load Key




Activates the load for the active channel. (Right or Left)(A or B)

Left Voltage Sense



The voltage sense terminals are used when precise measurement is needed. V Sense terminals are used to compensate for voltage drops across the main terminals caused by the resistance of the load wires.

 
Right Voltage Sense



It is automatically activated when connected to a DUT.


The voltage difference between the DUT and load voltage should not exceed 2V, otherwise you will get incorrect measurement for the voltage. (applicable to all models)

 Positive and Negative Terminals Left



The terminals for both the left and right side of a load can draw differing amounts depending on the load module specifications.

 
Positive and Negative Terminals Right



For 2 channel load modules, the left terminals are used for the 1<sup>st</sup> channel and the right terminals are used for the 2<sup>nd</sup> channel.

On single channel load modules, the left terminals are the lower (-) potential terminals, whilst the right terminals are the positive (+) potential terminals.

 Static/Dynamic  
Selector Key




The STATIC/DYNA. Key manually switches the load from Static (manual) to Dynamic loads.

Dynamic loads are only supported in CC and CR mode.

For more information see page 62 & 65.

Slave Knob  
(Load)

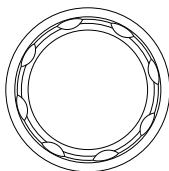

The Slave Knob is used to edit and vary parameters for the active channel on the local load.

Depending on the Mainframe setup, the Slave Knob will either only update the load (locally) or will update both the local module and the mainframe\*. The Slave Knob can also be configured to display measured or set values on the local load module\*\*.

\* For more information on “Knob Type”, see page 215.

\*\* For more information on “Slave Knob”, see page 219.

Short Key




The SHORT key is used to manually short circuit the active channel on the local active load.

The Short key can be set to enable or disable in the configure setting.

Please refer to page 189 for details.

Load on: Pressing or holding the SHORT key will short the load, depending on the short type selected.

## LED Display Overview – Load Module

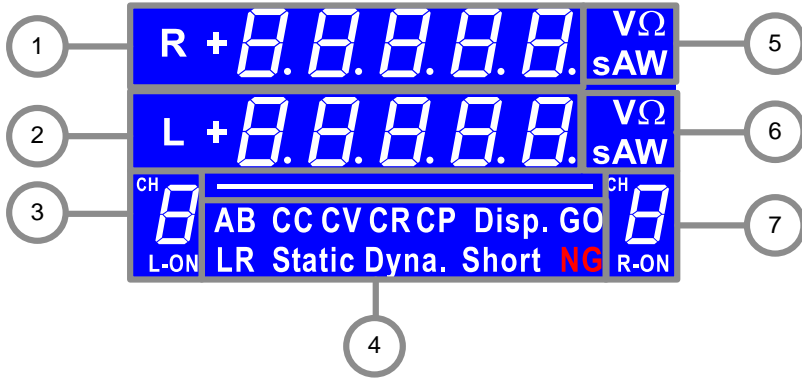

① & ②  
Channel Display



**R<sub>or</sub>L** Left and right channel indicator.



5 digit display.

③ & ⑦  
Channel Number Indicator



**CH 0** Indicates the channel number (1-8).

**L-ON** Indicates if the load is active on the load module. (Dual channel load modules)

**ON** Indicates if the load is on for single channel load modules.

④

Mode Indicator

The Mode Indicator LEDs will indicate what the current mode or settings are on the active channel(s).

**AB CC CV CR CP Disp. GO**  
**LR Static Dyna. Short NG**

- A<sub>or</sub> B** Value A or B for a single channel load module. Applies to CR, CV, CP and CC static mode only.
- CC** Constant Current Mode (CC) mode activated.
- CV** Constant Voltage Mode (CV) mode activated.
- CR** Constant Resistance Mode (CR).
- CP** Constant Power Mode (CP).
- Disp.** Display is shown on dual channel load modules when both left (L) and right (R) channel information is displayed.
- Press the Display button repeatedly to show information for both channels.
- GO** Lights up when Go/NoGo is activated and the load passes (GO) the Go/NoGo limits.
- L<sub>or</sub> R** L or R will light up when the left or right channel is selected.
- Static** Lights up when in Static mode.
- Dyna.** Lights up when in Dynamic mode.
- Short** Lights up when a load is shorted.

**NG** Lights up when Go/NoGo is activated and the load fails (NG) the Go/NoGo limits.

---

⑤ & ⑥  
Channel Unit  
Indicators

**VΩ**  
**sAW**

The Unit Indicators display the current unit.

**V** Voltage

**Ω** Resistance

**A** Current

**W** Power

**S** Second

---

## Installation

The installation chapter describes how to load the different load modules, install the optional GPIB card, the rack mount kit and how to determine each channel number.

If you need to move all installed device to another location, please disassembly the modules first, and then reassembly the modules after moving to the desired location.

### Load Module Installation



 
**WARNING**


To avoid static electricity, please use appropriate anti-static work practices.

Module installation


The PEL-2004A and PEL-2002A can accommodate 4 and 2 load modules, respectively. Module loads can have 1 or 2 channels. Installation of load modules is the same for both models.

Steps


1. Ensure the mainframe is turned off from the rear panel. Disconnect the power cord. 
2. Slide the module onto the rails of an empty load slot.

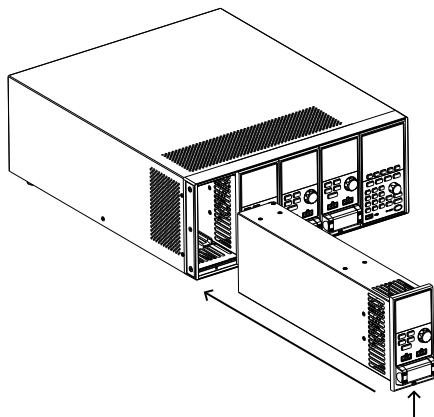


3. Use the supplied screw to fix the module to the load slot, located under the load terminals.

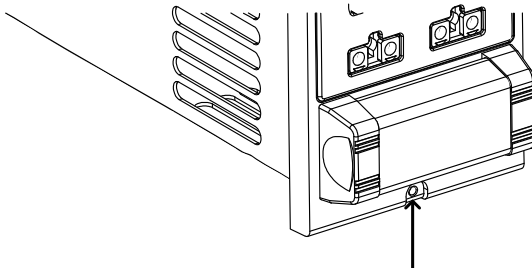

4. Install any additional modules as described above.
5. If there are any slots empty, install the supplied panel cover (part number: PEL-003). The panel cover will improve safety and increase air flow.

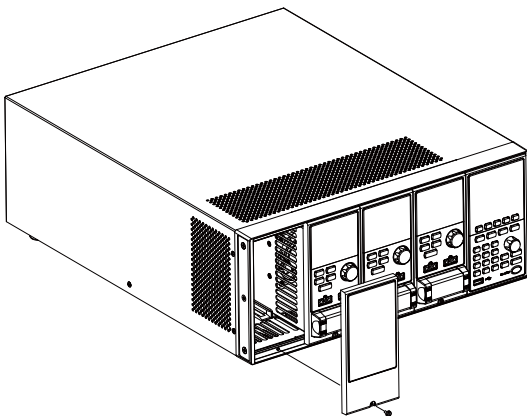

6. Use the supplied screws to fix the panel cover(s) over the load slot.

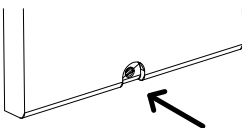

## GPIB Installation



### WARNING


To avoid static electricity, please use appropriate anti-static work practices.

### GPIB Card installation

The PEL-2004A/PEL-2002A has GPIB as an option ( ddpart no. PEL-001).

### Steps

1. Ensure the mainframe is disconnected from mains power.
2. Remove the screws from the GPIB cover plate and remove the cover plate from the rear panel.
3. Slide the GPIB card into the slot and push gently until the back plate is flush with the rear panel.

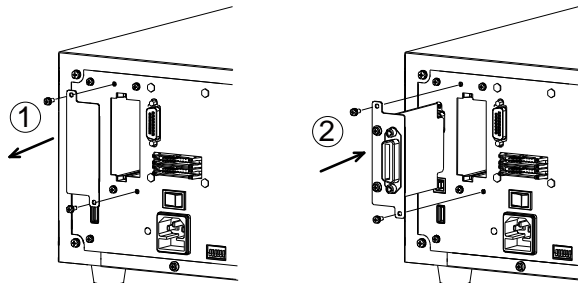

4. Use the screws that were removed from step 1 to secure the GPIB card.




## Rack Mount Installation


**Background**      The PEL-2004A can be used in a standard 19" rack mount enclosure with the optional rack mount kit (part no. 11EL-20040201). Each unit requires a rack height of 4U with a 1U space for ventilation top and bottom. The rear of the rack mount enclosure must be free of obstruction to allow heat to dissipate from the mainframe(s).

- Steps**
1. Screw the rack mount brackets as shown below using the supplied bolts.

**PEL-2002A**

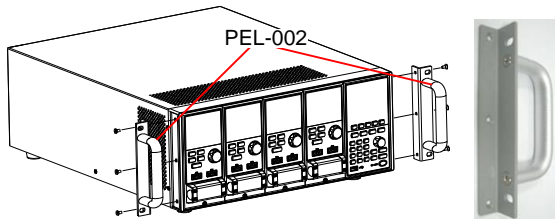

2. Insert into a standard 19" rack enclosure with at least 1U of space top and bottom for ventilation.

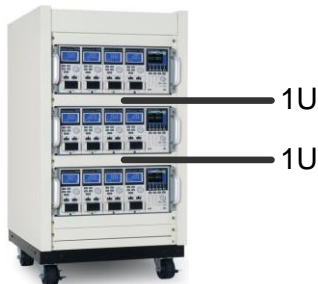

## Channel Number


**Description**

The channel number for a module load is determined by which slot it occupies on the mainframe chassis. There can be 1 or 2 channels per slot, depending on the load module type.

The PEL-2002A has two slots; The PEL-2004A has 4 slots. Channel 1 is the farthest away from the main display panel and channel 8 (PEL-2004A) or channel 4 (PEL-2002A) is the closest to the main display panel.

Below the PEL-2004A has all 4 slots occupied with the PEL-2020A, PEL-2030A, PEL-2040A and 2135MH load modules (LM), respectively. The PEL-2020A & 2225ML have 2 channels per load module, the PEL-2040A & PEL-2041A have only 1. So the channel determination is:


LM1: CH1, CH2; LM2: CH3, CH4; LM3: CH5;  
LM4: CH6.

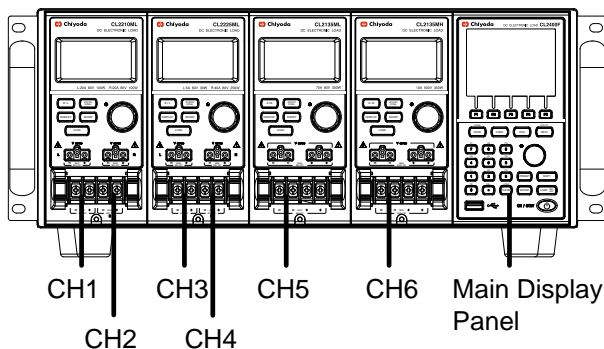


## Power Up & Self Test

---

- Panel operation
1. Connect the power cord to the power socket.

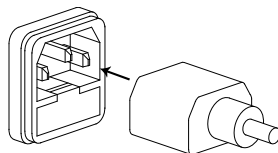

 
2. Turn the external power switch on.



3. Hold the power button on the front panel to turn on the power.



 The power button turns green from red (standby).



### WARNING

Ensure that the power outlet has a ground socket. The power outlet will have a ground connection if it is a 3 socket type.


Upon turning on, the Mainframe will perform a self-test. The self-test checks the System, followed by any attached channels.

### NOTE

When the firmware version of the mainframe and the slave are not identical, a message “The firmware will be updated, please access to website [www.gwinstek.com](http://www.gwinstek.com) to confirm the firmware version.” will appear on the mainframe.

<b>Initial</b>	<b>System</b>	<b>Success</b>
	<b>CH1</b>	<b>Success</b>
	<b>CH2</b>	<b>Success</b>
	<b>CH3</b>	<b>Success</b>
	<b>CH4</b>	<b>Success</b>
	<b>CH5</b>	<b>Success</b>


When the system check happens, the load modules will display each channel as it is checked, then display the current mode.

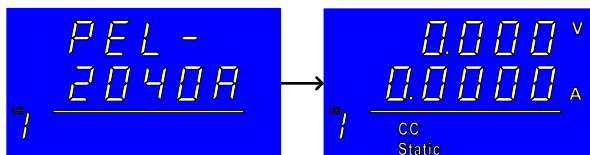

- If any of the System checks fail, please power down the load and reinstall the appropriate load module(s).
- To turn off the load, hold the power button for a few seconds.



 The PEL-2000A mainframe will return to standby mode.



# Load Connections

## Precautions and Procedures

---

Introduction	<p data-bbox="380 341 984 438">The PEL-2000A series supports a number of different load configurations for flexible operation.</p> <ul data-bbox="425 462 984 710" style="list-style-type: none"><li data-bbox="425 462 984 502">• Single DUT, single load</li><li data-bbox="425 510 984 550">• Single DUT, parallel load</li><li data-bbox="425 558 984 598">• Multiple DUTs, multiple loads</li><li data-bbox="425 606 984 646">• Multiple DUTs, multiple mainframe loads</li><li data-bbox="425 654 984 710">• Single DUT, parallel mainframes</li></ul> <p data-bbox="380 726 984 821">The PEL-2000A series also supports a number of different control methods and interfaces. The connections used are described here:</p> <ul data-bbox="425 845 984 983" style="list-style-type: none"><li data-bbox="425 845 984 885">• Frame link</li><li data-bbox="425 893 984 933">• Channel control</li><li data-bbox="425 941 984 983">• Go/NoGo</li></ul>
--------------	--

---

Wire Gauge considerations	<p data-bbox="380 1005 986 1238">Before connecting the PEL-2000A series, wire gauge must be taken into account. Load wires must be large enough to resist overheating when a short-circuit condition occurs as well as maintain a good regulation. The size, polarity and length of a wire are all factors in determining if a wire will withstand short circuiting.</p>
---------------------------	--

---

Wire Selection      Wires that are selected must be large enough to withstand a short circuit and limit voltage drops to no more than 2V per wire. Use the table below to help make a suitable selection.

AWG	Max Current A(Amp)
24	7.64
22	10.0
20	13.1
18	17.2
16	22.6
14	30.4
12	40.6
10	55.3

Load Line Inductance Considerations      When using the PEL-2000A series, voltage drop and voltage generated due to load line inductance and current change must be taken into account. Extreme changes in voltage may exceed the minimum or maximum voltage limits. Exceeding the maximum voltage limit may damage the PEL-2000A series.

To determine the voltage generated, the following equation can be used.

$$E = L \times (\Delta I / \Delta T)$$


E= voltage generated

L=load line inductance

$\Delta I$ = change of current (A)

$\Delta T$ = time (us)


Load line inductance (L) can be approximated as 1uH per 1 meter of wire. ( $\Delta I / \Delta T$ ) is the slew rate in A/us.

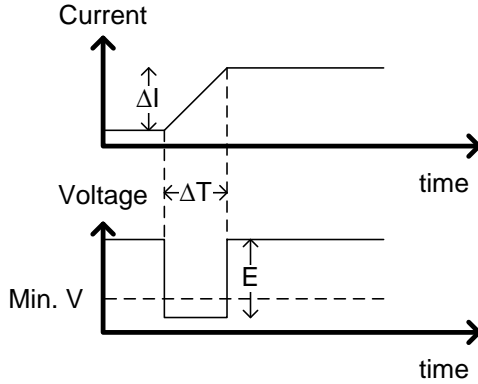

The diagram above shows how changes in current can affect voltage.

Limiting Load line inductance Load line inductance can be reduced by ensuring load wires are as short as possible and by twisting positive and negative load wires together. Current change can be limited by limiting the slew rate when switching.

“Twisted pair” will be shown on any connection diagram where the load wires should be twisted together.

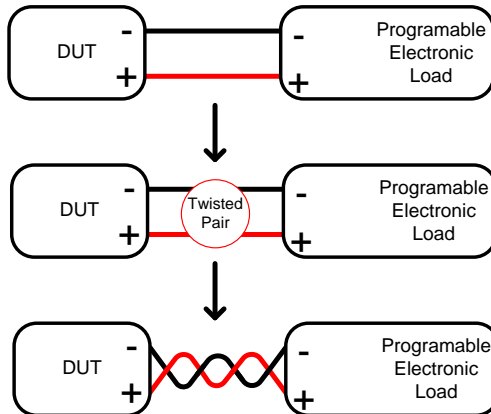

Load module considerations


The PEL-2000A series supports single and dual channel load modules.

Single channel load modules have one bank of negative terminals and one bank of positive terminals. Each terminal pair has a 40A capacity. For higher loads, each terminal can be wired in parallel to increase capacity.

Dual channel load modules have one bank of positive and negative terminals for each channel.

Single Channel Load Module

Dual Channel Load Module

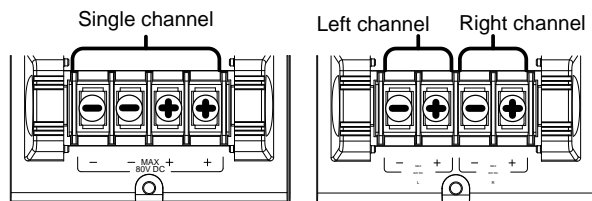

Connection

Follow the procedure below for all load connections.




**CAUTION**

Ensure that power is off from the load and the DUT before making any connections.

Steps

1. Carefully lift the terminal covers.
2. Connect the positive (+) terminal on the load module to the high potential output of the DUT.
3. Connect the negative (-) load terminal to the low potential output of the DUT.

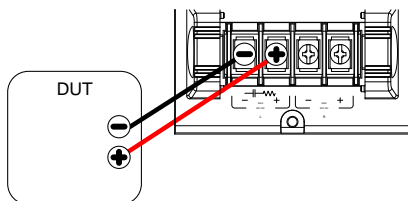




4. Close the terminal cover securely. Ensure the wires are secured properly and that the wires are not exposed when the cover is in place.

 WARNING

Ensure that the wires are tied or twisted together to prevent noise and inductance.

 CAUTION

Ensure the polarity is correct before proceeding with any connections. Using the wrong polarity could result in reverse voltage damage.

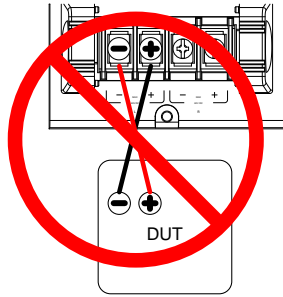

Ensure the input voltage doesn't exceed specifications. Exceeding the voltage specifications could result in damage to the instrument.

## Remote (Sense) Connection

**Background** The electronic load modules have two voltage sense contacts: Vsense +, Vsense -. Voltage sense can be used to help compensate for long cable length. The longer the cable, the higher the potential resistance and inductance, therefore a short cable is best. Twisting the cable can help reduce induced inductance and using the Vsense terminals compensates the voltage drop seen across the load leads, especially leads with higher resistance. This is useful when used in CV, CR or CP mode.




**WARNING**

Vsense + must have a higher potential than Vsense -.

### Connection

The diagram below shows how a DUT can be connected using voltage sense. Note that the sense wires are also twisted pairs.

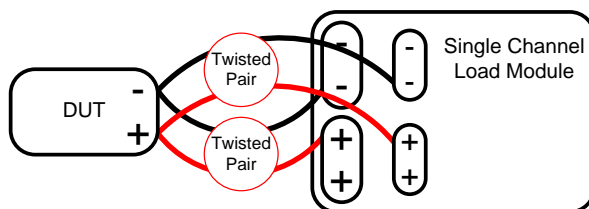

**Note**


The wire gauge for the sense wires should be no smaller than 16 gauge.

### Input

The voltage sense terminals must use a wire gauge of 16 to 14 (Diameter 1.29mm ~ 1.63mm).

### Remote Sense Terminal connection


The voltage sense terminals use a screw-less clamp connector. The clamp must be opened prior to inserting a wire. Use a small screwdriver to push the clamp release mechanism. Insert both wires then release the clamp mechanism.

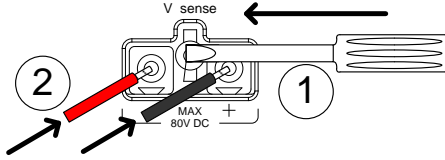

## Single Load Connections


### Dual Channel Load Module Connection

A dual channel load module can be used to sink two loads concurrently.

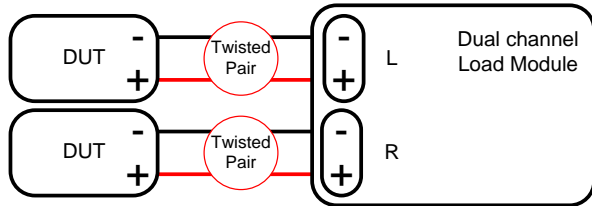


### Single Channel Load Module Connection

On a single channel load module, the left terminals are both negative (-), whilst the right terminals are both positive (+). Note this also applies to the voltage sense terminals.

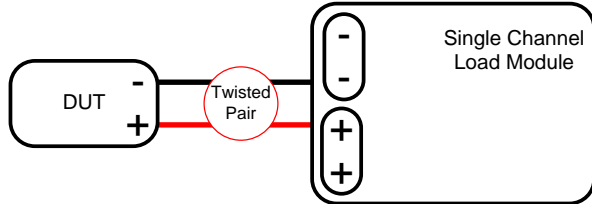


**CAUTION**

For loads exceeding 40A, both positive and both negative terminals must be used in parallel.

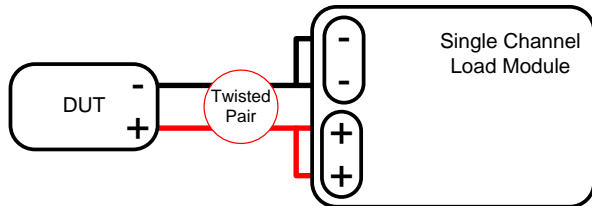

**DC Connection** For purely DC operation, a resistor and capacitor can be connected in parallel to the electronic load to reduce oscillation. The capacitor and resistor values are dependent on the load settings. Ensure the capacitor ripple current is within allowable limits.

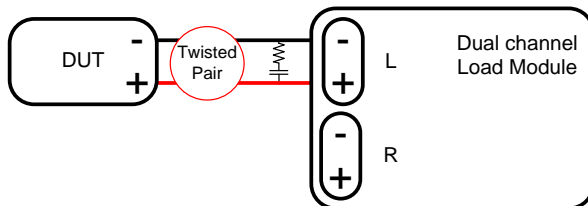


**Low Voltage Connection** Using the load with low voltage loads is generally limited to over 1 volt (load module dependent). In order to support low voltage loads, an auxiliary power supply is needed to boost the voltage to a range suitable for the load.

Precautions:

- Take into account the combined power of the load and auxiliary power supply.
- Make sure the auxiliary power supply is able to provide enough current.
- Take into account any noise or irregularities from the auxiliary supply.

The diagram below shows a typical connection.

 

Using an auxiliary power supply may induce reverse current. The PEL-2000A series has reverse voltage protection. For details see the protection section on page 84.

## Parallel Load Connections


---

### Parallel load modules

When the power output of a DUT exceeds the power rating of a channel or load module, the channel terminals, load modules or mainframes can be used in parallel to dissipate more power when used in CC or CR mode. Each channel will sink the amount of current specified. The total power sunk is the sum of all channels/modules. The amount of power can vary from each channel. For example if CH1 is 25A and CH2 is 20A, then the total current sunk is 45A. Parallel loads are supported for both static and dynamic loads (see page 82 for a description on parallel dynamic loading). Note that the same modules must be used when operating the parallel.

The PEL-2000A series also features a dedicated parallel configuration setting known as Group Unit. When Group Unit is turned on, load modules of the same type and rating to be used in parallel for CC and CR mode. See page 72 and 204 for more information.

### Parallel load

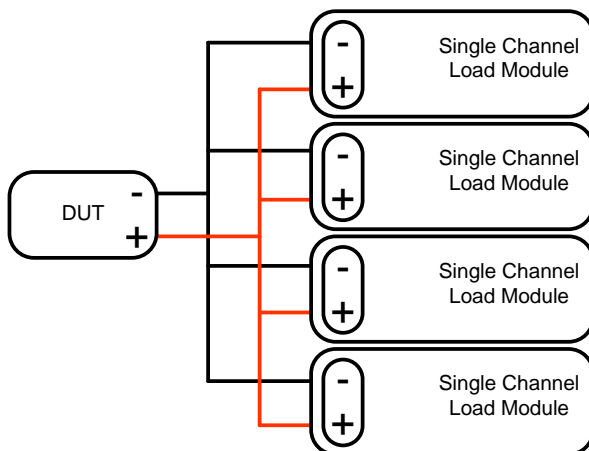




Note

Please note that the same load modules must be used in parallel.


Parallel loads using frame link connections

The PEL-2000A series mainframes can also be connected in parallel. Please note, when using a frame link connection there is a delay between the master and the slave. Please see page 55 for details.

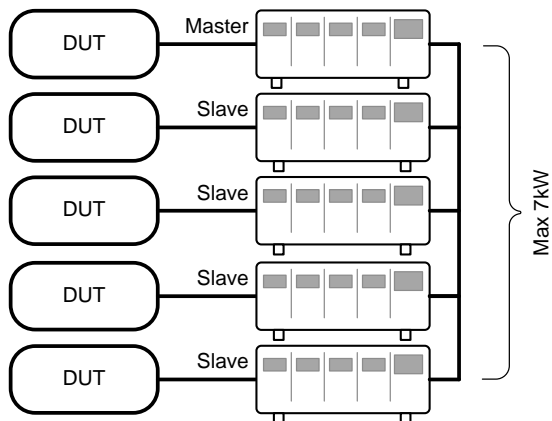

Multi-output power supply load

The PEL-2000A series is also able to sink a number of loads concurrently from multiple DUTs or sink a number of loads from the same DUT (i.e. multiple output power supply).

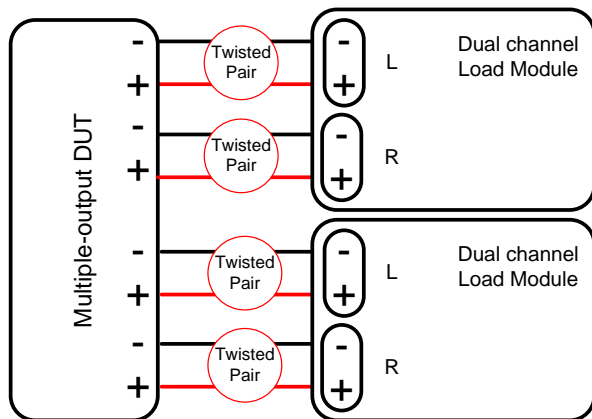


## Frame Link Connection

### Background

Frame link control involves connecting multiple mainframes using the frame link connections. Up to 4 slave mainframes can be connected to the master mainframe. The first mainframe (master) can be used to control the other slave frames. There is a delay time of  $2\mu\text{s}$  between the master and first slave mainframe, and  $4\mu\text{s}$ ,  $6\mu\text{s}$ , and  $8\mu\text{s}$  to the second, third, and fourth slave mainframes, respectively. The connectors used are standard MIL 20-pin connectors. For pin arrangement, see page 286. The frame link cable (part no. GTL-249) is an optional accessory, see page 17 for details.


### Frame Link Connection

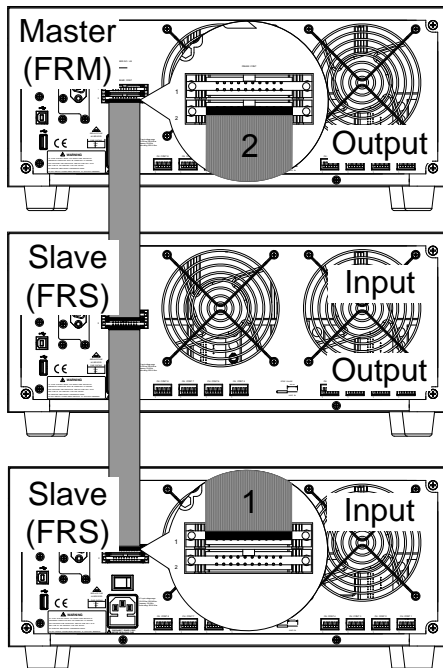


The first mainframe that is connected is the master frame; any additional frames are slave units. The ribbon cable connects to the master from connector 2, and the slave from connector 1. Each successive slave unit is connected in a cascading manner the same way.

Ensure the Mainframes are turned off before connecting the ribbon cables. Push the cable into the frame link connector. Ensure the arrows line up. The latches will close when the connection is complete. To remove, pull the latches out and connector will come out.

Insertion

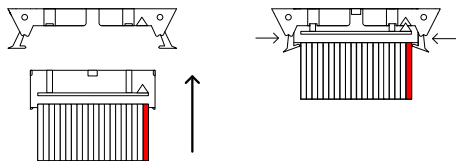

Removal

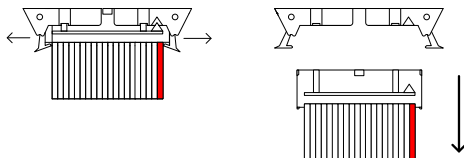

Ensure all the mainframes are off and disconnected from mains power before connecting.




## Channel Control Connection

**Background**


The Channel Control connectors are located on the rear panel of each mainframe. There are two channel control connectors for each load slot, one for each channel, if applicable. The channel control connector is used to externally:

- Turn on/off loads.
- Supply a reference voltage.
- Monitor the load input.

For further details on channel control and the interface see pages 89, 284.

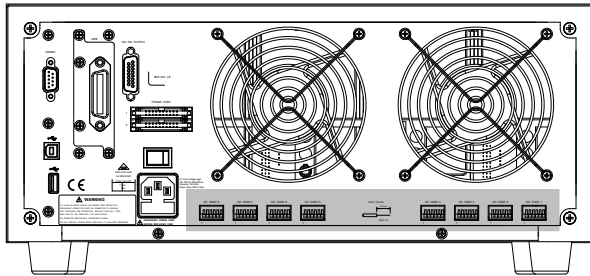


The Channel Control input/output pin layout is shown below.

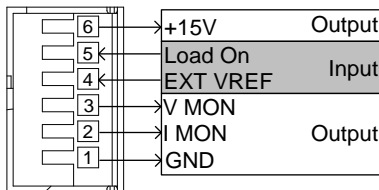

**External Voltage Connection**

The external voltage reference input must be between 0~10V.

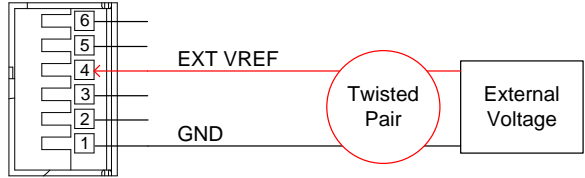


Ensure the external voltage reference is stable and has low noise. The External Voltage should be no more than 10V.

No more than 12 volts may be used as an external voltage. More than 12 volts may damage the load.

Load on connection

To turn a load on, an active low voltage (0-1V) must be applied across Load On (pin 5) and GND (pin 1), similarly an active high voltage (4-5V) must be applied to turn a load off. The Load On input must be TTL.

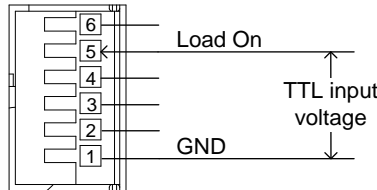


Voltage and Current Monitor Output

The Voltage Monitor Output (VMON) and Current Monitor Output (IMON) output the load input voltage and load input current as a percentage of rating current/voltage. Where 0 volts = 0% rating and 10 volts = 100% load input rating voltage or current.


The voltage monitor output is across pins 1 & 3, and the current monitor output is across pins 1 & 2. Pin 6 outputs a +15V reference voltage.

Below shows the pin configuration of the voltage and current monitor outputs.

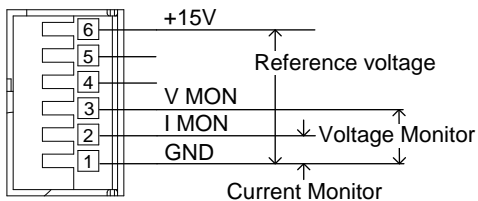

### Connector Connection

The channel control connector is a screw less clamp connector. The internal clamp mechanism must be opened before a wire can be inserted. To open the internal clamp, push the button above the wire socket, to close, release the button. Ensure at least 10mm is stripped from the wire. The diagram below shows the wire insertion procedure.

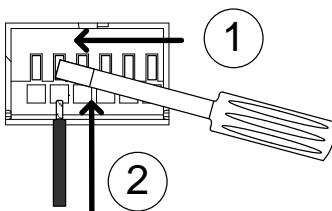


All connections to the channel control connector must use a 24 AWG wire gauge.

## Go/NoGo Connection

### Background

The Go/NoGo port is a 15 socket port. Each channel has a dedicated line for a Go/NoGo output. The ports are open-collector with active high (30V) indicating a pass and active low (1.1V) as fail (an alarm). The Go/NoGo terminal is a DB-15 female.

For more details on the Go/NoGo interface see page 289.

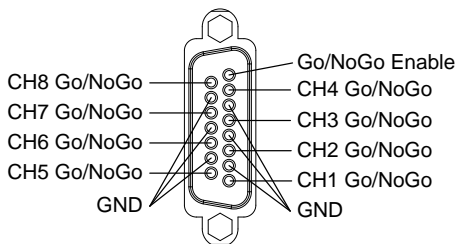

# PERATING DESCRIPTION

---

Operating Mode Description .....	62
Constant Current Mode .....	62
Constant Resistance Mode .....	65
Constant Voltage Mode .....	67
Constant Power Mode .....	70
Group Unit Mode .....	72
Run Program .....	74
Sequence .....	77
OCP Test Automation .....	82
Parallel Dynamic Loading .....	83
Configurations Description .....	84
Protection Modes .....	84
Operating Configurations .....	86
Channel Control .....	89
Interface and System .....	94
Interface .....	94
File System .....	94
File Format .....	99

## Operating Mode Description

There are four basic operating modes: constant current (CC), Constant Resistance (CR), Constant Voltage (CV/CV+CC) and Constant Power (CP). All channels operate using any of the modes. Each mode has a number of configurable options including slew rate, levels, protection modes, Go/NoGo and extensive save options.


### Constant Current Mode

---

**Background** In Constant Current Mode the load units will sink the amount of current programmed. Regardless of the voltage, the current will stay the same. There are two ranges in CC mode: High and Low. There are two main modes in CC mode: Static and Dynamic. Static mode can be used for stability tests and dynamic mode can be used to test transient load conditions.

Go/NoGo is supported for both High and Low range as well as Static and Dynamic mode.

---

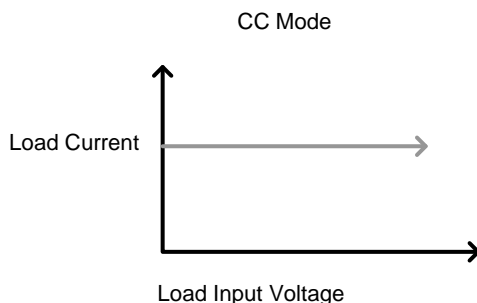

**Range** There are two selectable ranges for constant current mode: high and low range.


Low range has a higher resolution, but a lower range. If the current exceeds the Low Range, High range must be used.

---

**Static Functions** Static mode tests the stability of the voltage output from a power source. Single channel load modules can have two 2 current levels A (A Value) & B (B Value). A & B have the same range. Pressing the A/B key on the module load will cycle through the A and B states. Alternatively, the mainframe can select A or B Value.

Dual channel load modules only have one current level (A Value) per channel in static mode.


**Static Mode:**  
Single Channel  
Load module.

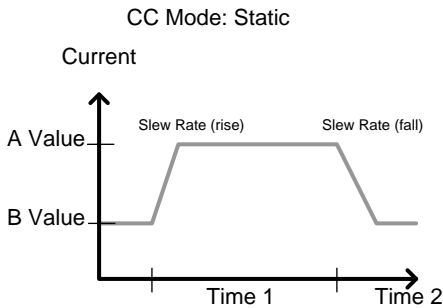

**Dynamic Functions**


Dynamic load functions allow you to set load levels (Level1, Level2), load time (Timer1, Timer2), and the slew rate (rising, falling). Depending on the settings, the load will switch automatically between levels 1 and 2.

Dynamic loading can be used for charge discharge cycle testing etc.

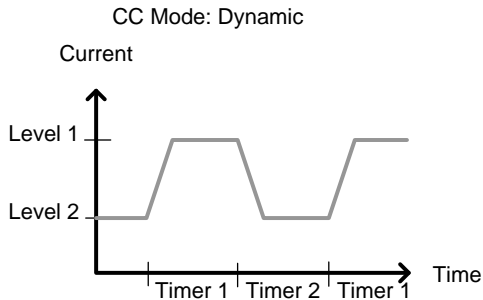

**Slew rate**


The slew rate is the rate at which the current will increase to a set level. There are two slew rates: rising slew rate & falling slew rate. In CC mode the slew rate is defined as A/uS.

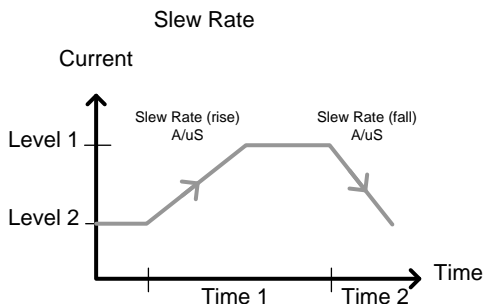


As can be seen above, the rising and falling slew rate need not be the same.

**Go/NoGo**

Using Go/NoGo, the Center, High and Low voltage limits can be set for both Static and Dynamic modes. A delay time of up to 1 second can also be set.

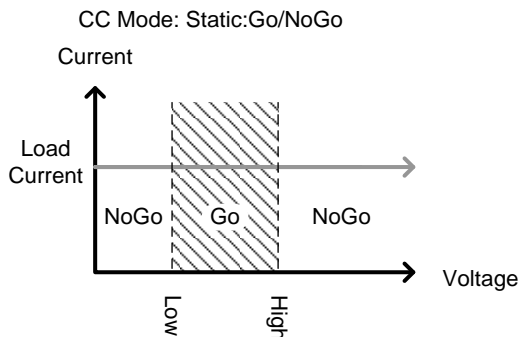



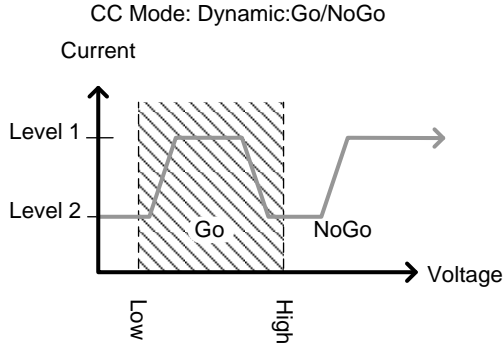


GO is specified as between the Low and High Go/NoGo limits. NoGo is specified as outside the Go/NoGo limits.

## Constant Resistance Mode

---

### Background


In Constant Resistance Mode the load units will linearly sink current and voltage to match a set resistance. CR mode has two different values (single load modules), two different ranges and rising and falling slew rates. Like CC mode, Constant resistance mode supports both dynamic and static loads. As with the other modes, Go/NoGo is supported.

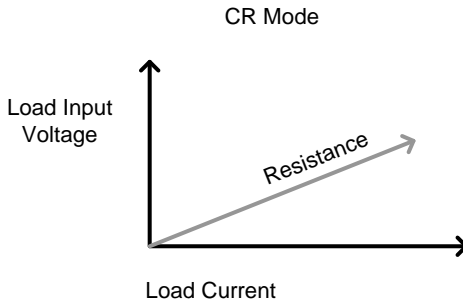


**Resistance Range** There are two ranges: High and Low. The Low range is used for low voltage ranges, whilst the High range uses high voltage ranges. The current range always remains in High range, regardless of the selected resistance range.

**Static Functions A/B range** For static mode, single channel load modules have two resistance levels. A & B have the same range. The A/B key can be used to switch between these resistance levels. Dual channel load modules only have one resistance level, A Value.

**Single Load Module**

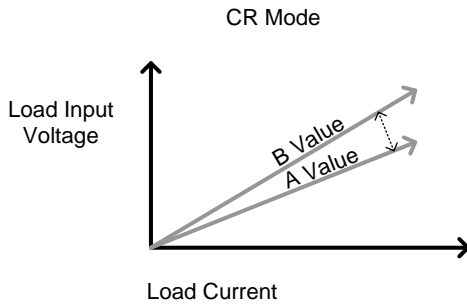


**Dynamic Functions** CR mode supports Dynamic loading. Dynamic load has two resistance levels (Level 1&2), and two timers (Timer 1&2) to switch between the resistance levels. Rising and falling slew rates can be set to determine the speed at which the load switches between load levels.

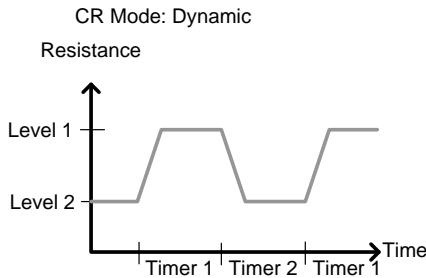

**Slew Rate**            The rising and falling slew rate (A/uS) determines the speed at which the load levels change from A to B Value (Static mode) or from Level1 to 2 (Dynamic mode) and vice versa.

**Go/NoGo**            Go/NoGo is also supported. Center, High and Low limits can be set as either percentages or voltage values. A delay time of up to 1 second can also be set.

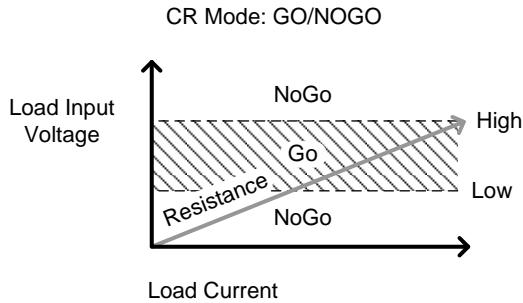


### Constant Voltage Mode

**Background**            In Constant Voltage Mode the load units will sink current whilst keeping the voltage constant.


Single channel load modules support 2 values (A Value, B Value) and have an adjustable cut-off current limit. Dual channel load modules only have A value.

Response speed can also be set to fast (Fast) or slow (Slow). The response speed relates to the slew rate of the current response.

Go/NoGo functionality is also supported either as a percentage or as a current value.

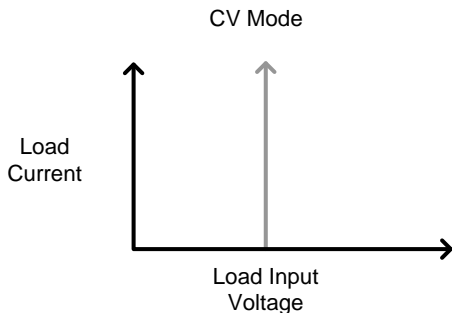


Voltage levels Two voltage levels can be set: A & B (single channel load module).

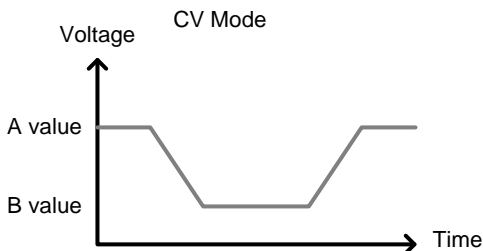

CV + CC When using CV mode, a current limit can be set for CV + CC mode.

When the voltage input is greater than A Value (load voltage) then the channel will operate in CV mode if the input current is less than the current limit. When the input current exceeds the current limit, the channel will operate in CC mode.


When the voltage input is less than A Value (load voltage) current stops flowing.

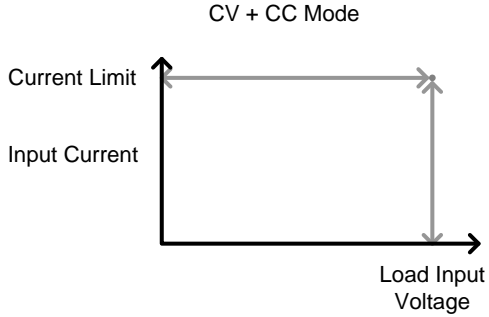

**Response Speed** Response speed can be set to fast or slow. Fast response and slow response is determined by the load module specifications. Slow response speeds are suitable for large loads as quick current changes will induce induction which can cause large voltage drops. The PEL-2000A series will try to rectify any voltage drops. However if voltage drops are too large, they may cause the load to go into oscillation. Large voltage drops caused by line voltage induction may damage the machine.

Range	Fast	Slow
	1kHz	100Hz

**Go/NoGo** Go/NoGo testing can be with either current (Ampere) values (High, Low) or percentage values (Center, High %, Low %). A delay time of up to 1 second can also be set.

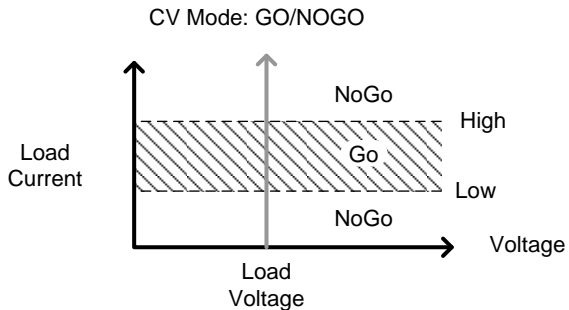

## Constant Power Mode


### Background

In Constant Power Mode the load units will ensure a constant power load for the power supply.

Single channel load modules support 2 values (A Value, B Value) and have an adjustable cut-off current limit. Dual channel load modules only have A value.


Constant power mode can operate in high or low range.

Go/NoGo functionality is also supported either as a percentage or as a current value.

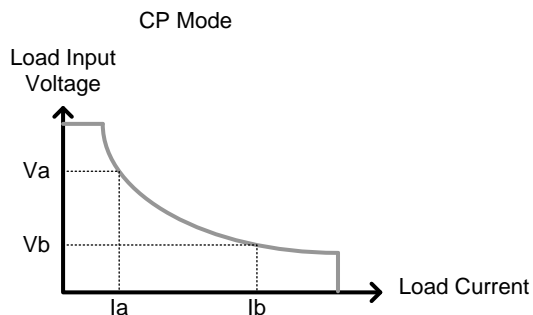


### Power levels

Two power levels can be set: A & B (single channel load module).

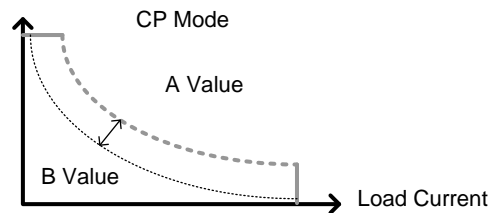


**CP + CC** When using CP mode, a current limit can be set for CP + CC mode.  
 When the constant power current is less than current limit, the channel will operate in CP mode.  
 When the constant power current exceeds the current limit, the channel will operate in CC mode.

**High/Low Range** There are two ranges: High and Low. The Low range is used for low power ranges, whilst the High range uses high power ranges.

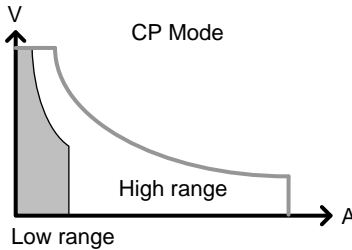

**Go/NoGo** Go/NoGo testing can set High and Low Current limits as a Value (in Amperes) or as a percentage. A delay time of up to 1 second can also be set.

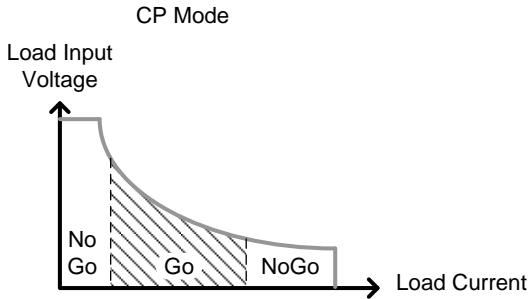

## Group Unit Mode

---

**Background**      The Group Unit menu allows load modules of the same type and rating to be configured as a single unit when used in parallel. This saves the hassle of configuring each channel individually.

Group Unit is only supported under CC and CR mode.

Group Unit has three configuration settings: Total Unit, Group Mode and Display Mode.

**Total Unit**      This configuration setting sets the number units that are to be used in parallel and enables or disables the Total Unit mode.

**Group Mode**      The Group Mode setting determines how the Current Levels/Resistance Values are set when used in parallel. There are two settings: Para and Sync.

The Para setting allows the all the parallelized load modules to be operated as a single large load module.

Sync mode allows the settings of a single unit to be synchronized across all the other parallelized load modules.

---

**CC Example**      Consider 3 load modules set to CC mode in Parallel.

In CC mode the total current for all units is the sum of each unit.


$$\text{Total } I = I_1 + I_2 + I_n$$

For example, to set a total load current of 90A, the Current Level setting in Para mode would be 90A, whilst it would be 30A in Sync mode.


---



Para mode

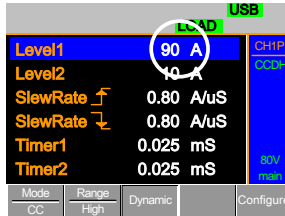

Sync Mode

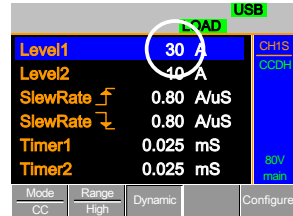


CR Example

When used in CR mode, the equation for equivalent resistance for all the parallel loads is:


$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \frac{1}{R_n}$$

For example, if 2 load modules have a set resistance of 100Ω each, the equivalent resistance of the load modules would be 50Ω. The Level setting in Para mode would be 50Ω and 100Ω in Sync mode.

Para mode

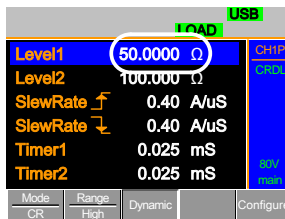

Sync Mode

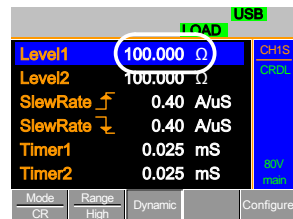

Display Mode


Display mode determines what units are displayed on the local load modules: V/I, V/W, I/W, S. The displayed units can only be controlled through this menu.

## Run Program

**Background** The Program function on the PEL-2000A series supports a total of 12 different programs at any one time with 10 sequences to each program. Up to 12 programs can be chained together. The Program function is able to create a number of Go/NoGo tests.

Run Program is not supported in Group Mode (page 72).

**Program Sequence** A program sequence is simply a single load test. A program is a battery of each of these tests run in succession. Each sequence loads the settings for each channel from Memory Data (Memory MXXX). The Memory Data stores settings such as the operating mode and range for each channel. Each sequence loads all channels at the same time, unless programmed otherwise. Sequences for each channel run synchronously.

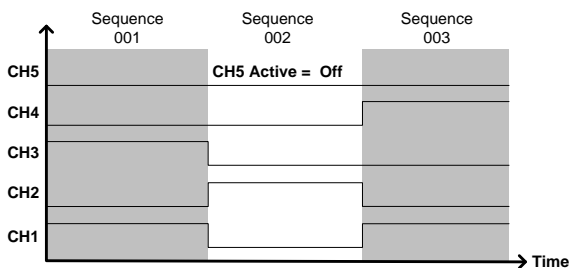


Each Sequence has a number of configuration options that apply to all the channels equally.

Sequence Item	Description
Memory	Loads the channel settings for each load module  Range: M001~M120


Run	<p>Sets the running configuration for the current sequence. The sequence can be skipped, run or run manually only.</p> <p>Range: Auto   Skip   Manual</p>
On-Time	<p>Sets the Sequence Run On-Time</p> <p>Range: 0.1 ~ 60.0s</p>
Off-Time	<p>Sets the Sequence Off-Time</p> <p>Range: Off   0.1 ~ 60.0s</p>
Short-time	<p>Sets whether the Short-Time for the sequence.</p> <p>Range: Off   0.1s ~ On-time</p>
P/F-Time	<p>Sets the Pass/Fail time for the sequence</p> <p>Range: Off   0.1 ~ (On-Time+Off-Time)-0.1s</p>
Short Channel	<p>Selects which channel will be shorted during the sequence</p> <p>Range: CH1 ~ CH8</p>

**Program**

 Sequences are run sequentially to create a Program. There are 10 Sequences in each Program.




 If less than 10 Sequences are desired for a Program, any additional Sequences can be skipped (not run).



Sequence 2 & 3 are skipped.

 **Program Chain** Any of the 12 programs can be chained together to create a Program Chain. Unlike Program Sequences, Program Chains need not be run sequentially in numerical order. Any program can be chained to any program. It is possible to chain programs into an infinite loop to continue a program indefinitely.



Above, a program chain running sequences out-of-order.

**Go/NoGo Results** If Go/NoGo limits have been configured, the Pass/Fail results for each channel will be displayed for all the sequences and programs.

The screenshot shows a device display with the following information:

- Top status bar: 06/15/18, 16 : 50, and a green **PROG** indicator.
- Section header: **Channel** in green.
- Table of results:

Program no.	P	S	1	2
Sequence no.	1	1	G	N
Channel	1	2	G	N
	1	3	G	N
	1	4	G	G

To the right of the table, the text **Go/NoGo** is displayed. At the bottom right of the screen is an **Exit** button.

## Sequence

---

**Background** The Sequence function is used to create high resolution load simulations. Each Sequence can be configured to create a unique load profile to accurately simulate loads in real time. Sequences are only applicable for CC (Static) and CR (Static) modes.

---




**Note:** Sequences are not to be confused with the sequences used to create a program. They are not the same and cannot be used interchangeably. Sequences (SEQ memory) cannot be used in Programs and Programs cannot load Sequences.

---

**Load Profiling** The Sequence function is able to simulate a load to a high resolution. Each channel is able to change its load sink within 25 $\mu$ s ~ 60000s per point independently. When used in parallel, multiple loads can be set concurrently to simulate the loads placed on multiple output power sources.


The diagram below shows the load profile of a DUT at start-up.

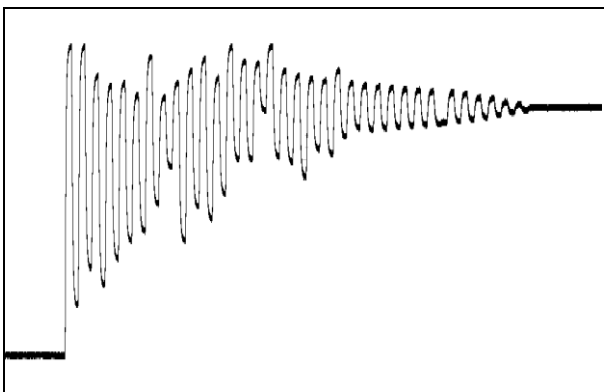

**Points**

Up to 120 points can be used with each Sequence. Each point can have a different duration, slew rate and value.


A new point can be inserted or deleted at any stage of a Sequence. Any new points that are inserted will have a value averaged from its neighbors as default.

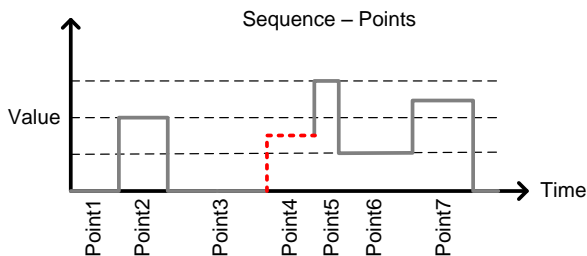

A new point is inserted after Point 3.


**Loop**

Sequences can be programmed to loop a number of times starting from any point in the sequence.

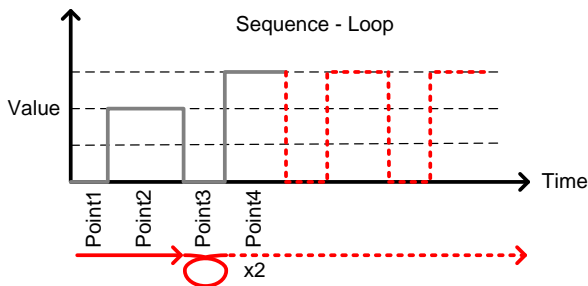


From Point3 the sequence is looped two times.

**On End Of Seq. function** If more than one Sequence is programmed on the mainframe, the On End Of Seq. function will hold the load current (of the selected sequence) to a designated value until all the other sequences have finished running.

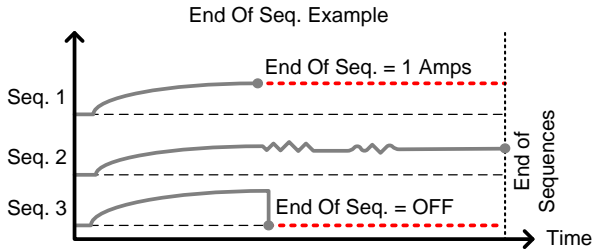

In the example above, Seq. 1 will hold the load current at 1A at the end of its sequence until the last sequence has finished. Seq. 2 is the longest sequence, and as such the End Of Seq. setting is not applicable. Seq. 3 is turned off after its sequence has finished (0 amps).

**Trig Out** The Trigger Out function allows a trigger sequence signal to be output from a channel via PIN 4 on Frame Link connector 1 when using Sequences. The Trig Out function is used from the Channel Duration menu.

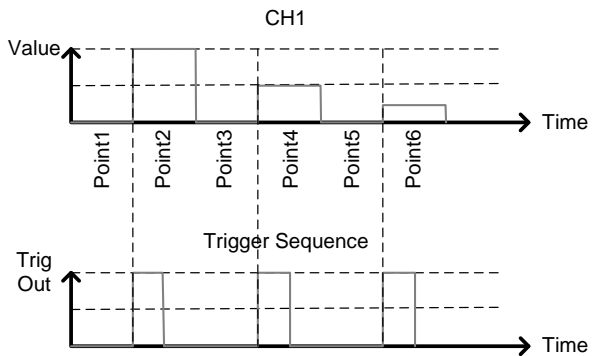

As can be seen above, a trigger sequence signal is output for every rising edge point.


**Trig In**

The Trigger In setting allows a sequence to start after a trigger (Trig Out) has been received via the frame link connector. The Trig In setting is used for frame linked mainframes.

**Channel Duration Time Setting**


The Channel Duration Time Setting feature allows the point time duration of one Sequence to be imported by another Sequence. If the receiving sequence doesn't have enough points, more will be created (without values).

For example, the sequences for CH1 and CH2 are shown below. CH1 has a total of 6 points with long durations, whilst CH2 has only 2 points, looped 5 times. The points from CH2 are also significantly shorter in duration.

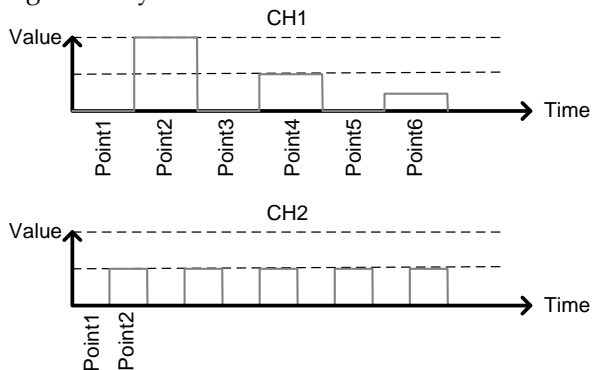

Below shows the resulting sequence when CH1 imports CH2. CH1 imports the duration time settings and number of points from CH2, but not the value data.



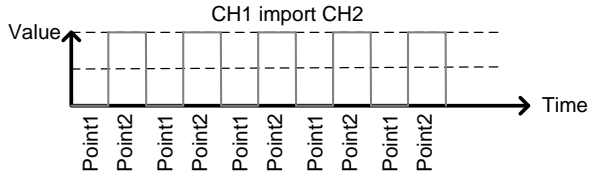


## OCP Test Automation

**Background** The OCP test function creates an automatic test to test the over current protection of power supply products. See page 173 for operation details.

This test will test to see when the over current protection of a power supply is tripped and return the measurements for the voltage and current when the over current protection was tripped. The PEL-2000A series also has a user-defined OCP setting in the event that the power supply OCP fails.

The diagram below shows an example of the OCP Test Automation function.

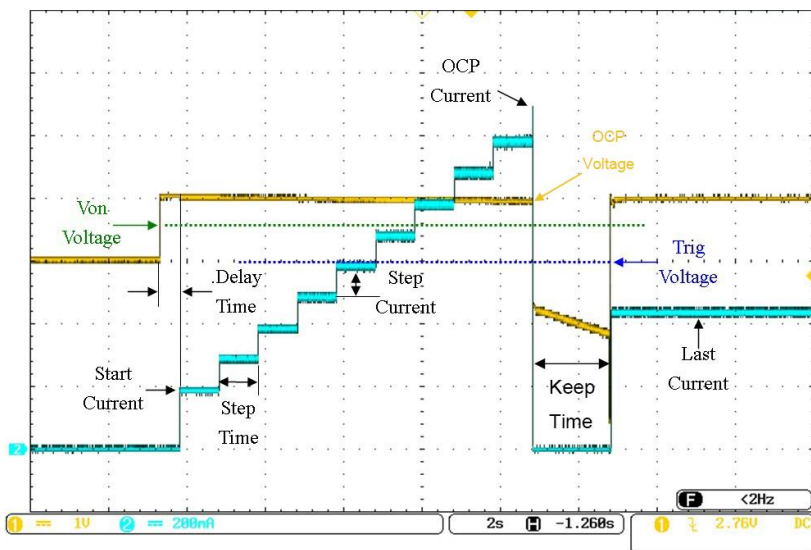


## Parallel Dynamic Loading

### Background

The PEL-2000A series of DC electronic loads support parallel dynamic loading. This simply means that when the load modules of a mainframe are connected in parallel and set to dynamic mode, they can perform dynamic tests synchronously following the same clock. Under dynamic mode, load current or resistance is pulsed between two preset levels. When used in parallel, higher powered outputs can be tested. This ability gives the PEL-2000A series the flexibility to perform dynamic tests over a wide range of power outputs.

For connection details see the Parallel Load Connections section on page 53.

The diagram below shows how two load modules are able to sink a higher load when used in parallel under dynamic mode.

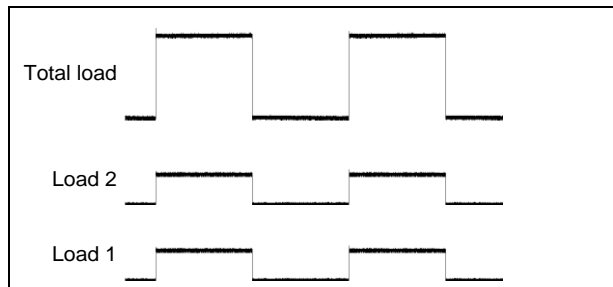

Note

The same type of load modules must be used operated in parallel.

## Configurations Description

There are a number of different configurations for the PEL-2000A series including protection modes, operating configurations, and file system configurations. The Configuration Description section describes what the different configurations are used for and how they can be relevant to different operations.

### Protection Modes


**Background**      The PEL-2000A series include a number of protection modes: Over Current Protection, Over Voltage Protection, Over Power Protection, Under voltage protection and Constant Power Protection.

The protection modes are useful to protect both the load modules and the DUT(s). A buzzer can be set to notify when a protection setting has been tripped. When a protection feature is activated and has been tripped then the load unit will display an alarm. The Mainframe will also display an alarm. When an alarm has been tripped the load will stop sinking current/voltage. There are three Over load protection settings: ON, OFF and Clear.

		Alarm	
<b>OCP Level</b>	5.075 A	CH1 CCDH  80V Conf	
<b>OCP Setting</b>	OFF		
<b>OVP Level</b>	81.6 V		
<b>OVP Setting</b>	ON		
<b>OPP Level</b>	29.75 W		
<b>OPP Setting</b>	OFF		
Protection	Other	Go-NoGo	Previous Menu


**Over Current Protection**

When a load unit is operating in CR, CV or CP mode, the unit may need over current protection to prevent excessive current being set. Over current protection stops the load from sinking more current than its recommended limit which can cause damage to the unit.

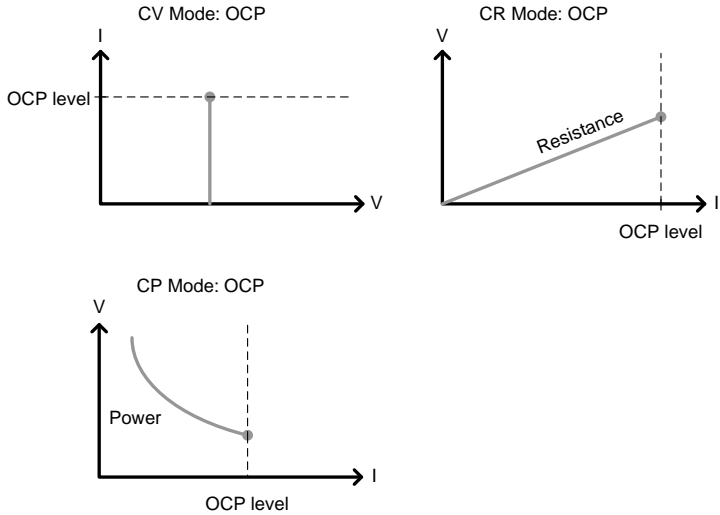

**Over Voltage Protection**

Over voltage protection is used to limit the amount of voltage sunk. If the OVP trips, the PEL-2000A series load will stop sinking voltage.

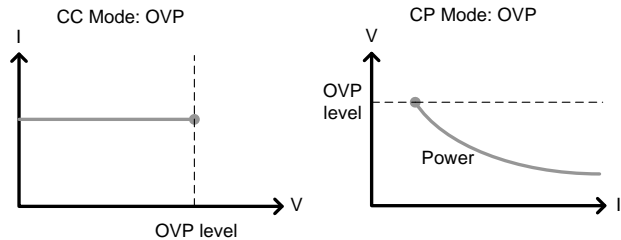

**Over Power Protection**


Over power protection is used to limit the amount of power sunk. When OPP is tripped power will cease to be sunk.

Reverse voltage Protection	Reverse voltage protection prevents reverse voltage damage to the PEL-2000A series up to the specified rating. When Reverse voltage protection has been tripped an alarm tone will sound until the reverse voltage is removed.
Under voltage Protection	Under voltage protection will turn off the load when the voltage drops below a set limit.
Constant Power Protection	Constant power protection will prevent excessive power draw.


## Operating Configurations

---

Background	<p>There are number of operating configuration settings. Configuration settings are for the following:</p> <p>CC Vrange, Von Voltage, Von Latch, CH Cont, Independent, load D-Time, Response settings, Step resolution settings, Short settings.</p>
CC Vrange	CC Vrange (page 185) is used to set the voltage range as High or Low for CC mode. CC voltage range is dependent on the load module specifications.
Von Voltage	<p>Von Voltage is the voltage limit at which the load will start to sink current. There are two operation modes for Von Voltage: Von latched: ON and Von latched: OFF.</p> <p>Latched: ON will sink current when Von has been tripped, and will continue to sink current even if the voltage drops below the Von Voltage.</p> <p>Von Latched: OFF will sink current when Von has been tripped, but will stop sinking current when the voltage drops below the Von Voltage setting.</p>

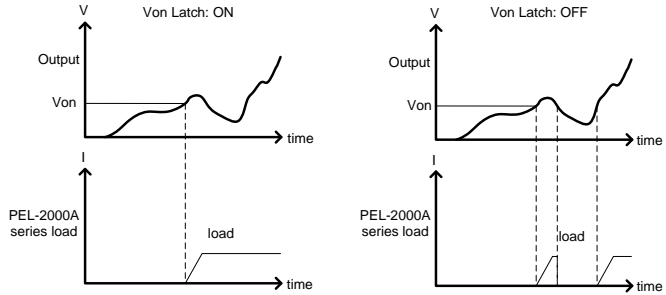

As can be seen in the diagram below, when Von-Latch is set to off, the load module will start to sink current when the Von-voltage limit has been tripped. It will stop sinking current when the output drops below the Von voltage limit.

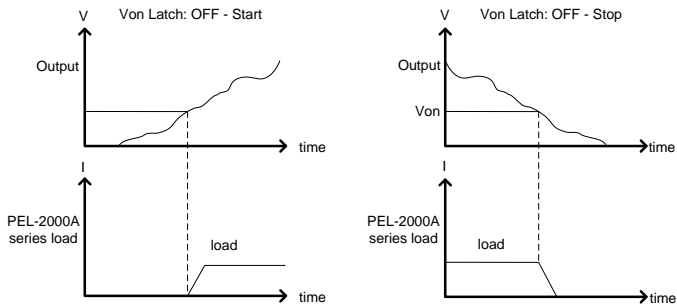

**CH CONT**

**Channel Control.** When Channel control is activated (External) it can be used to monitor the voltage and current output of the load as well as turn loads on or off remotely from the Channel Control (CH CONT) connectors located on the rear panel.

For more information about channel control, see external voltage control on page 89.

**Independent**

The Independent setting will allow the load modules to be controlled independently from the mainframe.

- Load D-Time** Load Delay time is used to delay activating a load (up to 10 seconds) after the load key has been pressed. However the Load D-Time setting will only work for loads that are initiated manually or when the PEL-2000A series mainframe is configured to Auto load (page 210) at run time.
- Response** The Response setting sets the bandwidth of the load to 1kHz (normal) or 100kHz (fast). The Response setting is particularly important for limiting startup current.
- Step Resolution** The current, resistance, voltage and power setting can have the step resolution configured for each channel. The step resolution refers to the step resolution of the *coarse adjustment* of these settings. The *fine adjustment* cannot be configured, see page 197 for details.

For example if the step resolution for CCH (CC high range) is .5 A, then the resolution can be incremented in .5A steps;

$$8.0 \leftarrow \rightarrow 8.5 \leftarrow \rightarrow 9.0 \leftarrow \rightarrow 9.5$$

The step resolution parameters apply to the following:

CCH Step – CC high range

CCL Step – CC low range

CRH Step – CR high range

CRL Step – CR low range

CVH Step – CV high range

CVL Step – CV low range

CPH Step - CP high range

CPL Step - CP low range



---


Step Resolution Range	<p>The step resolution range is dependent on the load module and the range:</p> <p>Max resolution: Module dependent, see page 197</p> <p>Min resolution: Module dependent, see page 197</p>
Short Key	<p>When short mode is on, the load unit can simulate a short circuit.</p> <p>Shorting can be individually set for each channel when programming sequences.</p> <p>To initiate a short circuit manually, the short key is used. It can be used at any time during an operation. It will not affect the settings. After a short circuit has finished, the load unit will resume the previous operation.</p> <p>The short function can be set ON or OFF. When setting to ON, the short key is enabled. When setting to OFF, the short key is disabled.</p> <p>The short key can be set to toggle or hold. When pressed in toggle mode, shorts are toggled on and off. When pressed in hold mode, the key needs to be held to short the load.</p> <p>The Short Safety can be used to set the short operation mode. When setting to ON, the short function must be used in the case of Load ON. When setting to OFF, the short function can be used directly.</p>



A short circuit may trip a protection mode if too much current is sunk.


## Channel Control

**Background** External channel control is used with the Channel Control connectors. Each channel control connector can activate each load, monitor voltage and current and has an external voltage reference input. The voltage and current monitors output 0~100% of the rated current/voltage as a voltage of 0~10V.

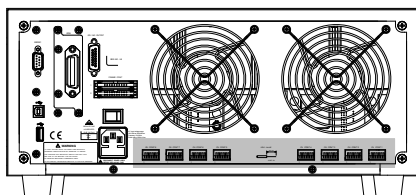

**External Voltage Reference** A voltage reference of 0-10V is used to represent 0-100% of the rating voltage/current of a load module. As seen below the external voltage reference and the rating voltage/current have a linear relationship. By varying the reference voltage between 0~10V the voltage/current setting will be changed accordingly.

External Voltage Control

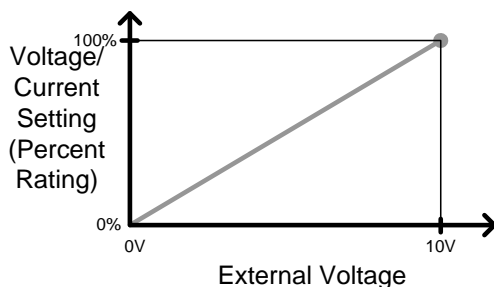


To determine the Percent Rating (voltage or current load input), use the following formula;

$$\text{Load Input} = \frac{\text{External Voltage}}{10(\text{V})} \times \text{Rating VorA}$$

Where "Rating V or A" is the rating voltage/current of the load module.

**Current Monitor** The load current input can be externally monitored using the IMON pin of a channel control connector. The IMON pin outputs a voltage of 0~10V to represent the input current as a percentage (0~100%) of rating current.

Current Monitor

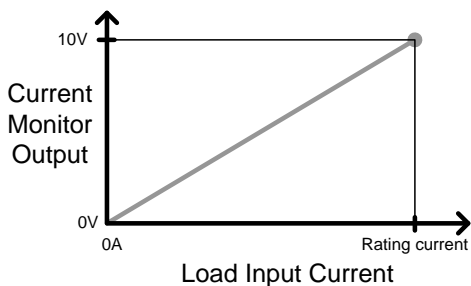


To determine the Current Monitor Output (IMON) , use the following formula;

$$\text{IMON} = \frac{\text{Load input current}}{\text{Rating A}} \times 10\text{V}$$

Where "Rating A" is the rating current of the load module.

**Voltage Monitor** The input voltage, like the load input current can be externally monitored with the channel control connectors. The VMON pin of the channel control connector outputs a voltage of 0~10V to represent the load input voltage as a percentage (0~100%) of the rating voltage.

Voltage Monitor

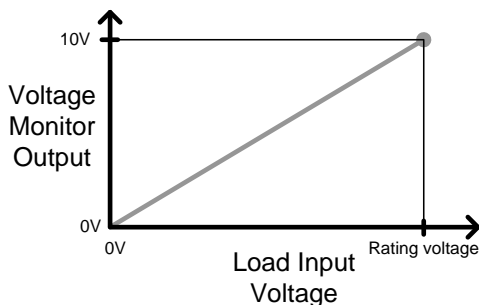

To determine the Voltage Monitor Output (VMON) , use the following formula;

$$VMON = \frac{\text{Load input voltage}}{\text{Rating V}} \times 10V$$

Where "Rating V" is the rating voltage of the load module.

**Turning on the Load** A load is turned on when Load On input is set to On (active low). A load is turned off when the Load On input is set to Off (active high).

When a load is turned on from the channel control interface, the load can be turned off from the mainframe, local module and via remote control. However the opposite is not true; when a load is turned off using the channel control interface, the load cannot be turned on via the mainframe, local module or via remote control.

For connections and configurations, see pages 57 and 284 respectively.

## Interface and System

### Interface

---

**Background** The PEL-2000A series support RS232, GPIB and USB remote frame control. Only one type of connection is supported at any one time. For more information on remote control please see the GW Instek website at [www.gwinstek.com](http://www.gwinstek.com) or see your local distributor about the PEL-2000A series programming manual.

For connection options and configurations see the options below.

---

RS-232 configuration	Page 232
RS-232 pin connection	Page 281
GPIB configuration	Page 235
GPIB pin configuration	Page 282
USB configuration	Page 233

### File System

---

**Background** The PEL-2000A series is able to save and recall a number of different data types for each channel:

Presets

Memory

Setup

SEQ (Sequence)

All data types can be saved and recalled to internal memory or saved to a USB flash drive. Each channel has its own dedicated memory for

---

	each data type. Thus files are saved/recalled for each channel and each data type.															
Preset Data	Preset data can be saved into 10 memory slots for each channel. Preset data contains the mode, range, CV response speed and Go/NoGo settings.															
	Internal Format P0~P9															
	External Format 20X0X_XX.P															
Preset Contents	Preset data contains the following data;															
	<table border="0"> <tr> <td>CHAN</td> <td>• Mode</td> <td>• Static/Dynamic</td> </tr> <tr> <td></td> <td>• Range</td> <td>• CV response speed</td> </tr> <tr> <td>Go/NoGo</td> <td>• SPEC Test</td> <td>• Entry Mode</td> </tr> <tr> <td></td> <td>• High</td> <td>• Low</td> </tr> <tr> <td></td> <td>• Center</td> <td></td> </tr> </table>	CHAN	• Mode	• Static/Dynamic		• Range	• CV response speed	Go/NoGo	• SPEC Test	• Entry Mode		• High	• Low		• Center	
CHAN	• Mode	• Static/Dynamic														
	• Range	• CV response speed														
Go/NoGo	• SPEC Test	• Entry Mode														
	• High	• Low														
	• Center															
Memory Data	Each channel can save up to 120 different Memory data types (M001~M120) into internal memory. Memory data contains general channel settings and is used when programming sequences. Memory data can be stored both internally and externally to USB. Preset data and Memory data store the same contents.															
	Internal Format M001~M120															
	External Format 20X0X_XX.M															
Memory Contents	Memory data contains the following data;															
	<table border="0"> <tr> <td>CHAN</td> <td>• Mode</td> <td>• Static/Dynamic</td> </tr> <tr> <td></td> <td>• Range</td> <td>• CV response speed</td> </tr> <tr> <td>Go/NoGo</td> <td>• SPEC Test</td> <td>• Entry Mode</td> </tr> <tr> <td></td> <td>• High</td> <td>• Low</td> </tr> <tr> <td></td> <td>• Center</td> <td></td> </tr> </table>	CHAN	• Mode	• Static/Dynamic		• Range	• CV response speed	Go/NoGo	• SPEC Test	• Entry Mode		• High	• Low		• Center	
CHAN	• Mode	• Static/Dynamic														
	• Range	• CV response speed														
Go/NoGo	• SPEC Test	• Entry Mode														
	• High	• Low														
	• Center															

SEQ Data	<p>SEQ data contains Sequence data. SEQ data can only be saved to and from USB. SEQ refers to Sequence data, not Program sequences.</p> <hr/> <p>Internal Format                    N/A (Internal buffer)</p> <p>External Format                    20X0X_XX.A</p> <hr/>									
SEQ Contents	<p>SEQ data contains the following data;</p> <hr/> <table border="0" style="width: 100%;"> <tr> <td style="width: 150px;">Seq.Edit</td> <td> <ul style="list-style-type: none"> <li>• No. (Points)</li> <li>• Slew rate <math>f</math></li> <li>• Duration time</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>• Value</li> <li>• Slew rate <math>\tau</math></li> </ul> </td> </tr> <tr> <td>Loop</td> <td> <ul style="list-style-type: none"> <li>• Repeat</li> <li>• On End Load</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>• Start of Loop</li> <li>• CC Vrange</li> </ul> </td> </tr> </table> <hr/>	Seq.Edit	<ul style="list-style-type: none"> <li>• No. (Points)</li> <li>• Slew rate <math>f</math></li> <li>• Duration time</li> </ul>	<ul style="list-style-type: none"> <li>• Value</li> <li>• Slew rate <math>\tau</math></li> </ul>	Loop	<ul style="list-style-type: none"> <li>• Repeat</li> <li>• On End Load</li> </ul>	<ul style="list-style-type: none"> <li>• Start of Loop</li> <li>• CC Vrange</li> </ul>			
Seq.Edit	<ul style="list-style-type: none"> <li>• No. (Points)</li> <li>• Slew rate <math>f</math></li> <li>• Duration time</li> </ul>	<ul style="list-style-type: none"> <li>• Value</li> <li>• Slew rate <math>\tau</math></li> </ul>								
Loop	<ul style="list-style-type: none"> <li>• Repeat</li> <li>• On End Load</li> </ul>	<ul style="list-style-type: none"> <li>• Start of Loop</li> <li>• CC Vrange</li> </ul>								
Setup Data	<p>Setup data can be saved to 4 internal memory slots. Setup data contains Memory data, Program Sequence, Chain data, configuration settings and operation settings for every channel. Setup data can be saved to Internal memory or to USB.</p> <p>Internal Format                    Setup Memory 1~4</p> <p>External Format                    200X0_XX.S</p> <hr/>									
Setup Contents	<p>Setup data contains the following data;</p> <hr/> <table border="0" style="width: 100%;"> <tr> <td style="width: 150px;">Program</td> <td> <ul style="list-style-type: none"> <li>• PROG</li> <li>• Memory</li> <li>• On-Time</li> <li>• P/F-Time</li> <li>• Short Channel</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>• SEQ (program sequence no.)</li> <li>• Run</li> <li>• Off-Time</li> <li>• Short-Time</li> </ul> </td> </tr> <tr> <td>Chain</td> <td> <ul style="list-style-type: none"> <li>• Start</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>• Program Sequence (P01~P12)</li> </ul> </td> </tr> <tr> <td>Run</td> <td> <ul style="list-style-type: none"> <li>• Active Channel (CH01~08)</li> </ul> </td> <td></td> </tr> </table>	Program	<ul style="list-style-type: none"> <li>• PROG</li> <li>• Memory</li> <li>• On-Time</li> <li>• P/F-Time</li> <li>• Short Channel</li> </ul>	<ul style="list-style-type: none"> <li>• SEQ (program sequence no.)</li> <li>• Run</li> <li>• Off-Time</li> <li>• Short-Time</li> </ul>	Chain	<ul style="list-style-type: none"> <li>• Start</li> </ul>	<ul style="list-style-type: none"> <li>• Program Sequence (P01~P12)</li> </ul>	Run	<ul style="list-style-type: none"> <li>• Active Channel (CH01~08)</li> </ul>	
Program	<ul style="list-style-type: none"> <li>• PROG</li> <li>• Memory</li> <li>• On-Time</li> <li>• P/F-Time</li> <li>• Short Channel</li> </ul>	<ul style="list-style-type: none"> <li>• SEQ (program sequence no.)</li> <li>• Run</li> <li>• Off-Time</li> <li>• Short-Time</li> </ul>								
Chain	<ul style="list-style-type: none"> <li>• Start</li> </ul>	<ul style="list-style-type: none"> <li>• Program Sequence (P01~P12)</li> </ul>								
Run	<ul style="list-style-type: none"> <li>• Active Channel (CH01~08)</li> </ul>									



CHAN	<ul style="list-style-type: none"> <li>• Mode</li> <li>• Range</li> </ul>	<ul style="list-style-type: none"> <li>• Static/Dynamic</li> <li>• CV response speed</li> </ul>
Go/NoGo	<ul style="list-style-type: none"> <li>• SPEC Test</li> <li>• High</li> <li>• Center</li> </ul>	<ul style="list-style-type: none"> <li>• Entry Mode</li> <li>• Low</li> </ul>


**Save: Internal memory**      When saving data to internal memory, either the current channel or all the channel data can be saved. Not all data types can save the current channel or all the channel data.

Data Type	Current Ch	All Ch
Preset	✓	✓
Memory	✓	✓
SEQ	✓ (single save)	—
Setup	—	✓

**Save: External memory**      Only SEQ, Memory and Preset data can be saved for a single channel to USB. All four data types (SEQ, Memory, Setup, Preset) can save all channels to USB.

Data Type	Current Ch	All Ch
Preset	✓	✓
Memory	✓	✓
SEQ	✓	✓
Setup	—	✓


**Save/Recall USB** In order to save data from a single channel to USB, data must first be saved to the internal memory. After data is saved to internal memory, all the files can be saved to USB.

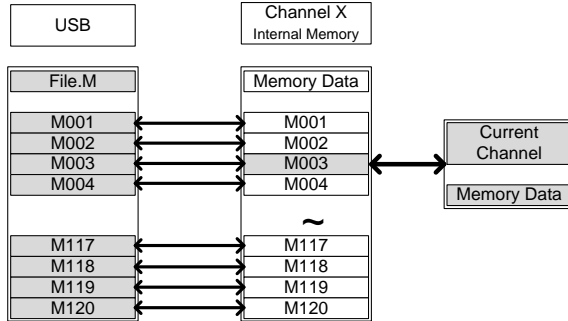

To recall saved files, the reverse is also true. Files must be recalled from the USB flash drive to internal memory. Then from internal memory the data can be recalled to each channel\*.


\*Excluding SEQ data.


**Save/Recall All** The SEQ, Preset, Memory or Setup data can be saved from every channel into USB. SEQ, Preset and Memory data is saved into a directory (ALL0000-ALL0099) with a file for each channel, whilst Setup data is saved in a single file.

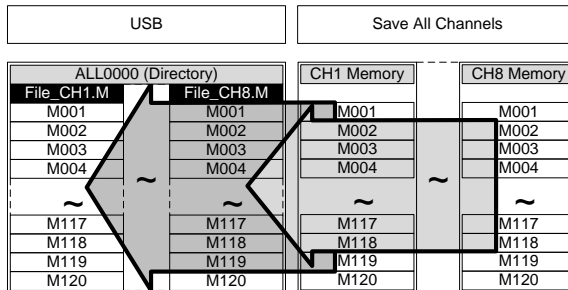

To recall saved files, the reverse is not true. Files must be recalled to each channel separately.

## File Format

Current Channel	Filename format	
Memory data	2030R_00.M	1: PEL-2000A series Load module
Preset data		type:
SEQ data	1 2 3 4	2020 = PEL-2020A
		2030 = PEL-2030A
		2040 = PEL-2040A
		2041 = PEL-2041A
		2: Channel location or Voltage range of single channel model.
		R = Right
		L = Left
		0 = Single channel or not used
		3: Save file number:
		0 ~99
		Incremented after each consecutive save.
		4: File extension
		M = Memory data
		P = Preset data
		A= SEQ data

All Channel	Directory Format	
	ALL_0000	1: All Channel common directory name
		2: Directory number:
	1 2	0000 ~ 0099

All Channel

File Format

 
Memory data

Preset data


SEQ data

Setup Data

2230R\_C1.M



20040\_00.S

 

1: PEL-2000A series Load module type:

2020 = PEL-2020A

2030 = PEL-2030A

2040 = PEL-2040A,

2041 = PEL-2041A

2: Channel, Voltage range of single channel model or Mainframe indication

R = Right

L = Left

0 = Single channel

3: Channel number:

C1 = CH1

C2 = CH2

Etc.

00 = All channels (Setup data)

4: File extension

M = Memory data

P = Preset data

A= SEQ data

S= Setup data

# TUTORIALS

 
---

Local loads .....	102
Single Channel Load .....	104
Parallel Load Modules .....	106
Programming.....	108
Sequences .....	110
Frame Link.....	111
Channel Control.....	113
General Configuration Options .....	115

## Local loads

Local mode operation is useful to quickly test loads using the load module control panel rather than the mainframe control panel. Local load modules can be configured to operate independently to the mainframe. This can be useful when settings need to remain unchanged on the mainframe. Note however that the local modules cannot change the modes (CC, CV, CR, CP), only the values.

Group Unit mode is not supported for local module control.



Step	Description	Details
1. Setup	Ensure the channel load is set up as desired.	Pages 38, 45
2. Channel selection	Ensure the correct channel or Value (A/B) is selected by using the R/L or A/B key.	Page 120
3. Measurement Mode selection	If in CC or CR mode, Static or Dynamic mode can be selected.	CC Pages 121, 132 CR Pages 136, 139
4. Run the Load	Press the LOAD key to start/end loading the device under test.	Page 122


### Optional

 5. Short configuration	Configure the SHORT settings.	Page 189
6. Display	To change the display output, use the DISPLAY key.	Page 123
7. Shorting the load	To short the load, use the SHORT key.	Page 123

- |                                   |   |          |
|-----------------------------------|---|----------|
| 8. Independent load               | The local load modules can be set to independent load.            | Page 193 |
| 9. Independent control            | Slave knobs can be configured to be independent to the mainframe. | Page 215 |
| 10. Configure Slave Knob Settings | Display Measured or Set Values with the selector knob.            | Page 219 |
-

## Single Channel Load

Single channel loads are used to manually test a DUT quickly or to configure channel settings for Program Sequences using the mainframe panel.



Step	Description	Details
1. Setup	Choose the appropriate load module and make sure it is installed.	Page 38
2. Connection	Connect the terminals to the DUT.	Page 45
3. Channel selection	Select the load channel on the mainframe.	Page 126
4. Measurement mode selection	Select measurement mode (CC, CV, CR, CP).	CC Page 128 CV Page 141 CR Page 134 CP Page 145
5. Range selection	Set the range to high or low (CC, CR, CV and CP mode).	CC Page 128 CR Page 135 CP Page 148
6. Mode selection	Choose Static or Dynamic mode (CC & CR mode only).	CC Pages 129, 132  CR Pages 136, 139
7. Dynamic levels (CC,CR)	Set the dynamic levels, slew rate and timers. Applicable to CC & CR mode only.	CC Page 130 CR Page 136



8. Static Values	Set the A(B) Value, slew rate (CC, CR) and current limit (CV, CP)	CC Page 132 CR Page 139 CV Page 142 CP Page 146
------------------	---	--

9. Go/NoGo	Set the Go/NoGo configurations, if applicable.	Page 200
------------	--	----------

10. Protection Modes	Configure the protection modes.	Page 181
----------------------	---------------------------------	----------

11. Run	Activate the load by pressing the load key.
---------	---




#### Optional

 12. Configuration	There are number of configurations that apply to all channels. For details see the Configuration Tutorial.	Page 115
-------------------	--	----------

## Parallel Load Modules

The Group Unit setting allows for a quick and easy parallel setup for load modules of the same type and rating. However, the Group Unit settings only apply for CC and CR modes.




Step	Description	Details
1. Setup	Choose the appropriate load modules and make sure they are installed. All load modules must be of the same type and rating.	Page 38
2. Connection	Connect the terminals to the DUT.	Page 45
3. Group Unit mode configuration	Enable Group Unit Mode and configure.	Page 204
4. Measurement mode selection	Select measurement mode (CC, CR).	CC Page 128 CR Page 134
5. Range selection	Set the range to high or low (CC, CR mode).	CC Page 128 CR Page 135
6. Mode selection	Choose Static or Dynamic mode.	CC Pages 129, 132 CR Pages 136, 139
7. Dynamic levels	For Dynamic mode, set the dynamic levels, slew rate and timers.	CC Page 130 CR Page 136
8. Static Values	For Static mode, set the A(B) Value and slew rate.	CC Page 132 CR Page 139

9. Go/NoGo Set the Go/NoGo configurations, if applicable. Page 200

10. Protection Modes Configure the protection modes. Page 181

 11. Run Activate the load by pressing the load key.




#### Optional

12. Configuration There are number of configurations that apply to all channels. For details see the Configuration Tutorial. Page 115

## Programming

 When creating a Program Sequence or Chain, all channels are used at the same time unless programmed otherwise. Program Sequences use the channel settings stored from Memory Data. Program sequences are primarily used to perform a battery of pass/fail tests on DUTs.




Step	Description	Details
1. Setup	Choose the appropriate load module(s).	Page 38
2. Connection	Connect the terminals to the DUT.	Page 45
3. Channel selection	Select the load channel(s) on the mainframe.	Page 126
4. Channel setup	See the “Single channel load” tutorial to configure a single channel. Do not activate the load.	Page 104
5. Save channel	Save the configured channel.	Page 238
6. Multiple channels	If multiple channels need to be configured, follow steps 1-5 for any remaining channels.	
7. Program menu	Enter the Program menu.	Page 151
8. Configure the sequence	Configure the program.	
9. Save sequences	Save the Program in the FUNC →Program menu.	
10. Program Chains	If required, Program chains can be created.	Page 155

- |                  |   |          |
|------------------|---|----------|
| 11. Save Program | Save the chain in the Chain menu.             |          |
| 12. Save Setup   | Save everything to the internal Setup memory. | Page 248 |
| 13. Run          | Run the Program Sequence/Chain.               | Page 157 |

## Sequences

 
Sequences are used to accurately simulate loads. As each Sequence is independent, Sequences are ideally suited to test multiple output power sources.



Step	Description	Details
1. Setup	Choose the appropriate load module(s).	Page 38
2. Connection	Connect the terminals to the DUT.	Page 45
3. Channel selection	Select a load channel with the mainframe.	Page 126
4. Channel setup	Create a sequence.	Page 163
5. Sequence loop	Create a sequence loop if necessary.	Page 165
6. Multiple channels	If multiple channels need to be configured, follow steps 1-5 for any remaining channels.	
7. Channel Duration menu	Edit the sequence channel duration information. Ensure that the channels containing Sequences are not set to OFF.	Page 167
8. Trigger Settings	Set Trigger Out and In channels, if appropriate.	
9. Run	Run the Sequence(s)	Page 170

## Frame Link

Frame link connections are used connect up to four slave main frames to a master main frame. When using frame link connections it is possible to perform a number of operations in parallel under the control of the master unit.

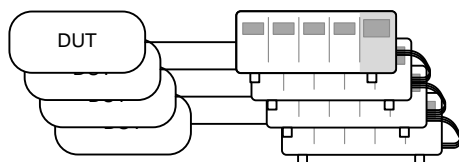

Step	Description	Details
1. Setup	Connect the mainframes together.	Page 55
2. Configure	Configure the Frame CONT to ON for all mainframes.	Page 213



At first both the master and slaves are independent. FRM (Frame Master) can be seen on the top panel of the each mainframe. When a mainframe is connected as a slave unit, the FRM icon will change to FRS (Frame Slave). The front panel keys are disabled on slave units when in slave mode (FRS).

Slave mode **FRM** → **FRS**

Master/Independent **FRM**

3. Program	See the tutorial sections for programming or channel configuration.	Pages 104, 106
------------	---	----------------

- 4. Run Run the loads. To run the loads, press the LOAD key on the master mainframe. To stop, press again. When the LOAD key is pressed all loads will be active.




**Options**

 - 5. Load Preset memory Load preset memory on the mainframe and all frame-linked slaves. Page 275

- 6. Load Setup Memory Load setup memory on the mainframe and all frame-linked slaves. Page 274

- 7. Set slave to independent Press shift + CHAN on the slave unit to enable local control on a slave unit.



**FRS** → **FRM**




When a load is run or memory is recalled from the master mainframe, the slave unit will return to mainframe control.

Ensure the same firmware is installed on both master and slave mainframes.



## Channel Control

The Channel Control connectors on the rear panel can be used to control and monitor the status of up to 8 channels. For more information on channel control, see page 89.

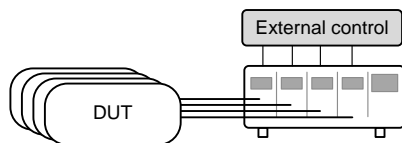

Step	Description	Details
1. Setup	Ensure the load and PEL-2000A series mainframe is turned off.	
2.	Choose the appropriate load module(s).	Page 38
3. Connection	Connect the terminals to the DUT.	Page 45
4.	Connect the channel control connectors on the rear panel.	Page 57 & 284
5.	Turn on the PEL-2000A series mainframe and DUT (load).	
6. Configure	Select the Mode* and Range* via the front panel.	CC Pages 128, 128 CV Page 141
7.	Activate channel control for each channel that will be used for external control, i.e., set CH CONT to External.	Page 192

- |            |  |              |
|------------|--|--------------|
| 8. Run     | Run the load. Turn the load on by either outputting an active low signal to the appropriate channel control connector or control connector, or press the LOAD key on the load module or mainframe**. | Page 57 & 89 |
| 9. Monitor | Use IMON and VMON to monitor the current and voltage of load outputs.  | Page 89      |
| 10. End    | To turn the load off, output an active high signal to the channel control connector, or press the LOAD key on the load module or mainframe**.  |              |

\* Mode and Range cannot be configured via the Channel Control (CH CONT) interface. Mode and Range can only be configured via the front panel.

\*\* The LOAD key cannot always be used to turn on/off the load. See page 89 for details.

## General Configuration Options

There are number of different options for each channel. The different options are described below.

Options	Description	Details
1. CC Vrange	Configure the CC Voltage range from high or low.	Page 185
2. Von Voltage	Configure the Von Voltage settings.	Page 187
3. Short Settings	Configure the short key settings.	Page 189
4. CH CONT	Turn channel control on/off	Page 192
5. Independent load	Turn the load module control to dependent (via mainframe) or independent control.	Page 193
6. Delay Time	Configure the load delay time for each channel. (0-10 seconds).	Page 195
7. Clear All Protection	Clear all the Protection Alarms.	Page 184
8. Display	Adjust display settings.	Page 211
9. Control type	Configure the Knob control.	Page 215
10. Slave Knob Setting	Display Measured or Set values with the selector knob.	Page 219
11. Alarm	Configure alarm settings.	Page 217
12. Step resolution	Configure the step resolution. Applicable to CC high and low range, CR high and low range, CV high and low range and CP high and low rang.	Page 197
13. Response	Configure the Response setting.	Page 200

14. Sound

Turn the sound on/off for the mainframe IU.

Page 211

# OPERATION

The PEL-2000A series operation is described in the chapters below. The sections are broken down into small operations. For thorough examples on the operation of the load, please see the tutorial section on page 102.

---

Local Mode Operation .....	120
Selecting a Channel.....	120
Selecting Static/Dynamic.....	121
Turning on the Load .....	122
Shorting.....	123
Display Output View .....	123
Editing CC/CR/CV/CP A/B Value .....	124
Mainframe Basic Operation .....	126
Help Menu .....	126
Channel Selection .....	127
Select CC Mode.....	128
Select CC Range .....	128
Select CC Dynamic Mode .....	129
Editing CC Dynamic Parameters .....	130
Select CC Static Mode.....	132
Editing CC Static Parameters.....	132
Set to CR Mode .....	134
Select CR Range .....	135
Select CR Dynamic Mode .....	136
Editing CR Dynamic Parameters .....	136
Select CR Static Mode.....	139
Editing CR Static Parameters.....	139
Select CV Mode.....	141
Editing CV Parameters .....	142
Select CV Range .....	144
Select CV Response Speed .....	144
Select CP Mode.....	145
Editing CP Parameters .....	146

Select CP Range .....	148
Creating a Program Sequence .....	150
Program Chains .....	155
Running a Program.....	157
Edit Sequence .....	163
Create Sequence Loop .....	165
Channel Duration Time Settings.....	167
Run Sequence .....	170
OCP Test Automation.....	173
Channel Configuration .....	180
Accessing the Configuration Menu.....	180
Setting (OCP/OVP/OPP/UVP) .....	181
Protection Clear .....	184
Setting the CC Voltage Range.....	185
Adjusting the Von Voltage and Latch.....	187
Configuring the Short settings .....	189
Configuring Channel Control .....	192
Configuring the Independent Setting.....	193
Configuring the Load Delay Time.....	195
Configuring Step Resolution .....	197
Configuring Response Time .....	200
Go/NoGo .....	201
Group Unit .....	204
Mainframe Configuration .....	208
Accessing System Information.....	208
Accessing the Load Menu .....	210
Adjusting the Speaker.....	211
Adjusting the Display Settings .....	212
Adjusting the Frame Control.....	213
Adjusting the Knob Control Type .....	215
Configuring Alarm Sound.....	217
Configuring Go/NoGo Alarm Sound .....	218
Adjusting Slave Knob Settings .....	219
View Language Settings.....	220
Adjusting the High Resolution .....	221
Adjusting the System Mode .....	223
Adjusting the Von Latch Clear.....	225
Adjusting the Measure Period.....	227
Adjusting the Jog Shuttle Control.....	228
Adjusting the RVP Load Off.....	229

Setting the Date and Time .....	231
Interface Configuration (settings) .....	232
Configuring RS232 Connection .....	232
Configuring USB Connection .....	233
Configuring the GPIB Address .....	235
RS232 and USB CDC Function Check .....	238
GPIB Function Check .....	242
Saving/Recalling Channels .....	244
Saving/Recalling Preset memory.....	246
Saving/Recalling Setup Memory .....	248
Setting the Default USB Path/File .....	250
Saving Setups to USB Memory .....	255
Saving/Recalling Memory Data to USB .....	258
Saving/Recalling Presets to USB .....	263
Saving/Recalling Sequences to USB .....	268
Quick Preset Recall/Save .....	273
Recall Setup Memory (Frame link).....	274
Recall Preset Memory (Frame link).....	275
Recall Factory/User's Defaults .....	276

## Local Mode Operation

Each channel can be edited by its local load module. Depending on the configuration, local changes can be reflected on the mainframe. For this section all operations refer to knobs and buttons on the local load module panels, unless stated otherwise.

### Selecting a Channel

---

Background	Each channel can be individually selected by using its load module panel. Changing channels on a load module only applies to dual channel load modules.
Single Channel Panel operation	Press any key on a load module to select its channel.
Dual Channel Panel Operation	For dual channel load modules, press any key on a load module that has the desired channel. Press the R/L key to cycle between the channels on the load module. L or R will be displayed on the bottom left hand to indicate which channel (left or right side) is active on the load module.



---

## LR




On single channel modules, pressing the A/B key repeatedly will change the level from A or B when in Static mode.

Channels cannot be selected in Group Unit Mode.

---



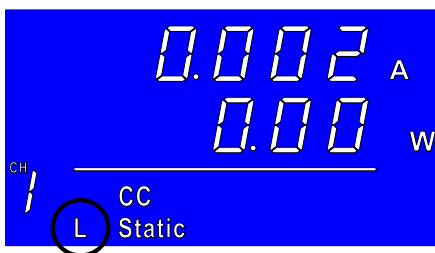


## Selecting Static/Dynamic

**Background** Each load channel can be individually switched from Static to Dynamic using the local load module.


1. Select a channel on the load module. Page 120

 **Panel operation** 2. Press the STATIC/DYNA. key to switch from dynamic to static mode and vice versa.



Note

All changes will be shown on the display and depending on the configuration, reflected on the mainframe.

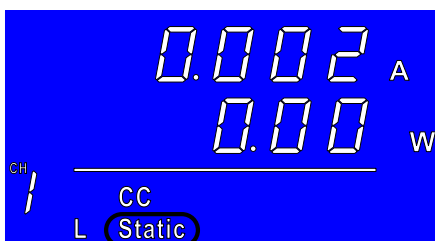

## Turning on the Load

**Background** Loads can be individually selected to be turned on using local operation.

1. Select a channel on the load module. Page 120


**Panel operation** 2. Press the LOAD key to turn on the load.



When a channel load is activated, the load on symbol will be displayed under the channel number.

### Range

- L-ON** Left channel
- R-ON** Right channel
- ON** Single channel

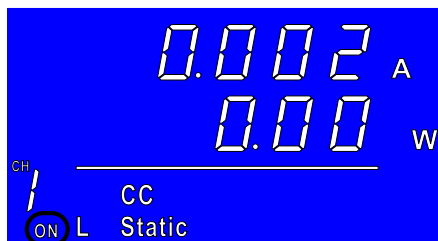

**Turning the load off** 3. Press the LOAD key.




## Shorting

---

**Background** The Short Key is used to simulate a short circuit.

1. Configure the Short settings. Page 189
2. Select a channel on the load module. Page 120

**Panel operation** 3. Press the SHORT key to enter the shorting modes.

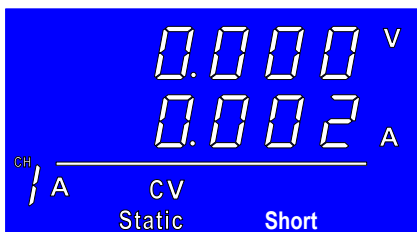

**Shorting** 4. a. Press the SHORT key (toggle mode).



Or

b. Hold the SHORT key (hold mode).



Note

The load cannot be shorted from the local load module in Group Unit mode.

## Display Output View

---

**Background** The DISPLAY key can be used to switch the display output to different views.

**Panel operation** 1. Press the DISPLAY key repeatedly to switch between the different views.



- V** Voltage
- A** Current
- W** Power
- S** Load on time.



Note

The Display mode cannot be changed in Group Unit mode.

## Editing CC/CR/CV/CP A/B Value

**Background** The Slave Knob is used to edit the A Value or B Value (single channel load module) when in static mode. The Slave Knob can also operate in fine or coarse editing mode.

**Panel Operation** 1. Ensure the mode is in static mode. Page 121

 
2. Choose a channel (or choose A or B Value) by pressing the R/L or A/B key.



3. Press the Slave Knob to toggle between fine and coarse editing mode.

SEt\_C = coarse mode.

SEt\_F = fine mode.




Fine mode example:



Coarse mode example:



4. Turn the Slave Knob to edit the A/B Value for the selected mode.

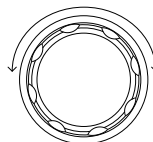



When the Slave Knob is set to “Measure”, the slave knob must be pressed first to display the values on the load module display.

Editing the A/B Value is not possible with this method in Group Unit mode.

## Mainframe Basic Operation

For the Mainframe Basic Operation section, all operations refer to the knobs and keys on the main configuration panel, unless otherwise stated.

### Help Menu



 
---

**Background** When any function key has been pressed or when a menu has been opened, the HELP key can be used to display a detailed description.

1. Press a function or system key on the front panel or open a menu.

**Help Selection** 2. Press the HELP key to display the built-in help.

3. Use the scroll wheel to scroll down if necessary.

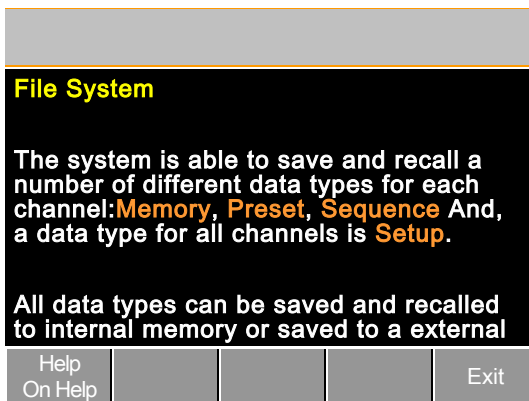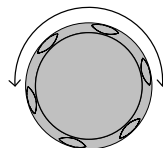

A detailed description of the function or menu item is shown.

4. Press F5 to exit.



## Channel Selection

 
**Background** There are up to 2 channels per load module, depending on the model. The main display can be used to control each channel individually.




When Group Unit Mode is enabled, channel selection is disabled. See page 120 for details.

**Mainframe Channel selection**


1. Press the CHAN button.



2. Select a channel by turning the Variable knob.

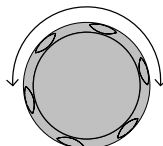

The channel selection appears highlighted in orange on the top right of the screen.

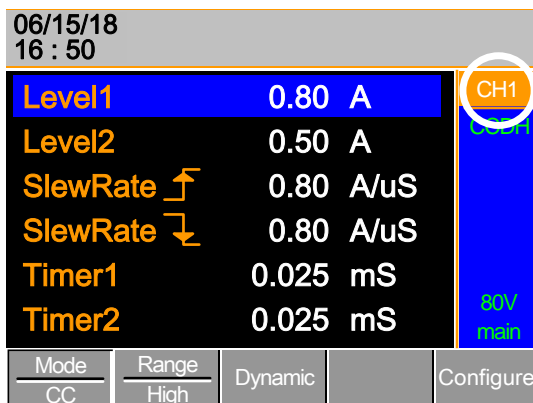


3. Press the Selector knob or Enter to confirm.




## Select CC Mode

 **Background** The PEL-2000A series loads operate in four different modes: Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).

When a channel is active, the F1 key can be used to switch between each operating mode.



 - Panel Operation**
1. Select a channel using the CHAN button and selector knob.
  2. Press F1 repeatedly until CC mode is displayed in the display panel.



Mode	Range	Dynamic		Configure
CC	High			



Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.

## Select CC Range

 
**Background** Constant current mode can run in high and low range. Maximum range is dependent on the load module. Some models are only high range.

Ensure the menu is in CC Mode. See page 128.

Mode	Range	Dynamic		Configure
CC	High			



- Panel Operation 1. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.



- CC Dynamic Low CCDL
- CC Dynamic High CCDH
- CC Static Low CCL
- CC Static High CCH



Note

Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

Note, not all load modules support dual ranges. If only one range is supported, it is usually high range.

## Select CC Dynamic Mode

 
### Background

Constant current mode can be set to dynamic or static mode. Dynamic mode is used to automatically set varying load rates.

Ensure the menu is in CC Mode. See page 128.

Mode	Range	Dynamic		Configure
CC	High			

- Panel Operation 1. Press the F3 key until Dynamic Range mode is selected.





Note

Changing from static to dynamic mode will only affect the current (active) channel.

## Editing CC Dynamic Parameters

---

### Background

Dynamic Constant Current Mode has two operating current levels, slew rates and timers.



Slew rates determine the speed at which the load will change from one level to the next.

The timers determine how long the load module/channel will stay at level 1 or level 2.

Ensure the menu is in CC Dynamic Mode. See page 129.

Mode CC	Range High	Dynamic		Configure
------------	---------------	---------	--	-----------

### Parameters

Level1	0 ~ Setting Max A
Level2	0 ~ Setting Max A
SlewRate 	Load module dependent
SlewRate 	
Timer1	0.025 ~ 30000.0 ms
Timer2	0.025 ~ 30000.0 ms




Note

When used in Group Unit mode, the Level1 & Level2 range is the combined rating of all the units used in Group Unit mode.


### Panel Operation

1. Use the Selector knob to highlight Level1.

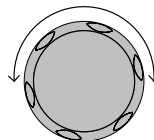

06/15/18 16 : 50			
<b>Level1</b>	0.80 A	CH1P	
<b>Level2</b>	0.50 A	CCDH	
<b>SlewRate</b> ↑	0.80 A/uS		
<b>SlewRate</b> ↓	0.80 A/uS		
<b>Timer1</b>	0.025 mS		
<b>Timer2</b>	0.025 mS	80V main	
Mode CC	Range High	Dynamic	Configure

 2. Press the Selector knob to edit the selected level, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.



**Level1**                      0.80 **A**

 3. Press the Selector knob or Enter to confirm selection.
4. Repeat steps 1-3 for the remaining parameters.



**Note**

Level1 & Level2 can be set for both High and Low Range.

\*Press Shift to toggle between coarse and fine adjustment when editing the Level1 and Level2 parameters. See page 197 for details.

 
## Select CC Static Mode

**Background** Constant current mode can be set to dynamic or static mode. Static mode is for manually varying the load for single channel load modules or to set a static load on dual channel modules.

Ensure the menu is in CC Mode. See page 127.

Mode CC	Range High	Dynamic		Configure
------------	---------------	---------	--	-----------

**Panel Operation** 1. Press the F3 key until Static mode is selected.



Note

Changing from static to dynamic mode will only affect the current (active) channel.

## Editing CC Static Parameters

**CC Values** When using a single channel load module, Static Constant Current Mode has two operating current values, A&B. If a dual channel load is used, only one current value is available per channel: A Value.

If Group Unit Mode is enabled, an additional parameter, Switch Value, is available to switch from A Value to B Value.

Ensure the menu is in CC Static Mode. See page 132.

Mode CC	Range High	Static	Seq. Edit	Configure
------------	---------------	--------	--------------	-----------


Parameters	A Value	0 ~ Setting Max A
	B Value	0 ~ Setting Max A
	SlewRate	↗ Load module dependent
	SlewRate	↘
	Switch Value	A/B (Group Unit Mode only)



Note

When Group Unit Mode is enabled, the A Value & B Value range is the combined rating of all the units used in Group Unit Mode, see page 72.

- Panel Operation
1. Use the Selector knob to highlight A Value.

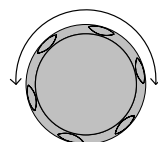


### Single Channel Configuration

LOAD		USE	CHP
A Value	0.80 A	↗	CCP
B Value	0.80 A		
SlewRate	0.80 A/uS	↘	
SlewRate	0.80 A/uS		
Mode	Range	Static	Seq. Edit
CC	High		Configure

### Group Unit Mode Configuration

LOAD		USE	CHP
A Value	0.80 A	↗	CCP
B Value	0.80 A		
SlewRate	0.80 A/uS	↘	
SlewRate	0.80 A/uS		
Switch Value	A		
Mode	Range	Static	Seq. Edit
CC	High		Configure

 2. Press the Selector knob to edit the selected value, then turn to increase or decrease the value\*.



OR

Use the number pad to enter a number.




**A Value**

 **0.80**

**A**

3. Press the selector knob or Enter to confirm selection.



4. Repeat steps 1-3 for the remaining parameters.



Note

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module. This is not applicable to Group Unit mode.

For Group Unit mode, use the Switch Value parameter to switch between A and B Value.

A/B Value and rising/falling SlewRate can be set for both High and Low Range.

\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 197 for details.


## Set to CR Mode

 ---

### Background


The PEL-2000A series load operates in four different modes, Constant Current (CC), Constant Voltage (CV), Constant Resistance (CR) and Constant Power (CP). Constant Resistance mode will maintain a constant resistive load, using variable current and voltage levels.

When a channel is active, the F1 key can be used to switch between each operating mode.



### Panel Operation

 1. Press the CHAN button and use the selector knob to select a channel.
2. Press F1 until CR mode is displayed in the display panel.



Mode	Range	Dynamic		Configure
CR	Low			



Note

Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.

## Select CR Range

### Background

 
Constant Resistance mode can run in high and low range. Range is dependent on the load module.

Ensure the menu is in CR Mode. See page 134.

Mode	Range	Dynamic		Configure
CR	Low			

### Panel Operation

1. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.

- |                 |      |
|-----------------|------|
| CR Static Low   | CRL  |
| CR Static High  | CRH  |
| CR Dynamic Low  | CRDL |
| CR Dynamic High | CRDH |





Note

Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

All resistance values and slew rates are dependent on Range, i.e., A Value in low range can be different from A Value in high range.

## Select CR Dynamic Mode

---

Background

 
Constant Resistance mode can be set to dynamic or static mode. Dynamic mode is used to automatically set varying load rates.

Ensure the menu is in CR Mode. See page 134.



Panel Operation

1. Press F3 until Dynamic Range mode is selected.



Note

Changing from static to dynamic mode will only affect the current (active) channel.

## Editing CR Dynamic Parameters

---

CR levels

Dynamic Constant Resistance Mode has two operating resistance levels, slew rates and timers.



Slew rates determine the speed at which the load will change from one level to the next.



The timers determine how long the load module/channel will stay at level 1 or level 2. See the CR operating description for details about slew rates and timers, page 65

Ensure the menu is in CR Dynamic Mode. See page 136.

Mode	Range	Dynamic		Configure
CR	Low			


Parameters	Level1	Minimum ~ Rating $\Omega$
	Level2	Minimum ~ Rating $\Omega$
	SlewRate	 Load module dependent
	SlewRate	
	Timer1	0.025 ~ 30000.0ms
	Timer2	0.025 ~ 30000.0ms




Note


When used in Group Unit Mode, the Level1 & Level2 range is the combined rating of all the units used in Group Unit Mode.

- Panel Operation
1. Use the Selector knob to highlight Level1.

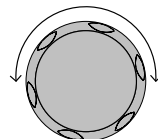

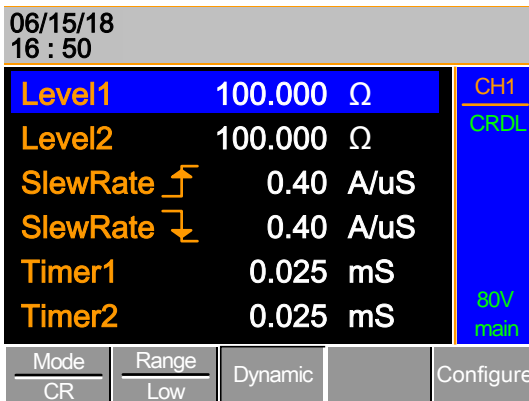

 - Press the Selector knob to edit the selected level, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.



 - Press the Selector knob or Enter to confirm selection.



- Repeat steps 1-3 for the remaining parameters.



Note

Level1 & Level2 can be set for both High and Low Range.

\*Press Shift to toggle between coarse and fine adjustment when editing the Level1 and Level2 parameters. See page 197 for details.


## Select CR Static Mode

 **Background** Constant Resistance mode can be set to dynamic or static mode. Static mode is for manually varying the load for single channel load modules or to set a static load on dual channel modules.

Ensure the menu is in CR Mode. See page 134.

Mode	Range	Dynamic		Configure
CR	Low			

**Panel Operation** 1. Press the F3 key until Static mode is selected.



Note

Changing from static to dynamic mode will only affect the current (active) channel.



## Editing CR Static Parameters

**Background** Single channel load modules have two resistance levels, A Value & B Value. Dual channel load modules have only one resistance level per channel, A Value.

When Group Unit Mode is enabled, an additional parameter, Switch Value, is available to switch from A Value to B Value.

Ensure the menu is in CR Static Mode. See page 139.

Mode	Range	Static	Seq. Edit	Configure
CR	Low			


Parameters	A Value	Setting Min ~ Rating $\Omega$
	B Value	Setting Min ~ Rating $\Omega$
	SlewRate 	Load module dependent
	SlewRate 	
	Switch Value	A/B (Group Unit Mode only)




Note

When Group Unit Mode is enabled, the A Value & B Value range is the combined rating of all the units used in Group Unit Mode.


- Panel Operation
- Use the Selector knob to highlight A Value.

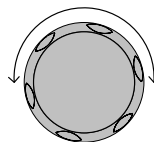


Single Channel Configuration

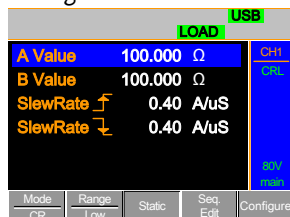

Group Unit Mode Configuration

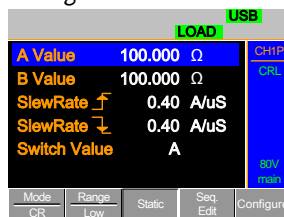


 - Press the Selector knob to edit A Value / B Value, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.

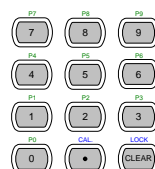

**A Value** 100.000  **$\Omega$**

 - Press the selector knob or Enter to confirm selection.



- Repeat steps 1-3 for B Value (if applicable), rising and falling SlewRate.



Note

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module (not applicable to Group Unit mode).

For Group Unit mode, use the Switch Value parameter to switch between A and B Value.

A/B Value and rising/falling SlewRate can be set for both High and Low Range.

\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 197 for details.


## Select CV Mode
 
### Background

The PEL-2000A series electronic load operates in four different modes, Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).


CV Mode cannot be used with the Group Unit mode.

When a channel is active, the F1 key can be used to switch between each operating mode.



### Panel Operation

 - Press the CHAN button and use the selector knob to select a channel.



- Press F1 until CV mode is displayed in the display panel.



Mode	Range	Response		Configure
CV	High	Slow		



Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.

## Editing CV Parameters

---

**Background** Constant Voltage mode can be set to a maximum limit (Curr Limit). Using the current limit enables limiting the current draw.


When using CV mode on single channel load modules, two voltage levels can be set, A Value and B Value. On a dual channel load module, only one voltage level can be set per channel: A Value.

Ensure the menu is in CV Mode. See page 141.

Mode	Range	Response		Configure
CV	High	Slow		


Parameters	A Value	0 ~ Setting Max V
	B Value	0 ~ Setting Max V
	Curr Limit	Load module dependent

**Panel Operation** 1. Use the Selector knob to highlight A Value.

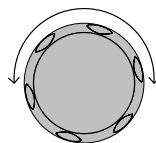


06/15/18 16 : 50			
<b>A Value</b>	10.00	V	CH1
<b>B Value</b>	15.00	V	CVH
<b>Curr Limit</b>	10.00	A	Slow
			80V main
Mode CV	Range High	Response Slow	Configure

 2. Press the Selector knob to edit the selected value, then turn to increase or decrease the value\*.




OR

Use the number pad to enter a number.

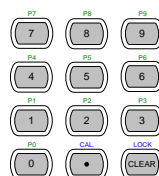

**A Value** 10.00 V

 3. Press the selector knob or Enter to confirm selection.



4. Repeat steps 1-3 for the remaining parameters.



Note

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module.

When setting the current limit, please ensure that the current limit is within the test device's limits.

A/B Value can be set for both High and Low Range.


\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 197 for details.

## Select CV Range

 **Background** Constant Voltage mode can run in high and low range. Range is dependent on the load module. Ensure the menu is in CV Mode. See page 144.

Mode CP	Range Low			Configure
------------	--------------	--	--	-----------

**Panel Operation** 1. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.

- CV High Range      CVH
- CV Low Range      CVL



Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

## Select CV Response Speed

**Background** Constant voltage mode has fast and slow response speeds. Quick current changes can induce line voltage, making it more difficult for the PEL-2000A series load to maintain a constant current. In these types of conditions, slow response speed is recommended. Maximum current range is dependent on the load module type.

 


Ensure the menu is in CV Mode. See page 141.

Mode		Response		Configure
CV		Slow		

Panel Operation

1. Press F3 (Response) to switch between Fast and Slow response speeds.



Response speed settings will be reflected in the Current Operation Channel Status panel.

CV Slow Response Slow

CV Fast Response Fast



Note

Changing the response speed will only affect the current (active) channel. Other channels will not be affected by any changes.

## Select CP Mode

 
Background

The PEL-2000A series electronic load operates in four different modes, Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), and Constant Power (CP).


CP mode cannot be used with the dedicated Group Unit mode.

When a channel is active, the F1 key can be used to switch between each operating mode.





 - Panel Operation
1. Press the CHAN button and use the selector knob to select a channel.
  2. Press F1 until CP mode is displayed in the display panel.



Mode CP	Range Low			Configure
------------	--------------	--	--	-----------



Changing the operating mode will only affect the current (active) channel. Other channels will not be affected by any changes.

## Editing CP Parameters

---

### Background

Constant Power mode can be set to have a maximum limit (Curr Limit). Using the current limit enables limiting the current draw.

When using CP mode on a single channel load module, two power levels can be configured, A Value and B Value. On a dual channel load module, only one power level can be configured per channel: A Value.


Ensure the menu is in CP Mode. See page 141.

Mode CP	Range Low			Configure
------------	--------------	--	--	-----------


### Parameters

A Value	0 ~ Setting Max W
B Value	0 ~ Setting Max W
Curr Limit	Load module dependent

- Panel Operation 1. Use the Selector knob to highlight A Value.

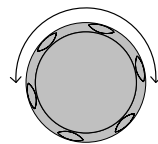

 2. Press the Selector knob to edit the selected value, then turn to increase or decrease the value \*.




OR

Use the number pad to enter a number.



 3. Press the selector knob or Enter to confirm selection.



4. Repeat steps 1-3 for the remaining parameters.



Note

The last Value (A Value or B Value) that is set becomes the active setting. To swap between A Value and B Value, use the A/B keys on the local load module.

A/B Value can be set for both High and Low Range.

When setting the current limit, please ensure that the current limit is within the test device's limits.

\*Press Shift to toggle between coarse and fine adjustment when editing the A Value and B Value parameters. See page 197 for details.

## Select CP Range

### Background

 
Constant Power mode can run in high and low range. The maximum range is dependent on the load module. Some models are only high range.

Ensure the menu is in CP Mode. See page 141.

Mode	Range			Configure
CP	Low			

### Panel Operation

1. Press the F2 (Range) key repeatedly until High or Low range is selected.



The range will be reflected in both the bottom menu system and the Current Operation Channel Status panel.

CP High Range      CPH

CV Low Range      CPL





Changing the range will only affect the current (active) channel. Other channels will not be affected by any changes.

Not all load modules support dual ranges. If only one range is supported, it is usually high range.

## Creating a Program Sequence

 
### Background

The PEL-2000A series has a total of 12 different programs and 10 sequences to each program. That totals to 120 different configurations.

Each Sequence in each program uses the settings saved from Memory Data (Memory MXXX). Memory Data contains settings such as the mode and range for each channel. Different Sequences can use the same Memory Data repeatedly. Each Sequence loads all channels at the same time, unless programmed otherwise.


Sequence1	
CH1 M001	Run
CH2 M001	On-Time
CH3 M001	Off-Time
CH4 M001	Short-Time
CH5 M001	P/F-Time
CH6 M001	Short CH1
CH7 M001	~
CH8 M001	Short CH8

Sequences are run sequentially to create a Program. There are 10 Sequences in each Program.



If less than 10 Sequences are desired for a Program, any additional Sequences can be skipped (not run).

 Sequence 2 & 3 are skipped.



Parameters	Memory	M001~M120
	Run	Skip-Auto-Manual
	On-Time	0.1 ~ 60.0 seconds
	Off-Time	Off - 0.1 ~ 60.0 seconds
	P/F Time	Off - 0.1 ~ (On-Time+Off-Time)-0.1
	Short-Time	Off - 0.1 ~ On-Time
	Short Ch	Off - 1~ 8 (CH1~CH8)


 


Note


Before a program can be created, the settings for each sequence for every channel that is to be used in the program must first be pre-configured and saved into Channel Memory (MXXX).

Sequence Settings


1. Press the FUNC key then F1 (Program) to access the Program menu.

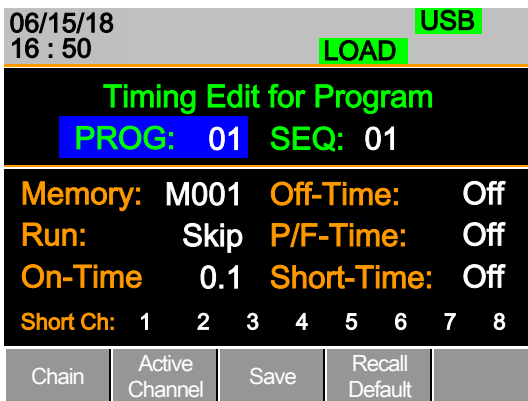

2. Use the Selector Knob to highlight PROG:.

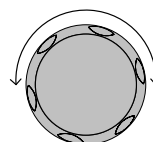

- Press the selector knob to edit PROG., then turn to select the program number.

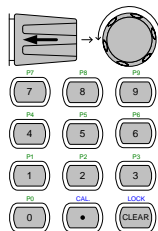


OR

Use the number pad to enter a program number.

Program: 01 ~12

 
- Press Enter or push the selector knob to confirm.



Repeat steps 2-4 to choose the sequence number (SEQ:).

Sequence: 01 ~ 10

- As sequences are executed sequentially, start at SEQ: 01.

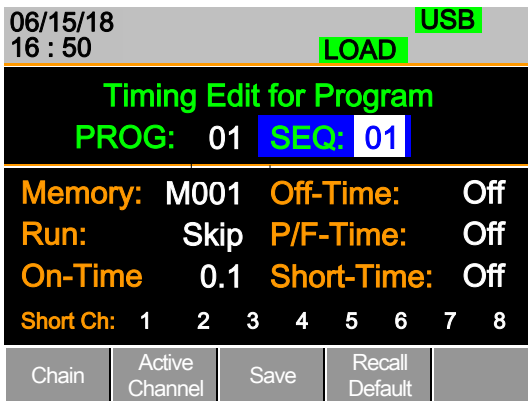

- Repeat steps 2-4 to configure the following for the current Program Sequence:

Memory: M001 ~M120

Choose which Memory data will be used for the sequence. M001 ~ M120

Run: Skip – Auto - Manual



Choose whether to run the sequence in the program automatically, skip the sequence or manually start the sequence.

On-Time: 0.1 ~ 60.0 seconds

Determines how long the sequence will run for (seconds).

Off-Time: Off – 0.1 ~ 60.0 seconds

Sets how long the sequence will stay off for (in seconds) between each sequence. Assuming Short time is not set to OFF, Off-Time will always run after On-Time.

Short Time: Off – 0.1 ~ On-Time (seconds)

Determines how long a short circuit will last (seconds). However the shorting time cannot be longer than the On-time. Short Time will start at the same time as On-time.

P/F Time: Off – 0.1 ~ (On-Time+Off-Time)-0.1 (seconds)

The Pass(P)/Fail(F) Delay Time can be set to 0.1 seconds less than the total test time. The total test time is defined as:

On-Time + Off-Time (seconds)

If Go/NoGo is turned on but the pass fail time is off, then Go/NoGo test will continue, but there will not be a specified pass/fail time window.

Short Channel: Off – 1~ 8 (CH1~CH8)

Each channel can be individually set to simulate a short circuit (CH1~8) or can have shorting disabled (Off). When Short Channel is set to Off, the channel will ignore the execution of Short-Time.

7. Repeat the above steps for all ten sequences for the same (current) program.

Save Sequence

8. Press F3 (Save) to save all the sequence data for all of the program.



Note

Note the program data is not yet saved into Setup Memory. If you wish to save the Program to Setup Memory see page 248.

Recall Default

9. To recall the Default Program settings, press F4.




Note

If the Default is recalled, all data will be lost. This does not include the internal Setup Memory. To see the default settings, see page 302.

Timing Diagram for Single Step

Below is a timing diagram of a single step in a program.

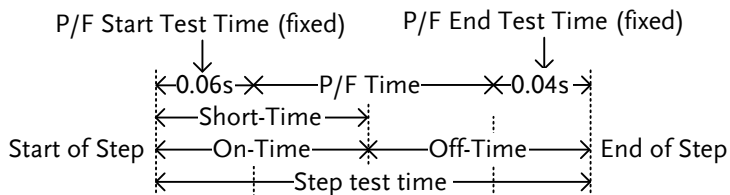


## Program Chains


**Background** On the PEL-2000A, there are up to 12 different programs containing 10 sequences.


If 10 sequences in a Program Sequence prove to be inadequate for testing, the PEL-2000A series can chain different programs together, effectively making a larger Program Sequence.

 Unlike Program Sequences, Program Chains do not need to be run in numerical order. Up to 12 Program Sequences can be chained together




 - Panel operation**
1. Create 1 or more Program Sequences. Page 145
  2. If Program Sequences were created in a different session, ensure the programs have been loaded from Setup Memory. Page 248
  3. Press the FUNC key, then Program (F1), followed by Chain (F1).




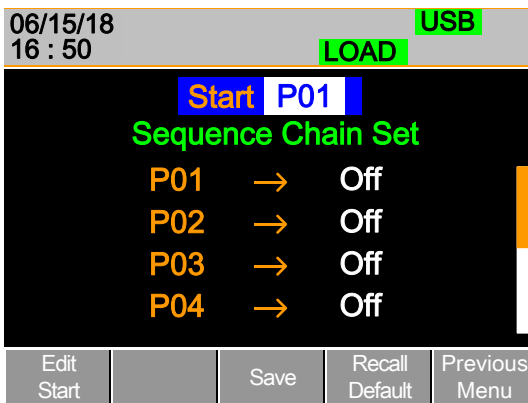

 
4. Press F1 (Edit Start) and use the selector knob to edit Start and confirm which Program Sequence (PXX) will start the program chain. Any Program (P01~P12) can be used to start a Program Chain.



5. Use the Selector knob to scroll down to P01 (Program 1).

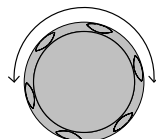

 6. Use the Selector knob to choose the program that will execute after P01 (P02~P12).



OR

Select (Off) to end the Program Chain after (P01).

OR

Select (P01) to execute after P01, this will create a continuously looping Program Chain.

P01 → Off – P01~P12

- Repeat the above procedure to P02~P12 to complete the program chain.

The Program Chain ends at the first Program (PXX) that is followed by Off. It is possible to create continuously looping program chains.

Save Program Chain

- Press F3 (Save) to save the program chain.




Note

Note the Program Chain data is not yet saved into Setup Memory. If you wish to save the Program Chain to Setup Memory see page 246.

Recall Default

- To recall the Default program chain, press F4.




Note

If the Default is recalled, Start will revert to P01 and all program sequences will be set to Off.

Previous Menu

- Press F5 (Previous Menu) to return the Sequence menu.



## Running a Program

---

Background

 
Once a Program Chain/Program Sequence has been created, it can be executed. As Program Sequences apply to all the channels, any channels that don't need to be active (load off) can be programmed in the Active Channel menu. At Default, all channels are set to (load) Off.

EXT will be shown next to any channels set to external channel control.


Panel operation

- Create 1 or more Program Sequences. Page 145
- Create a Program Chain. Page 155


3. Press the FUNC key, Program (F1) and Active Channel (F2).



Channel 1 (CH01) will be highlighted. Note CH1 has CH CONT set to External

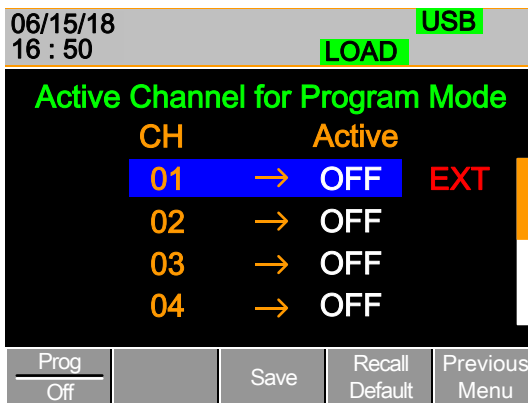


 4. Edit the channel using the Selector knob.



CH 01~08: ON (activate channel) – OFF (not activated)

 5. Press Enter or push the selector knob to confirm the selection.
6. If needed, repeat steps 4-5 for the remainder of the channels.



Note

If all channels are Active OFF, a program cannot be run as there will be no channels active.

Save Program

7. To save press F3.




Recall Default


8. To recall default settings press F4



 
Note

If the Default is recalled, all channels will revert to Active OFF.

Previous Menu 9. Press F5 (Previous Menu) to return to the Sequence menu. 


Turn Program On/Off 10. Press F1 (Prog) to turn On or Off the current Program. 

Pressing F1 will cycle from Program On to Off.




11. PROG will appear on the mainframe status panel when the program is turned on.



Run Program 12. Press the load key on the mainframe to start the Program. 

13. The Run Program screen appears, and the PROG icon turns orange.

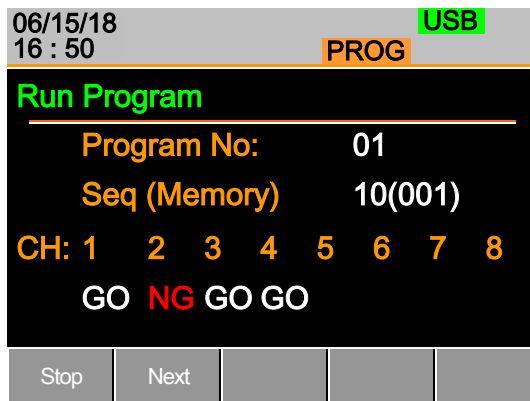


As each sequence or program is completed the screen will update to display the active sequence/program. Notice that if a channel has been set up with Go/NoGo limits, a pass (GO) or fail (NG) will be displayed on the main display as well as the local load module display.



Note

If the Active = OFF for all the channels then “No Active Channel” will be displayed instead of channel numbers.

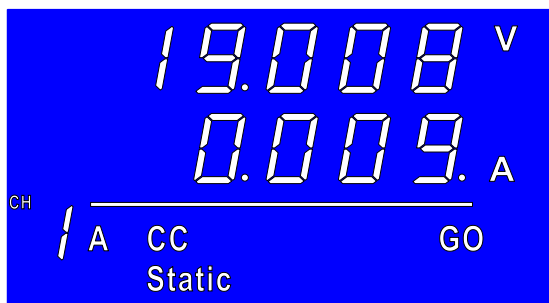

Each active load module will display the output as the program runs.


14. If Run was configured to manual in any of the program sequences, press F2 (Next) to continue the program sequence, otherwise the program will continue automatically.

F2


15. Press F1 (Stop) at any time to abort the program when it is running.


F1



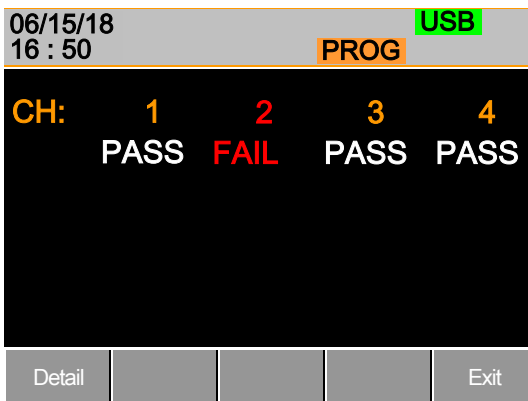


When the program has finished, the physical channels that have run will be displayed, a PASS or FAIL will be displayed if Go/NoGo testing has been set.

- 16. When the program has finished, press F1 to see any result details. 

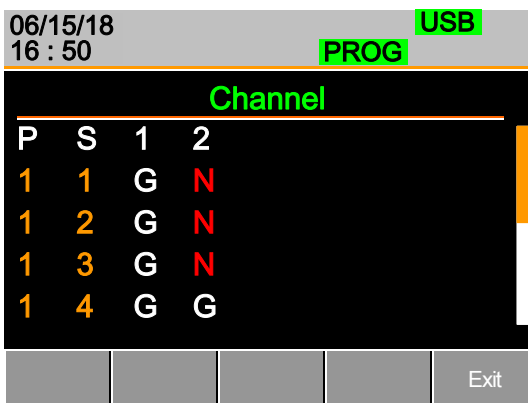

The Program (P) and Sequence (S) numbers for the Program are displayed on the left hand side and the Go/NoGo (G/N) results are displayed on the right hand side for each channel in the program.

Use the Selector knob to scroll down to view the remainder of the list if necessary.

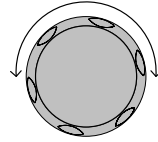

17. Press F5 to exit at any time.



Upon exiting, the previous menu before running the program will load.

## Edit Sequence

**Background** The Sequence function can be configured to create a unique load profile to accurately simulate loads in real time for single or multiple loads. Sequence can only be used with CC static or CR static modes. For details see page 77.

Each Sequence is composed of a number of points with customizable current/resistance, slew rate and duration times. Each sequence can be looped an infinite amount of times. Sequences are only applicable for CC (Static) and CR (Static) modes.




Note

The sequence function should not be confused with program sequences. They are not the same. Program sequences cannot be used with the Sequence function and vice versa.


Parameters	Value	Setting Min ~ Setting Max $\Omega$ /A
SlewRate		Load module dependent
SlewRate		
Duration Time	0.000025 ~ 60,000 seconds	

- Panel operation**
1. Choose a channel and mode. Page 126,  
128
  2. Press the CHAN key, F4 (Seq. Edit) to enter the Sequence Edit menu.




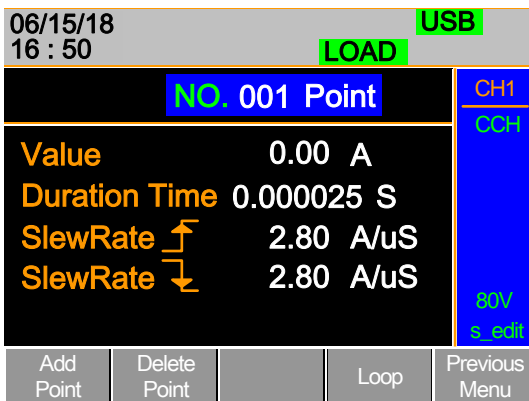

- Use the Selector knob to highlight Value.

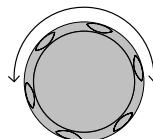

 - Press the Selector knob to edit the Value, then turn to increase or decrease the value.




OR

- Use the number pad to enter a number.



 - Press the Selector knob or Enter to confirm selection.
- Repeat for rising and falling Slew Rate and Duration Time.



Add Point

- To add an extra point after the current point, press Add Point (F1).




---

Range      001~120

---



Note

Add Point will insert a new point directly after the current point. The value of the current/resistance of the inserted point will be the average of the point before and after. All other settings will remain unchanged.

 
Delete Point

9. To delete the current point, press Delete Point (F2).



Edit previous point

10. Use the selector knob to change the current point number.



**001 Point**



Note

The Point number can only be changed if more points have already been added.

Save Sequence

11. Press Save (F3) to save the sequence.



Note

The save icon will only appear after a change has been made in the menu.

## Create Sequence Loop

Background

Sequences can be looped a number of times. The loops can be started at any point in the sequence. The Start of Loop function determines which point will start each repeating loop.

The On End of Seq. function will hold the load current (of the selected sequence) to a designated value until all the other sequences have finished running.


CC Vrange sets the range in CC mode for Sequences. See page 77 for more details.

Ensure the menu is in the Seq. Edit menu and that a sequence has been created. See page 163


Add Point	Delete Point		Loop	Previous Menu
-----------	--------------	--	------	---------------

Parameters	Repeat	1~9999/Infinity (0)
	Start of Loop	001~ last point
	On End of Seq.	OFF / Setting Min ~ Setting Max
	CC Vrange (CC mode only)	High/Low


- Panel operation 1. Press Loop (F4) to enter the Loop menu.

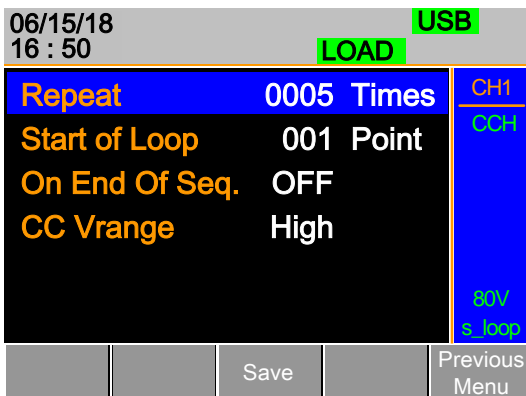

2. Use the Selector knob to highlight Repeat.

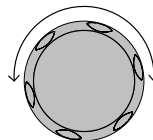

 3. Press the Selector knob to edit Repeat, then turn to increase or decrease the value.



OR


4. Use the number pad to enter a number.



Select 0 to choose infinity.

**Repeat 0005 Times**

 5. Press the Selector knob or Enter to confirm selection.



6. Repeat for the remaining parameters.

Save Loop

7. Press Save (F3) to save the loop.



## Channel Duration Time Settings

Background

Each sequence can have the timing duration data of another sequence. For example CH1's sequence can import the timing duration settings of CH2's sequence.

This is useful to quickly compare two different loads to the same timing characteristics. See page 77 for more details.

Each channel's sequence can be turned off by configuring the channel Setting to OFF. If a channel uses the same channel number, i.e. CH 01 → 01, then the duration time settings will not be altered for that channel.

 
At least one channel must output a Trigger Sequence Signal via PIN4 of the first frame link connector (master) if a sequence is run. For more details see page 77.


The Trigger In signal is used to start any sequence that has TRIG set to IN. The trigger input signal is input via PIN4 of the first frame link connector (slave). For more details, see page 77.

Any channels with channel control (CH CONT) set to external will be shown on the right side as EXT. See page 192 for details on setting channel control.

Parameter	CH 01~08 Setting OFF ~ maximum channels
	CH 01~08 TRIG IN , OUT , IN/OUT, OFF

Ensure at least one sequence has been created and saved. Page 163


- Panel operation
1. Press FUNC, then Sequence (F2) to enter the Channel Duration Time menu. 

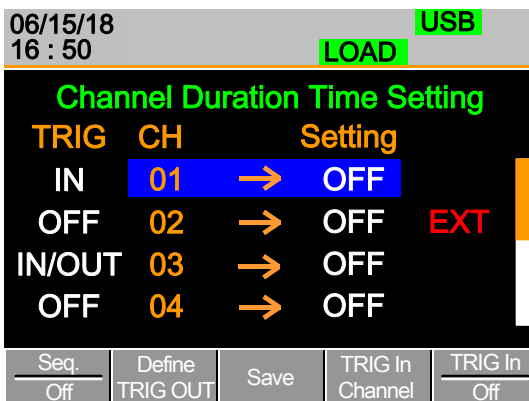


CH3 is set to TRIG OUT, whilst CH1 & CH3 are set to TRIG IN. CH2 has no trigger settings and has CH CONT set to external.



- Use the Selector knob to highlight a channel.

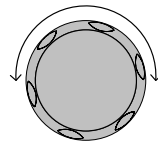

 - Press the Selector knob to edit the channel, and then turn to choose which channel's Duration Time Setting to import.





---

Range Ch 01~08 / OFF

---



 - Press the Selector knob or Enter to confirm selection.



Trigger Out Channel

- Press Define TRIG OUT (F2) if you want the currently selected channel to output the Trigger sequence signal.



One channel must be set as the TRIG OUT channel.

Trigger In Channel

- Press TRIG In Channel (F4) to allow the current sequence to be triggered with the Input trigger.



Trigger In On/Off

- To turn the Input trigger source on, press Trig In (F5).



- Repeat the above steps for any other remaining channels.

Save settings

- Press Save (F3) to save the settings.



## Run Sequence

**Background** Like Programs, Sequences must be turned “ON” before they can be run.


When running a Sequence, the front panel function keys, number pad, operation keys and selector knob are disabled for the specific channel(s). The load module panel is also disabled (bar the display key) for the specific channel.

Channels that do not have a Sequence can still be edited by changing channels via the CHAN key or by using the local load module.

Ensure at least one Sequence has been created and saved. Page 163

Ensure the Channel Duration Time Settings have also been configured and that no Sequence (CH01~08) that you wish to run are set to OFF. Page 167

**Panel operation** 1. Press FUNC, then Sequence (F2) to enter the Channel Duration Time Setting menu.

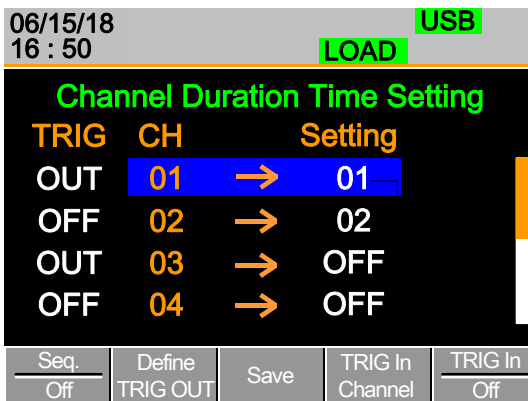

2. Press Seq. (F1) to turn on the Sequences.




3. SEQ will be displayed on the Mainframe Status panel.



4. Press the LOAD key to run all the Sequences. If a channel has TRIG set to IN, that channel will now wait for a trigger before running.



5. Run SEQ Mode will be displayed on the bottom of the display for the specific channels. On the Mainframe Status panel, SEQ will turn orange.

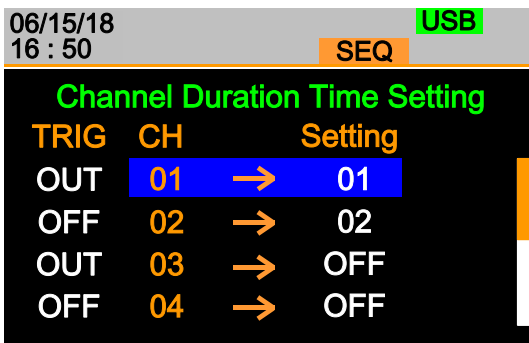

**Run SEQ Mode**

Stop the load

6. Press the LOAD key again or wait for the Sequence (if not infinitely looped) to end/stop the load.



Turn off SEQ

7. Press Seq. (F1) to turn OFF the Sequence(s) when the load is not running.






Note

All UI keys/knob will be disabled for all channels that run a Sequence, bar the function keys and R/L keys.

# OCP Test Automation

**Background** The OCP test function creates an automatic test to test the OCP of power supply products.

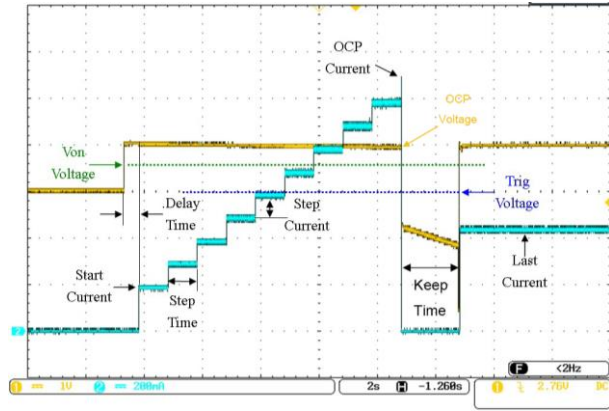

<b>Parameters</b>	<b>Active Channel</b>	Applies the setting to the load channel.
	<b>Range</b>	High(CC Mode High) or Low(CC Mode Low)
	<b>Start Current(Start C)</b>	Starting current value for the test.
	<b>End Current(End C)</b>	The current value that will end the test. The value must be higher than the OCP value of the DUT you are testing. This parameter is used as a fail-safe for if the over current protection of the DUT fails.
	<b>Step Current(Step_C)</b>	Sets the step resolution of the current.

Last Current(Last_C)	Sets the final current value after OCP has been tripped. This is the steady-state current draw after the OCP has been tripped.
Step Time(Step_T)	Sets the execution time of each step. (50mS to 1600S)
Delay Time(Delay)	The OCP testing delay time. Sets the how long to delay starting the test after the Load On key has been pressed. (0 ~ 160S)
Trig Voltage(Trig_V)	Sets the voltage trigger level needed see whether the power supply OCP has been triggered. When the power supply OCP has been triggered, its voltage output will drop. The voltage trigger level is used to test to see if the voltage output has been drop.
Keep Time(Keep_T)	Set the how long to enter the Last Current after detect the OCP.(0~160S)



Note

This mode can only be used under CC mode.


Panel operation

1. Press the FUNC key, F4 (OCP) to enter the OCP Test Automation menu.




06/15/18		FRM	USB
16 : 50		SEQ	
OCP Function		Chan: 1	
Range:	High	Step_T:	0.05
Start C:	0.000	Delay:	0.000
End C:	71.400	Trig_V:	0.0000
Step_C:	0.002	Keep_T:	0.000
Last_C:	0.000		
OCP On	Active Channel		

- Use the Selector knob to highlight the parameter you want to edit.

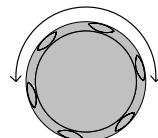

 - Press the Selector knob to edit the parameter, then turn to increase or decrease the value.




OR

Use the number pad to enter a number.



 - Press the Selector knob or Enter to confirm selection.




- Repeat steps 2 -4 for all the parameters.

Save the OCP Test Automation Settings


- Press Save (F3) to save the OCP Test Automation settings.



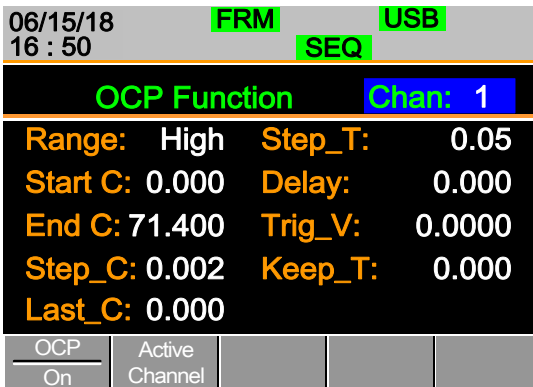




Select Active Channel

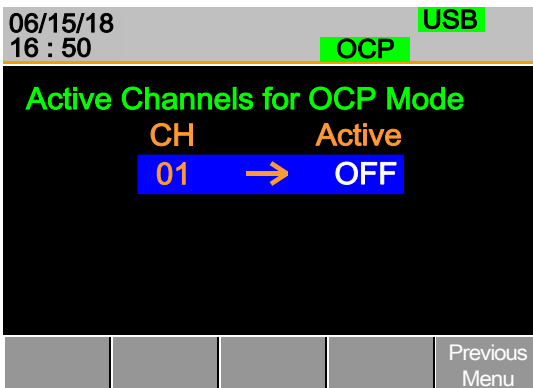- To select the load channels for the test, press Active Channel (F2).



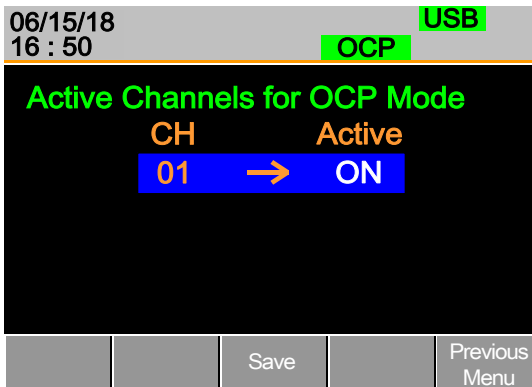






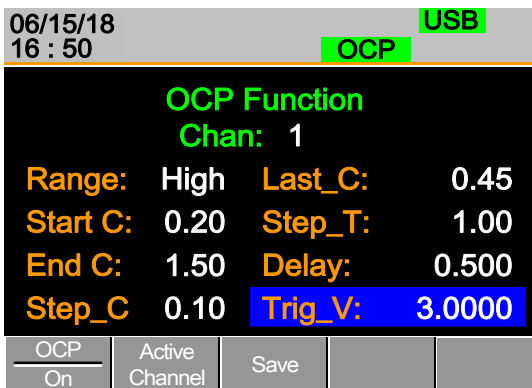
8. Use the selector knob to Enter key to turn the Active value to ON.  OR 

Save the OCP Test Automation Channel

9. Press Save (F3) to save the OCP test automation channel. 

10. Press Previous Menu (F5) to return to the OCP Test Automation menu. 

11. Press OCP (F1) to turn OCP to ON. 



 
Save the OCP Test Automation Parameters

12. Press Save (F3) to save the OCP test automation parameters.




Start the OCP Test Automation

13. Press the Load key to start to OCP Test Automation.



Test Results

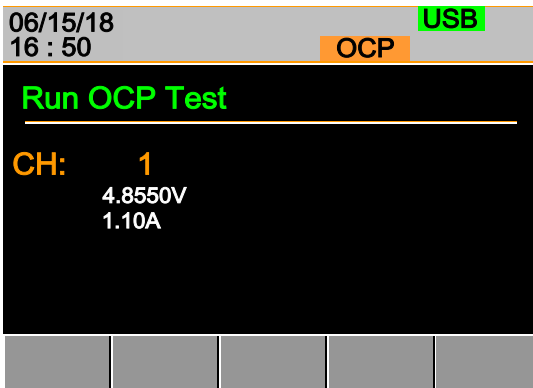

**Voltage Reading:** The voltage of the DUT before the OCP was triggered.


**Current Reading:** The current of the DUT before the OCP was triggered.



Note

In addition to the setting the OCP test parameters as described above, the VON voltage settings must also be set according to the output characteristics of the DUT.

An OCP Test Automation example using actual current and voltage waveforms.

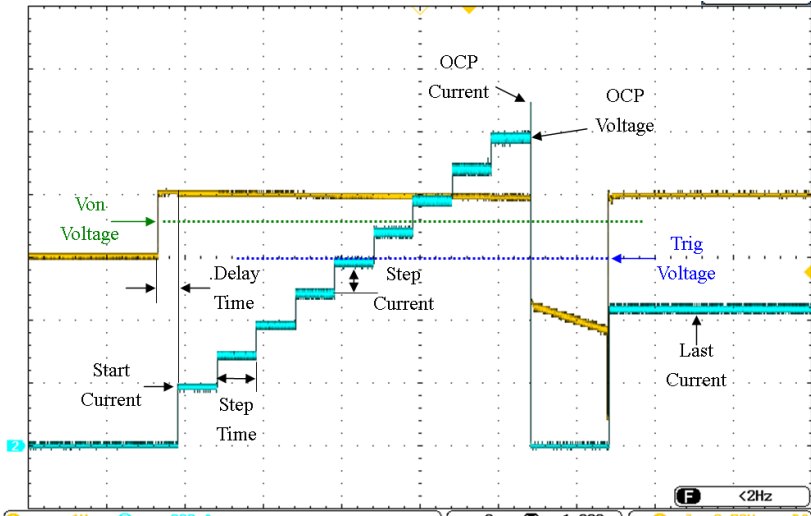


## Channel Configuration

The Channel Configuration chapter describes the configuration options for individual channels. Any configuration settings that are changed only apply to the current channel, other channels will not be changed.


### Accessing the Configuration Menu

**Background** The configuration menu is used to access instrument settings and properties as well as set the protection levels for each channel.

 **Panel operation** 1. Select the channel to be configured by pressing the CHAN key and using the Selector knob.



2. Press the F5 (Configure) key to enter the configuration (Protection) menu.

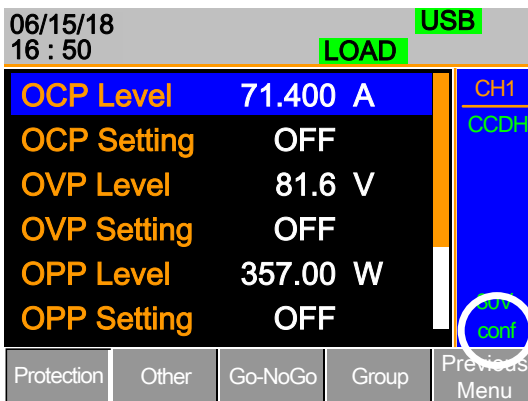

## Setting (OCP/OVP/OPP/UVP)

---

**Background** Over Protection is used to set the voltage, current or power limit. In the event that the current, voltage or power exceeds the over protection settings, the load module display will show an error message and beep an alarm.

When tripped, Under Voltage Protection (UVP) will turn off the load. UVP trips when the load voltage drops below a set limit.

Only when the protection settings are set to On (XXP Setting -On) will the protection modes be active.


All protection settings can be set to 2% higher than specification rating.

---


Parameters	OCP Level	1.25% Rating A ~ 102% Rating A
	OCP Setting	ON/OFF/Clear
	OVP Level	1.25% Rating V ~ 102% Rating V (0.5% Rating V ~ 102% Rating V for PEL-2041A)
	OVP Setting	ON/OFF/Clear
	OPP Level	PEL-2020A : 1W ~ 102W PEL-2030A(L) : 0.9W ~ 30.6W PEL-2030A(R) : 1.25W ~ 255W PEL-2040A : 1.75W ~ 357W PEL-2041A : 1.75W ~ 357W
	OPP Setting	ON/OFF/Clear
	UVP Level	OFF ~ current using operating voltage range of slave module.
	UVP Setting	Clear
	Protection Clear	All

---


Panel operation Ensure the menu is the configuration menu. See page 180.

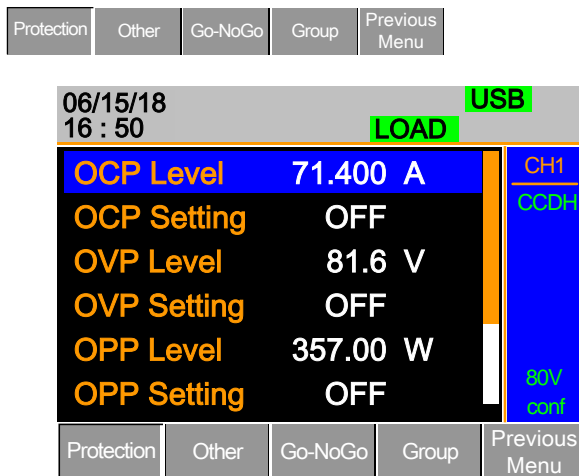

1. Use the Selector knob to highlight OCP Level.

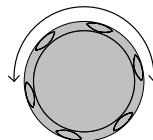

 2. Press the Selector knob to edit the selected level, then turn to increase or decrease the value.




OR

3. Use the number pad to enter a number.




**OCP Level 71.400 A**

 
4. Press the Selector knob or Enter to confirm selection.



- Use the Selector knob to highlight OCP Setting.

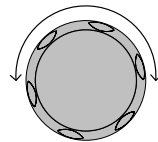

 - Use the selector knob to turn ON, OFF or CLEAR the OCP Setting.



- Repeat steps 1-5 for :

OCP Level	OPP Setting
OVP Level	UVP Level
OVP Setting	UVP Setting
OPP Level	

 
**Clearing an Alarm** When any of the protection settings are tripped, Alarm will be shown on the Mainframe Status Panel and an alarm tone will sound by default.



On the local load module, the protection setting that has been tripped will be displayed.

OCP    *0*   *C*   *P*  
 OVP    *0*   *U*   *P*  
 REV\*   *r* *E* *U* *\_* *U*  
 OPP    *0*   *P*   *P*  
 OTP\*   *0*   *t*   *P*  
 CPP\*   *C*   *P*   *P*  
 UVP    *U*   *U*   *P*

- Turn the load off by pressing the Load key and turn off the load input.



9. Change the XXP Setting to Clear to clear the alarm.

**OCP Setting**      **Clear**



Note

\*REV, OTP and CPP cannot be cleared using this method, the Protection Clear function must be used instead, see page 184.

See pages 60 and 289 to output alarms via the Go/NoGo output terminal.

The configuration settings only apply to the current channel.

## Protection Clear

---

### Background

When any of the protection circuits have been tripped, the Protection Clear function can be used to reset the alarms.

Alarm will be shown on the Mainframe Status Panel and an alarm tone will sound by default when any of the protection settings are tripped.



On the local load module, the protection setting that has been tripped will be displayed.

Example: Reverse voltage protection



OCP	<i>0</i>	<i>C</i>	<i>P</i>
OVP	<i>0</i>	<i>U</i>	<i>P</i>
REV	<i>r</i>	<i>E</i>	<i>U</i>




OPP *O P P*  
 OTP *O t P*  
 CPP *C P P*  
 UVP *U U P*

Panel operation Ensure the menu is in the configuration menu. See page 180.




1. Turn the load off by pressing the load key if necessary.
2. Use the selector knob to scroll down to Protection Clear.

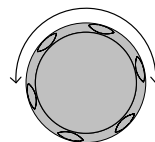

**Protection Clear All**

 3. Press the Selector knob or Enter to clear all.



Note

The configuration settings only apply to the current channel, other channels will not be affected.

### Setting the CC Voltage Range


Background The Constant Current Voltage range can be set to high or low.

Parameter CC Vrange High/Low


Panel operation Ensure the menu is in the configuration menu. See page 180.




1. Press the F2 (Other) key to enter the other menu.

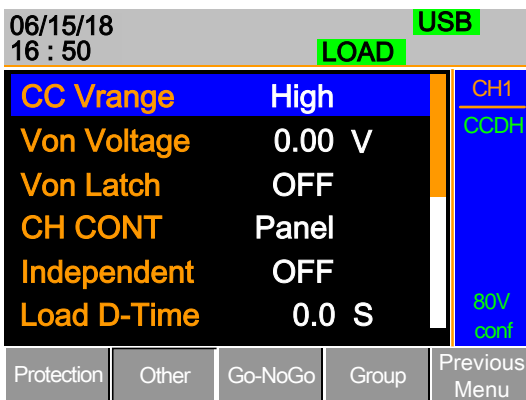

2. Use the Selector knob to highlight CC Vrange.

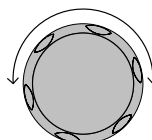

 3. Press the Selector knob to edit CC Vrange, then turn to increase or decrease the range.



**CC Vrange**      **High**

4. Press the Selector knob or Enter to confirm selection.



Note

The configuration settings only apply to the current channel.

## Adjusting the Von Voltage and Latch


**Background** The Von Voltage is the voltage point at which the load module will start to sink current. When Von latch is set to ON, the load will continue to sink current after being tripped, even if the voltage drops below the Von Voltage level. The step resolution of Von Voltage is load module dependent.

<b>Parameters</b>	Von Voltage	0.0~Rating volts
	Von Latch	ON/OFF


**Panel operation** Ensure the menu is in the configuration menu. See page 180.




1. Press the F2 (Other) key to enter the Other menu.

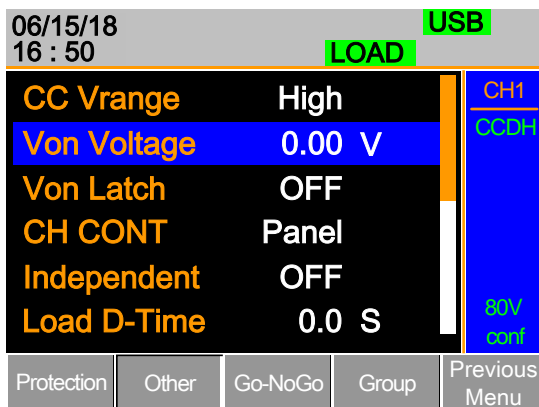

2. Use the Selector knob to highlight Von Voltage.

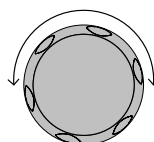


 3. Press the Selector knob to edit the selected value, then turn to increase or decrease the value.



OR

Use the number pad to enter a number.

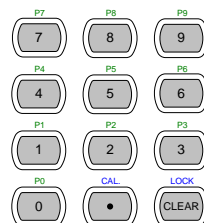

**Von Voltage 0.00 V**

4. Press the Selector knob or Enter to confirm selection.



5. Repeat steps 3 to 5 to turn Von Latch ON or OFF

For details about Von and Latch settings please see page 86.



Note

The configuration settings only apply to the current channel, other channels will not be affected.

## Configuring the Short settings

---


Background	The Short Key option is used to simulate a short circuit.	
	The Short Function option is used to set whether short function is enabled or disabled.	
	The Short key option can be configured to toggle (press SHORT on the load module to toggle ON or OFF) or to Hold (the SHORT key is held to short the load).	
	The Short Safety option can be used to set whether short function enabled depends on Load ON or not. When setting to ON, short function enabled only when Load ON mode is enabled. When setting to OFF, short function directly enabled independent of Load ON mode.	
Parameter	Short Function	ON/OFF
	Short Key	Hold/Toggle
	Short Safety	ON/OFF

Panel operation Ensure the menu is in the configuration menu. See page 180.




1. Press the F2 (Other) key to enter the other menu.




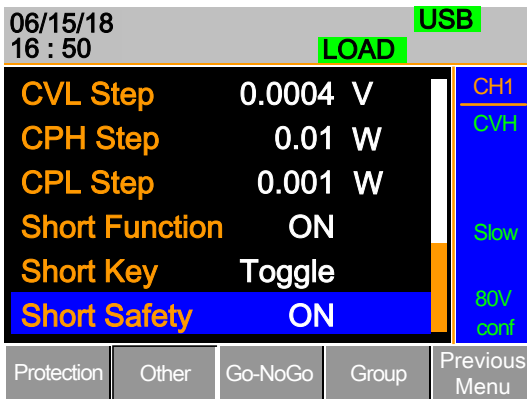

2. Use the Selector knob to highlight Short Function.

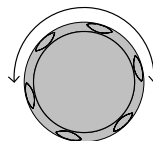


 3. Press the Selector knob to edit the selected setting, turn to change the setting.




**Short Function** ON

 
4. Press the Selector knob or Enter to confirm selection.



5. Use the Selector knob to highlight Short Key.

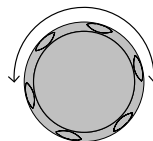


 6. Press the Selector knob to edit the selected setting, turn to change the setting.




**Short Key** Toggle

 
7. Press the Selector knob or Enter to confirm selection.



8. Use the Selector knob to highlight Short Safety.

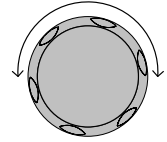

 
9. Press the Selector knob to edit the selected setting, turn to change the setting.



**Short Safety**

**ON**

 10. Press the Selector knob or Enter to confirm selection.




## Configuring Channel Control


**Background** When Channel Control (CH CONT) is set to External, it will disable editing the active channel load. Instrument buttons and knobs can still be used to access the menu for the active channel or to edit other channels that do not have channel control active. This prevents settings on the active channel from being changed on the local machine. See pages 57 & 89 for details.

Parameter	CH CONT	Panel/External
-----------	---------	----------------

 
**Panel operation** Ensure the menu is in the configuration menu. See page 180.



1. Press the F2 (Other) key to enter the Other menu.

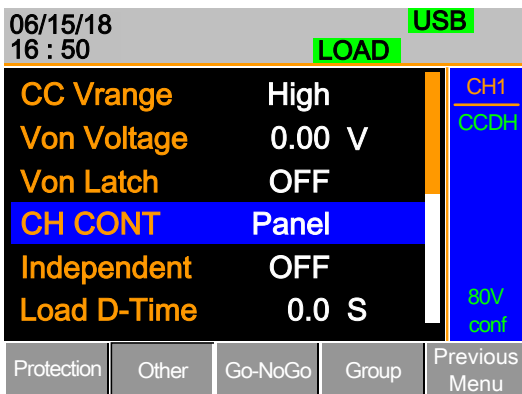


2. Use the Selector knob to highlight CH CONT.

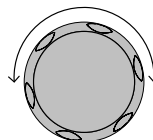



 3. Press the Selector knob to edit the selected setting, turn to change the setting from Panel to External.



**CH CONT** External

4. Press the Selector knob or Enter to confirm selection.



Channel control is now activated. To turn Channel Control off, CH CONT must be set to Panel again. When Channel Control is active, EXT will be displayed on the side panel for the active channel.



Note

Channel Control can only be activated on the active channel; other channels will not be affected.

## Configuring the Independent Setting

**Background** The Independent setting allows a channel to be load independent from the mainframe. What this means is that a load module with Independent set to ON can only load from the local load module. If the LOAD ON/OFF key is pressed from the mainframe, the channel with Independent set to ON will be unaffected by the mainframe, except when running a program.

---


**Parameter** Independent ON/ OFF

---


Panel operation    Ensure the menu is in the configuration menu. See page 180.




1. Press the F2 (Other) key to enter the Other menu.

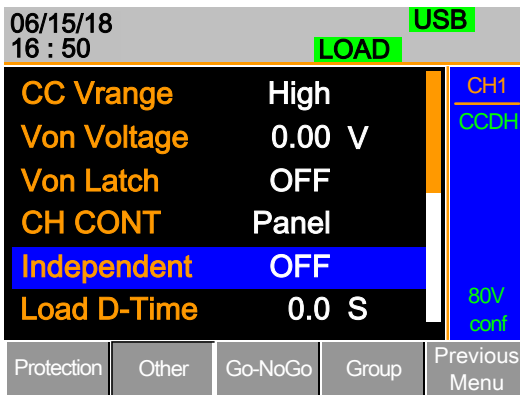


2. Use the Selector knob to highlight Independent.

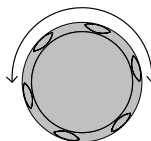

 3. Press the Selector knob to edit the selected setting, turn to change the setting.



 4. Press the Selector knob or Enter to confirm selection.





Note

When a channel has been set to independent, an asterisk (\*) will be shown next to the channel number indicator in the Current Operation Channel Status panel.

The configuration settings only apply to the current channel, other channels will not be affected.



## Configuring the Load Delay Time

**Background** The mainframe can delay loading a channel by up to 10 seconds. However the Delay Time is only applicable for manual loading. Delay Time is not applicable to Programs or Sequences.


**Parameter** Load D-Time 0~10 S

**Panel operation** Ensure the menu is the configuration menu. See page 180.




1. Press the F2 (Other) key to enter the other menu.




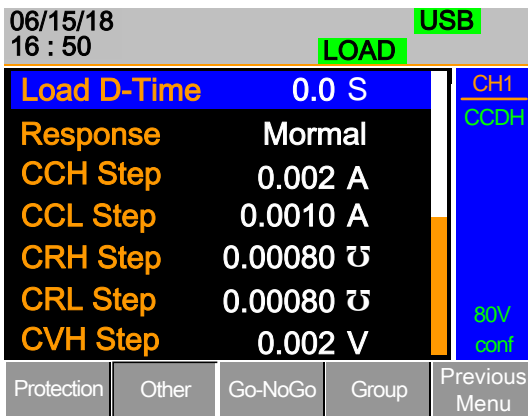

- Use the Selector knob to highlight Load D-Time.

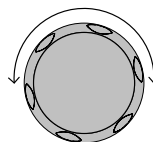

 - Press the Selector knob to edit the selected setting, turn to change the setting.




OR

Use the number pad to enter a number.



**Load D-Time 0.0 S**

 - Press the Selector knob or Enter to confirm selection.



Note

The Delay Time only applies to the current channel; other channels will not be affected.

Delay time only applies when the load is manually turned on or during start up with the Auto Load On setting (page 210).

## Configuring Step Resolution

---

**Background** The CC, CR, CV and CP step resolution settings can be edited in the configuration menu. These step resolution settings directly correspond to the step resolution of the coarse adjustment when setting the CC, CR, CV and CP parameters.

The minimum and maximum step resolution that can be set for each channel is dependent on the load module. For more information on step resolution see page 86.

Step Resolution		Minimum* <sup>1</sup>	Maximum* <sup>2</sup>	Unit
PEL-2020A	CCH Step	HR/20000	HR/2	Amperes A
	CCL Step	LR/20000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens $\bar{U}$
	CRL Step	LR/40000	LR/2	Siemens $\bar{U}$
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	LR/2	Voltage V
	CPH Step	HR/10000	HR/2	Watt W
	CPL Step	LR/10000	LR/2	Watt W
PEL-2030A (L)	CCH Step	HR/40000	HR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens $\bar{U}$
	CRL Step	LR/40000	LR/2	Siemens $\bar{U}$
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	LR/2	Voltage V
	CPH Step	HR/30000	HR/2	Watt W

PEL-2030A (R)	CCH Step	HR/40000	HR/2	Amperes A
	CCL Step	LR/40000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens Ū
	CRL Step	LR/40000	LR/2	Siemens Ū
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	LR/2	Voltage V
	CPH Step	HR/25000	HR/2	Watt W
	CPL Step	LR/25000	LR/2	Watt W
PEL-2040A	CCH Step	HR/35000	HR/2	Amperes A
	CCL Step	LR/35000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens Ū
	CRL Step	LR/40000	LR/2	Siemens Ū
	CVH Step	HR/40000	HR/2	Voltage V
	CVL Step	LR/40000	LR/2	Voltage V
	CPH Step	HR/35000	HR/2	Watt W
	CPL Step	LR/35000	LR/2	Watt W
PEL-2041A	CCH Step	HR/20000	HR/2	Amperes A
	CCL Step	LR/20000	LR/2	Amperes A
	CRH Step	HR/40000	HR/2	Siemens Ū
	CRL Step	LR/40000	LR/2	Siemens Ū
	CVH Step	HR/50000	HR/2	Voltage V
	CVL Step	LR/50000	LR/2	Voltage V
	CPH Step	HR/35000	HR/2	Watt W
	CPL Step	LR/35000	LR/2	Watt W

\*1 HR = High range rated value, LR = Low range rated value.

 
\*2 Maximum value = HR (LR)/2 \* 1.02.




Note

Use the Shift key to toggle between coarse and fine adjustment mode when editing the CC, CR, CV and CP values with the Selector knob on the main display. The fine adjustment resolution varies between the function and load module used.

Coarse mode:




Fine mode:

 


Panel operation

 
Ensure the menu is the configuration menu. See page 180.



1. Press the F2(Other) key to enter the Other menu.

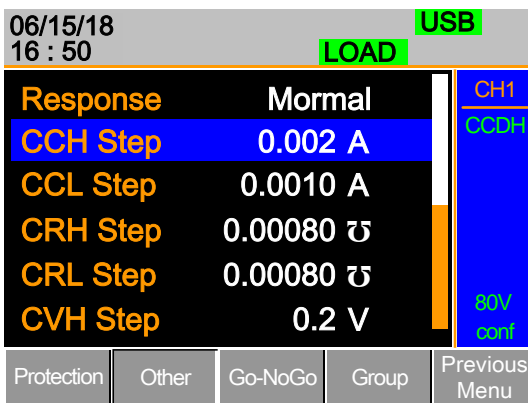


2. Use the Selector knob to scroll down to highlight CCH Step.

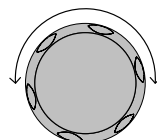

Note

CCH Step is off-screen when entering Other menu.

 - Press the Selector knob to edit the selected setting, turn to change the setting.




OR

Use the number pad to enter a number.



**CCP Step 0.002A**

 - Press the Selector knob or Enter to confirm selection.



- Repeat steps 2-4 to edit the step resolution of:

CCL Step	CVH Step	CPH Step
CRH Step	CVL Step	CPL Step
CRL Step		



Note


The Step resolution settings only apply to the active channel, other channels will not be affected.

## Configuring Response Time

 **Background** The Response time setting is used to limit current draw when input voltage less than 1V. The Response setting sets the bandwidth of the load to Fast (100kHz) or as Normal (1kHz).

**Parameters** Response Normal, Fast

**Panel operation** Ensure the menu is the configuration menu. See page 180.




- Press the F2 (Other) key to enter the other menu.





06/15/18		USB
16 : 50		LOAD
<b>Response</b>	Normal	CH1
CCH Step	0.002 A	CCDH
CCL Step	0.0010 A	
CRH Step	0.00080 $\bar{U}$	
CRL Step	0.00080 $\bar{U}$	
CVH Step	0.002 V	80V conf
Protection	Other	Go-NoGo
	Group	Previous Menu

2. Use the Selector knob to scroll down to highlight Response.

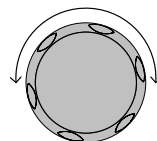


Note

Response is off-screen when entering Other menu.

**Response** Normal

 3. Press the Selector knob or Enter to confirm selection.



Note

The Response settings only apply to the active channel, other channels will not be affected.

## Go/NoGo

### Background

Go/NoGo mode is used to set threshold limits. When a load is within the limit(s) it is considered to be “Go”, when the load has exceeded the limit it is considered to be “NoGo”.

Go/NoGo limits can be set as either absolute values (Entry Mode set to “Value”) or as a percentage offset from a nominal (Center) value (Entry Mode set to “Percent”).

Go/NoGo can be used in both high and low ranges, as well as CC, CV, CR and CP Modes. The Go/NoGo status can be read using the rear Go/NoGo output.

A delay time can also be imposed for up to 1 second.



Note

Any Go/NoGo configuration only applies to the current channel with the same mode and range.

Parameters	Entry Mode	Value	Percent
	CC Mode	High: V	High: %
	CR Mode	Low: V	Low: %
			Center: V
	CV Mode	High: A	High: %
	CP Mode	Low: A	Low: %
			Center: A
	Delay Time	0.0~1.0 seconds	
	SPEC Test	ON/OFF	

 
Panel Operation Ensure the menu is in the Configuration menu. See page180.



Choose Absolute/ Percentage limits 1. Press (F3) Go-NoGo to access the Go/NoGo menu.



2. Use the selector knob to edit Entry Mode.



3. Choose Value for absolute limits or Percent for percentage offset limits.

**Entry Mode Value**



Or

**Entry Mode Percent**


- The menu changes according to the selection.

Value


Percent

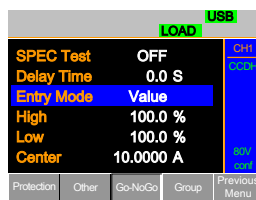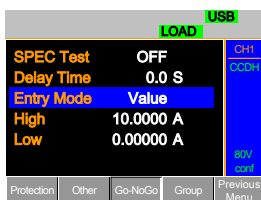

- Use the Selector knob and number pad to edit Delay time, High, Low and Center (Percent mode only).

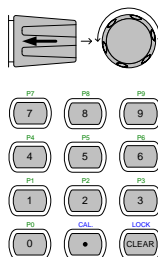


 - Press the selector knob or Enter to confirm each value.



Turn Go/NoGo On/Off

 - Use the Selector knob to edit Spec Test.



- Choose ON to turn on Go/NoGo.

**SPEC Test ON**

- Choose OFF to turn off Go/NoGo.

**SPEC Test OFF**

When SPEC test is set to ON, SPEC will be displayed in the Current Operation Channel Status panel.



## Group Unit

---

### Background

The Group Unit menu allows load modules of the same type and rating to be configured as a single unit when used in parallel. Up to 4 load modules can be used in this mode.

Operating the PEL-2000A series load modules in Group Unit mode is almost identical to using the load modules separately. The only difference is that the channel configuration only needs to be setup for channel 1 and not individually for each channel.

There are two mode types: Para and Sync. The Para setting allows the all the parallelized load modules to be operated as a single large load module. Sync mode allows the settings of a single unit to be synchronized across all the other parallelized load modules.

The Display Mode will determine which parameters are displayed on the local load modules.



Note

Only CC or CR mode can be used in Group Unit.

For the single channel load modules, PEL-2040A and PEL-2041A are fully support these two modes (Para, Sync) of group function.

The PEL-2030A does not support group function.

The dual channel of PEL-2020A does support group function partially. It can support to group 2 units of same module under the Sync mode only. That means the PEL-2020A can be 2chx100W or 1chx200W.

Ensure the same firmware used for both units.

Parameters

 
Total Unit      2/3/4/OFF

Group Mode      Para/Sync

Display Mode    V,I /V,W/I,W/S

Panel Operation


1. Ensure current channel is selected as the active channel. Page 127
2. Ensure the menu is in the Configuration menu. See page 180.




Parallel Setup

 
3. Press (F4) Group to access the Group menu.



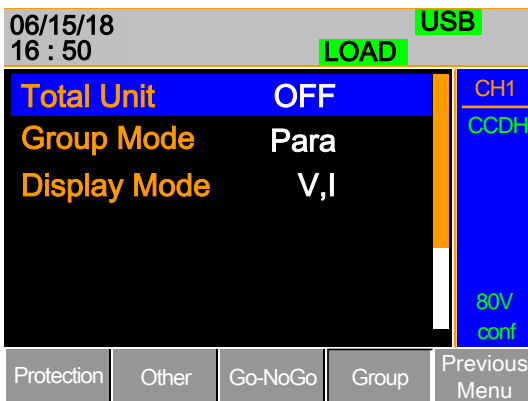


 - Use the Selector knob to change Total Unit from the OFF setting to the number of parallel units. 




- Press the selector knob or Enter to confirm. 

 Parallel Mode

- To change the type of mode, use the Selector knob to edit Group Mode. 
- Choose Para to operate the units as a single large load module, or choose Sync to synchronize the load settings across each parallel unit.



 Display Mode

- Use the selector knob to change the display settings on the local load modules. 
- Choose from V, I / V, W / I,W or S.

## Display Mode V,I

When Para Unit is active, an indicator will be displayed on the screen. The indicator depends on the Group Mode. P will be displayed for Para Mode and S will be displayed for Sync Mode.

 
CHXP	Para Mode
CHXS	Sync Mode



The PEL-2000A is now ready to operate in Parallel Mode.

Turn Parallel  
Mode Off

- To disable Parallel Mode, use the selector knob to change Total Unit to OFF.



## Total Unit OFF

## Mainframe Configuration

The Mainframe Configuration chapter describes configuration settings that apply to all channels and general interface settings.

### Accessing System Information

---

**Background**      The System Information displays the mainframe and load module(s) serial numbers.

---

**Parameters**

**MainFrame Ver:** Mainframe firmware version.

**PEL-200X SN:** Mainframe Serial number.

**SlotX(Y)Ver:** The version number of the Xth load module occupying the Xth slot with channel number Y.

 
**PEL-20XX SN:** The serial number and module model of the Xth load module

Y designates the channel of each installed load module. For example if dual channel load modules are installed, then Ch (1,2) will be used for the firmware and serial number.

---

**Panel operation**

1. Press the Shift Key then the Help key to access the Utility menu/System Info menu.





06/15/18		LOAD		USB
16 : 50				
MainFrame Ver: 1.XX XXXX				
PEL-2002 SN: EJXXXXXX				
Slot1(1)Ver: 1.XX				
PEL-2041 SN: EJXXXXXX				
Slot2(2)Ver: 1.XX				
PEL-2041 SN: EJXXXXXX				
System Info	Load	Interface	Time Set	Other



Note

If you have set Memo through command, you can see the Memo information by pressing System Info (F1) once again. (Please refer to the chapter contains commands “:MEMo” and “:CHANnel:MEMo” in the programming manual for details)

06/15/18		LOAD		USB
16 : 50				
MainFrame (PEL-2004A) MEMO:				
No Memo				
CH1 (PEL-2040A) MEMO:				
123				
CH2 (PEL-2040A) MEMO:				
123				
System Memo	Load	Interface	Time Set	Other



## Accessing the Load Menu

 
**Background**      The PEL-2000A series is able to automatically start loading from the last program or load setting.



If Auto Load On is set to Load, the last load setup used before the machine was reset will automatically start to load upon startup.

If Program is set as the Auto Load On configuration, the last program executed will start upon the next start up.

**Parameters**      Auto Load      ON/OFF  
                          Auto Load On      Load/Program

  - Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu. 
  2. Press F2 (Load). 

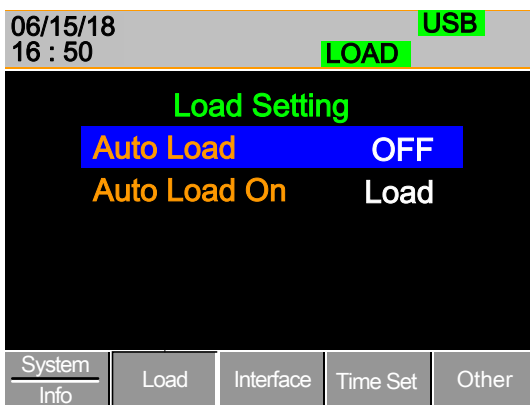

3. Press the Selector knob, then turn to choose Auto Load. 
4. Press the Selector knob or Enter to confirm selection. 



5. Scroll to Auto Load On and choose Load or Program for the next time the PEL-2002A starts up.

## Adjusting the Speaker

 
**Background** The PEL-2000A series has an internal speaker for both the mainframe and load modules. The speaker function turns On/Off the sound for the UI (key presses and scrolling). The speaker setting will not alter the sound for protection alarms or Go/NoGo alarms.


**Parameter** Speaker ON/OFF

- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu.
  2. Press F5 (Other Menu).

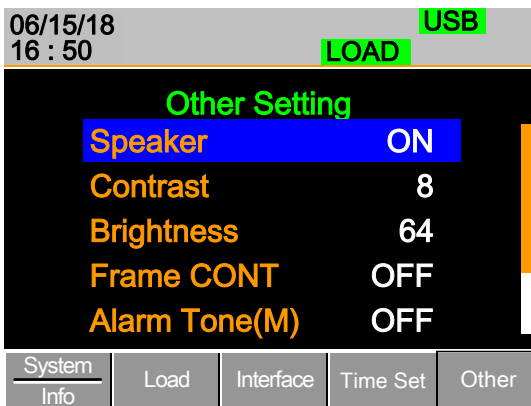


 3. Use the Selector knob to highlight Speaker.

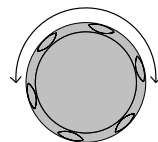

4. Press the Selector knob to edit Speaker, then turn to change from On to Off and vice versa. 



**Speaker ON**

 
5. Press the Selector knob or Enter to confirm selection. 

### Adjusting the Display Settings

 
**Background** The PEL-2000A series has a TFT LCD display. The display brightness and contrast can be controlled via the utility menu.

<b>Parameters</b>	Brightness	50~90	50(low)	90(bright)
	Contrast	3~13	3(low)	13(high)


- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu. 
  2. Press F5 (Other Menu). 

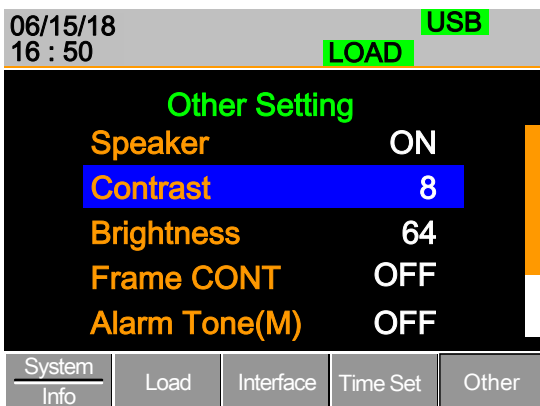

- Use the Selector knob to highlight Contrast.

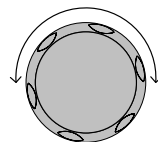

 
- Press the Selector knob to edit contrast, then turn to increase or decrease the value.



**Contrast**

**8**

 - Press the Selector knob or Enter to confirm selection.



- Repeat steps 3-5 for the Brightness.

## Adjusting the Frame Control

**Background** Frame control is used to control a number of different frame linked mainframes (slaves) with a master mainframe. For information on frame control, frame control interface and connection see pages 55 & 286.



 
**Note**

When using frame control, ensure the same firmware is installed in both master and slave units.

**Parameters** Frame CONT ON/OFF


**Panel operation** 1. Connect the mainframes using a frame link connection. Page 55.

- On the master mainframe, press the Shift Key then the Help key to access the Utility menu.




- Press F5 (Other Menu).





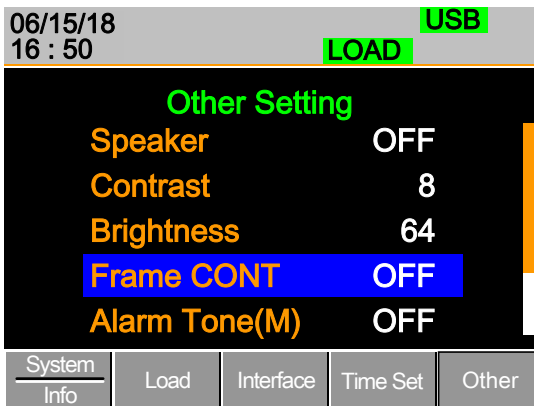

- Use the Selector knob to highlight Frame CONT.

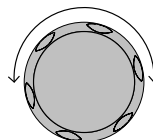

 - Press the Selector knob to edit, then turn to turn Frame CONT (frame control) ON or OFF.

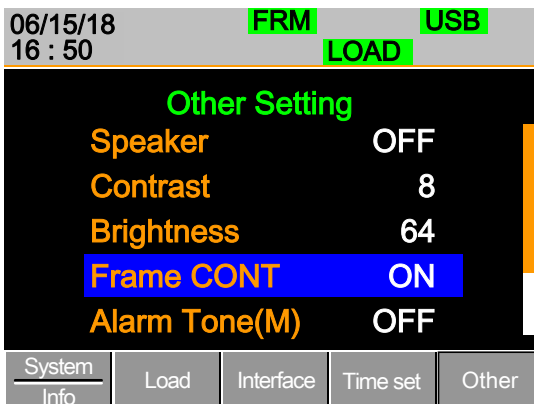

When Frame CONT is set to ON the mainframe will display FRM (Master) or FRS (Slave) on the top of the display.

6. Repeat the above steps for any connected slave mainframe units.

Frame control is now ready for both master and slave mainframes.




## Adjusting the Knob Control Type


**Background** The mainframe control knob can be set to “Update” or “Old” mode.

When setting to Update mode, rotating the mainframe knob will change the setting value of load module at the same time.


When setting to Old mode, rotating the mainframe knob won’t change the setting value of load module unless pressing the knob or Enter key.

Parameter	Knob Type	Updated/Old
-----------	-----------	-------------


- |                 |  |   |
|-----------------|--|---|
| Panel operation | 1. Press the Shift Key then the Help key to access the Utility menu. |  →  |
|                 | 2. Press F5 (Other Menu).  |    |

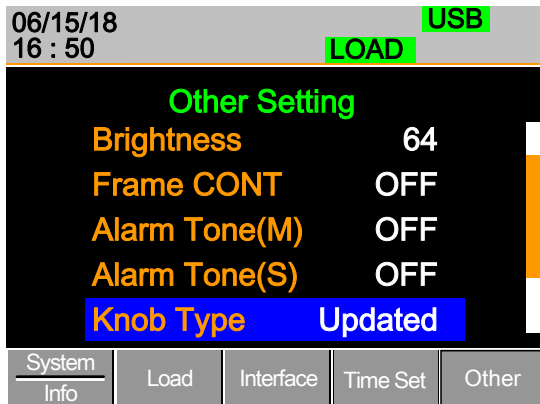

- Use the Selector knob to move the cursor down to Knob Type (below the initial screen).

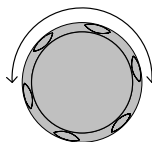


 - Press the Selector knob to highlight Knob Type, then turn to change to Old/Updated.



**Knob Type** Updated

 - Press the Selector Knob or Enter to confirm selection.

 



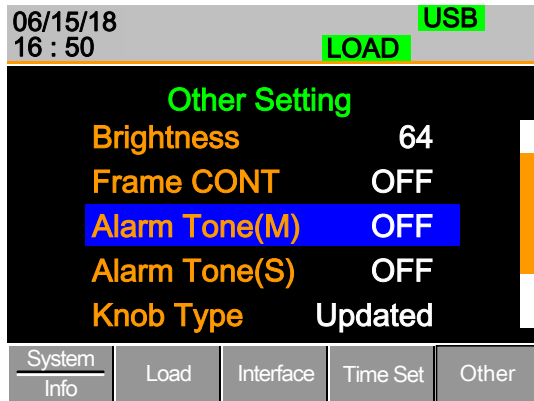


## Configuring Alarm Sound


**Background** The PEL-2000A series has two different types of alarms, one located on the mainframe (Alarm Tone M) and one for each load module (Alarm Tone S).  
Alarm Tone (M)/(S) can individually be set ON or OFF.

Parameter	Alarm Tone(M)	ON/OFF
	Alarm Tone(S)	ON/OFF


- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu. 
  2. Press F5 (Other Menu). 



3. Use the selector knob to highlight Alarm Tone(M)

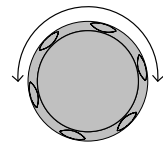

4. Press the Selector knob to select the master alarm (Alarm Tone (M)), turn to edit and press to confirm selection.

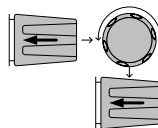

**Alarm Tone(M) ON**

5. Repeat the steps to edit the slave alarm (Alarm Tone(S)).


 
### Configuring Go/NoGo Alarm Sound

**Background** When any Go/NoGo limits are tripped from any channel, a tone can be set as an alarm.


The Go\_NoGo tone alarm settings apply to all channels.

**Parameter** Go\_NoGo Tone ON/OFF


- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu.
  2. Press F5 (Other Menu).

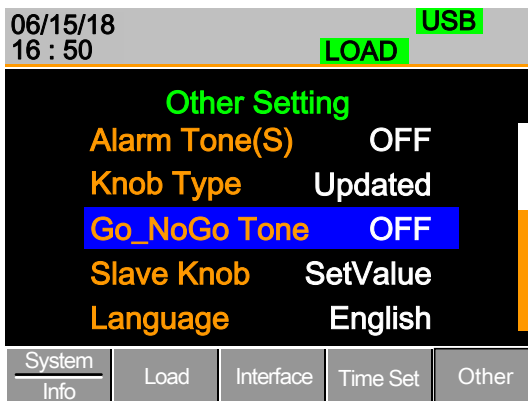

- Use the Selector knob to move the cursor down to Go\_NoGo Tone (below the initial screen).

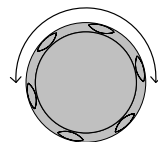


 - Press the Selector knob to highlight Go\_NoGo Tone, then turn to change to ON/OFF.



**Go\_NoGo Tone OFF**

 - Press the Selector Knob or Enter to confirm selection.



## Adjusting Slave Knob Settings

### Background

Channel loads can be edited using the local load module or the Mainframe. When using the slave knob to edit a load, the load module display can be set to two different types: SetValue and Measured.

When a load is ON, SetValue will always display the set value (A Value, B Value) on the local load module display whilst “Measure” will show the actual measured value when editing the load. These settings apply to all channels.

 
The “Measure” setting can be temporarily disabled by pressing the Slave Knob to display the “SetValue” instead of the “Measure” value in the local load module display.

### Parameter


Slave Knob Measure/SetValue

### Panel operation


- Press the Shift Key then the Help key to access the Utility menu.




2. Press F5 (Other Menu).

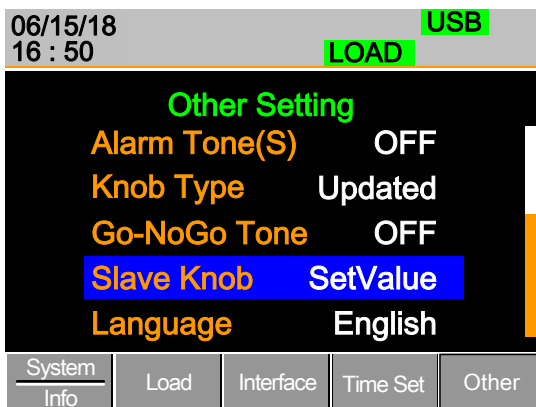

3. Use the Selector knob to move the cursor down to Slave Knob (below the initial screen).

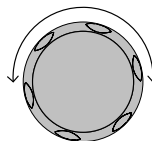

 4. Press the Selector Knob to highlight Slave Knob, then turn to change to Measure/SetValue.




5. Press the Selector Knob or Enter to confirm selection.




## View Language Settings

 **Background** The language settings can be viewed in the Utilities menu.


- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu.



2. Press F5 (Other Menu).

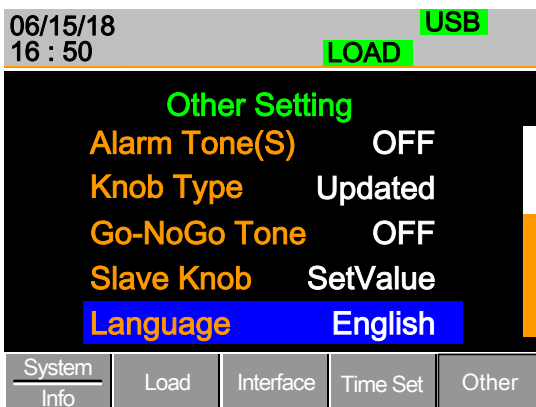

3. Use the Selector knob to move the cursor down to Language (below the initial screen).

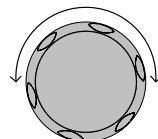

## Adjusting the High Resolution

 
**Background** ON: When there is difference between the measured value of voltage, current or power which displayed on the module panel and the setting value, the system will fine tune the load value so that the measured value close to the setting value. The system will perform and complete this action after loading is on in one second.

OFF: The system won't perform any action when there is difference between the measured value of voltage, current or power which displayed on the module panel and the setting value.


Parameter	High Resolution	ON/OFF
-----------	-----------------	--------

Panel operation


1. Press the Shift Key then the Help key to access the Utility menu.




2. Press F5 (Other Menu).

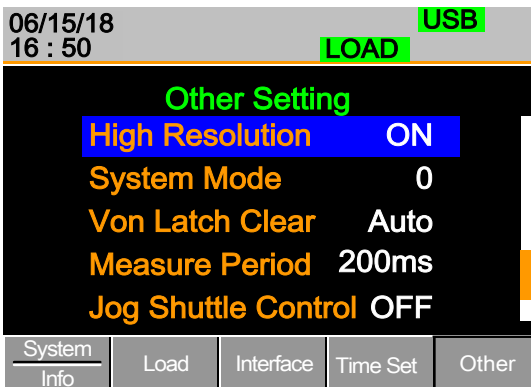

3. Use the Selector knob to highlight High Resolution.

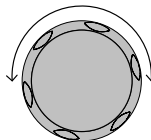

 4. Press the Selector knob to edit High Resolution, then turn to change from ON to OFF and vice versa.




**High Resolution** ON

5. Press the Selector knob or Enter to confirm selection.

 



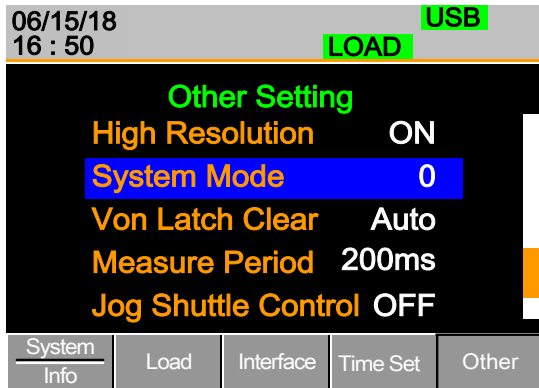
## Adjusting the System Mode

Background	<p>1: When any command is received, the Master panel will automatically enter the Remote fast mode.</p> <p>0: The Master panel won't automatically enter the Remote fast mode.</p>
------------	--


 Note	For details about remote mode fast/normal, please refer to command :UTILity:REMOte:MODE in the programming manual.
--	--

Parameters	System Mode 0/1
------------	-----------------


- |                 |   |
|-----------------|---|
| Panel operation | <ol style="list-style-type: none"> <li>Press the Shift Key then the Help key to access the Utility menu.              </li> <li>Press F5 (Other Menu).              </li> </ol> |
|-----------------|---|



- Use the Selector knob to highlight System Mode.

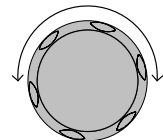

 4. Press the Selector knob to edit System Mode, then turn to change from 0 to 1 and vice versa.



**System Mode**

**0** |

5. Press the Selector knob or Enter to confirm selection.







## Adjusting the Von Latch Clear

**Background**      Auto: Load starts when the terminal voltage of module is higher than Von value. The system stops loading when the terminal voltage of module is close to 0V for more than 25ms and system is under the state of detecting Von again.

Manual: The load starts when the terminal voltage of module exceeds the Von setting value. Loading keep going even if the terminal voltage of module close to 0V.

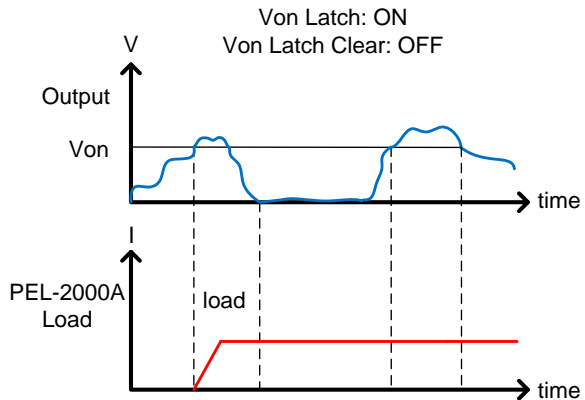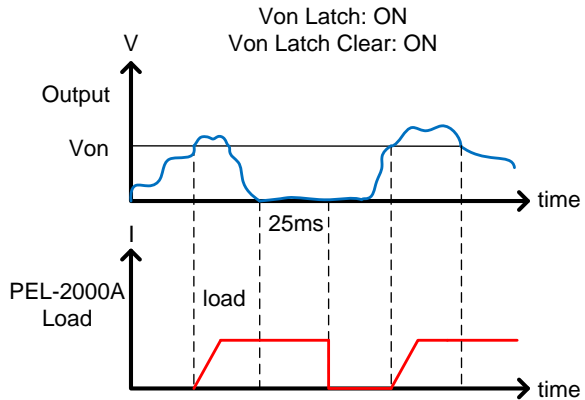




Note


This feature is only available when Von Latch is set to ON.

Parameters Von Latch Clear Auto/Manual

 
Panel operation 1. Press the Shift Key then the Help key to access the Utility menu.




2. Press F5 (Other Menu).

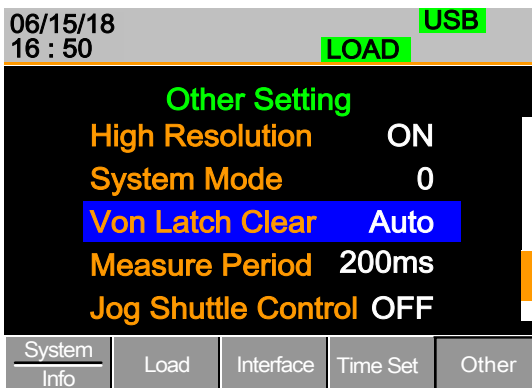

3. Use the Selector knob to highlight Von Latch Clear.

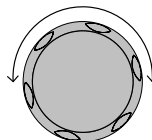

 4. Press the Selector knob to edit Von Latch Clear, then turn to change from Auto to Manual and vice versa.





**Von Latch Clear** Auto


5. Press the Selector knob or Enter to confirm selection.



## Adjusting the Measure Period

 **Background** You can select a measure sample rate through this setting. 200ms or 20ms are available for voltage and current sampling rate.

**Parameter** Measure Period 200ms/20ms

 
- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu. 
  2. Press F5 (Other Menu). 

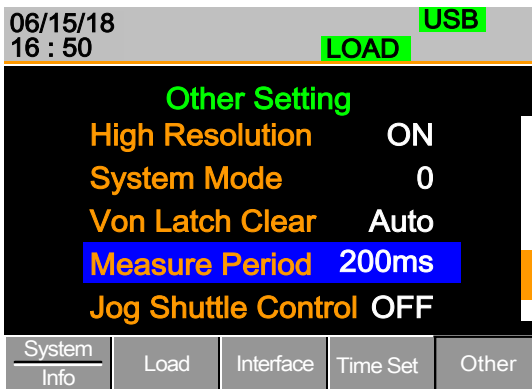

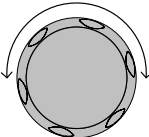3. Use the Selector knob to highlight Measure Period. 
4. Press the Selector knob to edit Measure Period, then turn to change from 200ms to 20ms and vice versa. 

**Measure Period** 200ms

 - Press the Selector Knob or Enter to confirm selection.





## Adjusting the Jog Shuttle Control

**Background** ON: After this setting is enabled, the settings value will be adjusted by slave knob in Jog Shuttle mode when you adjust the setting value. The interval value is adjusted according to the knob speed.


OFF: If this setting is disabled, the settings value will be adjusted by slave knob in the form of fixed compartment when you adjust the setting value.

Parameter	Jog Shuttle Control	ON/OFF
-----------	---------------------	--------

 
- Press the Shift Key then the Help key to access the Utility menu.
- Press F5 (Other Menu).

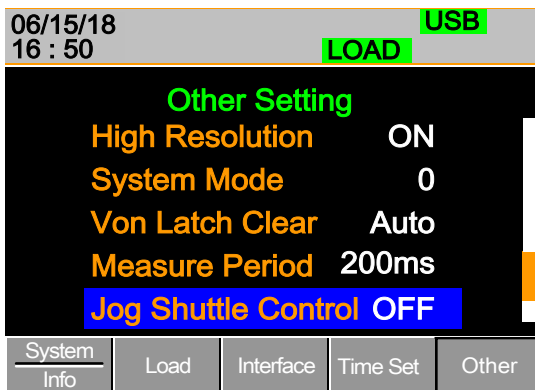

- Use the selector knob to highlight Jog Shuttle Control

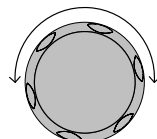

4. Press the Selector knob to edit Jog Shuttle Control, then turn to change from OFF to ON and vice versa.

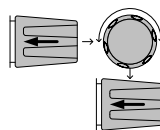

## Jog Shuttle Control OFF

5. Press the Selector knob or Enter to confirm selection.

## Adjusting the RVP Load Off

**Background**      ON: When RVP is detected, Alarm will display on the screen and stop loading.

OFF: When RVP is detected, Alarm will display on the screen but loading is kept on.

 


Note

This setting applies to all channels. But each channel independently detects RVP and performs the action of emitting alarm and stopping load.


Parameter	RVP Load Off	ON/OFF
-----------	--------------	--------

- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu.




2. Press F5 (Other Menu).




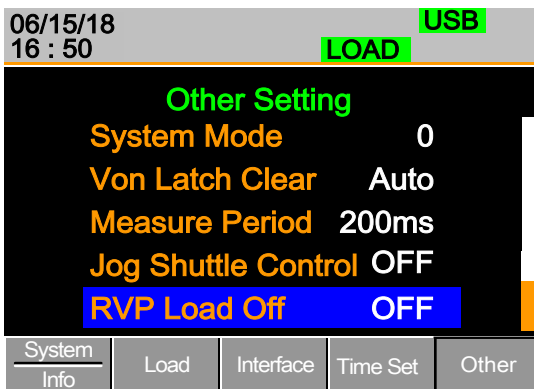

- Use the Selector knob to highlight RVP Load Off.

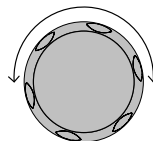


 - Press the Selector knob to edit RVP Load Off, then turn to change from OFF to ON and vice versa.



**RVP Load Off** OFF

 - Press the Selector Knob or Enter to confirm selection.




## Setting the Date and Time

**Description** The date and time settings are used to time-stamp files when saving files.

- The date is shown on top of the display.

<b>Parameters</b>	Month	1~12
	Day	1~31
	Year	1990~2038
	Hour	0~23
	Minute	0~59

 **Panel operation** 1. Press the Shift Key then the Help key to access the Utility menu.



2. Press F4 (Date/Time Menu).



Settings: Month, Day, Year, Hour, Minute

06/15/18		RS232	
16 : 50		LOAD	
<b>Date/Time</b>			
<b>Month</b>	<b>6</b>		
<b>Day</b>	<b>15</b>		
<b>Year</b>	<b>18</b>		
<b>Hour</b>	<b>16</b>		
<b>Minute</b>	<b>50</b>		
System Info	Load	Interface	Time Set
			Other

## Interface Configuration (settings)

 

The Interface Configuration chapter describes configuration settings that apply when using the PEL-2000A mainframe with a remote connection. There are three interface options for remote control: RS232, GPIB and USB. Only one interface can be used at a time. For more details about remote control and interface connections, see the Interface section on page 280.


### Configuring RS232 Connection

**Background** When using RS232 a number of parameters need to be set. These include Baud rate, Stop Bit and Parity. When setting RS232 parameters, ensure they match that of the host machine.

**Parameters**


Baud Rate	2400/4800/9600/19200/38400
Stop Bit	1~2
Parity	None/Odd/Even

- Panel operation**
1. Press the Shift Key then the Help key to access the Utility menu. 
  2. Press F3 (Interface Menu). 

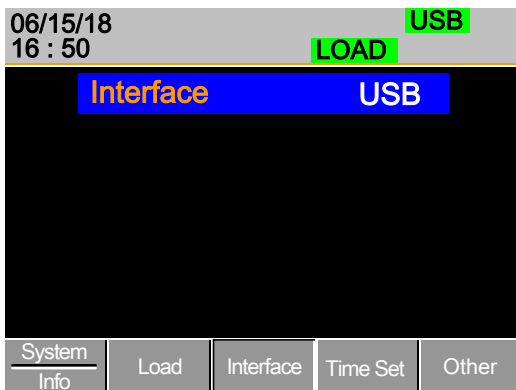



 
- If the Interface mode is not RS232, use the Selector knob to edit Interface.




- Choose RS232.



 
- Press the Selector knob to confirm.



- The RS232 Menu appears.

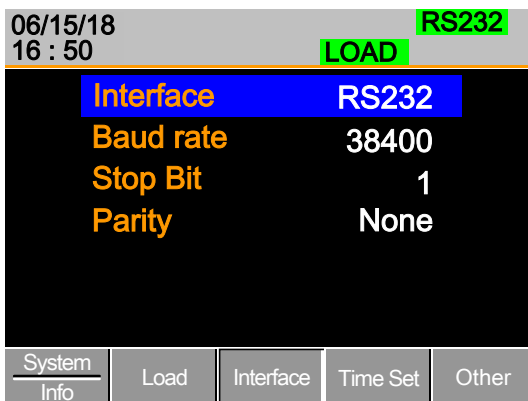

 - Use the Selector knob to edit Baud rate, Stop Bit and Parity.



Note

The Baud Rate, Stop Bit and Parity must match that of the host machine.

For RS232 function check, please refer to the section “RS232 and USB CDC function check” on page 238.

## Configuring USB Connection


 
**Background** Of the three interface options, USB is the easiest to use.

**USB connection** PC side connection Type A, host


PEL-2000A side connector	Type B, device
Speed	1.1/2.0(full speed)

Panel operation


1. Press the Shift Key then the Help key to access the Utility menu.
2. Press F3 (Interface Menu).

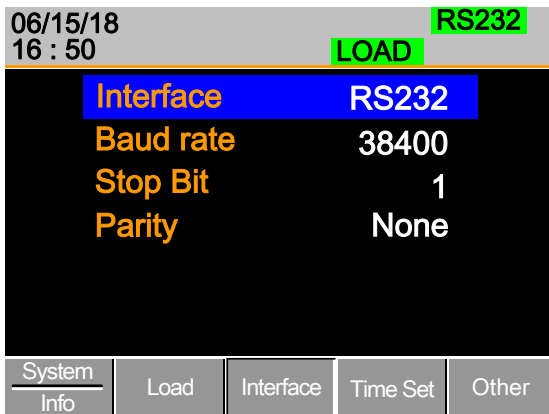


 3. If the Interface mode is not USB, use the Selector knob to edit Interface.
4. Choose USB.



 5. Press the Selector knob to confirm.
6. The Interface will become USB.



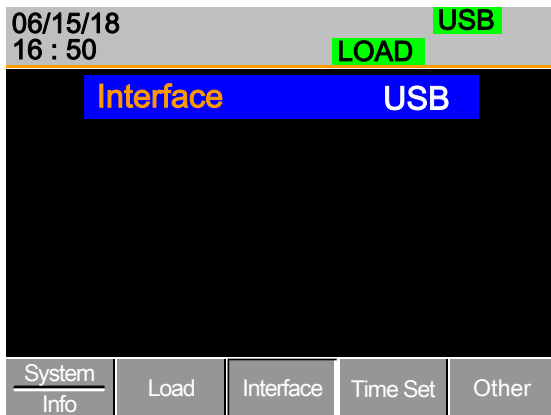

7. Connect the USB cable to the USB-B slave port on the rear.



8. When the PC asks for the USB driver, select PEL-2000A.inf (downloadable from the GW Instek website, [www.gwinstek.com](http://www.gwinstek.com), PEL-2000A product corner).



Note


For USB CDC function check, please refer to the section “RS232 and USB CDC function check” on page 238.

## Configuring the GPIB Address

 **Background** When using GPIB, an address must be specified.


**Parameters** Address 01~30


1. Press the Shift Key then the Help key to access the Utility menu.



 2. Press F3 (Interface Menu).




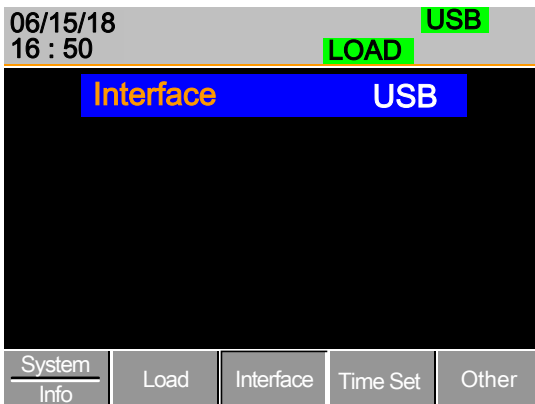


3. If the Interface mode is not GPIB, use the Selector knob to edit Interface. 

 
4. Choose GPIB.



5. Press the Selector knob or Enter to confirm selection. 

 6. The GPIB menu appears.

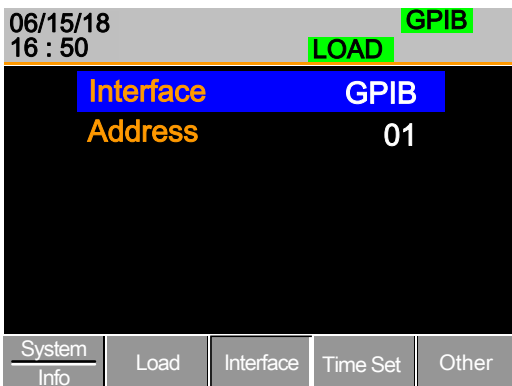


7. Use the selector knob to edit the GPIB address. 

8. Edit the GPIB address.

Range            1 ~ 30

 9. Connect the GPIB cable to the rear panel port: 24-pin female connector



- GPIB constraints
- Maximum 15 devices altogether, 20m cable length, 2m between each device
  - Unique address assigned to each device
  - At least 2/3 of the devices turned On
  - No loop or parallel connection



Note

The GPIB Address must match that of the host machine.

For GPIB function check, please refer to the section “GPIB function check” on page 242.

## RS232 and USB CDC Function Check

---

**Background** To test the RS232 and USB CDC functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, [www.ni.com](http://www.ni.com), via a search for the VISA Runtime Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

---

**Requirements** Operating System: Windows XP, 7, 8, 10

---




Functionality check can only be performed after the cable connection has been completed and the PEL-2000A interface has been set.


---

**Functionality check**


1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:  
  
Start>All Programs>National Instruments>Measurement & Automation
2. From the Configuration panel access, **My System>Devices and Interfaces**, select the corresponding port which is connected to PEL-2000A via USB or RS232 interface.
3. In this example (NI MAX Version 18.0.0f0), we assume that PEL-2000A series is connected COM 1(ASRL1), after selecting the ASRL1::INSTR “COM1”, click the Open VISA Test Panel.

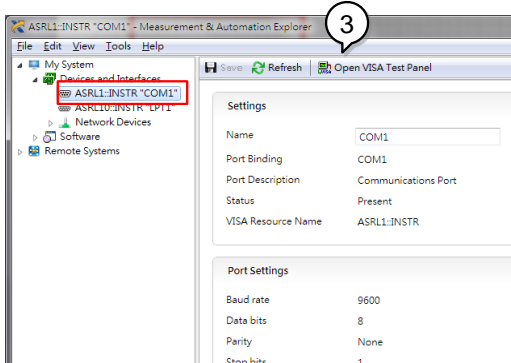


4. In the ASRL Settings page. You can see the information of Serial Settings.

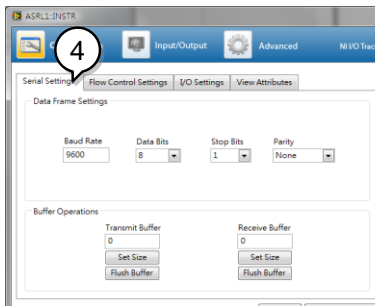

5. Click on I/O Settings.
6. Make sure the *Enable Termination Character* check box is checked, and the terminal character is \n (Value: xA).
7. Click *Apply Changes*.

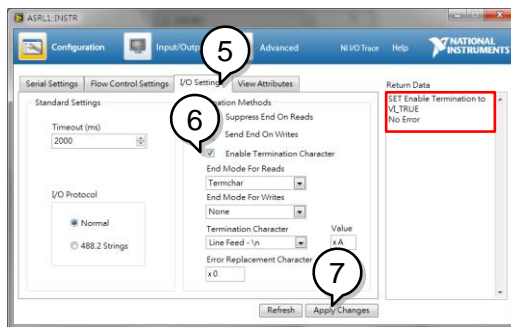


8. Click the *Input/Output* icon.
9. Enter *\*IDN?\n* in the *Select or Enter Command* dialog box if it is not already.

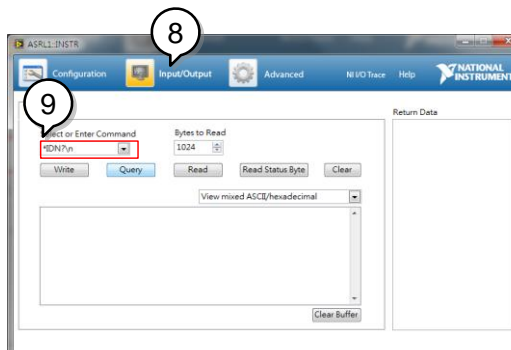

10. Click the *Query* button.
11. The *\*IDN?\n* query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

GW Instek, PEL-2000A, 00000001, V108\n



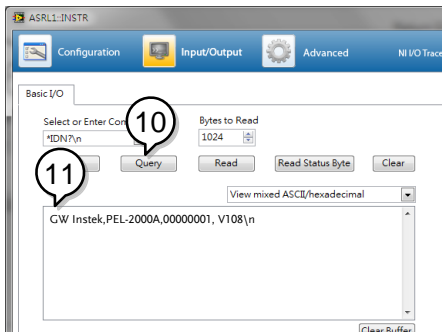


The COM port corresponding to the USB CDC will exist until the USB driver is well installed. If you want to do the USB CDC function check, the VISA resource name should be changed to the COM port which is occupied by the USB CDC protocol as a virtual com port in your system.

## GPIB Function Check

---

Background	To test the GPIB functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, <a href="http://www.ni.com">www.ni.com</a> , via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <a href="http://www.ni.com/visa/">http://www.ni.com/visa/</a>
Requirements	Operating System: Windows XP, 7, 8, 10
Functionality check	<p>Please use the National Instruments Measurement &amp; Automation Controller software to confirm GPIB functionality.</p> <p>See the National Instrument website, <a href="http://www.ni.com">http://www.ni.com</a> for details.</p>
Operation	<ol style="list-style-type: none"><li>1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press: <i>Start&gt;All Programs&gt;National Instruments&gt;Measurement &amp; Automation</i></li><li>2. From the Configuration panel access; <i>My System&gt;Devices and Interfaces&gt;GPIB0</i></li><li>3. Press the <i>Scan for Instruments</i> button.</li><li>4. In the <i>Connected Instruments</i> panel the PEL-2000A should be detected as <i>Instrument 0</i> with the address the same as that configured on the PEL-2000A.</li><li>5. Double click the <i>Instrument 0</i> icon.</li></ol>

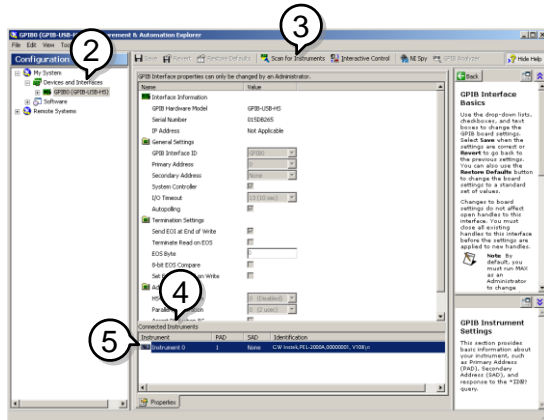


- Click on *Communicate with Instrument*.
- In the *NI-488.2 Communicator* window, ensure *\*IDN?* is written in the *Send String*: text box.

Click on the *Query* button to send the *\*IDN?* query to the instrument.

- The *String Received* text box will display the query return:

*GW Instek,PEL-2000A,xxxxx, xxx*

(manufacturer, model, serial number, version)

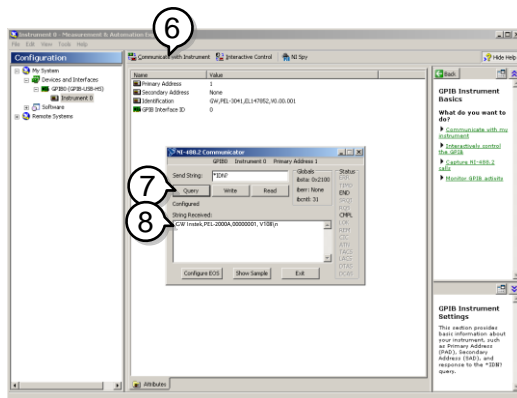

- The function check is complete.

## Saving/Recalling Channels


 
**Background** The PEL-2000A series can save data for up to 120 different channel configurations. Each channel is represented by 120 memory slots using the onboard memory.

Memory is used in program sequences or for individual channel setups. For further details on memory, see page 94.


**Panel operation** 1. Press the File key.



2. Press F1 repeatedly until the Media Memory menu appears.

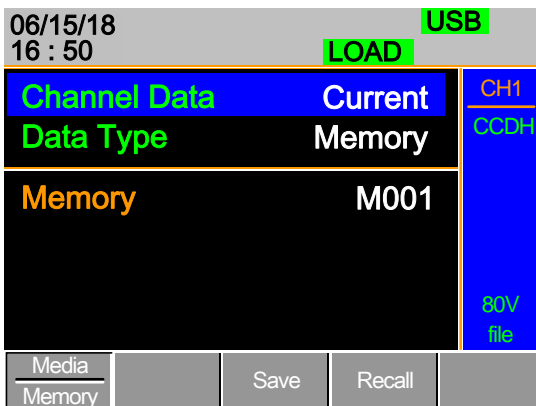

 
3. Use the Selector Knob to edit Channel Data and Data Type.



4. Choose Current or All and Memory.

<b>Channel Data</b>	<b>Current</b>
<b>Data Type</b>	<b>Memory</b>

 5. Press the Selector knob to edit Memory (M001-M120)




OR

Use the number pad to enter a number.



06/15/18	16 : 50	<b>USB</b>
<b>Channel Data</b>	<b>Current</b>	<b>LOAD</b>
<b>Data Type</b>	<b>Memory</b>	<b>CH1</b>
<b>Memory</b>	<b>M001</b>	<b>CCDH</b>
		<b>80V file</b>
Media Memory	Save	Recall

 6. Press F3 to Save or F4 to Recall the memory settings.



7. A message will indicate when a save has been successful

**Memory No 001 Save OK**



 
The display will revert to the channel menu after recalling memory.

## Saving/Recalling Preset memory



**Background** The PEL-2000A series can store up to 10 presets for each channel. The presets can be saved or recalled either individually for each channel (Channel Data: Current) or at the same time (Channel Data: All), using the All option.

For further details on memory, see page 94.


**Panel operation** 1. Press the File key.



 2. Press F1 repeatedly until the Media Memory menu appears.

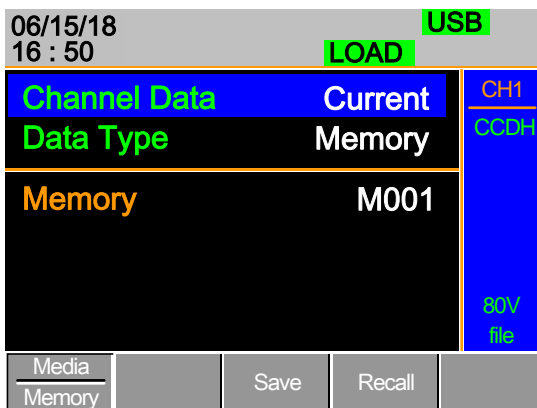

 3. Use the Selector Knob to edit Channel Data and Data Type.



4. To save or recall only the active channel, choose Current and Preset. To save or recall all the presets choose All and Preset.


Save / Recall  
Current Channel

<b>Channel Data</b>	<b>Current</b>
<b>Data Type</b>	<b>Preset</b>

Save / Recall All  
Channels


<b>Channel Data</b>	<b>All</b>
<b>Data Type</b>	<b>Preset</b>

 5. Press the Selector knob to edit Preset (P0-P9)




OR

Use the number pad to enter a number.

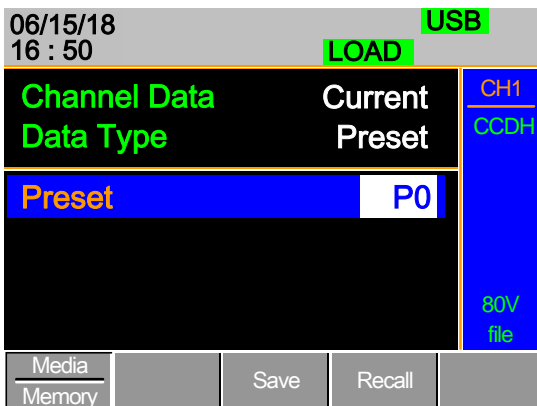

 6. Press F3 to Save or F4 to Recall the Presets.



7. A message will be displayed when the save is complete.

**Preset P0 Save OK**



Note

The display will revert to the channel menu after recalling memory.


 
## Saving/Recalling Setup Memory

**Background** The PEL-2000A series can store up to 4 different setups using the onboard memory. Each setup can be saved from the file menu. Using Setup Memory, each channel will be saved. For further details on memory, see page 94.


**Panel operation** 1. Press the File key.



2. Press F1 repeatedly until the Media Memory menu appears.

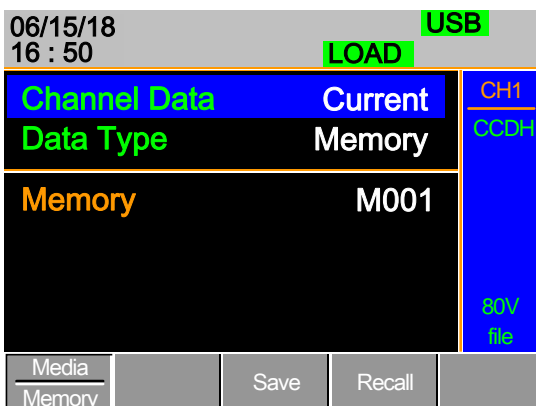

 3. Use the Selector Knob to edit Channel Data and Data Type.




4. Choose All and Setup.



<b>Channel Data</b>	<b>All</b>
<b>Data Type</b>	<b>Setup</b>

 5. Press the Selector knob to edit Setup Memory (1~4)



OR


Use the number pad to enter a number.



The screenshot shows the following information on the screen:

- Top left: 06/15/18, 16:50
- Top right: USB
- Center: Channel Data All, Data Type Setup
- Below center: Setup Memory 1 (highlighted in blue)
- Right side: CH1, CCDH, 80V file
- Bottom: Media Memory, Save, Recall buttons

 6. Press F3 to Save or F4 to Recall the Setup Memory.




7. A message will be displayed when the save/recall is complete.


**Setup Memory 1 Save OK**  
**Setup Memory 1 Recall OK**



## Setting the Default USB Path/File

 
**Background** When saving files to a USB memory stick the files will be saved into the root directory if a file path has not been set.


**Panel operation** 1. Insert a USB flash drive into the front panel USB slot. 

2. Press the File key. 

3. Press F1 repeatedly until the Media USB menu appears. 

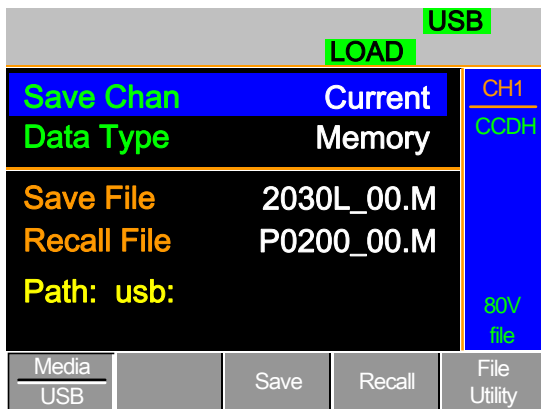

4. Press F5 (File Utility). 

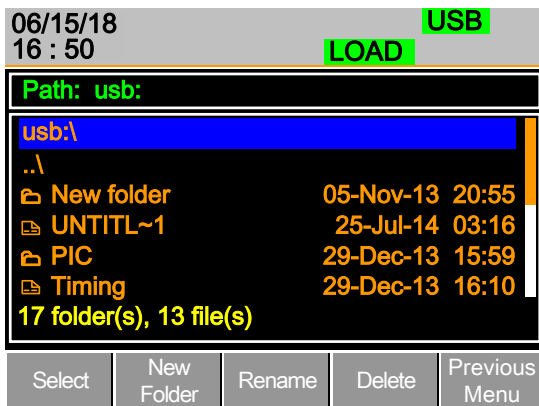


The top section (window) shows the current USB path.

There are 4 options:

- **Select;** Selects the current USB path as the default file path to save. (Step 5)
- **New Folder;** Creates a new folder (Step 7)
- **Rename;** Renames the current folder/path (Step 13)
- **Delete;** deletes the current file/path name. (Step 20)


Select Default Path

5. Use the Selector knob to highlight the new path directory

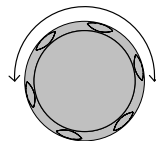

6. Press F1 (Select) to select the new default directory path.



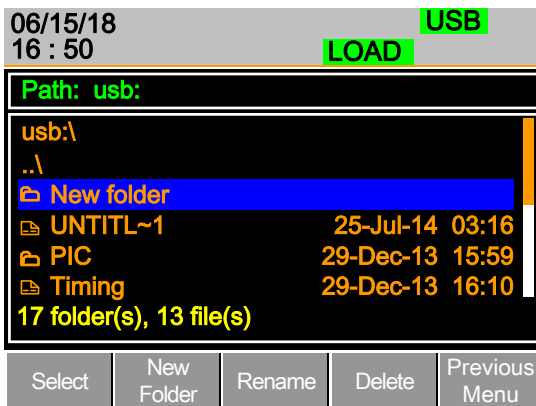

The new path will be shown in the upper Path box in green.




Create New Folder


7. To create a new directory, Press F2(New Folder)




The On-Screen keyboard (OSK) appears. The directory has an 8 character size limit.

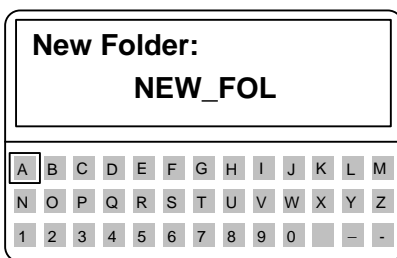

8. Use the Selector knob to scroll left and right through the keys.

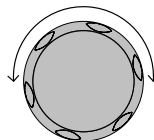

 9. When a key is highlighted, use the selector knob, F1 or Enter to confirm a key entry.



10. Use F2 (Back Space) to delete any previous entries/mistakes.



11. Press F3 (Save) to save the directory name.





12. Press F5 (Previous menu) to continue to the previous menus



Rename Folder

13. Use the Selector knob to highlight the file/directory that needs to be renamed.

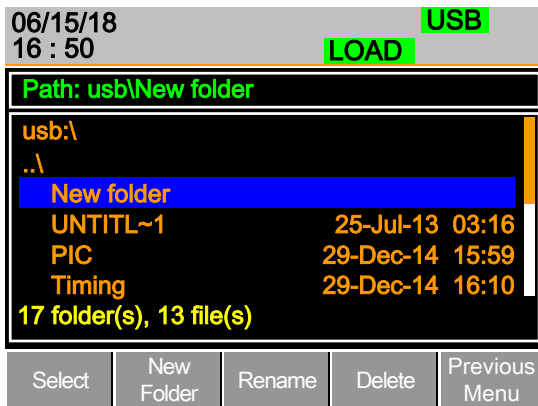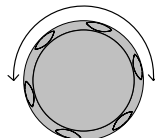


14. Press F3 (Rename)




The On Screen Keyboard appears



15. Use the Selector knob to scroll left and right through the keys.

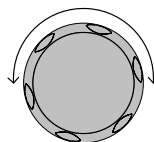

 16. When a key is highlighted, use the selector knob, F1 or Enter to confirm a key entry.



17. Use F2 (Back Space) to delete any previous entries/mistakes.




18. Press F3 (Save) to save the directory name.



19. Press F5 (Previous menu) to continue to the previous menus



- Delete File Name 20. Use the Selector knob to highlight a file/directory.

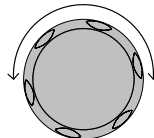


21. Press (F4) Delete.



If there is any content in the folder, you cannot delete it and the message **Error! This folder may be not empty!** will be displayed on the screen.

22. To confirm deletion, press F4 again.

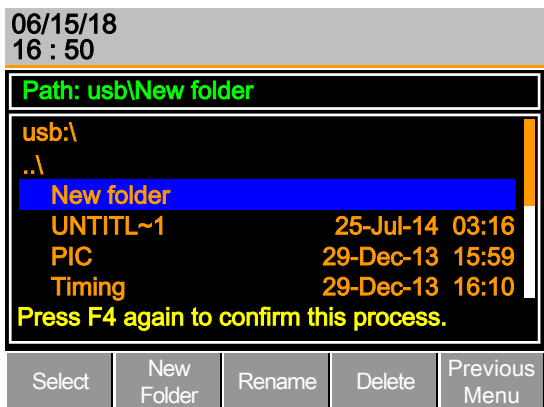

## Saving Setups to USB Memory

**Background** Setup data contains all the channel data including Memory, Presets and Program Sequences.


 
There are four setups in internal memory. When saving to USB, all four setups will be saved. Conversely, when recalled, all four setups will be recalled to main memory.

The file extension \*.S is used for Setup data only.


 
---

**Parameters** Save File 200X0\_XX.S


---

- Panel operation**
1. Insert a USB flash drive into the front panel USB slot. 
  2. Ensure the USB path has been set. Page 250.
  3. Press the File key. 


- Press F1 repeatedly until the Media USB menu appears.

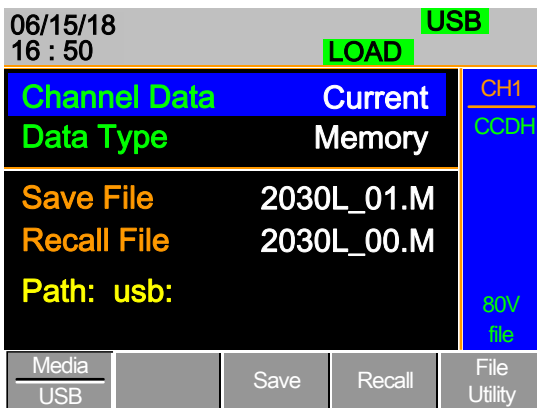

 - Use the Selector Knob to edit Save Chan and Data Type.
- Choose All and Setup.






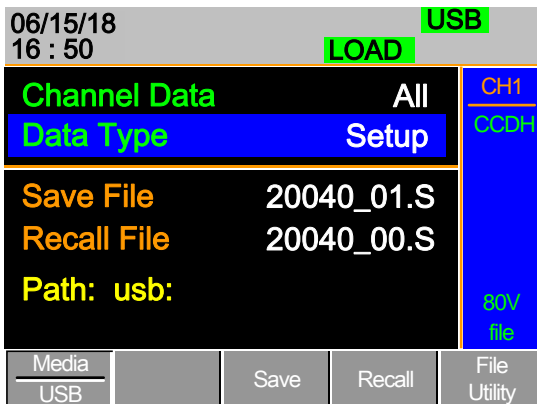


The screen will update to only show Setup files (\*.S) that are available to save/recall in the root directory. Press F5 (File Utility) to select the directory to save.

Save/ Recall  
Setups to USB

 - Use the Selector Knob to edit Save File or Recall File. Rotating the selector knob will scroll through all the available setup files (\*.S).



 - Choose a file name.
- Press F3 (Save) to save the setup data or F4 (Recall) to recall the setup data.



- A screen message will appear when the save/recall has completed.



**20040\_01.S Save Ok**

  **20040\_00.S Recall Ok**




Setups can only be saved if they have been saved to internal memory first. For details on how to save to internal memory see page 248.



## Saving/Recalling Memory Data to USB

Background	<p>There are two options to save or recall Memory data to a USB flash drive:</p> <p>Save Chan Current: Saves the active Channel's Memory data (M001~M120) into the root directory (20XXX_XX.M). Press F5 (File Utility) to select the directory to save.</p> <p>Save Chan All: Every channel's Memory data (CH1 M001~120 ~ CH8 M001~M120) will be saved into a directory (ALL00XX) as separate files for each channel (P0X0X_C1.M ~ P0X0X_C8.M).</p> <p>Recall File: Recalls the selected file to the active channel's Memory. It is not possible to update all the channels at once, only one channel at a time can be recalled.</p> <p>The file extension *.M is used for Memory data only.</p> <p>For more information about the file structures see, page 94.</p>
Parameters	<p>Save Channel Data: Directory ALL0000 ~ ALL0099 All File: P0X0X_CX.M</p> <p>Save Channel Data: File: 20XXX_XX.M Current</p> <p>Recall Channel File: 20XXX_XX.M Data: Current</p>
Panel operation	<ol style="list-style-type: none"> <li>1. Insert a USB flash drive into the front panel USB slot.  </li> <li>2. Ensure the USB path has been set. <span style="float: right;">Page 250.</span></li> </ol>

 
3. Press the File key.



 4. Press F1 repeatedly until the Media USB menu appears.

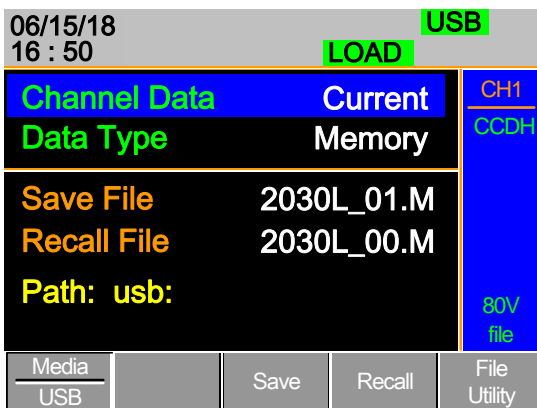


 - Save all Channels 5. Use the Selector knob to edit Save Chan and Data Type.




6. Choose All, and Memory



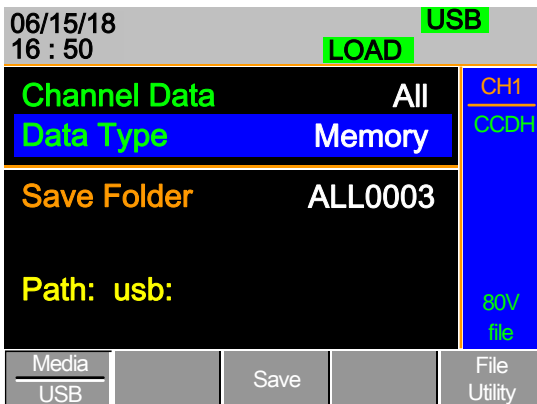

 The screen updates to show Save Folder. Note it is not possible to recall all channels at once, only save.

7. Use the Selector Knob to edit Save Folder. 
8. Choose a directory name(ALL0000 ~ ALL0099).

**Save Folder ALL0003**



Note

 
Any used directories will not be available. It is not possible to over-write older directories. They must be deleted first.


9. Press F3 (Save) 

10. A screen message will be displayed when complete.


**ALL0003 Save Ok**

Save /Recall File

11. Use the Selector Knob to edit Save Chan and Data Type. 
12. Choose Current and Memory.

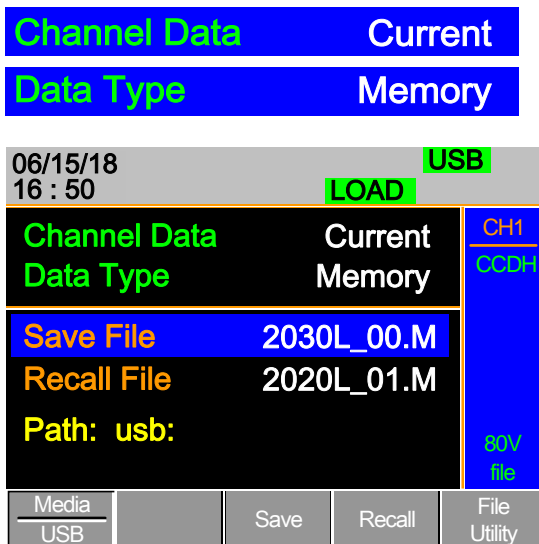


 13. Use the selector knob to edit Save or Recall File.
14. Choose a file name.
15. Press F3 (Save) to save or F4 (Recall) to recall the current channel memory.
16. A save or recall message will be displayed when complete.




**2030L\_00.M Save Ok**  
**2030L\_00.M Recall Ok**

- Recall File from USB path
17. Press F5 (File Utility).
  18. Use the selector knob to select path for saving memory. usb:\ALLXXXX\File: 2XXXXX\_XX.M

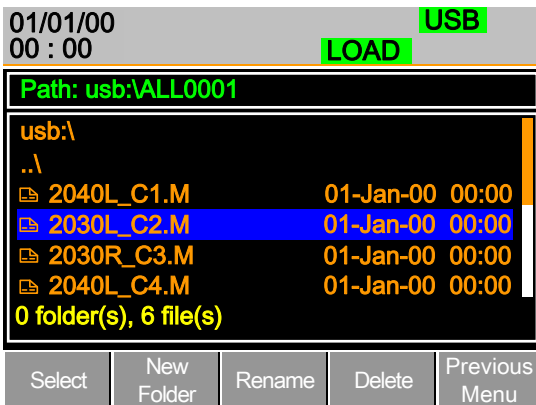

19. press the selector knob, Enter or F1
20. A recall message will be displayed when complete.

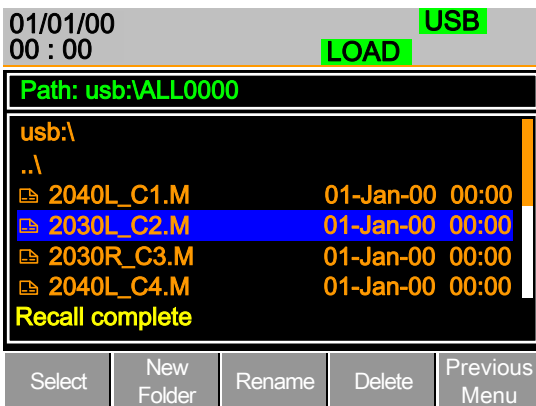

Remember only data that has been saved to internal memory will be saved to USB. Only the active channel will be saved.

If you try to recall data that originated from a different load module than the active channel, an error message will appear. The filename must reflect the active channel's load module type.

## Machine Type Error

### Saving/Recalling Presets to USB

---

Background	<p>There are two options to save or recall Channel Presets to a USB flash drive:</p> <p>Save Chan Current: Saves the active Channel's Presets (P0~P9) into the root directory (20XXX_XX.P). Press F5 (File Utility) to select the directory to save.</p> <p>Save Chan All: Every channel's Presets (CH1 P0~P9 ~ CH8 P0~P9) will be saved into a directory (ALL00XX) as separate files for each channel (P0X0X_C1.P ~ P0X0X_C8.P)</p> <p>Recall: Recalls the selected file to the active channel's Presets (P0~P9). It is not possible to update all the channels at once, only one channel at a time can be recalled.</p> <p>The file extension *.P is used for channel Presets only.</p> <p>For more information about the file structures see page 94.</p>
------------	--

---




Parameter	Save Channel Data: All	Directory: ALL0000 ~ ALL0099 File: P0X0X_CX.P
	Save Channel Data: Current	File: 20XXX_XX.P
	Recall Channel Data: Current	File: 20XXX_XX.P

Panel operation

1. Insert a USB flash drive into the front panel USB slot.
2. Ensure the USB path has been set.
3. Press the File key.
4. Press F1 repeatedly until the Media USB menu appears.




  Page 250.

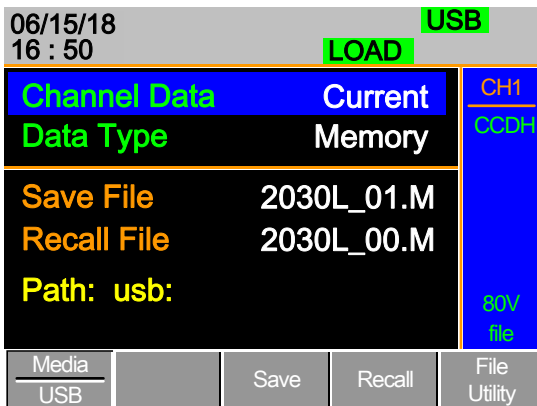


Save all Channel Presets

 
5. Use the Selector knob to edit Save Chan and Data Type.
6. Choose All, and Preset





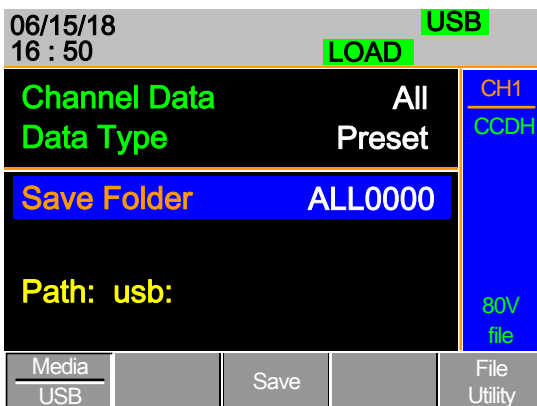

 The screen updates to show Save Folder. Note it is not possible to recall all presets at once, only save.

7. Use the Selector Knob to edit Save Folder. 
8. Choose a directory name(ALL0000 ~ ALL0099).

**Save Folder ALL0000**



Note

Any used directories will not be available. It is not possible to over- write older directories. They must be deleted first.

 
9. Press F3 (Save)

F3


10. A screen message will be displayed when the save is complete.


**ALL0001 Save Ok**

- Save/Recall Preset 11. Use the Selector Knob to edit (current channel) Save Chan and Data Type.



 
12. Choose Current and Preset.

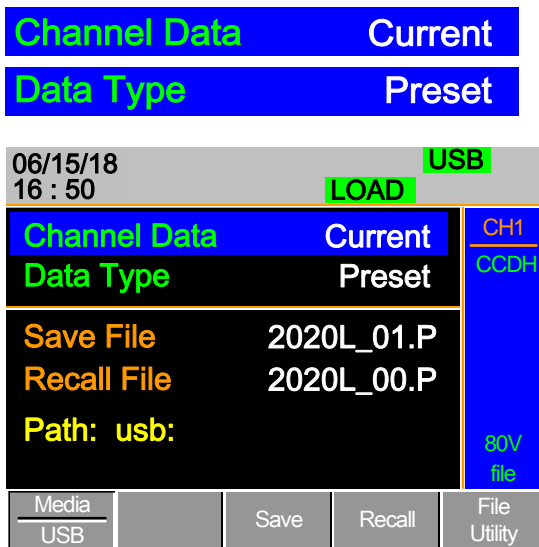

13. Use the selector knob to edit Save File or Recall file. 

14. Choose a file name.

 15. Press F3 (Save) to save or F4 (Recall) to recall the Channel Presets.




16. A message will be displayed when the save or recall has completed.


**2020L\_01.P Save Ok**  
**2020L\_01.P Recall Ok**

Recall File from USB path

17. Press F5 (File Utility).
18. Use the selector knob to select path for saving preset. usb:\ALLXXXX\File: 20XXX\_XX.P

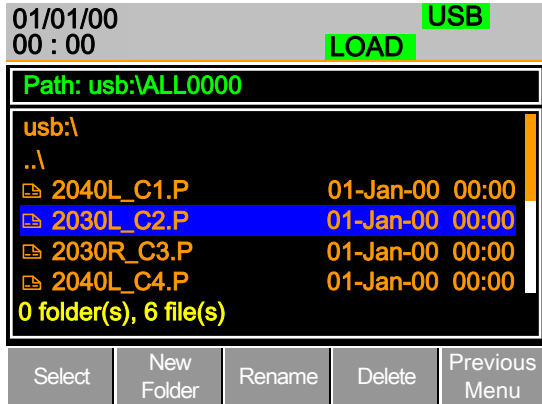

19. Press the selector knob, Enter or F1.
20. A recall message will be displayed when complete.

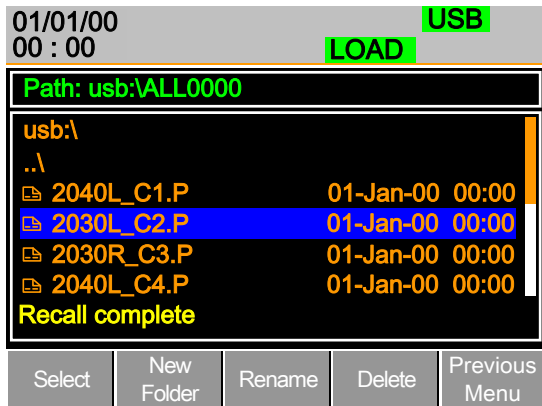

Remember only data that has been saved to internal memory will be saved to USB. Only the active channel presets will be saved.

If you try to recall data that originated from a different load module than the active channel, an error message will appear. The filename must reflect the active channel's load module type.

## Machine Type Error

### Saving/Recalling Sequences to USB

---

**Background** There are two options to save or recall Sequences to a USB flash drive. Sequences can either be saved from all channels or from the current channel only.

**Save All:** Every channels' sequences will be saved into a directory (ALL00XX) as separate files for each channel (20XXX\_C1.A~ 20XXX\_C8.A).

**Save Current:** The current channel's sequence will be saved into the root directory (20XXX\_XX.A). Press F5 (File Utility) to select the directory to save.

**Recall:** Sequences can only be recalled for the current channel. It is not possible to recall all channels' Sequences at once.

The file extension \*.A is used for Sequences only.

For more information about the file structures see page 94.

---

<b>Parameters</b>	Save Channel Data:Directory: ALL0000 ~ ALL0099
	All File: 20XXX_CX.A
	Save Channel Data:File: 20XXX_XX.A
Current	
Recall Channel	File: 20XXX_XX.A
Data: Current	



---

Panel operation

1. Insert a USB flash drive into the front panel USB slot.
2. Ensure the USB path has been set.
3. Press the File key.
4. Press F1 repeatedly until the Media USB menu appears.




 
Page 250.

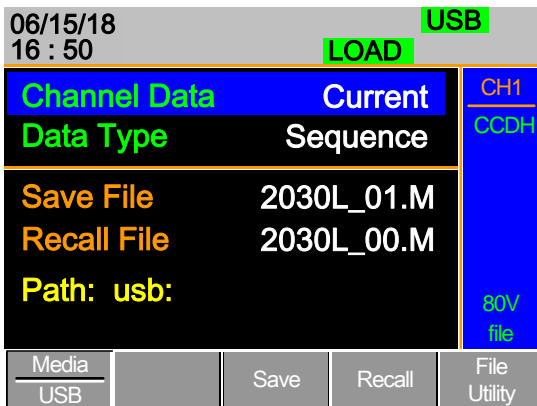


Save all Channel SEQ

 5. Use the Selector knob to edit Save Chan and Data Type.
6. Choose All, and Sequence



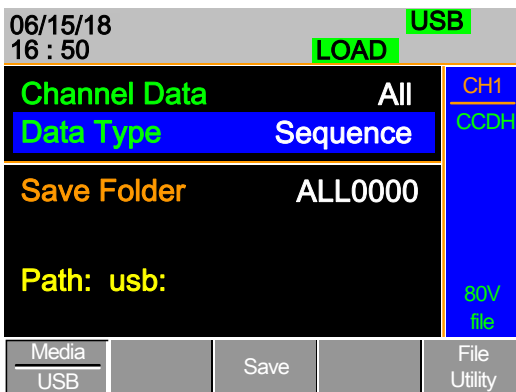

 
The screen updates to show Save Folder. Note it is not possible to recall all Sequence data at once, only save.


7. Use the Selector Knob to edit Save Folder. 
8. Choose a directory name (ALL0000~ALL0099).




Any used directories will not be available. It is not possible to over-write older directories. They must be deleted first.


9. Press F3 (Save) 
10. A screen message will be displayed when saving.

### Save All Chan in ALL0000

 - Save/Recall SEQ (current channel) 11. Use the Selector Knob to edit Save Chan and Data Type. 
12. Choose Current and Sequence.

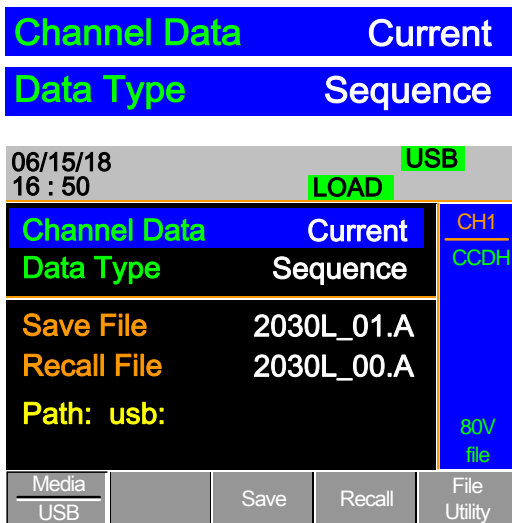


 13. Use the selector knob to edit Save File or Recall File.
14. Choose a file name.
15. Press F3 (Save) to save or F4 (Recall) to recall the current channel's sequence.
16. A message will be displayed when the file is saved/recalled.




**2030L\_01.A Save OK**  
**2030L\_01.A Recall OK**

- Recall File from USB path
17. Press F5 (File Utility).
  18. Use the selector knob to select path for saving sequence. usb:\ALLXXXX\File: 20XXX\_XX.A

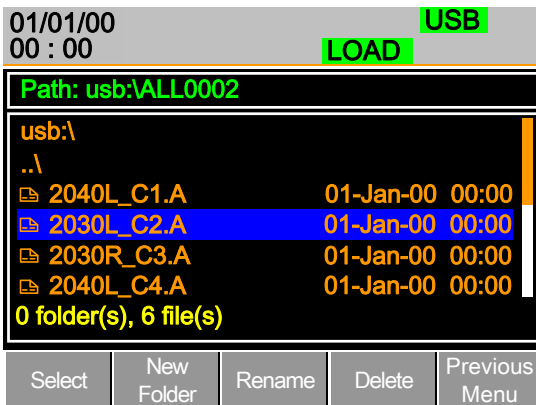

19. Press the selector knob, Enter or F1.
20. A recall message will be displayed when complete.

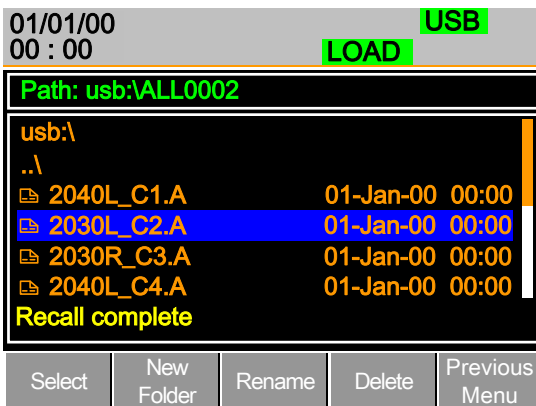

Remember a sequence must first be saved to (internal) buffer before it can be saved to USB.



If you try to recall data that originated from a different load module than the active channel, an error message will appear. The filename must reflect the active channel's load module type.

## Machine Type Error

### Quick Preset Recall/Save

**Background**      The PEL-2000A series mainframes have up to 10 Channel Presets (P0~P9). Quick recalling or saving presets will only be applicable to the active channel. For example, P1 on CH1 is not the same as P1 on CH2.

 
**Parameter**      Presets    P0 ~ P9 (current channel)

**Panel Operation**    1. Remove any USB devices from the front panel.

2. Select the channel you want to save Channel Presets to.      Page 126.


**Save Current Channel Preset**    3. To save a Channel Preset, press the Preset key and hold one of the number keys (0-9) for a short time until a beep is heard.

0 = P0  
1 = P1 etc.




**Save All Channel Presets**    4. To save All Channel Presets, press the Shift key, the Preset key and hold one of the number keys (0-9) for a short time until a beep is heard.

0 = P0  
1 = P1 etc.

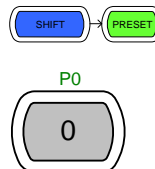

 
5. Press the Preset key again to deactivate it.



The Preset will be saved to the one of 10 presets depending on the number pressed.

Recall Current Channel Preset

 6. Press the Preset key and one of the number keys.




0 = P0  
1= P0 etc.


Only the current Channel preset will be recalled.

Recall All Channel Presets

 
7. Press the Shift key, the Preset key and one of the number keys.



0 = P0  
1= P0 etc.

 

 8. Press the Preset key again to deactivate it.



### Recall Setup Memory (Frame link).

Background

A master mainframe can command all mainframes (master and slave) to recall setup memory from their internal memory. No setup data will be recalled from the master mainframe to the slave units.

Parameter

Setup memory 1~4.

Panel Operation

1. On the Master mainframe, follow the procedure for recalling setup memory for all channels.

Page 248

All mainframes will update setup memory upon recall.



Note

It is necessary to save setup data before recalling both master and slave. If the setup data is not saved first, there will be no value change after recalling.

## Recall Preset Memory (Frame link)

---

**Background** A master mainframe can command all units to recall preset memory from their internal memory. Only the first three preset memories (P0~P2) can be recalled.

Channel presets can be recalled via the file menu or using the quick recall feature using the number pad.

 
---

**Parameters** Presets P0 ~ P2 (current channel)

---

**Panel Operation: Quick Keys** 1. Remove any USB devices from the front panel.


2. On the master mainframe, press the Shift and Preset key.



3. Press one of the number keys (0-2).

0 = P0

 1 = P1 etc



The screen will flash momentarily when the presets are recalled.

**Panel Operation: File menu** 4. On the master mainframe follow Page 246 the procedure to recall preset memory for all channels.

The screen will flash momentarily when the presets are recalled.




It is necessary to save preset data before recalling both master and slave. If preset data is not saved first, the value after recalling will be the factory default setting.



## Recall Factory/User's Defaults

 **Background** The Factory/User's defaults can be saved or recalled at any time. For details on the factory defaults please see the default settings in the appendix, page 302

**Panel Operation** 1. Press the File key.




 2. Press F1 repeatedly until the Media Default menu appears.

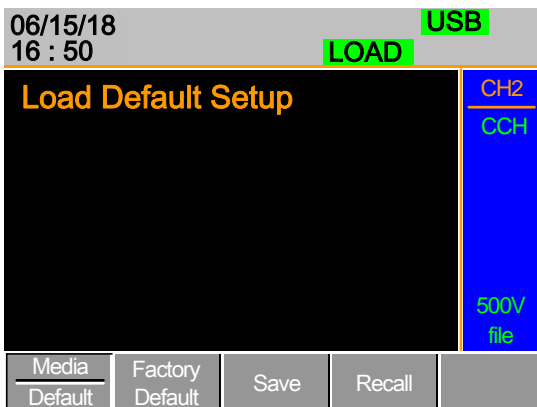


3. Press Factory Default (F2) to recall the factory default settings.



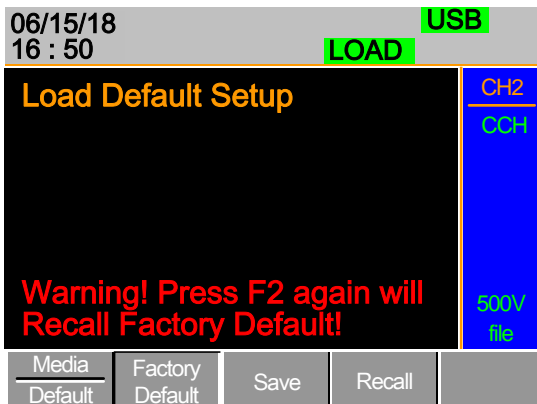


4. Press F2 again to ensure recall factory default setting

F2

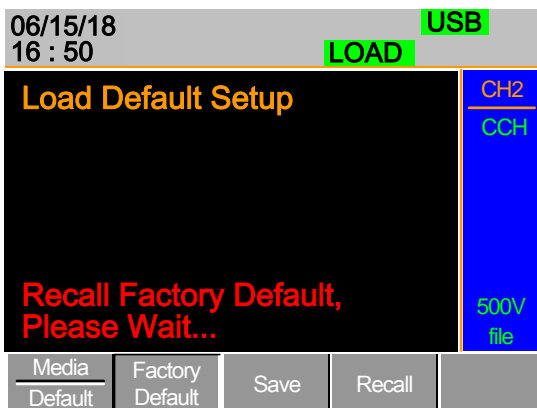

5. Wait a short time for the settings to be recalled.
6. Press Save (F3) to save the user's default.


F3

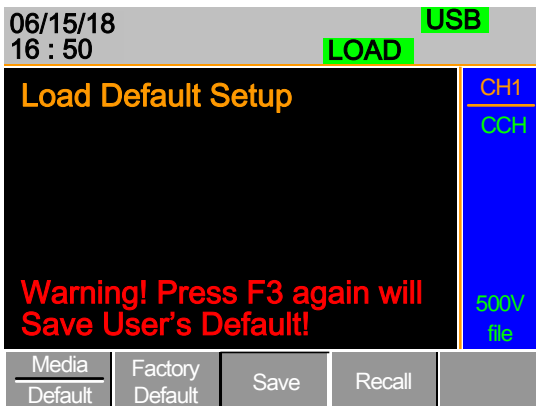

7. Press Save (F3) again to ensure save the user's default.




8. Wait a short time for the settings to be saved.

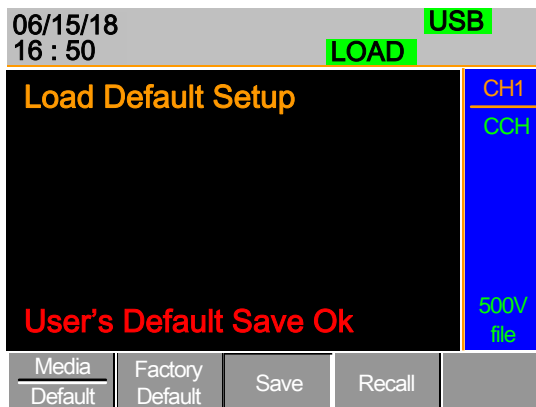

9. Press Recall (F4) to recall the user's default.




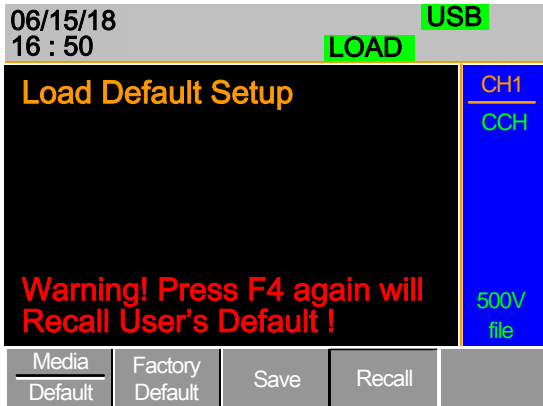

10. Press Recall (F4) to ensure recall the user's default



11. Wait a short time for the settings to be saved.

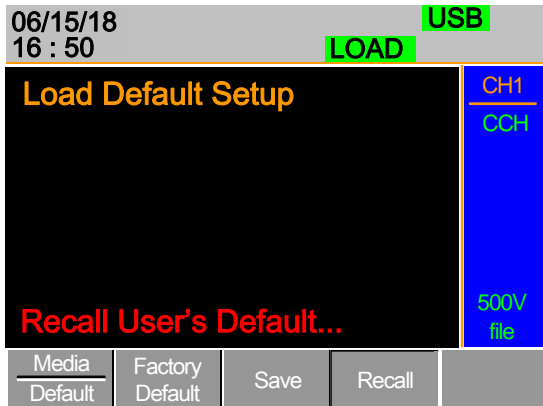

# I NTERFACE

The Interface chapter details the pin configuration of the RS232, GPIB, Frame Link, Channel Control and Go/NoGo interfaces.

---

Interface Configuration .....	281
Configure RS-232C interface.....	281
Configure GPIB interface .....	282
Configure Channel Control interface.....	284
Configure Frame Link Interface .....	286
Configure Go/NoGo Interface.....	289
USB Interface Connection .....	290

 


## Interface Configuration


### Configure RS-232C interface

RS-232C configuration	Connector	DB-9, Male
	Baud rate	9600
	Parity	None
	Data bit	8
	Stop bit	1

Connect the RS-232C cable (part no. GTL-232) to the rear panel port: DB-9 male connector.



#### Pin assignment

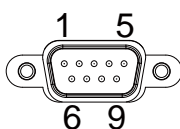


- 2: RxD (Receive data)
- 3: TxD (Transmit data)
- 5: GND

1, 4, 6, 7, 8, 9: No connection

#### PC connection

Use the Null Modem connection as shown in the diagram below.

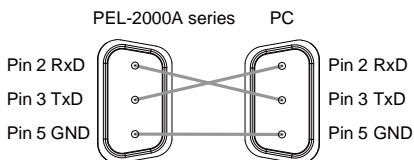


## Configure GPIB interface


Interface function codes The interface function codes for the Electronic Load are listed as the following table.

Code	Interface function
SH1	Source Handshake capability
AH1	Acceptor Handshake capability
T5	Talker (basic talker, serial poll, unaddressed to talk on LAG)
L4	Listener (basic listener, unaddressed to listen on LAG)
SR1	Service Request capability
RL0	No Remote/Local capability
PP0	No Parallel Poll capability
DC1	Device Clear capability
DT0	No Device Trigger capability
C0	No Controller capability
E1	Open collector bus drivers
TE0	No Extended Talker capability
LE0	No Extended Listener capability

 Connection Connect the GPIB cable to the rear panel port: 24-pin female connector.



Pin assignment

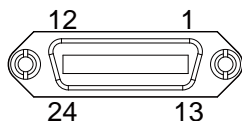

---


Pin1	Data line 1	Pin13	Data line 5
Pin2	Data line 2	Pin14	Data line 6
Pin3	Data line 3	Pin15	Data line 7
Pin4	Data line 4	Pin16	Data line 8
Pin5	EOI	Pin17	REN
Pin6	DAV	Pin18	Ground
Pin7	NRFD	Pin19	Ground
Pin8	NDAC	Pin20	Ground
Pin9	IFC	Pin21	Ground
Pin10	SRQ	Pin22	Ground
Pin11	ATN	Pin23	Ground
Pin12	Shield (screen)	Pin24	Signal ground

---

- GPIB constraints
- Maximum 15 devices altogether, 20m cable length, 2m between each device
  - Unique address assigned to each device
  - At least 2/3 of the devices turned On
  - No loop or parallel connection

## Configure Channel Control interface

Channel control configuration	Connector	Screwless connector.
	Wire Gauge	22-28 AWG (24 AWG recommended).
	Wire connection	10 mm strip gauge for connection.

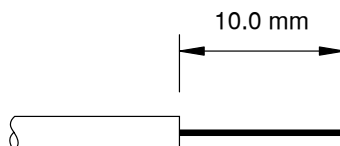

Input 0-10V.

### Pin Assignment



1 6


1 GND	Negative potential of the load input terminal.
2 I MON (OUTPUT)	Load input current monitor; where 0V = 0% of input current and 10V = 100% of input current.
3 V MON (OUTPUT)	Load input voltage monitor; where 0V = 0% of input voltage and 10V = 100% of input voltage.
4 Ext Voltage ref (INPUT)	External voltage reference; Where 0V=0% of rating voltage/current and 10V = 100% of rating voltage/current. The external voltage reference is for CC and CV mode.

**5 Load On**


Load On Input.

Load on = Active low.

Load off = Active high. (Pin 5 of the connector is internally pulled up to 3.3V with a 10kΩ resistor when the switch is open. Thus when the switch is open, pin 5 is logically high. When the switch is closed, pin 5 is pulled down to the GND ground level, making pin 5 logically low)

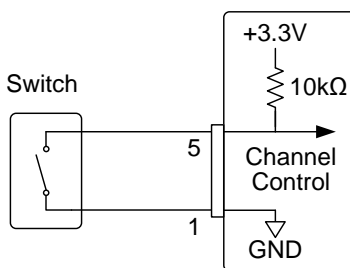

The Load On/Off determines whether the external switch is closed (low) or open (high)

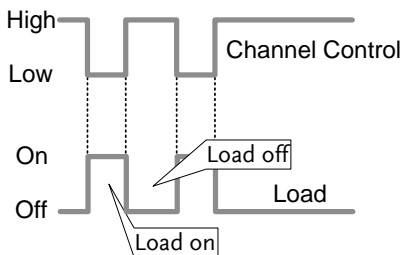

**6 +15V**

 
Internal power output. Max 50mA.

Channel Control Mode/Range Interface Constraints


Mode and Range configuration is only selected via the front panel.

## Configure Frame Link Interface

**Connection**      Connect the Frame link cable (MIL 20 pin connector) to the rear panel port: 20-pin male connector.



 
**Pin assignment**  
(Frame link connector 1)



Pin number	Pin name	Description
Pin1	A	Input, Recall Preset memory 0 (All channels)
Pin2	B	Input, Recall Preset memory 1 (All channels)
Pin3	C	Input, Recall Preset memory 2 (All channels)
Pin4	TRIG_IN	Trigger input
Pin5	MEM_1	Input, Recall Setup memory 1 (All channels)
Pin6	MEM_2	Input, Recall Setup memory 2 (All channels)
Pin7	MEM_3	Input, Recall Setup memory 3 (All channels)
Pin8	MEM_4	Input, Recall Setup memory 4 (All channels)
Pin9	Enable	Input, Enable Load (On/Off), recall Preset memory (0-2) and Setup memory (1-4)

Pin10	Load On/Off	Input, Load On/Off
Pin11	N.C	No connection
Pin12	N.C	No connection
Pin13	N.C	No connection
Pin14	N.C	No connection
Pin15	Load Status	Output, load on status.
Pin16	Alarm Status	Output, alarm activated.
Pin17	+5V	Power source output, +5V, 100mA.
Pin18	N.C	No connection.
Pin19	GND	Ground
Pin20	GND	Ground

 Pin assignment  
(Frame link  
connector 2)



Pin number	Pin name	Description
Pin1	Sync._A	Output, Sync signal, Recall Preset memory 0 (All channels)
Pin2	Sync._B	Output, Sync signal, Recall Preset memory 1 (All channels)
Pin3	Sync._C	Output, Sync signal, Recall Preset memory 2 (All channels)
Pin4	TRIG_OUT	Trigger output


---

Pin5	Sync._MEM_1	Output, Sync signal, Recall Setup memory 1 (All channels)
Pin6	Sync._MEM_2	Output, Sync signal, Recall Setup memory 2 (All channels)
Pin7	Sync._MEM_3	Output, Sync signal, Recall Setup memory 3 (All channels)
Pin8	Sync._MEM_4	Output, Sync signal, Recall Setup memory 4 (All channels)
Pin9	Sync._Enable	Output, Sync signal, Enable Load (On/Off), recall Preset memory (0- 2) and Setup memory (1-4)
Pin10	Sync._Load On/Off	Output, Sync signal, Load On/Off
Pin11	N.C	No connection
Pin12	N.C	No connection
Pin13	N.C	No connection
Pin14	N.C	No connection
Pin15	Load Status	Output, load on status.
Pin16	Alarm Status	Output alarm activated.
Pin17	N.C	No connection
Pin18	+5V	Power source output, +5V, 100mA
Pin19	GND	Ground
Pin20	GND	Ground




Explanation	<ul style="list-style-type: none"> <li>• Input: active low (0-1V) active high (4-5V)</li> <li>• Note: Input type is internally pulled up to 5V with a 10kΩ resistor.</li> <li>• Output: high (floating) low (0-1V)</li> <li>• Note: Output type is internally Open collector outputs, maximum 30VDC with 1.1V saturation voltage (100mA).</li> <li>• When Enable (pin9) is on (active low), the following is disabled from the mainframe: Load On/Off (pin 10) activating loads and recalling preset (pin 1-3) or setup memory (pin 5-8).</li> </ul>
Frame Link constraints	<ul style="list-style-type: none"> <li>• Maximum 5 (1 master + 4 slave units) devices can be linked altogether with a maximum cable length of 30cm for each cable.</li> <li>• All the connected devices must be turned on.</li> <li>• No loop or parallel connections</li> </ul>

## Configure Go/NoGo Interface

 Connection	<p>Use a DSUB (DB-15 Female) connector to connect to the Go/NoGo port.</p> <p>The Go/NoGo port is an output only port.</p>	
------------	--	---

Pin assignment

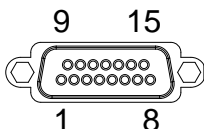

Pin1	Ch1_GO/NG	Pin9	Ch5_GO/NG
Pin2	GND	Pin10	GND
Pin3	Ch2_GO/NG	Pin11	Ch6_GO/NG
Pin4	GND	Pin12	GND
Pin5	Ch3_GO/NG	Pin13	Ch7_GO/NG
Pin6	GND	Pin14	GND
Pin7	Ch4_GO/NG	Pin15	Ch8_GO/NG
Pin8	GO/NG_Enable		

Connection Type    Open collector output maximum 30VDC with 1.1V saturation voltage (100mA).

30 V DC (high)	Pass (Go) or SPEC Test: OFF
----------------	--------------------------------

1.1 V DC (low)	Fail (NoGo)
----------------	-------------

## USB Interface Connection

Connection    For USB remote connection, use the USB-B port on the mainframe rear panel.



# F AQ

Q1. The load voltage indicated on the load module is below expected.

---

A1. Ensure the load leads are as short as possible, twisted and use the appropriate wire gauge. Ensure that voltage sense is used, this can help alleviate the voltage drop across the load the leads.

Q2. When I try to start a program sequence, it will not run. “No Active Channel” is displayed.

---

A2. Ensure the channel(s) is activated (not set to OFF) in the FUNC→Program→Active Channel menu.

Q3. When trying to save to USB, the USB memory stick is unresponsive.

---

A3. Try restarting the PEL-2000A mainframe. If this fails to solve the problem, ensure the USB memory is cleanly formatted.

Q4. When I try to clear an alarm, it doesn't work.

---

A4. Before clearing an alarm or using the Protection Clear All function, the DUT must be turned off. After the DUT is off, the alarm(s) can be cleared.


For more information, contact your local dealer or GW Instek at [www.gwinstek.com](http://www.gwinstek.com)

# APPENDIX


## Fuse Replacement

---

- Step
1. Turn off the power at the wall socket and rear panel. Remove the power cord.
  2. Remove the fuse socket using a minus driver.

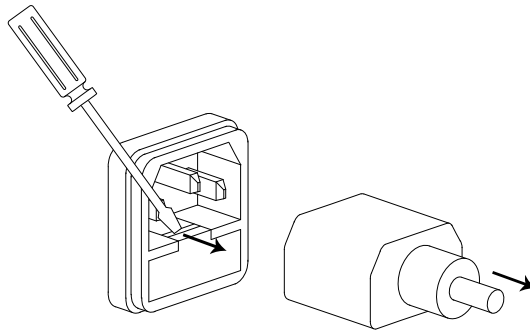

3. Replace the fuse in the holder.

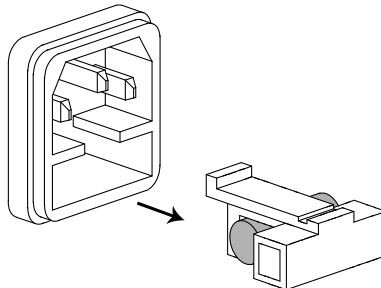


---


Rating            T3.15A, 250V

# Firmware Update

**Background** The PEL-2000A firmware can be easily updated using a USB memory stick. For the latest firmware please see your local GW Instek distributor or download the latest firmware from [www.gwinstek.com](http://www.gwinstek.com).

**File Name** File: P2KAXXXX.UPG

 **Note** Copy the firmware file (\*.UPG) into the root directory of a USB stick before proceeding with the firmware update.

 
 **WARNING** Do not turn the power off or remove the USB memory when the firmware is being read or upgraded.

**Panel operation** 1. Insert a USB flash drive into the front panel USB slot.

2. Press the File key.




3. Press F1 repeatedly until the Media USB menu appears.



4. Press F5 (File Utility).



 5. Use the selector knob to scroll down to the firmware file (\*.UPG) and press the selector knob, Enter or F1.



6. Press F1 to confirm the firmware upgrade.



 
7. Wait for the firmware upgrade to finish, a message will be displayed upon completion.
8. Turn the power Off.





Recall Factory Default

9. Turn the power On.

10. Press the File key.



 
11. Press F1 repeatedly until the Media Default menu appears.

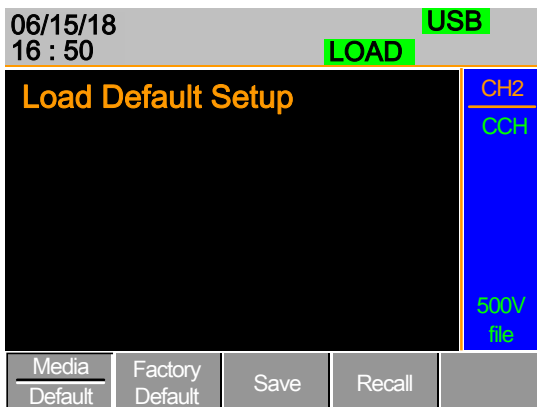

12. Press Factory Default (F2) to recall the factory default settings.




13. Firmware updating process is complete and you can use the device now.

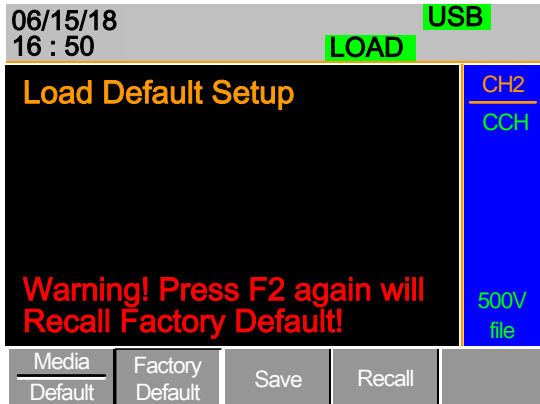

14. Press F2 again to ensure recall factory default setting

F2

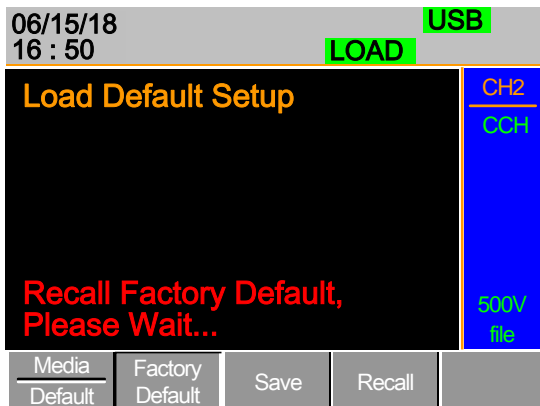

15. Wait a short time for the settings to be recalled.

## Calibration

---

### Background


The PEL-2000A series load modules should be calibrated at least on a yearly basis.

GW instek does not support End-User calibration. Please see your distributor for calibration details.




# Range Chart


PEL-2020A Low Range 10W

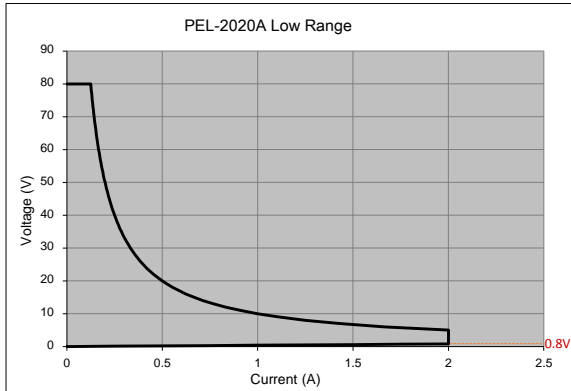


PEL-2020A High Range 100W

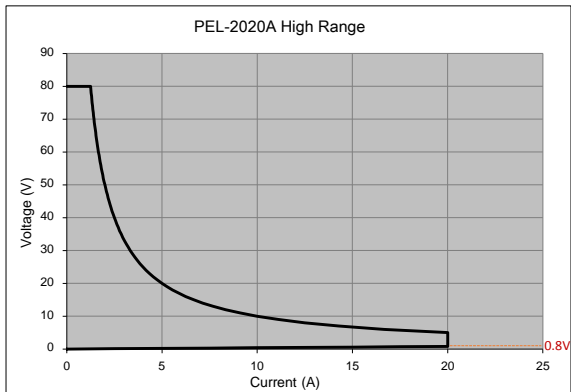


PEL-2020A CV Low Range

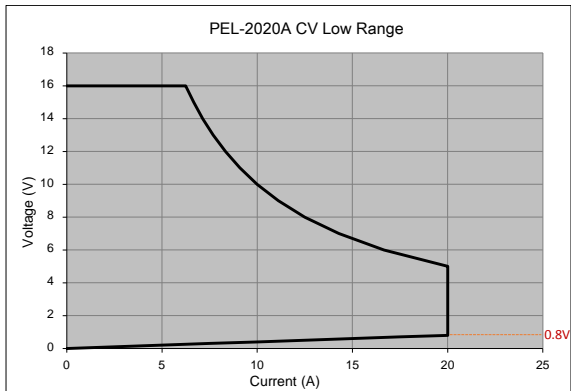


**PEL-2030A (L)  
High range 30W**

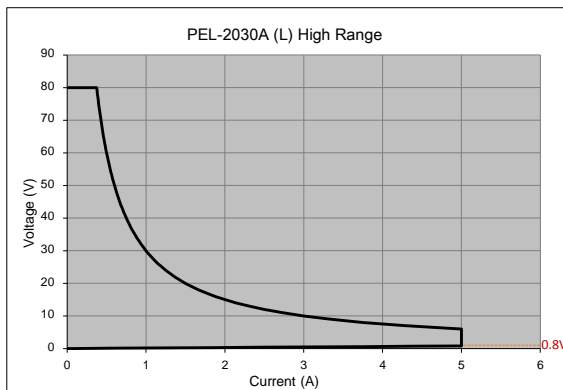


**PEL-2030A (L)  
CV Low Range**

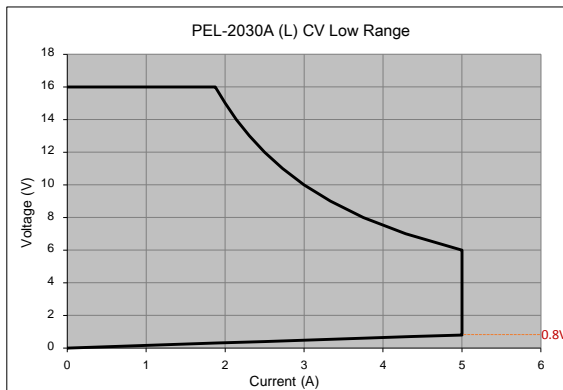


**PEL-2030A (R)  
Low Range 25W**

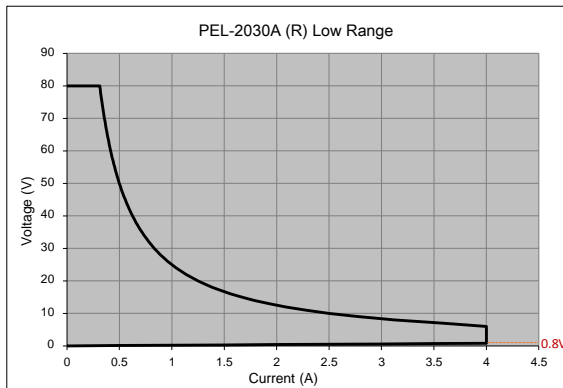


PEL-2030A (R)  
High Range  
250W

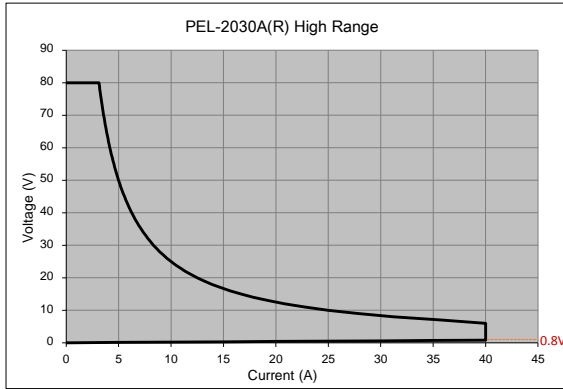


PEL-2030A (R)  
CV Low Range

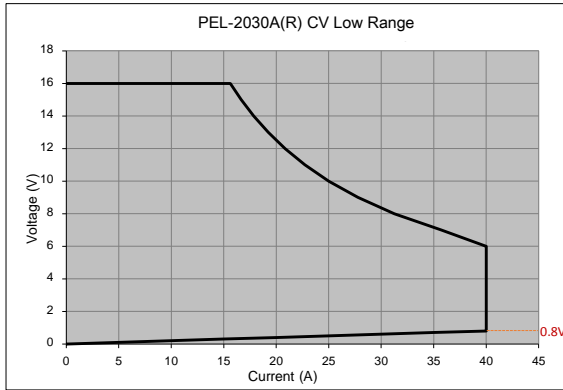


PEL-2040A Low  
Range 35W

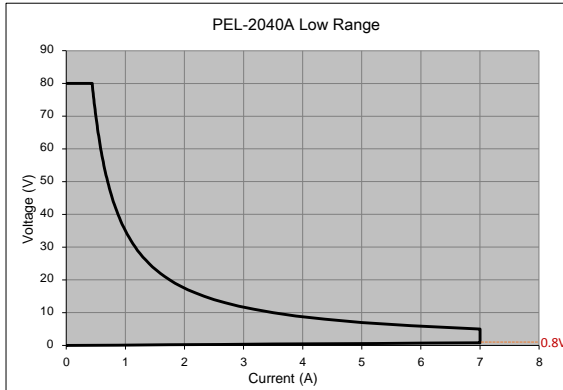


**PEL-2040A High Range 350W**

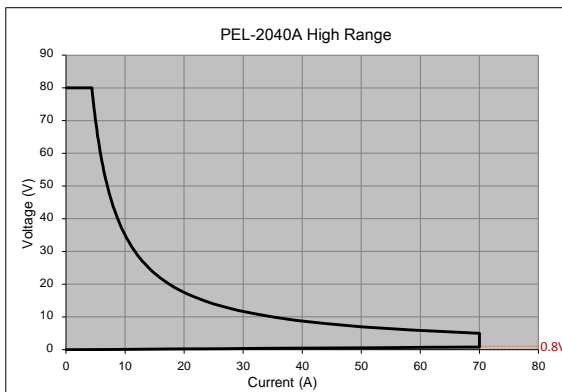


**PEL-2040A CV Low Range**

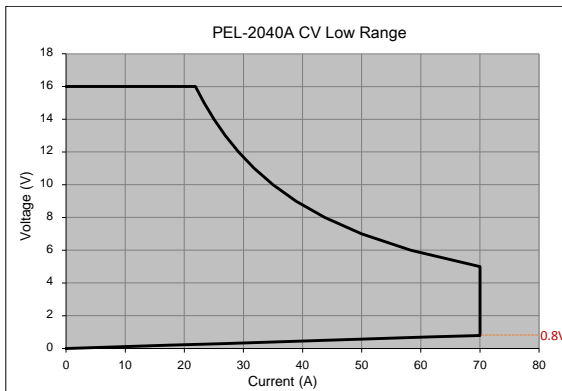


**PEL-2041A Low Range 35W**

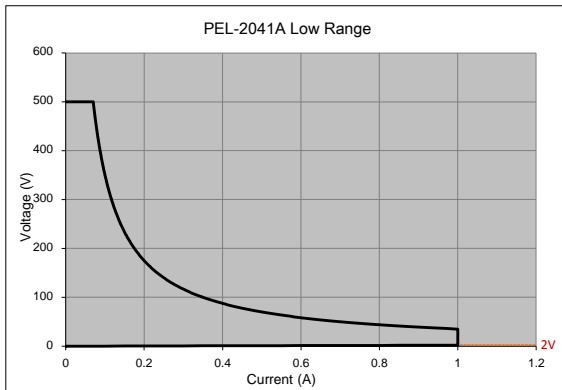

**PEL-2041A High Range 350W**

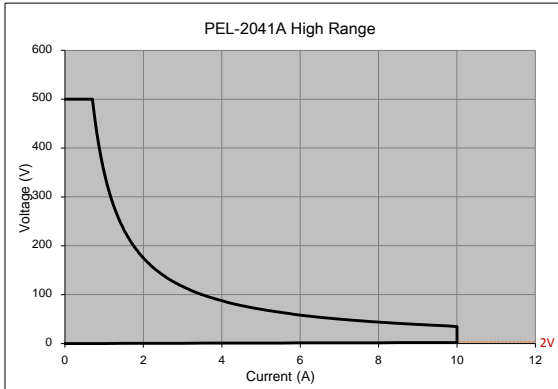

**PEL-2041A CV Low Range**

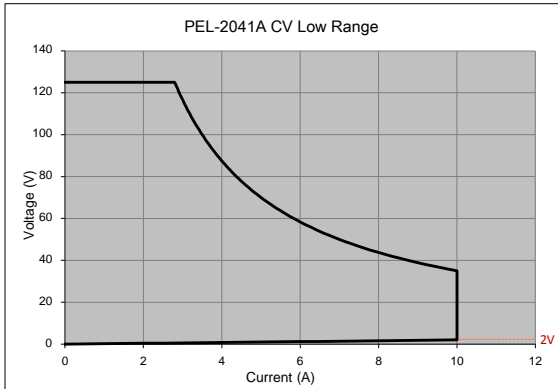

## Default Settings

Menu Item		
CC Mode	Range: High	Mode: Static
	A/B Value: Min A	Rising Slew Rate: Max
	Falling Slew Rate: Max	
CR Mode	Range: High	Mode: Static
	A/B Value: Max $\Omega$	Rising Slew Rate: Max
	Falling Slew Rate: Max	
CV Mode	Range: High	Response: Slow
	A/B Value: Max V	I Meas: High
	Curr Limit: Max A	
CP Mode	Range: High	A/B Value: Min W
	Curr Limit: Max A	
CHAN-Protection	OCP Level: Max	OCP Setting: OFF
	OVP Level: Max	OVP Setting: OFF
	OPP Level: Max	OPP Setting: OFF
	UVP Level: OFF	UVP Setting: Clear
	Protection Clear: All	
CHAN- Other	CC Vrange: High	Von Voltage: 0V
	Von Latch: OFF	CH CONT: Panel
	Independent: OFF	Load D-Time: 0.0s
	Response: Fast	CCH Step: Min
	CCL Step: Min	CRH Step: Min
	CRL Step: Min	CVH Step: Min
	CVL Step: Min	CPH Step: Min
	CPL Step: Min	Short Function: ON
	Short Key: Toggle	Short Safety: ON

CHAN-Group	Total Units: OFF Display Mode: V,I	Group Mode: Para
CHAN- Seq. Edit	NO.: 001 Rising/Falling SlewRate: Max	Value: Min Duration Time: 0.000025s
CHAN- Seq. Edit - Loop	Repeat: Infinity Times On End Of Seq.: OFF A (CC mode) OFF $\Omega$ /OFF K $\Omega$ (CR mode)	Start of Loop: 001 Point CC Vrange: High
CHAN- Go/NoGo	SPEC Test: OFF Entry Mode: Value Low: Min	Delay Time: 0.0 s High: Max
FUNC- Program	PROG: 01 Memory: M001 On-Time: 0.1 P/F-Time: Off Short Channel: All channels	SEQ: 01 Run: Skip Off-Time: Off Short-Time: Off
FUNC- Program Chain	Start: P01	P01~P12→: Off
FUNC- Program- Active Channel	CH 01~08: Active: OFF	Prog: Off
FUNC- Sequence	Seq.: Off TRIG: CH1: OUT Setting: CH01~CH08: OFF	TRIG In: Off TRIG: CH2~08: OFF
FUNC- OCP	OCP: Off Range: High End C: Setting Range Max Last_C: Min Delay: Min	Chan: 1 Start C: Min Step_C: Min Step_T: Min Trig_V: Min

	Keep_T: Min	
FUNC- OCP- Active Channel	CH 01~08: Active: OFF	
FILE- Memory	Channel Data: Current Memory: M001	Data Type: Memory
FILE- USB	Channel Data: Current Save File: No File	Data Type: Memroy Recall File: No File
UTILITY- Load	Auto Load: OFF	Auto Load On: Prog
UTILITY - Interface	USB	
UTILITY - Other	Speaker: OFF Brightness: 70 Alarm (M): ON Knob Type: Updated Slave Knob: SetValue High Resolution: ON Von Latch Clear: Auto Jog Shuttle Control: OFF	Contrast: 8 Frame CONT: OFF Alarm (S): OFF Go_NoGo Tone: OFF Language: English System Mode: 0 Measure Period: 200ms RVP Load Off: OFF



## Specifications

The specifications apply when the PEL-2000A series is powered on for at least 30 minutes to warm-up to a temperature of  $25^{\circ}\text{C} \pm 5^{\circ}\text{C}$ , unless specified otherwise.

	PEL-2002A	PEL-2004A
MODULE SLOTS	2	4

### GENERAL

#### Operating Environment

Temperature	$0^{\circ}\text{C}$ to $40^{\circ}\text{C}$
Relative Humidity	0 to 85% RH
Altitude	Up to 2000m
Location	Indoor, no direct sunlight, dust free, almost non conductive pollution.

#### Storage Environment

Temperature	$-10^{\circ}\text{C}$ to $70^{\circ}\text{C}$
Relative Humidity	< 90% RH
Location	Indoor

Power Supply	AC input voltage range: 100-120Vac / 200-240Vac (90-132Vac / 180-250Vac)
	Frequency: 47~63Hz
	Power rating: PEL-2004A: 250VA Max PEL-2002A: 150VA Max
	Transient overvoltage on the main supply is 2500V.

Fuse	T3.15A/250V	
Pollution degree	2	
Measurement	1	
Category		
Rear panel USB class	USB 2.0 full speed (CDC-ACM)	
Weight	Approx. 17.1kg (Full modules)	Approx. 28.4kg (Full modules)

### PEL-2020A (100Wx2)

RANGE	Low	High
CURRENT	0~2A	0~20A
VOLTAGE	0~80V	
MIN.OPERATING	0.4V at 2A	0.8V at 20A
VOLTAGE(dc)Typ.)	0.2V at 1A	0.4V at 10A

**STATIC MODE**

**CONSTANT CURRENT MODE**

Operating Range	0~2A	0~20A
Setting Range	0~2.04A	0~20.4A
Resolution	0.1mA	1mA
Accuracy	$\pm(0.1\%set + 0.1\%F.S.^{*1})$	
	$\pm(0.1\%set + 0.2\%F.S.)$	

**CONSTANT RESISTANCE MODE**

Operating Range	0.075Ω~300Ω(100W/16V)	
	3.75Ω~15kΩ(100W/80V)	
Setting Range	0.075Ω~300Ω(100W/16V)	
	3.75Ω~15kΩ(100W/80V)	
Resolution	0.333ms(100W/16V)	
	6.667μs(100W/80V)	
Accuracy	300Ω: $\pm(0.2\%set + 0.1S)$	
	15kΩ: $\pm(0.1\%set + 0.01S)$	

**CONSTANT VOLTAGE + CONSTANT CURRENT MODE**

Operating Range	1~16V	1~80V
Setting Range	0~16.32V	0~81.6V
Resolution	0.4mV	2mV
Accuracy	$\pm(0.05\%set + 0.1\%F.S.)$	
Current Setting Range	0~2.04A	0~20.4A
Resolution	0.1mA	1mA
Accuracy	$\pm(0.1\%set + 0.1\%F.S.^{*1})$	
	$\pm(0.1\%set + 0.2\%F.S.^{*1})$	

**CONSTANT POWER + CONSTANT CURRENT MODE**

Operating Range	1~10W	1~100W
Setting Range	0~10.2W	0~102W
Resolution	1mW	10mW
Accuracy	$\pm(0.5\%set + 0.5\%F.S.^{*1})$	
	$\pm(0.5\%set + 0.5\%F.S.)$	
Current Setting Range	0~2.04A	0~20.4A
Resolution	0.1mA	1mA
Accuracy	$\pm(0.1\%set + 0.1\%F.S.^{*1})$	
	$\pm(0.1\%set + 0.2\%F.S.^{*1})$	

NOTE : \*1: F.S. = Full scale of H Range

**DYNAMIC MODE**

T1&T2	0.025ms ~ 10ms / Res: 1μs	
	10ms ~ 30s / Res: 1ms	
Accuracy	1us / 1ms $\pm 100ppm$	

**CONSTANT CURRENT MODE**

Slew Rate	0.32 ~ 80mA/μs	3.2 ~ 800mA/μs
-----------	----------------	----------------

Slew Rate	0.32mA/μs	3.2mA/μs
Resolution		
Slew Rate Setting Accuracy	±(10% + 15μs)	
Current Setting Range	0~2.04A	0~20.4A
Current Resolution	0.1mA	1mA
Current Accuracy	±0.4% F.S.	

## CONSTANT RESISTANCE MODE

Slew Rate	3.2 ~ 800mA/μs	
Slew Rate Resolution	3.2mA/μs	
Slew Rate Setting Accuracy	±(10% + 50μs)	
Resistance Setting Range	0.075Ω~300Ω(100W/16V)	3.75Ω~15kΩ(100W/80V)
Resistance Resolution	0.333ms(100W/16V)	6.667μs(100W/80V)
Resistance Accuracy	300Ω: ±(0.5%set + 0.1S)	15kΩ: ±(0.5%set + 0.01S)

## MEASUREMENT

## VOLTAGE READBACK

Range	0~16V	0~80V
Resolution	0.32mV	1.6mV
Accuracy	±(0.025%set + 0.025% F.S.)	

## CURRENT READBACK

Range	0~2A	0~20A
Resolution	0.04mA	0.4mA
Accuracy	±(0.05%set + 0.05% F.S.*2)	

## POWER READBACK

Range	0~10W	0~100W
Accuracy	±(0.1%set + 0.1% F.S.*1)	

NOTE : \*1 : Power F.S. = Vrange F.S. x Irange F.S.

\*2 : F.S. = Full scale of H Range

## PROTECTIVE

## Over Power Protection

Range	1~102W
Resolution	0.5W
Accuracy	±(2%set + 0.25% F.S.)

**Over Current Protection**

Range	0.25~20.4A
Resolution	0.05A
Accuracy	±(2%set + 0.25% F.S.)

**Over Voltage Protection**

Range	1~81.6V
Resolution	0.2V
Accuracy	±(2%set + 0.25% F.S.)

Over Temperature Protection  
 ≒85°C

**Rated Power Protection(CPP)**

Value	110W
Accuracy	±5%set

**GENERAL**

**SHORT CIRCUIT**

Current(CC)	≒2.2/2A	≒22/20A
Voltage(CV)	≒0V	
Resistance(CR)	≒3.75Ω	≒0.075Ω

Input Resistance 500kΩ(Typical)

(Load OFF)

Temperature Coefficient 100ppm

Weight Approx. 3.8kg

**PEL-2030A (30W/250W)**

RANGE	High	Low	High
CURRENT	0~5A	0~4A	0~40A
VOLTAGE	0~80V		
MIN.OPERATING VOLTAGE(dc)	0.8V at 5A	0.4V at 4A	0.8V at 40A
	0.4V at 2.5A	0.2V at 2A	0.4V at 20A

**STATIC MODE**

**CONSTANT CURRENT MODE**

Operating Range	0~5A	0~4A	0~40A
Setting Range	0~5.1A	0~4.08A	0~40.8A
Resolution	0.125mA	0.1mA	1mA
Accuracy	±(0.1%set + 0.1%F.S.)	±(0.1%set + 0.1%F.S.*1)	±(0.1%set + 0.2%F.S.)

**CONSTANT RESISTANCE MODE**

Operating Range	0.3Ω ~1.2kΩ (30W/16V) 15Ω ~60kΩ (30W/80V)	0.0375Ω ~150Ω(250W/16V) 1.875Ω ~7.5kΩ(250W/80V)
Setting Range	0.3Ω~1.2kΩ (30W/16V) 15Ω~60kΩ (30W/80V)	0.0375Ω ~150Ω(250W/16V) 1.875Ω ~7.5kΩ(250W/80V)
Resolution	83.333μs (30W/16V) 1.666μs (30W/80V)	0.666ms(250W/16V) 13.333μs(250W/80V)
Accuracy	1.2kΩ: ± (0.2%set + 0.1S) 60kΩ: ± (0.1%set + 0.01S)	150Ω: ±(0.2%set + 0.1S) 7.5kΩ: ±(0.1%set + 0.01S)

**CONSTANT VOLTAGE + CONSTANT CURRENT MODE**

Operating Range	1~16V 1~80V	1~16V	1~80V
Setting Range	0~16.32V 0~81.6V	0~16.32V	0~81.6V
Resolution	0.4mV 2mV	0.4mV	2mV
Accuracy	±(0.05%set + 0.1%F.S.)	±(0.05%set + 0.1%F.S.)	
Current Setting Range	0~5.1A	0~4.08A	0~40.8A
Resolution	0.125mA	0.1mA	1mA
Accuracy	±(0.1%set + 0.2%F.S.)	±(0.1%set + 0.1%F.S.*1)	±(0.1%set + 0.2%F.S.*1)

**CONSTANT POWER + CONSTANT CURRENT MODE**

Operating Range	1~30W	1~25W	1~250W
Setting Range	0~30.6W	0~25.5W	0~255W
Resolution	1mV	1mV	10mV
Accuracy	±(0.5%set + 0.5%F.S.)	±(0.5%set + 0.5%F.S.*1)	
Current Setting Range	0~5.1A	0~4.08A	0~40.8A
Resolution	0.125mA	0.1mA	1mA
Accuracy	±(0.1%set + 0.2%F.S.)	±(0.1%set + 0.1%F.S.*1)	±(0.1%set + 0.2%F.S.*1)

NOTE : \*1 : F.S. = Full scale of H Range

**DYNAMIC MODE**

T1&T2	0.025ms ~ 10ms / Res: 1μs 10ms ~ 30s / Res: 1ms		
Accuracy	1us / 1ms + 100ppm		

**CONSTANT CURRENT MODE**

Slew Rate	0.8 ~ 200mA/μs	0.64 ~ 160mA/μs	6.4 ~ 1600mA/μs
Slew Rate	0.8mA/μs	0.64mA/μs	6.4mA/μs
Resolution			
Slew Rate setting	±(10% + 15μs)		
Accuracy			
Current Setting	0~5.1A	0~4.08A	0~40.8A
Range			
Current	0.125mA	0.1mA	1mA
Resolution			
Current Accuracy	±0.4% F.S.		

**CONSTANT RESISTANCE MODE**

Slew Rate	0.8 ~ 200mA/μs	6.4 ~ 1600mA/μs
Slew Rate	0.8mA/μs	6.4mA/μs
Resolution		
Slew Rate Setting	±(10% + 50μs)	
Accuracy		
Resistance	0.3Ω~1.2kΩ	0.0375Ω ~150Ω(250W/16V)
Setting Range	(30W/16V) 15Ω~60kΩ (30W/80V)	1.875Ω ~7.5kΩ(250W/80V)
Resistance	83.333μs	0.666ms(250W/16V)
Resolution	(30W/16V) 1.666μs (30W/80V)	13.333μs(250W/80V)
Resistance	1.2kΩ: ±(0.5%set	150Ω: ±(0.5%set + 0.1S)
Accuracy	+ 0.1S)	7.5kΩ: ±(0.5%set + 0.01S)
	60kΩ: ±(0.5%set	+ 0.01S)

**MEASUREMENT**

**VOLTAGE READBACK**

Range	0~16V	0~80V	0~16V	0~80V
Resolution	0.32mV	1.6mV	0.32mV	1.6mV
Accuracy	±(0.025%set + 0.025% F.S.)			

**CURRENT READBACK**

Range	0~5A	0~4A	0~40A
Resolution	0.1mA	0.08mA	0.8mA

Accuracy	$\pm(0.05\% \text{set} + 0.05\% \text{ F.S.}^{*2})$		
----------	---	--	--

## POWER READBACK

Range	0~30W	0~25W	0~250W
Accuracy	$\pm(0.1\% \text{set} + 0.1\% \text{ F.S.}^{*1})$		$\pm(0.1\% \text{set} + 0.1\% \text{ F.S.}^{*1})$

NOTE : \*1 : Power F.S. = Vrange F.S. x Irange F.S.

\*2 : F.S. = Full scale of H Range

## PROTECTIVE

## Over Power Protection

Range	0.9~30.6W	1.25~255W
Resolution	0.15W	1.25W
Accuracy	$\pm(2\% \text{set} + 0.25\% \text{ F.S.})$	

## Over Current Protection

Range	0.0625~5.1A	0.5~40.8A
Resolution	0.0125A	0.1A
Accuracy	$\pm(2\% \text{set} + 0.25\% \text{ F.S.})$	

## Over Voltage Protection

Range	1~81.6V
Resolution	0.2V
Accuracy	$\pm(2\% \text{set} + 0.25\% \text{ F.S.})$

Over Temperature Protection  $\cong 85^{\circ}\text{C}$ 

## Rated Power Protection(CPP)

Value	33W	275W
Accuracy	$\pm 5\% \text{set}$	

## GENERAL

## SHORT CIRCUIT

Current(CC)	$\cong 5.5/5\text{A}$	$\cong 4.4/4\text{A}$	$\cong 44/40\text{A}$
Voltage(CV)	$\cong 0\text{V}$		
Resistance(CR)	$\cong 15\Omega$	$\cong 0.3\Omega$	$\cong 1.875\Omega$

Input Resistance (Load OFF) 500k $\Omega$ (Typical)

Temperature Coefficient 100ppm

Weight Approx. 3.8kg

	PEL-2040A		PEL-2041A	
RANGE	Low	High	Low	High
CURRENT	0~7A	0~70A	0~1A	0~10A
VOLTAGE	0~80V		0~500V	

MIN. OPERATING VOLTAGE (dc) Typ.)	0.4V at 7A	0.8V at 70A	1V at 1A	2V at 10A
	0.2V at 3.5A	0.4V at 35A	0.5V at 0.5A	1V at 5A

**STATIC MODE**

**CONSTANT CURRENT MODE**

Operating Range	0~7A	0~70A	0~1A	0~10A
Setting Range	0~7.14A	0~71.4A	0~1.02A	0~10.2A
Resolution	0.2mA	2mA	0.05mA	0.5mA
Accuracy	$\pm(0.1\% \text{set} + 0.1\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.2\% \text{F.S.})$	$\pm(0.1\% \text{set} + 0.1\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.2\% \text{F.S.})$

**CONSTANT RESISTANCE MODE**

Operating Range	0.025Ω~100Ω(350W/16V) 1.25Ω~5kΩ(350W/80V)	1.25Ω~5kΩ(350W/125V) 50Ω~200kΩ(350W/500V)		
Setting Range	0.025Ω~100Ω(350W/16V) 1.25Ω~5kΩ(350W/80V)	1.25Ω~5kΩ(350W/125V) 50Ω~200kΩ(350W/500V)		
Resolution	1mS(350W/16V) 20μS(350W/80V)	20μS(350W/125V) 0.5μS(350W/500V)		
Accuracy	100Ω: $\pm(0.2\% \text{set} + 0.1\text{S})$ 5kΩ: $\pm(0.1\% \text{set} + 0.01\text{S})$	5kΩ: $\pm(0.2\% \text{set} + 0.02\text{S})$ 200kΩ: $\pm(0.1\% \text{set} + 0.005\text{S})$		

**CONSTANT VOLTAGE + CONSTANT CURRENT MODE**

Operating Range	1~16V	1~80V	2.5~125V	2.5~500V
Setting Range	0~16.32V	0~81.6V	0~127.5V	0~510V
Resolution	0.4mV	2mV	2.5mV	10mV
Accuracy	$\pm(0.05\% \text{set} + 0.1\% \text{F.S.})$		$\pm(0.05\% \text{set} + 0.1\% \text{F.S.})$	
Current Setting Range	0~7.14A	0~71.4A	0~1.02A	0~10.2A
Resolution	0.2mA	2mA	0.05mA	0.5mA
Accuracy	$\pm(0.1\% \text{set} + 0.1\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.2\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.1\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.2\% \text{F.S.}^{*1})$

**CONSTANT POWER + CONSTANT CURRENT MODE**

Operating Range	1~35W	1~350W	1~35W	1~350W
Setting Range	0~35.7W	0~357W	0~35.7W	0~357W
Resolution	1mW	10mW	1mW	10mW
Accuracy	$\pm(0.5\% \text{set} + 0.5\% \text{F.S.}^{*1})$	$\pm(0.5\% \text{set} + 0.5\% \text{F.S.})$	$\pm(0.5\% \text{set} + 0.2\% \text{F.S.}^{*1})$	$\pm(0.5\% \text{set} + 0.5\% \text{F.S.})$
Current Setting Range	0~7.14A	0~71.4A	0~1.02A	0~10.2A
Resolution	0.2mA	2mA	0.05mA	0.5mA
Accuracy	$\pm(0.1\% \text{set} + 0.1\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.2\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.1\% \text{F.S.}^{*1})$	$\pm(0.1\% \text{set} + 0.2\% \text{F.S.}^{*1})$



NOTE : \*1 : F.S. = Full scale of H Range

**DYNAMIC MODE**

T1&T2	0.025ms~10ms/Res: 1μs 10ms ~ 30s / Res: 1ms			
Accuracy	1us / 1ms ± 100ppm			

**CONSTANT CURRENT MODE**

Slew Rate	0.001 ~ 0.28A/μs	0.01 ~ 2.8A/μs	0.16 ~ 40mA/μs	1.6 ~ 400mA/μs
Slew Rate	0.001A/μs	0.01A/μs	0.16mA/μs	1.6mA/μs
Resolution				
Slew Rate Setting	±(10% + 15us)			
Accuracy				
Current Setting	0~7.14A	0~71.4A	0~1.02A	0~10.2A
Range				
Current	0.2mA	2mA	0.05mA	0.5mA
Resolution				
Current Accuracy	±0.4% F.S.		±0.4% F.S.	

**CONSTANT RESISTANCE MODE**

Slew Rate	0.01 ~ 2.8A/μs		1.6 ~ 400mA/μs	
Slew Rate	0.01A/μs		1.6mA/μs	
Resolution				
Slew Rate Setting	±(10% + 50μs)			
Accuracy				
Resistance	0.025Ω~100Ω(350W/16V)		1.25Ω~5kΩ(350W/125V)	
Setting Range	1.25Ω~5kΩ(350W/80V)		50Ω~200kΩ(350W/500V)	
Resistance	1ms(350W/16V)		20μs(350W/125V)	
Resolution	20μs(350W/80V)		0.5μs(350W/500V)	
Resistance	100Ω: ±(0.5%set + 0.1S)		5KΩ: ±(0.5%set + 0.02S)	
Accuracy	5kΩ: ±(0.5%set + 0.01S)		200kΩ: ±(0.5%set + 0.005S)	

**MEASUREMENT**

**VOLTAGE READBACK**

Range	0~16V	0~80V	0~125V	0~500V
Resolution	0.32mV	1.6mV	2.5mV	10mV
Accuracy	±(0.025%set + 0.025% F.S.)			

**CURRENT READBACK**

Range	0~7A	0~70A	0~1A	0~10A
Resolution	0.14mA	1.4mA	0.02mA	0.2mA
Accuracy	±(0.05%set + 0.05% F.S.*2)			

**POWER READBACK**

Range	0~35W	0~350W	0~35W	0~350W
-------	-------	--------	-------	--------

Accuracy  $\pm(0.1\%set + 0.1\% F.S.^{*1})$

NOTE : \*1 : Power F.S. = Vrange F.S. x Irange F.S.

\*2 : F.S. = Full scale of H Range

**PROTECTIVE**

**Over Power Protection**

Range 1.75~357W

Resolution 1.75W

Accuracy  $\pm(2\%set + 0.25\%F.S.)$

**Over Current Protection**

Range 0.875~71.4A 0.125~10.2A

Resolution 0.175A 0.025A

Accuracy  $\pm(2\%set + 0.25\%F.S.)$

**Over Voltage Protection**

Range 1~81.6V 2.5~510V

Resolution 0.2V 1.25V

Accuracy  $\pm(2\%set + 0.25\%F.S.)$

Over  $\cong 85^{\circ}C$

Temperature  
Protection

**Rated Power Protection(CPP)**

Value 385W

Accuracy  $\pm 5\%set$

**GENERAL**

**SHORT CIRCUIT**

Current(CC)  $\cong 7.7/7A$   $\cong 77/70A$   $\cong 1.1/1A$   $\cong 11/10A$

Voltage(CV)  $\cong 0V$

Resistance(CR)  $\cong 1.25\Omega$   $\cong 0.025\Omega$   $\cong 50\Omega$   $\cong 1.25\Omega$

Input Resistance 500k $\Omega$ (Typical)  
(Load OFF)

Temperature 100ppm


Coefficient

Weight Approx. 3.8kg

# Dimensions


PEL-2002A

---

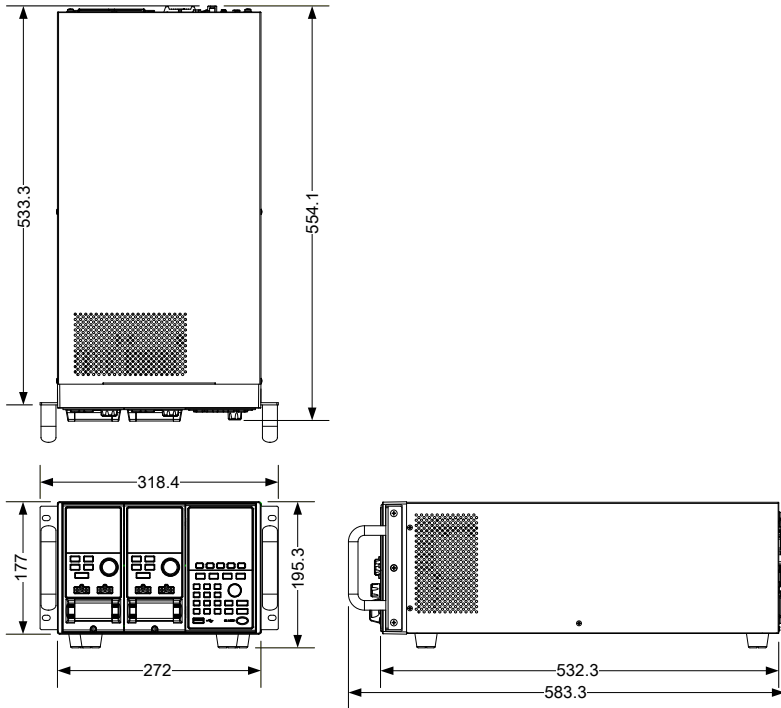


**PEL-2004A**

---

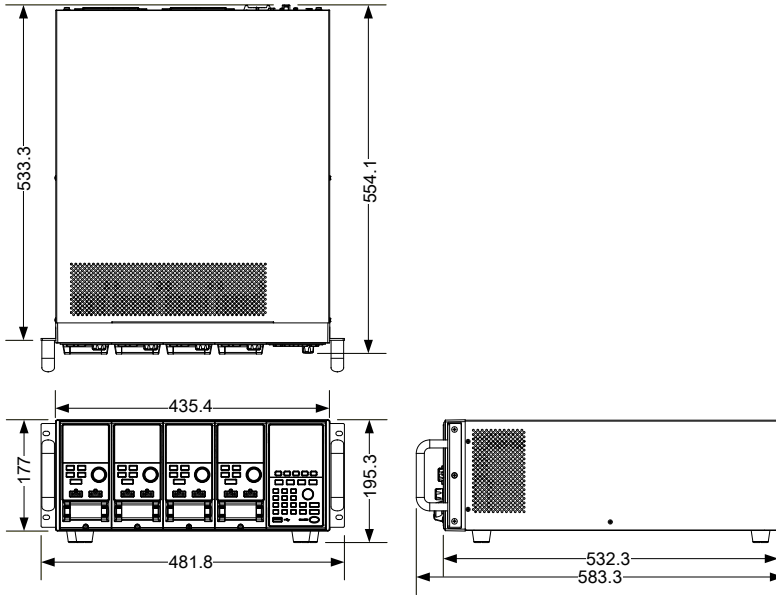

**PEL-2020A/PEL-2030A/PEL-2040A/PEL-2041A**

---

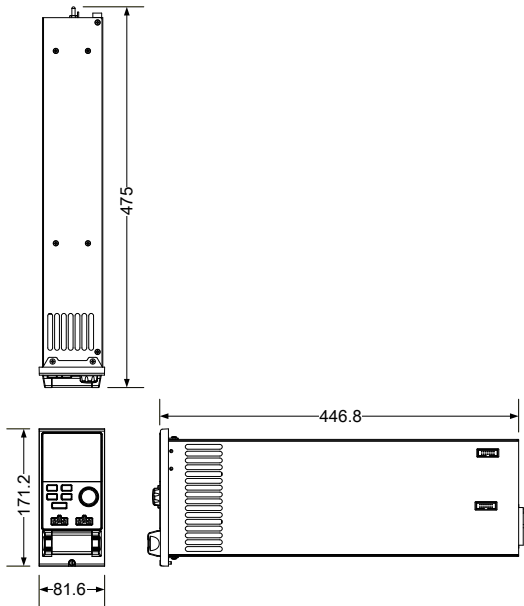

## Declaration of Conformity

We

**GOOD WILL INSTRUMENT CO., LTD.**

declare that the below mentioned product

Type of Product: **Programmable Electronic Load**

Model number: **PEL-2004A, PEL-2002A.**

Load module: **PEL-2020A, PEL-2030A, PEL-2040A, PEL-2041A.**

satisfies all the technical relations application to the product within the scope of council:

**Directive:** 2014/30/EU; 2014/35/EU; 2011/65/EU; 2012/19/EU

The above product is in conformity with the following standards or other normative documents:

© **EMC**

<b>EN 61326-1</b>	Electrical equipment for measurement, control and laboratory use -- EMC requirements (2013)	
<b>EN 61326-2-1</b>		
Conducted & Radiated Emission EN55011: 2009+A1: 2010 Class A	Electrical Fast Transients EN 61000-4-4: 2012	
Current Harmonics EN 61000-3-2: 2014	Surge Immunity EN 61000-4-5: 2006	
Voltage Fluctuations EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014	
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010	
Radiated Immunity EN 61000-4-3: 2006 +A1:2008+A2:2010	Voltage Dip/ Interruption EN 61000-4-11: 2004	

© **Safety**

<b>Low Voltage Equipment Directive 2014/35/EU</b>	
Safety Requirements	EN 61010-1: 2010 EN 61010-2-030: 2010

GOOD WILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng Dist., New Taipei City 236, Taiwan

Tel: +886-2-2268-0389

Fax: +866-2-2268-0639

Web: [www.gwinstek.com](http://www.gwinstek.com)

Email: [marketing@goodwill.com.tw](mailto:marketing@goodwill.com.tw)

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhuijiang Road, Snd, Suzhou Jiangsu 215011, China

Tel: +86-512-6661-7177

Fax: +86-512-6661-7277

Web: [www.instek.com.cn](http://www.instek.com.cn)

Email: [marketing@instek.com.cn](mailto:marketing@instek.com.cn)

GOOD WILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: +31(0)40-2557790

Fax: +31(0)40-2541194

Email: [sales@gw-instek.eu](mailto:sales@gw-instek.eu)

# INDEX

- Alarm configuration .....217, 228
- All Chan save/recall
  - description .....98
- Baud rate configuration.....232
- Brightness & contrast....212, 223
- Calibration .....296
- Calibration key .....21
- CC vrange mode description.86
- CC+CV mode.....68
- Channel configuration
  - CC voltage range..... 185
  - Go/NoGo mode ..... 201
  - Go/NoGo On/Off.....203
  - Independent setting.....193
  - Load delay time.....195
  - Parallel mode ..... 204
  - Protection All Clear..... 184
  - Response time..... 200
  - SPEC test ON/OFF ..... 203
  - Step resolution..... 197
- Channel configuration
  - Configuration menu..... 180
  - OCP/OCV/OPP..... 181
- Channel configuration
  - Von voltage configuration . 187
- Channel configuration
  - Short..... 189
- Channel configuration
  - channel control ..... 192
- Channel control configuration192, 284
- Channel control connection...57
- Channel control description ..90
- Channel control mode
  - description .....87
- Channel duration time
  - settings mode description ..80
- Cleaning the instrument.....8
- Clear key .....22
- Configuration mode
  - description .....84
- Connection
  - Channel control.....57
  - Frame link.....55
  - Go/NoGo control .....60
  - Remote sense.....50
  - Wire gauge .....46
  - Wire Inductance.....46
- Connection procedure .....48
- Constant power mode
  - description .....70
- Constant Resistance mode
  - description .....65
- Constant voltage + constant
  - current mode description...68
- Constant voltage mode
  - description .....67
- Declaration of conformity ....318
- Default Settings .....302
- Delay time mode description 88
- Dimensions .....315
- Display key .....32
- Display settings .....212, 223
- Disposal instructions .....9
- Dynamic constant current
  - mode description .....63
- Dynamic loads Constant
  - Resistance mode description66
- EN61010

measurement category .....	7	Interface menu .....	232
Pollution degree .....	9	RS232 .....	232
Enter key .....	24	USB configuration .....	233
Environment		Internal memory save	
operation .....	8	description .....	97
Storage .....	9	Knob configuration .....	215, 227
External memory save		Language Settings .....	220
description .....	97	List of features .....	13
External voltage mode		Load (module) key .....	33
description .....	90	Load connections .....	45
Features .....	13	Load Connections	
File format mode description	99	Auxiliary voltage connection	52
Firmware update .....	293	DC Connection .....	52
Frame control configuration	213, 223, 226, 229	Dual channel load module ...	51
Frame Link configuration ...	286	Low voltage connections .....	52
Frame link connection .....	55	Multiple output power source	54
Front panel overview .....	20	Parallel load modules .....	53
Function Keys .....	20	Parallel loads .....	53
Fuse		Parallel mainframes .....	54
rating .....	8	Precautions .....	45
Fuse replacement .....	292	Single channel load module.	51
Go/NoGo Alarm Sound .....	218	Single load .....	51
Go/NoGo connection .....	60	Load delay time configuration	195
Go/NoGo constant current		Load D-Time mode	
mode description .....	64	description .....	88
Go/NoGo constant Resistance		Load key .....	24
mode description .....	67	Load Menu .....	210
Go/NoGo constant voltage		Load module installation .....	38
mode description .....	69	Load module Overview .....	32
Go/NoGo interface		Load profiling description ....	77
configuration .....	289	Load terminals .....	33
GPIB card installation .....	40	Load wire induction .....	46
GPIB configuration .....	235, 282	Load wiring .....	47
Independent configuration .	193	Local operation	
Independent mode description	87	A&B Value .....	120
Installation		Channel selection .....	120
GPIB card .....	40	coarse mode .....	124
Load module .....	38	Display .....	123
Rack mount .....	41	Dynamic .....	121
Interface configuration .....	281	Editing the load .....	124
Baud Rate .....	232	fine mode .....	124
GPIB .....	235	Load .....	122
		Operation .....	120



R/L keys .....	120	Programming .....	150
Shorting .....	123	Recall default chain .....	157
Static .....	121	Recall default sequence.....	154
Lock key .....	22	Run Sequence.....	170
Mainframe configuration		Save chain.....	157
alarm sound .....	217, 228	Save Program chain.....	157
Brightness & contrast..	212, 223	Save sequence .....	154
Configuration menu.....	208	Sequence loop .....	165
Frame control.....	213, 223, 226, 229	Trig out .....	167
Go/NoGo Tone .....	218	Measurement types.....	17, 19
Knob type .....	215, 227	Memory data description.....	95
Language .....	220	Number pad.....	21
Load menu .....	210	OCP test automation.....	173
Slave knob .....	219, 229	OCP Test Automation	
Speaker .....	211, 221	description .....	82
System Info.....	208	Operating configurations	
Utility menu .....	208	mode description .....	86
Mainframe operation		Operating Description .....	61
CC Dynamic mode.....	129	Operating Modes	
CC Mode .....	128	Channel duration time	
CC Range.....	128	settings.....	80
CC Static mode .....	132	Configuration.....	84
CC Static Values.....	132	Configuration - Over current	
Channel duration time		protection .....	85
settings .....	167	Configuration - Over power	
Channel Selection.....	126, 127	protection .....	85
CP Current limit .....	146	Configuration - Over voltage	
CP mode .....	145	protection .....	85
CP Power values.....	146	Constant current - Go/NoGo.....	64
CP range .....	144, 148	Constant current - Slew rate.....	64
CR Range.....	135	Constant current -Dynamic .....	63
CR Static Parameters.....	139	Constant current -static.....	63
CR Dynamic mode .....	136	Constant Power.....	70
CR mode .....	134	Constant Resistance.....	65
CR Static mode .....	139	Constant Resistance -	
CV Current limit.....	142	Dynamic loading.....	66
CV mode .....	141	Constant Resistance - Slew	
CV response speed .....	144	rate .....	67
CV Voltage values .....	142	Constant Resistance	
Edit Sequence.....	163	Go/NoGo .....	67
OCP test automation.....	173	Constant Voltage .....	67
Program chain.....	155	Constant Voltage - Response	
Program Execution.....	157	speed .....	69
Program Sequences.....	150		

Constant Voltage + Constant Current Mode.....	68	Over voltage mode description.....	85
Constant Voltage -Go/NoGo69		Overview .....	15
Constant Voltage -levels .....	68	Display Overview .....	25
External Voltage Control.....	90	Front panel .....	20
File format.....	99	LED display.....	35
File System .....	94	Load module.....	32
Go/NoGo.....	76	Rear Panel.....	29
Interface.....	94	Parallel Dynamic loading description.....	83
Memory data .....	95	pass/ fail test multiple step tutorial .....	102
Operating Configuration s - Von Voltage.....	86	Power key .....	24
Operating Configurations....	86	Power supply Safety information.....	7
Operating Configurations - CC vrange.....	86	Power up .....	43
Operating Configurations - independent .....	87	Power up sequence .....	43
Operating Configurations - Load D-Time .....	88	Preset data description .....	95
Operating Configurations - Short .....	89	Preset key .....	22
Operating Configurations - Step Resolution .....	88	Program Chain mode description.....	76
Parallel Dynamic Loading ...	83	Program mode description ...	74
Preset data.....	95	Protection All clear.....	184
Program Chain .....	76	Quick save Presets to internal memory.....	273
Reverse voltage protection ..	86	R/L key.....	32
Run Program .....	74	Rack mount installation.....	41
save/recall All Chan.....	98	Range Chart.....	297
SEQ data.....	96	Recall factory defaults.....	276
Sequences.....	77	Recall Memory data to USB	258
Setup data .....	96	Recall Presets - Framelink ...	275
Trig Out.....	79	Recall Setups - Framelink ....	274
USB save/recall.....	98	Remote control sockets function check	238, 242
Operation Contents .....	117	Remote control function check GPIB .....	242
Local load.....	120	Remote sense connections.....	50
Operation Environment .....	8	Response speed constant voltage mode description..	69
Operation keys.....	22	Response time.....	200
Over Current mode description.....	85	Reverse voltage protection....	86
Over power mode description	85	RS232 configuration .....	232
Over protection configuration .....	181		

- RS-232C configuration.....281
- Safety Instructions.....6
- Safety symbols.....6
- Save Memory data .....244
- Save Memory data to USB ...258
- Save Preset memory .....246
- Save presets to USB.....263
- Save Sequences to USB.....268
- Save setup memory.....248
- Save setup to USB .....255
- Save to internal memory244, 250
- Save to internal setup memory248
- Save/Recall
  - default USB path ..... 250
  - FrameLink Preset Recall..... 275
  - FrameLink Setup Recall..... 274
  - Preset memory ..... 246
  - Quick save Presets to internal memory ..... 273
  - Recall factory defaults ..... 276
  - Recall Memory data to USB258
  - Save Memory data to USB.. 258
  - Save Preset Memory ..... 246
  - Save presets to USB.....263
  - Save SEQ (Sequences) to USB268
  - Save setup to USB..... 255
  - Save to internal Memory .... 250
  - Save to setup Memory ..... 248
  - Setup memory..... 248
  - USB path..... 250
- Save/Recall
  - Memory data..... 244
  - Save to internal Memory .... 244
- Selector Knob.....22
- SEQ data description .....96
- Sequence editing/creating...163
- Sequence mode description...77
- Sequences mode description .74
- service contact point .....291
- Setting the date and time .....231
- Setup data description.....96
- Shift key.....23
- Short configuration.....189
- Short key .....34
- Shorting mode description ....89
- Slave knob
  - settings..... 219, 229
- Slave knob
  - description..... 34
- Slew rage constant current
  - mode description ..... 64
- Slew rate Constant Resistance
  - mode description ..... 67
- Socket server function check238, 242
- Speaker Settings .....211, 221
- Specifications .....305
- Static constant current mode
  - description .....63
- Static/ Dynamic key .....34
- Step resolution.....197
- Step Resolution mode
  - description .....88
- Storage Environment.....9
- System Info .....208
- System Keys.....20
- Terminals.....33
- Trig out .....167
- Trig out mode description ....79
- Tutorials
  - Channel control.....113
  - Frame link.....111
  - General configuration options115
  - Local load .....102
  - Parallel load.....106
  - Program .....110
  - Single load .....104
- Tutorials
  - Basic Operation.....101
- Twisted pair description .....47
- UK power cord.....10
- USB configuration.....233
- USB path.....250
- USB remote interface
  - connection.....290
- USB save/recall description ..98

Utility Menu.....	208	Von voltage mode description	86
Voltage levels constant		Wire Connections .....	45
voltage mode description..	68	Wire gauge .....	45
Voltage sense terminal.....	33	Wire induction .....	46
Von voltage configuration ..	187	Wiring procedure .....	48