

Дистанционно управление VESTEL RC-1055 е предназначено за следните модели телевизори:

ACOUSTIC SOLUTIONS LCD1515F,
ACOUSTIC SOLUTIONS LCD1595UVF,
ACOUSTIC SOLUTIONS LCD26805HD,
ACOUSTIC SOLUTIONS LCD26NK750HD,
ACOUSTIC SOLUTIONS LCD26NK750HDF,
ACOUSTIC SOLUTIONS LCD32761HDF,
ACOUSTIC SOLUTIONS LCD32762HDF,
ACOUSTIC SOLUTIONS LCD32805HD,
ACOUSTIC SOLUTIONS LCD32NK750HD,
ACOUSTIC SOLUTIONS LCD32NK750HDF,
ACOUSTIC SOLUTIONS LCD37761F1080P,
ACOUSTIC SOLUTIONS LCD37761HDF,
ACOUSTIC SOLUTIONS LCD37762HDF,
ACOUSTIC SOLUTIONS LCD37805HD,
ACOUSTIC SOLUTIONS LCD40765HDF,
ACOUSTIC SOLUTIONS LCD42761HDF,
ACOUSTIC SOLUTIONS LCD42805HD,
ACOUSTIC SOLUTIONS LCDW19HDF,
AKURA AV20700-IDTV, AKURA TXPROM,
ALBA LCD42880F1080P, ALBA LCDW16HDF,
ANDERSSON A190WD, ANDERSSON A190WD DVD,
ANDERSSON Y75HD, ANDERSSON Y80HDDVB-T,
ANSONIC LCD326HP, ANSONIC TELECOMANDA-TV,
BUSH IDLCD17TV022X, BUSH IDLCD26TV27HD,
BUSH IDLCD32TV022HD, BUSH IDLCD32TV27HD,
BUSH IDLCD37TV25HD, BUSH IDLCD37TV27HD ,
BUSH IDLCD42TV25HD, BUSH LCD23TV022,
BUSH LCD26TV022HDX, BUSH LCD32F1080P,
BUSH LCD32TV022HD, BUSH LCD37TV022HD,
BUSH LCD37TV025HD, BUSH LCD42TV025HD,
BUSH RF2194D, BUSH PROMTX,
CYBERPIX TM26720U, CYBERPIX TM-26720U,
CYBERPIX TM4217U, CYBERPIX TM-4217U,
DIGIHOME 16822HDDIGITAL, DIGIHOME 2015,
DIGIHOME 22784WHD, DIGIHOME 32723HD,
DIGIHOME 37723HDDIGITAL, DIGIHOME DH15DLCD07B,
DIGILOGIC D15LCDTV-1, DIGILOGIC D15LCDTV-1,
DUAL DPTV42-2, DUAL DPTV42-5,
DUAL DPTV50-1, DUAL DTFT15-2,
DUAL DTFT26-4, DUAL DTFT32-4, DUAL DTFT40-1,
ELBE XTV1552, ELBE XTV1600, ELBE XTV1601,

ELBE XTV1910, ELBE XTV1911, ELBE XTV1912,
ELBE XTV2200, ELBE XTV2201, ELBE XTV2202,
ELBE XTV2640, ELBE XTV2650, ELBE XTV2655,
ELBE XTV3280, ELBE PROMTX,
ELFUNK 26832HD, ELFUNK 26855UT, ELFUNK 3008,
ELFUNK 42832FHD, ELFUNK 52786FHD,
EVESHAM ALQEM32VX,
FAIRTEC FC-26-Z23, FAIRTEC FC26Z23,
FERGUSON FTV21F1,
FINLUX 15FL745, FINLUX 20FL745, FINLUX 20FL745T,
FINLUX 22FLD850VHU, FINLUX 26FL745, FINLUX 26FL785,
FINLUX 26FLD745, FINLUX 32FL745, FINLUX 32FL760,
FINLUX 32FL760TC, FINLUX 32FLD745, FINLUX 32FLD760(L1),
FINLUX 32FLD850U-C1, FINLUX 37FL745, FINLUX 37FLD745,
FINLUX 37FLD760(L2), FINLUX 37FLD760, FINLUX 42FL745,
FINLUX 42FLD745, FINLUX 42FLD760, FINLUX 42FLHD760,
FINLUX 42FLHD785, FINLUX 42FLHD800,
FISHER 32FD01, FISHER 37FD01,
FUNAI 29D-0528HS, FUNAI 29D0528HS, FUNAI 30A0828WL,
GOGEN S5522DVBT,
GOODMANS GLCD26W3DVBT, GOODMANS GLCD26W3DVBT,
GOODMANS GTV42P5HD, GOODMANS GTV42P5HD,
GOODMANS GTVL26W26HD, GOODMANS GTVL26W26HD,
GOODMANS GTVL26W26HDF, GOODMANS GTVL26W26HDF,
GOODMANS GTVL32W17HDFX, GOODMANS GTVL32W17HDFX,
GOODMANS GTVL32W26HD, GOODMANS GTVL32W26HD,
GOODMANS GTVL32W26HDF, GOODMANS GTVL32W26HDF,
GOODMANS GTVL37W17HDFX, GOODMANS GTVL37W17HDFX,
GOODMANS LD1960D, GOODMANS LD1960D, GOODMANS LD2245D,
GOODMANS LD2245D, GOODMANS LD2262D, GOODMANS LD2262D,
GOODMANS LD2661HDFVT, GOODMANS LD2661HDFVT,
GOODMANS LD3260HDFVT, GOODMANS LD3260HDFVT,
GOODMANS LD3261HDFVT, GOODMANS LD3261HDFVT,
GOODMANS LD3265D1, GOODMANS LD3265D1,
GOODMANS LD3270D, GOODMANS LD3270D,
GOODMANS LD4255HD, GOODMANS LD4255HD,
GOODMANS LD4260HDFVT,
GRANDIN 32LVA07T, LC1505T, LC16V09,
GRUNDIG DTR1200, GRUNDIG GU19WDV4, GRUNDIG GU22WDV4,
GRUNDIG GULCD26HDIV, GRUNDIG GULCD32HDIV,
GRUNDIG GULCD37HDIV, GRUNDIG GULCD42HDIV,
HITACHI 15LD2550B, HITACHI 15LD2550EB,
HITACHI 15LD2550EWA, HITACHI 19LD2550B,
HITACHI 19LD2550EBLCD, HITACHI 22LD3560U,
HITACHI 32LD30UA, HITACHI L26HP03U,

HITACHI RC1055,
HYUNDAI HLT2601HD, HYUNDAI HLT-2601HD,
HYUNDAI HLT2670, HYUNDAI HLT-2670,
KENDO CT26S55SNSI, KENDO LC10S32DVB-T,
KENDO LC11S16DVB-T, KENDO LC11S40USB,
KENDO LC11S47HD, KENDO LC28S81HD,
KENDO LC29S66HD,
KINETIX KIN32805LCD,
LINSAR L15F102, LINSAR L22HDF102,
LINSAR L26HDF202, LINSAR L32HDF202,
LOGIK 32LW782,
LUXOR 1515, LUXOR 1595 DIGITAL, LUXOR 19751HDD IGITAL,
LUXOR 2311, LUXOR 26761HD DIGITAL,
LUXOR 26762HD DIGITAL, LUXOR 3211,
LUXOR 32756HD DIGITAL, LUXOR 32761HD DIGITAL,
LUXOR 32762HD DIGITAL, LUXOR 3711,
LUXOR 37761HD DIGITAL, LUXOR 37762HD DIGITAL,
LUXOR 42761HD DIGITAL, LUXOR HD19796D,
LUXOR HD19822D, LUXOR HD22822D, LUXOR LCD-328,
LUXOR LUX1515D, LUXOR LUX-1515D, LUXOR LUX26765,
LUXOR LUX-26765, LUXOR LUX32765, LUXOR LUX-32765,
MATSUI 15L607, MATSUI 15LI618, MATSUI M19L1618,
MATSUI MAT26LW507, MATSUI MAT26LW508,
MATSUI MAT32LW507, MATSUI MAT32LW508,
MATSUI M37LW508, MATSUI M42LW508,
MATSUI MAT42WL3306E,
MEDION MD20099, MEDION MD30025/A, MEDION MD30025/S,
MEDION MD30116, MEDION MD30134, MEDION MD30200,
MEDION MD30238, MEDION MD30247, MEDION MD30272A,
MEDION MD30726, MEDION MD32532, MEDION P16005,
MIKOMI LCD15796, MIKOMI LCD15796BF, MIKOMI LCD15796F,
MIKOMI LCD15796PF, MIKOMI LCDW19HD,
MYRIA MY20735, MYRIA MY20735BK, MYRIA MY20735BKW,
MYRIA MY20735W, MYRIA MY32735, MYRIA PROMTX,
NORDMENDE MR26E30, NORDMENDE NM26780,
NORDMENDE NM32720, NORDMENDE NM32780,
NORDMENDE NM37780, NORDMENDE NM42780,
NOVITA LCDTV4205, NOVITA TXPROM,
OKI TVV15, OKI TVV15TD, OKI TVV20,
OKI TVV20TD, OKI TVV22TD, OKI TVV26TD,
OKI TVV32, OKI TVV32T1, OKI TVV32T2,
OKI TVV32TD, OKI TVV37TD, OKI TVV42FH,
OKI TVV42TD, OKI V15A-PH, OKI V16A,
OKI V19A-LED1, OKI V19A-LED2, OKI V19A-PH,
OKI V19B-PH, OKI V19C-PH, OKI V19D-PH,

OKI V22A-PH, OKI V22B-FH, OKI V22B-FHI,
OKI V22E-PHI, OKI V24A-LED1 OKI V26A-H,
OKI V26B-FHSU, OKI V26B-H, OKI V26C-PHTU,
OKI V32A-FH, OKI V40A-PHS, OKI V42A-FHS,
OKI V42B-FHSU, OKI PROMTCX
ONN LE26LCD0802I, ONN LE32LCD0802ID,
OPERA TV5561, OPERA TELECOMANDA-TV,
ORION 17MB24, ORION LCD19, ORION LCD20,
ORION LCD26, ORION LCD32, ORION LCD37S,
ORION LCD37S, ORION LCD42, ORION LCDPI32-B,
ORION LCDPIF37, ORION LCD-PIF37, ORION LCDPT32S,
ORION LCD-PT37S ORION LCD-PT37S LCD,
ORION LCDDT15B LCD, ORION LCDDT15B, ORION LCDDT15B,
ORION LCDDT15S, ORION PT32-S, ORION T19S, ORION T20S,
QUADRO TFT-20DT1, QUADRO TFT-26DT1, QUADRO TFT-26KL20,
QUADRO TFT-27DT1, QUADRO TFT-27KL20, QUADRO TFT-32DT1,
QUADRO TFT-32KL20, QUADRO TFT-37DT1, QUADRO TFT-37KL20,
QUADRO TFT-40DT1, QUADRO TFT-40KL20,
SABA S19LV08,
SAIVOD LCD-632CI,
SANYO CE15LC95-C/P, SANYO CE19LC95-C/P,
SANYO CE19LD90-B, SANYO CE19LD95-B, SANYO CE20WLD25-B,
SANYO CE22LD90-B, SANYO CE22LD94-B, SANYO CE26HW04,
SANYO CE26LD81-B/UK, SANYO CE26LD81-C, SANYO CE26LD90-B,
SANYO CE32HW04, SANYO CE32LD33-B, SANYO CE32LD81-B/UK,
SANYO CE32LD81-C, SANYO CE32LW02, SANYO TXPROROM,
SANYO CE37FD33-B, SANYO CE37HW04, SANYO CE37LD33-B,
SANYO CE37LD81-B, SANYO CE42FD33-B, SANYO CE42FD81-B,
SANYO CE42HW04, SANYO CE42LD33-B, SANYO CE42LD81-B,
SANYO CE47FD33-B, SANYO CE47FD51-B, SANYO CES26WSD7-B,
SANYO CES32WSD7-B, SANYO CES37WSD7-B, SANYO RC1055,
SCHNEIDER STV1488,
SEG ATLANTIC II, SEG ATLANTIC, SEG HOBART,
SEG INDIANAPOLIS-S, SEG SAGA, SEG TURAN,
SILVERCREST LCD-TV 73208, SILVERCREST LCD-TV 73218,
STERLING LCD40765HDF,
SUPERIOR VLCD32064,
TECHLINE TL-26LC783 II, TECHLINE TL-32LC783,
TECHLINE TL-32LC856, TECHNICAL LCD2218HDTB,
TECHNICA 2105, TECHNICA RC1243,
TECHNICAL 1017HDTS, TECHNICAL 3218HDTB,
TECHNICAL LCD3718HDTB, TECHNICAL TCT14B,
TECHNICAL TN85S+FUN, TECHNICAL PROMTX,
TECHNIKA LCD26-290, TECHNIKA LCD26-209V,
TECHNIKA LCD26290, TECHNIKA LCD26209V,

TECHNIKA LCD15ID-107, TECHNIKA LCD32-209V,
TECHNIKA LCD32-209X, TECHNIKA LCD32209V,
TECHWOOD LCD3207HD, TECHWOOD LCD3711,
TECHWOOD NATUS X815DVB-T, TECHWOOD NATUS X815DVB-T/12,
TECHWOOD NATUS X819, TECHWOOD NATUS X819DVB-T,
TECHWOOD NATUS X820, TECHWOOD NATUS X822,
TECHWOOD NATUS X822DVB-T, TECHWOOD NATUS X826,
TECHWOOD NATUS X832A, TECHWOOD NATUS X832A-100,
TECHWOOD NATUS X832A-II, TECHWOOD NATUS X832A-IIA,
TECHWOOD NATUS X832S, TECHWOOD NATUS X832SA,
TECHWOOD NATUS X832S-II, TECHWOOD NATUS X832S-IIA,
TECHWOOD NATUS X837, TECHWOOD NATUS X837FHD,
TECHWOOD NATUS X842FHD, TECHWOOD NATUS X847FHD,
TECHWOOD NATUS X932B, TECHWOOD NATUSX922B DVB-T,
TECHWOOD NATUSX922B, TECHWOOD RC1055,
TELE SYSTEM PALCO 19/L02, TELE SYSTEMPALCO 22/L02,
TELE SYSTEMPALCO 32/L02,
TELEFUNKEN RC1055, TELEFUNKEN T26R761,
TELEFUNKEN T40R781FHD, TELEFUNKEN T40R781FHD,
TELEFUNKEN T47FHD761R, TELEFUNKEN TE26FD857HURTOS,
TELEFUNKEN TE26FD857HURTOS2, TELEFUNKEN
TE26FD857HURTOSI,
TELEFUNKEN TE26FD857HUTS, TELEFUNKEN TE26FD857HUTS2,
TELEFUNKEN TE26FD857HUTSI, TELEFUNKEN TE26FE857HURTOS,
TELEFUNKEN TE26FE857HURTOS2, TELEFUNKEN
TE26FE857HURTOSI,
TELEFUNKEN TE26FE857HUTS, TELEFUNKEN TE26FE857HUTS2,
TELEFUNKEN TE26FE857HUTSI, TELEFUNKEN TE42ED857HURTOS,
TELEFUNKEN T32R900 II FHD, TELEFUNKEN TXPROM,
TELEFUNKEN TE42ED857HURTOS2, TELEFUNKEN
TE42ED857HURTOSI,
TELEFUNKEN TE42ED857HUTS, TELEFUNKEN TE42ED857HUTS2,
TELEFUNKEN TE42ED857HUTSI, TELEFUNKEN TE42EE857HURTOS,
TELEFUNKEN TE42EE857HURTOS2, TELEFUNKEN
TE42EE857HURTOSI,
TELEFUNKEN TE42EE857HUTS, TELEFUNKEN TE42EE857HUTS2,
TELEFUNKEN TE42EE857HUTSI, TELEFUNKEN TS26D761L,
TELEFUNKEN TL19857XN4, TELEFUNKEN TXPROM,
TELEFUNKEN TS32D761L, TELEFUNKEN TS32MD761HS,
TELETECH 20715, TELETECH 20715W, TELETECH 32715BK,
TELETECH L-22875SB, TELETECH LCD 16855,
TELETECH LCD 19855, TELETECH LCD 22855,
TESLA 32LCD45WD,
TEVION CTV7110A, TEVION CTV7110S, TEVION CTV7110SA,
TEVION MD30024, TEVION P15017, TEVION TEVION CTV7110AA,

UNIDEN TFT-32750HD,
UNIVERSUM FT-LCD 81091, UNIVERSUM FT-LCD 8165,
UNIVERSUM FT-LCD 8166, UNIVERSUM FT-LCD 8176,
VESTEL LCD40765,
WALKER WP2006LCD,
WALTHAM DTV1500V,
WHARFEDALE CTV2122F, WHARFEDALE LCD1710AF,
WHARFEDALE LCD2010AF, WHARFEDALE LCD2310AF,
WHARFEDALE LCD2610HDAF, WHARFEDALE LCD26HDMI,
WHARFEDALE LCD2710HDAF, WHARFEDALE LCD3210HDAF,
WHARFEDALE LCD32HDMI, WHARFEDALE LCD3710HDA,
WHARFEDALE LCD3710HDAF, WHARFEDALE LCD37F1080P,
WHARFEDALE LCD42720HDF, WHARFEDALE LCD42F1080P