 
 


Single-phase power meter
 Voltage(when $\leq 600V$)input directly
 Current(when $\leq 5A$)input directly



Single-phase power meter
 Voltage(when $\leq 600V$)input directly
 Current(when $> 5A$)input via CT



Single-phase power meter
 Voltage(when $> 600V$)input via PT
 Current(when $> 5A$)input via CT