


Chapter 4. Cautions

- 4.1 Please confirm if the power supply, input signal and each terminal wiring of the meter are correct and reliable before applying the power.
- 4.2 The instrument must be preheated for 15 minutes to guarantee the precision of measurement.
- 4.3 The instrument should not be rapped, knocked and vibrate excessively and its using environment should meet the technical requirements.
- 4.4 The meter has been calibrated according to the measuring range required by the customer upon order. The user should check once again if the measuring range of the meter is fit with the specifications of the transformer and set the measuring range again if not.

Chapter 5. Packing and Storage

The instrument and accessories with packing should keep storage conditions cool and dry and free of wet and corrosive gas with temperature not more than 70°C and not less than -40°C, and relative humidity ≤ 85% RH.

Digital Ammeter Digital Voltmeter Digital Frequency Meter

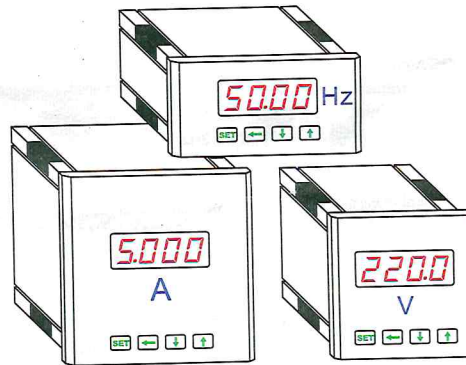

Operational Instruction Manual

- 7 -

Digital Ammeter, Voltmeter, Frequency Meter

Please read through the manual before installation and operation

Chapter 1. Technical parameters

- 1.1 Measuring range:
 - 1.1.1 Digital AC Voltmeter
 - Direct measurement: AC 0~600V
 - Accessory device: AC 0~9999KV(PT*/100V)
 - 1.1.2 Digital DC Voltmeter
 - Direct measurement: DC 0~600V
 - 1.1.3 Digital AC Ammeter
 - Direct measurement: AC 0~10A
 - Accessory device: AC 0~9999A(CT*/5A)
 - 1.1.4 Digital DC Ammeter
 - Direct measurement: DC 0~10A
 - DC 0~9999A(Shunt*/75mV)
 - 1.1.5 Digital Frequency Meter: 30.00~99.99Hz
- 1.2 Accuracy rating: voltage¤t: ±0.5% FS±1 digit, frequency: 0.1Hz
- 1.3 Sampling rate: about 1 times/s
- 1.4 Measuring display mode: RMS measurement, four-digit LED nixietube display
- 1.5 Display resolution: Max. display resolution : 0.001A, 0.1V, 0.01Hz
- 1.6 Input circuit consumption: current<0.5VA, voltage&frequency<1VA
- 1.7 Auxiliary power supply: AC 220V, 50/60Hz(Can customize other values)
- 1.8 Auxiliary supply consumption: < 3VA
- 1.9 Overflow indication: Displaying character "HHHH"
- 1.10 Alarm Output: Higher and lower limit alarm output by two groups of reply, contact rating is AC250V/2A, DC30V/2A
- 1.11 Transmitting output: can be set freely as DC 0~10mA, 0~20mA or 4~20mA, accuracy rating is ±0.5% FS, electrical isolation between the signal input and auxiliary power supply
- 1.12 Transmitting output load resistance: ≤500Ω
- 1.13 Communication interface: RS485 serial communication, applying MODBUS_RTU communication protocol
- 1.14 Operational environment: free of corrosive gas with temperature of -10~50°C, and humidity 85%RH

Note: communication output, alarm output, transmitting output are additional functions.

- 1 -


Chapter 2. Installment and connection

2.1 Shape and cutout hole dimension(unit: mm)

Shape	Panel dimension		Case dimension			Cutout hole dimension	
	W	H	W	H	D	W	H
120×120Square	120	120	110	110	83	112	112
96×96Square	96	96	90	90	83	92	92
80×80Square	80	80	74	74	83	76	76
72×72Square	72	72	66	66	83	68	68
48×48Square	48	48	44	44	73	45	45
96×48Rectangular	96	48	90	44	83	92	45

2.2 Method of installation

Choose the corresponding hole cutout dimension from the table above, make a hole in the installation screen, insert the instruments into the hole, place the four clamping pieces into the clamping holder and push and tighten them by hand.

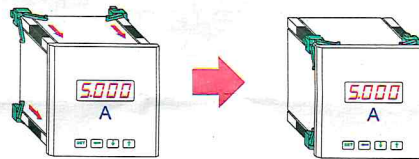


2.3 Wiring instructions

2.3.1 Terminal arrangement and function declaration of instrument (please accord to the one of instrument case)

Auxiliary power supply (POWER): AC 220V, 50/60Hz (Can customize other values)
Electrical quantity signal input (INPUT): HI represents "+" port of DC input signal, live wire terminal of AC voltage input signal and inlet wire terminal of AC current input signal.


2.3.2 Typical connection

(1) Digital Voltmeter, Frequency Meter

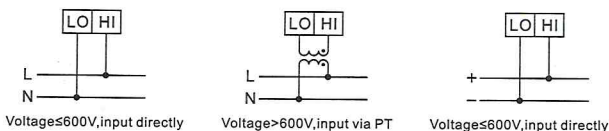


- 2 -

(2) Digital Ammeter

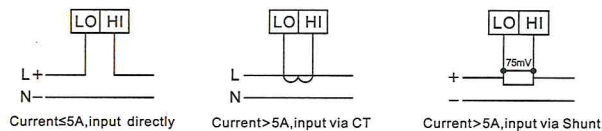

Chapter 3. Programming and usage


3.1 Panel description

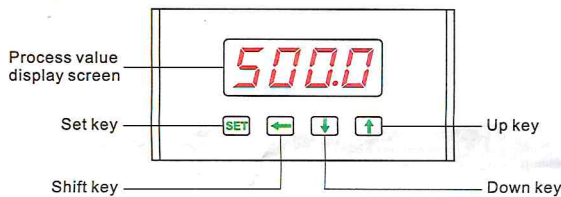


3.2 Key function

- SET** Set key: Press this key 2s to enter the programmable mode; Under the programmable mode, it is used to save and return to the menu.
- ←** Shift key: Under the programmable mode, it is used to left shift the cursor one digit, and quit the programmable mode and return to the measuring value display interface.
- ↓** Down key: under the programmable mode, it is used for depression of parameter value or enter the next menu;.
- ↑** Up key: under the programmable mode, it is used for progressive increase of parameter value or enter the previous menu;

 
3.3 Display description




Digital Ammeter

 

Digital Frequency Meter

 

3.4 Menu framework

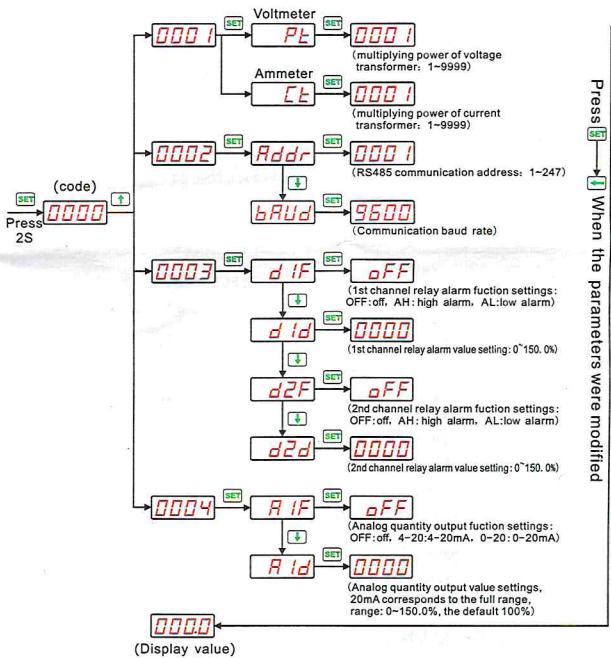

3.5 Menu significations


Under the programmable mode, four menu setting items including of signal input, communication, switching value output, analog quantity output. Signal input code:0001; communication code:0002; switching value output code:0003; analog quantity output:0004.

Menu	Parameter	Description
Code	0001, 0002 0003, 0004	Signal input code:0001; Communication code:0002; Switching value output code:0003; Analog quantity output:0004.
Pt	1~9999	Set multiplying power of voltage transformer:PT (Primary value/second value of voltage transformer) for example: PT=300A/50A=60
Ct	1~9999	Set multiplying power of current transformer:CT (Primary value/second value of current transformer) for example: CT=300A/50A=60
Addr	1~247	RS485 communication address: 1~247
bAud	1200, 2400 4800, 9600	Communication baud rate
d1F	OFF AH AL	1st channel relay alarm function settings: OFF:off, AH: high alarm, AL:low alarm
d1d	0~150.0%	1st channel relay alarm value setting: 0~150.0%
d2F	OFF AH AL	2nd channel relay alarm function settings: OFF:off, AH: high alarm, AL:low alarm
d2d	0~150.0%	2nd channel relay alarm value setting: 0~150.0%
R1F	OFF 0-20 4-20	Analog quantity output function settings: OFF:off, 4-20:4-20mA, 0-20:0-20mA
R1d	0~150.0%	Analog quantity output value settings, 20mA corresponds to the full scale, range: 0~150.0%, the default 100%


3.6 Programming operation examples

The measuring range of instruments has been set as the same parameters provided by users at the factory. Users should check if the input network, voltage/current measuring range and transformer multiplying power are consistent with the actual input again before use.

Example 1: The factory default parameter is AC 5A(CT=1); If the current transformer is 100A/5A, should modify the CT multiplying power as 20(100/5)

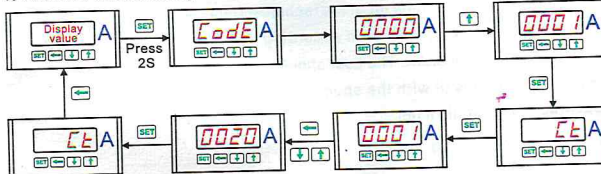

Example 2: The factory default parameter is AC 10KV/100V(PT=10KV/100V=100); If the voltage transformer is 10KV/100V, should modify the PT multiplying power as 350(PT=35KV/100V=350)

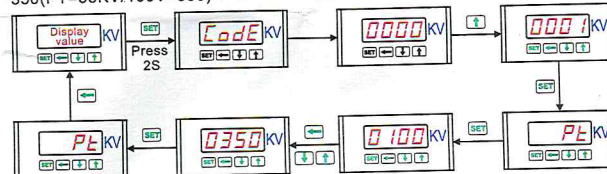

Example 3: The factory default parameter is DC 100A/75mV(CT=100/5=20); If the SHUNT is 400A/75mV, should modify the CT multiplying power as 80(CT=400/5=80)

