


### III. Safety Information

1. Supply voltage should be follow the specifications, other high voltage would most probably destroy it.
2. Connect the wires of the controller and LED fittings as per the instruction.

#### Connect Diagram

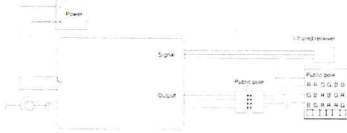

## USER MANUAL



### IR CONTROLLER