RSM954N

subminiature signal relays





- Subminiature monostable relays
- DC coils of up to 24 V DC, low coil power 0,36 W
- For PCB
- Sealed, for wave soldering and cleaning
- Small dimensions, light weight
- Application: for telecommunication devices, household electrical appliance, office equipment, etc.
- Recognitions, certifications, directives: RoHS, callus

, , , , , , , , , , , , , , , , , , ,		
1 CO		
Ag/Au 0,2 μm		
125 V / 220 V		
6 V		
3 A / 125 V AC		
3 A / 30 V DC		
50 mA		
3 A		
375 VA		
$\leq 50 \text{ m}\Omega$		
3 24 V		
DC: ≥ 0,1 U _n		
see Table 1		
0,36 W		
100 MΩ 500 V DC, 60 s		
1 000 V AC type of insulation: basic		
500 V AC type of clearance: micro-disconnection		
≥ 1,2 mm		
≥ 2 mm		
5 ms / 5 ms		
10 ⁵ 3 A, 125 V AC		
10 ⁵ 3 A, 30 V DC		
107		
15,5 x 11 x 11,5 mm		
3,5 g		
-25+55 °C		
IP 64 PN-EN 60529		
10 g		
1,5 mm DA (constant amplitude) 1055 Hz		
max. 235 °C		
max. 3,5 s		

The data in bold type pertain to the standard versions of the relays.

Coil data - DC voltage version

Table 1


www.relpol.com.pl

Coil code	Rated voltage V DC	1 21 201 1	Acceptable resistance		iting range DC
	, 20	Ω	10010101100	min. (at 20 °C)	max. (at 20 °C)
1003	3	25	± 10%	2,25	3,3
1005	5	75	± 10%	3,75	5,5
1006	6	100	± 10%	4,50	6,6
1009	9	225	± 10%	6,75	9,9
1012	12	400	± 10%	9,00	13,2
1024	24	1 600	± 10%	18,00	26,5


RSM954N

subminiature signal relays


Dimensions

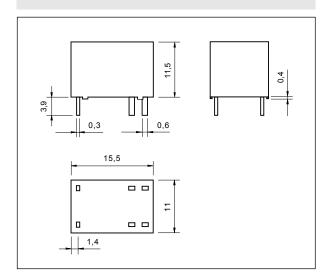

Connection diagram (pin side view)

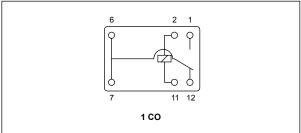


Pinout (solder side view)

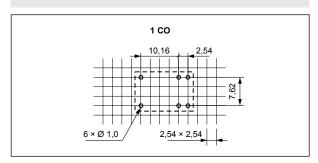

Mounting

Relays RSM954N are designed for direct PCB mounting.

Ordering codes

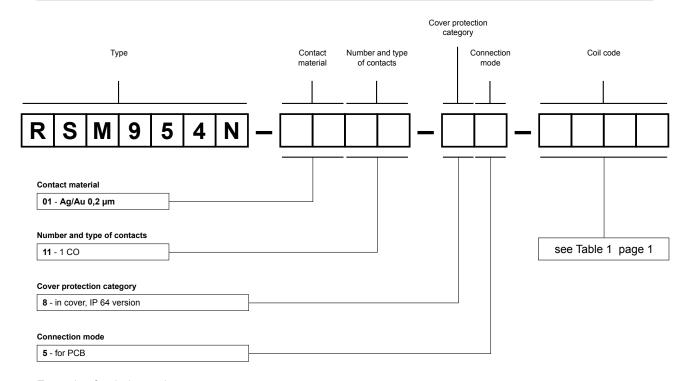

Example of ordering code:

RSM954N-0111-85-1005 relay RSM954N, for PCB, one changeover contact, contact material Ag/Au 0,2 µm, coil voltage 5 V DC, in cover IP 64

PRECAUTIONS:

1. Ensure that the parameters of the product described in its specification provide a safety margin for the appropriate operation of the device or system and never use the product in circumstances which exceed the parameters of the product. 2. Never touch any live parts of the device. 3. Ensure that the product has been connected correctly. An incorrect connection may cause malfunction, excessive heating or risk of fire. 4. In case of any risk of any serious material loss or death or injuries of humans or animals, the devices or systems shall be designed so to equip them with double safety system to guarantee their reliable operation.