

LW26-10



LW26-20



LW26-32



LW26-63



LW26-160



LW26 Series Rotary Switches

◆ Introduction

The LW26 series rotary switch mainly applies in 440V and below, AC 50Hz or 240V and below DC circuits. For breaking and closing, change-over of circuits under manual un-frequent operation. And the typical application are: control of 3 phase motors, control switch of switch gear, control switch of instruments, and control switch of machinery and welding machine.

The series comply the GB 1404803, GB 14048.5 and IEC 60947-3, IEC 60947-5-1.

The LW26 series have 7 current ratings: 10A, 20A, 25A, 32A, 63A, 125A and 160A.

The LW26 series rotary were designed for multiple functions, have wide variety of applications.

The LW26-10, LW26-20, LW26-25, and LW26-32F have finger prove terminals.

LW26 series rotary switch are an excellent substitute for LW2, LW5, LW6, LW8, LW12, LW15, HZ5, HZ10, and HZ12.

The LW26 series rotary switch has two derivatives,

Working conditions

- (1) Ambient temperature Do Not exceed 40°C, and the average temperature, measured over a period of 24 hours, Do Not exceed 35°C.
- (2) Ambient temperature Do Not less than -5°C.
- (3) Should Not be installed above 2000m above sea level.
- (4) A clean environment was required.

LW26X-10



LW26-25



LW26-32



LW26-63




LW26-125




◆ Designation

Use as control switches

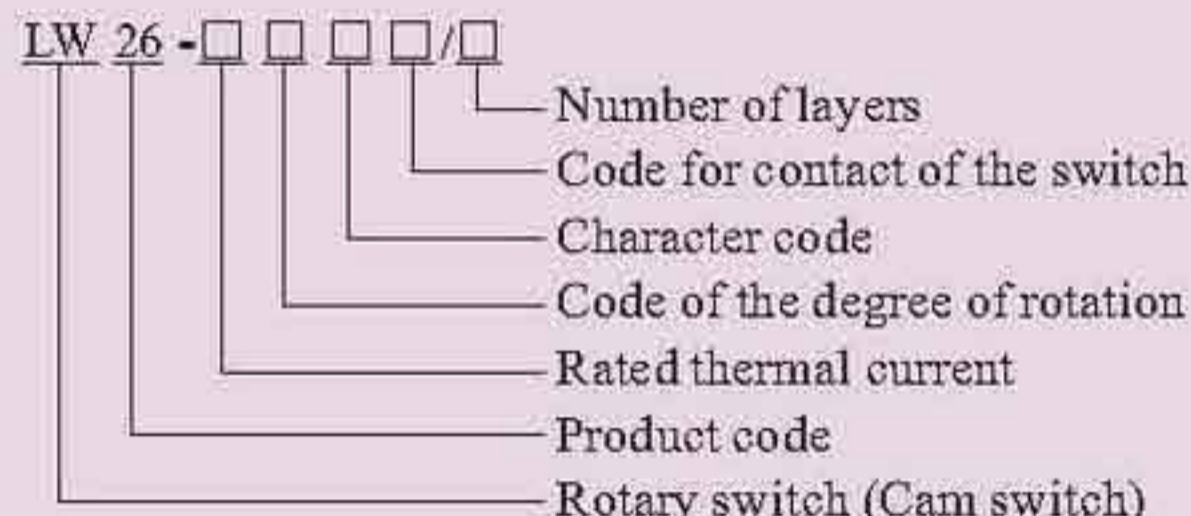


Re: Character code represent the rotating type, for instance, we have limited movement, spring return and limited movement with spring return.

Use as motor switch

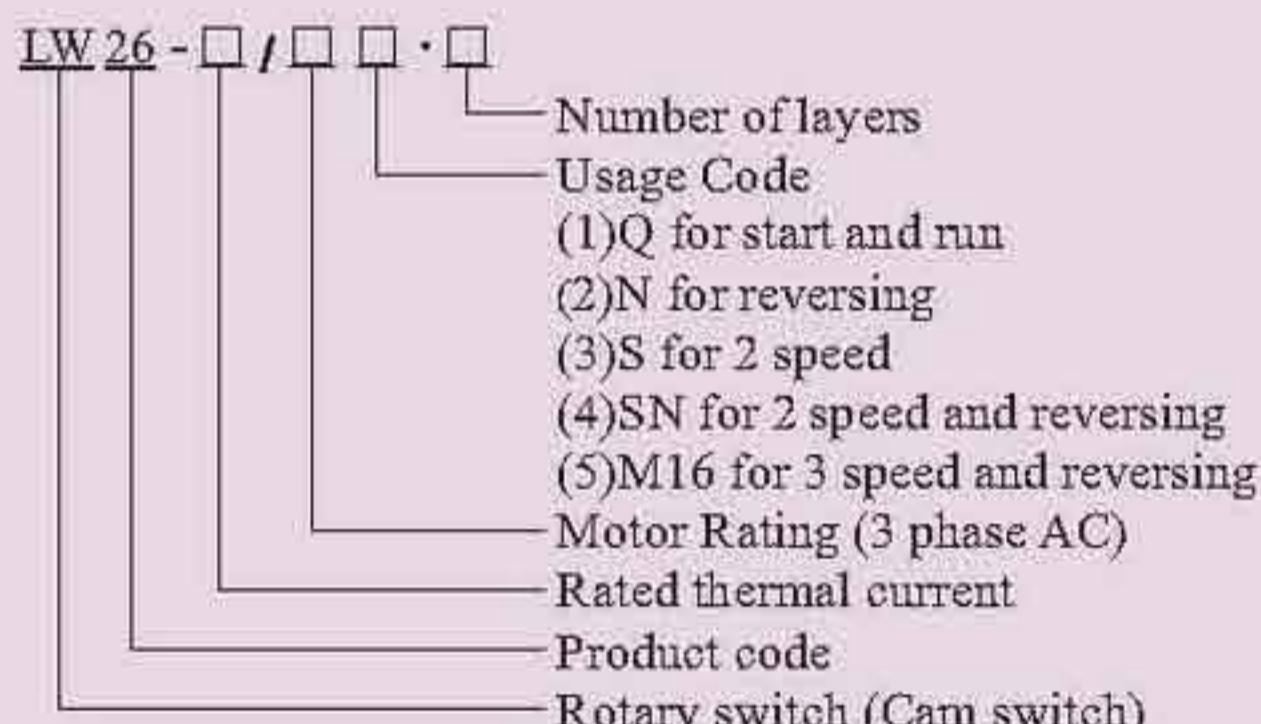

Re: switches in this category normally rotate at 60° . And the SN normally rotate at 45° .

Use as control switch for a main circuit

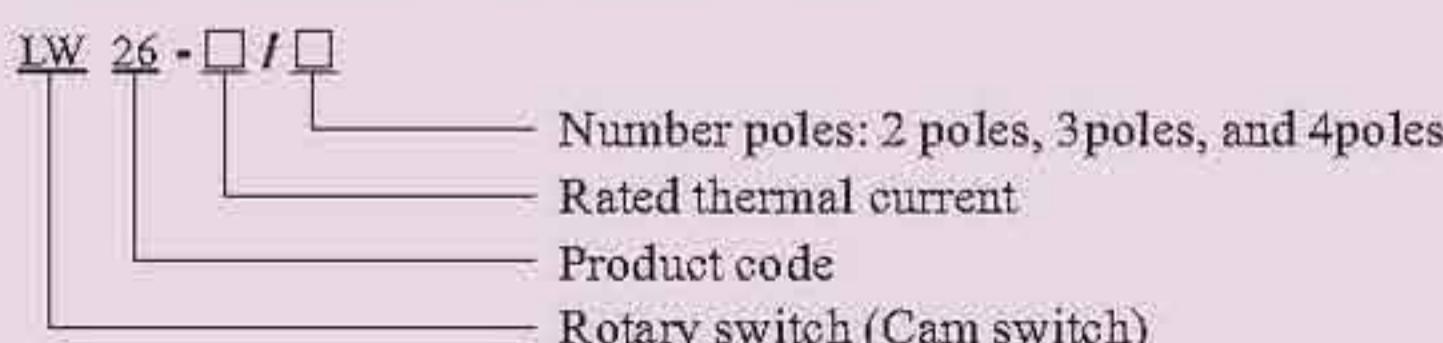

Re: switches in this category normally rotated at 60° .


◆ Classification

- 1 Classified by utilization:
 - (1) Change-over switch;
 - (2) Motor switch;
 - (3) Control switch.
- 2 Classified by operation
 - (1) Limited movement;
 - (2) Spring return;
 - (3) Limited movement with spring return.
- 3 Classified by contact system
 - (1) Switches with limited movement could have 12 layers in maximum (for 32A and below), and for 63A and above could have 8 layers in maximum;
 - (2) Switches with spring return could have 3 layers in maximum;
 - (3) Motor switches could have 6 layers in maximum.
- 4 Diagram for the operation and position of handle

Operation angle:	Character code	Position of handle											
		30° Rotation				45° Rotation				60° Rotation			90° Rotation
Spring return	A			0°→30°				0°→45°					
	B		30°→0°→30°				45°→0°→45°						
Limited movement	C			0°→30°				0°→45°			0°→60°		0°→90°
	D		30°	0°→30°			45°	0°→45°		60°	0°→60°	90°	0°→90°
	E		30°	0°→30°→60°			45°	0°→45°→90°		90°	30°→30°→90°	90°	0°→90°→180°
	F		60°	30°→0°→30°→60°			90°	45°→0°→45°→90°		90°	30°→30°→90°→150°		
	G		60°	30°→0°→30°→60°→90°			90°	45°→0°→45°→90°→135°		150°	90°→30°→30°→90°→150°		
	H		90°	60°→30°→0°→30°→60°→90°			135°	90°→45°→0°→45°→90°→135°					
	I		90°	60°→30°→0°→30°→60°→90°→120°			135°	90°→45°→0°→45°→90°→135°→180°					
	J	120°	90°→60°→30°→0°→30°→60°→90°→120°										
	K	120°	90°→60°→30°→0°→30°→60°→90°→120°→150°										
	L	150°	120°→90°→60°→30°→0°→30°→60°→90°→120°→150°										
Limited movement with spring return	M	150°	120°→90°→60°→30°→0°→30°→60°→90°→120°→150°→180°										
	N									30°→30°			
	P											90°→0°	
Limited movement with spring return	Z		30°→0°→60°				90°→0°→45°			60°→0°→60°			
			60°→30°→0°→30°→60°				135°→90°→0°→45°			90°→60°	0°→60°→90°		
			30°→0°		90°→120°		45°→0°→45°			120°→60°	0°→60°→120°		

◆ Escutcheon plate and Handle

Escutcheon plate

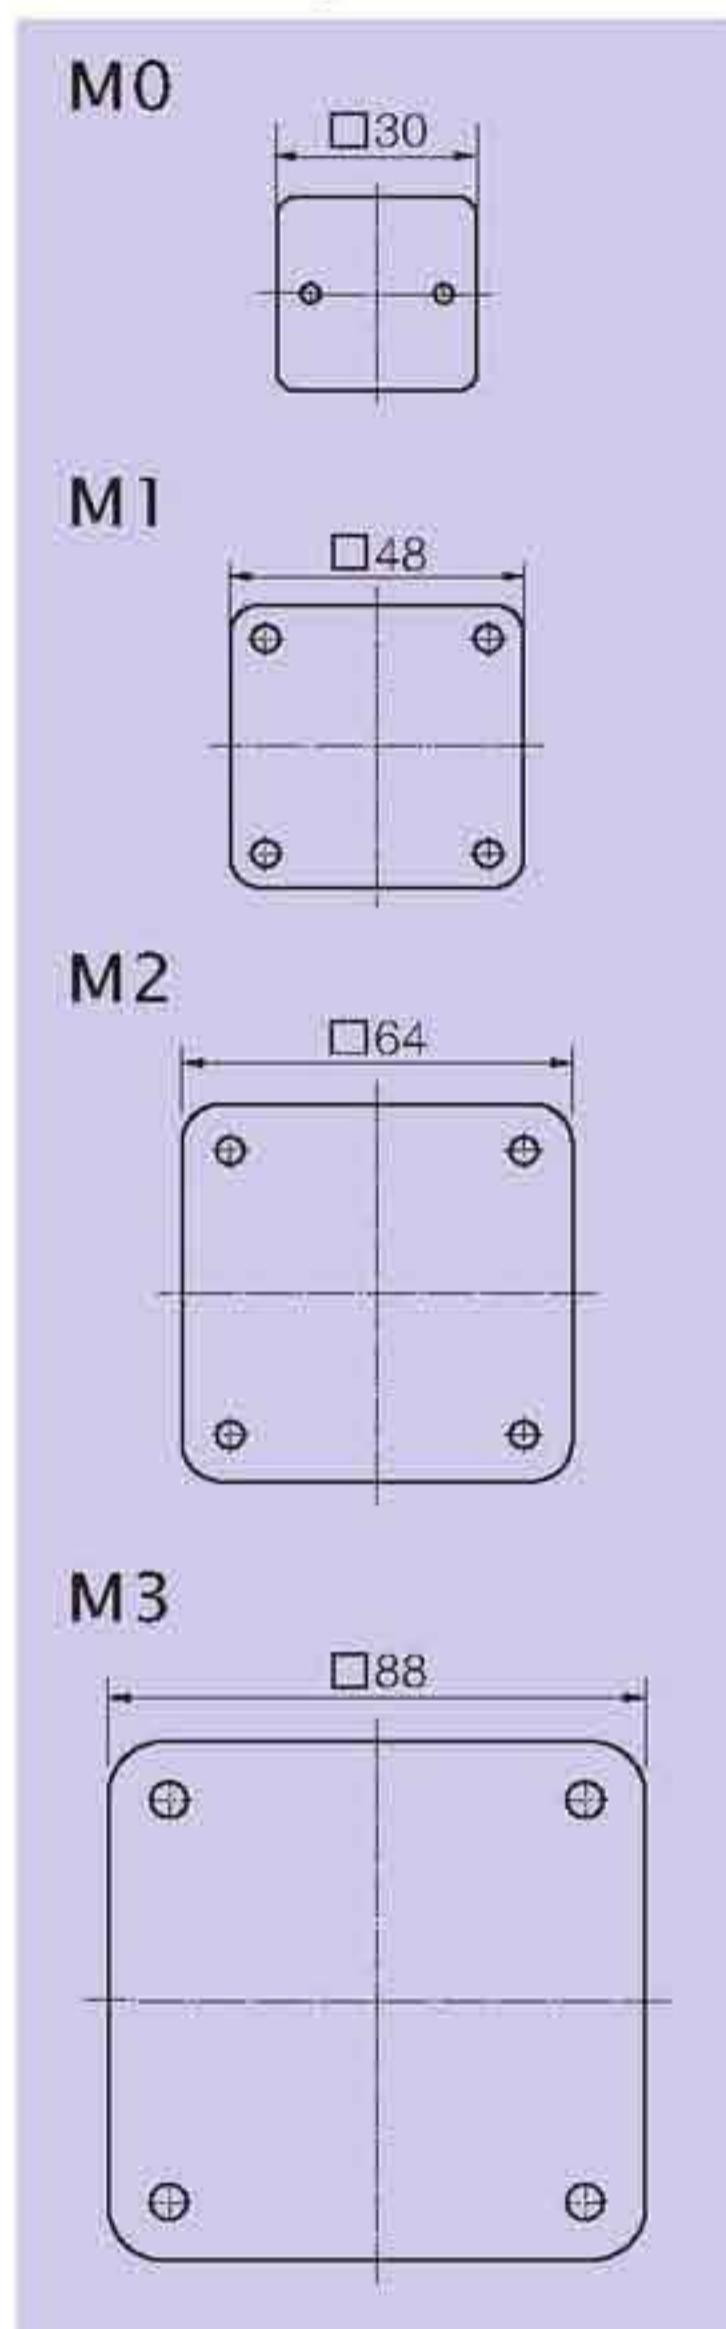

Type of handle

Type of handle	Color	Escutcheon plate			
		M0	M1	M2	M3
R	Black	●	●	●	
	Red	●	●	●	
	White	●	●	●	
	Gray	●	●	●	
F	Black	●	●		
	Red	●	●		
	White	●	●		
	Gray	●	●		
H	Black	●			
	Red	●			
	White	●			
	Gray	●			
P	Black	●	●		
	Red	●	●		
	White	●	●		
	Gray	●	●		
I	Black	●	●	●	
	Red	●	●	●	
	White	●	●	●	
	Gray	●	●	●	
B	Black	●			
	Red	●			
	White	●			
	Gray	●			
L	Black	●			
	Red	●			
	White	●			
	Gray	●			
K	Black	●	●		
	Red	●	●		
	White	●	●		
	Gray	●	●		

Re: ● Standard, ● Optional.

Product	Escutcheon plate						Type of handle						Rotating angle				Maximum Number of layers				
	M0	M1	M1B	M2	M2B	M3	R	F	I	B	H	L	P	K	30°	45°	60°	90°	12	10	8
LW26-10	●								●						●	●	●	●		●	
LW26X-10	●								●						●	●	●	●		●	
LW26-20	●	●	●	●			●	●	●	●	●	●	●	●	●	●	●	●	●	●	
LW26X-20	●	●	●	●			●	●	●	●	●	●	●	●	●	●	●	●	●	●	
LW26-25	●	●	●	●			●	●	●	●	●	●	●	●	●	●	●	●	●	●	
LW26-32		●	●	●	●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
LW26-32F		●	●	●	●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
LW26-63	●	●	●	●	●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	
LW26-125							●	●							●	●	●	●	●	●	
LW26-160							●	●	●						●	●	●	●	●	●	

Re: M1B M2B Platet should be installed by self tapping screw.

◆ Technical parameters

Description		LW26-10		LW26-20		LW26-25		LW26-32		LW26-63		LW26-125		LW26-160	
Rated thermal current I_{th}	A	10		20		25		32		63		125		160	
Rated working voltage U_{ab}	V	240	440	240	440	240	440	240	440	240	440	240	440	240	440
Rated working current I_e															
AC-21A	A	10	10	20	20	25	25	32	32	63	63	100	100	150	150
AC-23A	A	7.5	7.5	15	15	22	22	30	30	57	57	90	90	135	135
AC-2	A	7.5	7.5	15	15	22	22	30	30	57	57	90	90	135	135
AC-3	A	5.5	5.5	11	11	15	15	22	22	36	36	75	75	95	95
AC-4	A	1.75	1.75	3.5	3.5	6.5	6.5	11	11	15	15	30	30	55	55
AC-15	A	2.5	1.5	5	4	8	5	14	6						
Power P															
AC-23A	kW	1.8	3	3.7/2.5	7.5/3.7	5.5/3	11/5.5	7.5/4	15/7.5	15/10	30/18.5	30/15	45/22	37/22	75/37
AC-2	kW	2.5	3.7	4	7.5	5.5	11	7.5	15	18.5	30	30	45	37	55
AC-3	kW	1.5	2.2	3/2.2	5.5/3	4/3	7.5/3.7	5.5/4	11/5.5	11/6	18.5/11	15/7.5	30/13	22/11	37/18.5
AC-4	kW	0.37	0.55	0.55/0.75	1.5/1.5	1.5/1.1	3/2.2	2.7/1.5	5.5/3	5.5/2.4	7.5/4	6/3	12/5.5	10/4	15/7.5

Re:Neutral;

Re:The power under: AC-23A、AC-3、AC-4 are in three phase three pole, and the divider represents the power under single phase two pole.

Mechanical life

Mechanical life without load: $0.1 \cdot 10^6$ times, operation frequency is 120 times/h.

Mechanical life with load: $0.03 \cdot 10^6$ times operation frequency is 120 times/h.

Order procedure

When you place an order please specify the contact diagram of the product you require. The LW26 Series rotary have the similar contact diagram as the other rotary switches like LW2D、LW5D、LW6D、LW8D、LW12、LW15、HZ5D and HZ25D. Our factory have published «The General Contact Diagram for Cansen Rotary Switches» Which will help you to specify the contact diagram.

In addition please specify the current rating, mounting plate, handle type, color and quantity as well.

For instance:

When order and 20A, rotary angle 60° , character code C, contact diagram code 5391, M1 plate, black R handle switch 20 units.

The order can be:


LW26-20 • 6C5391/2 A11R (M1 R) 20units.

Due to the update of the technologies, we reserve the right of update the catalog the without further notices.

◆ Dimensions

Dimensions and installation


Square escutcheon plate and rectangular escutcheon plate

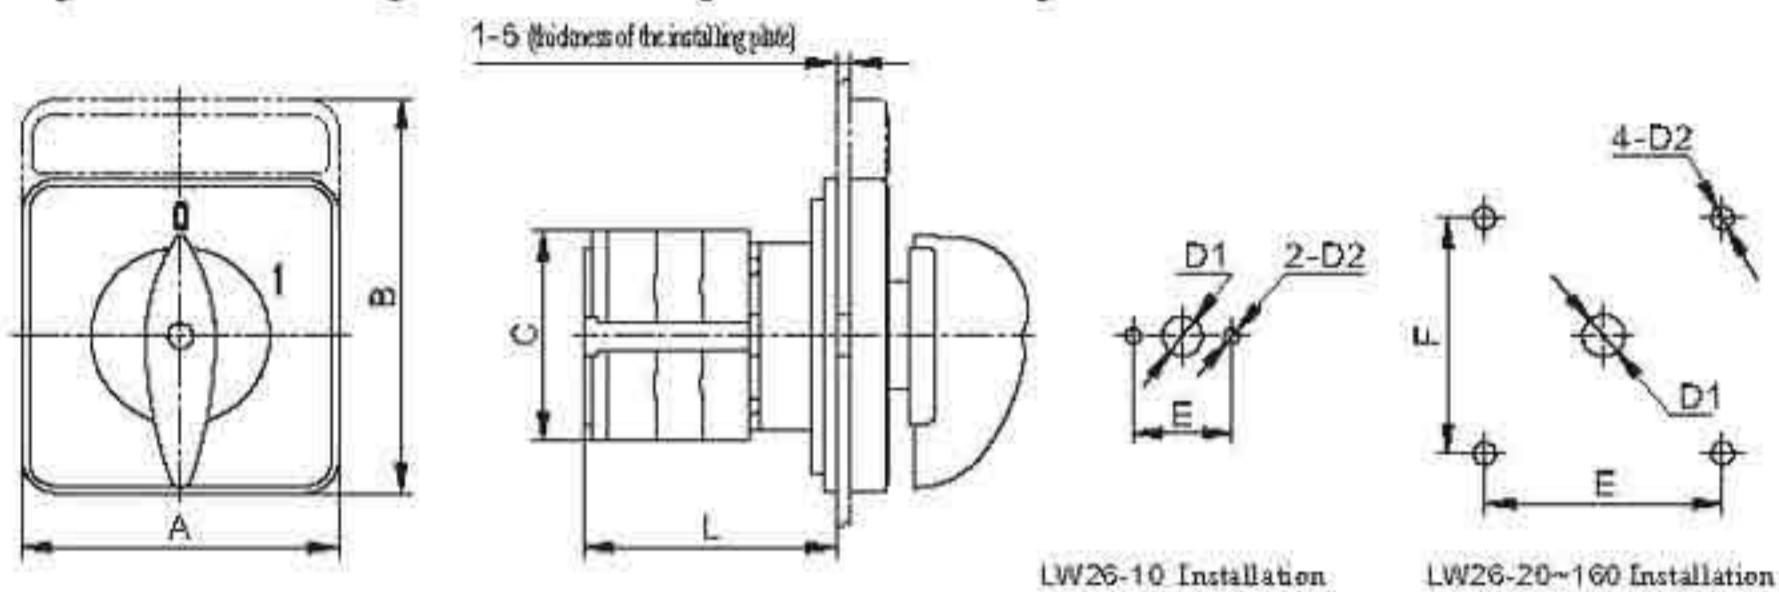


Description	Escutcheon plate	Dimensions (mm)				Installation (mm)			
		A	B	C	L	E	F	D1	D2
LW26-10	M0 square	30	30	28	22+8n	20	18	13.2	13.2
LW26X-10	M0 square	30	30	28	26.5+12n	20	18	13.2	13.2
LW26-20	M1 square	48	48	43	22+9.6n	36	36	18.5	14.5
	M1 rectangular	48	60	43	22+9.6n	36	36	18.5	14.5
	M2 square	64	64	43	25+9.6n	48	48	110	14.5
	M2 rectangular	64	80	43	25+9.6n	48	48	110	14.5
LW26X-20	M1 square	48	48	46	22+14n	36	36	18.5	14.5
	M1 rectangular	48	60	46	22+14n	36	36	18.5	14.5
	M2 square	64	64	46	25+14n	48	48	110	14.5
	M2 rectangular	64	80	46	25+14n	48	48	110	14.5
LW26-25	M1 square	48	48	45.2	23+12.8n	36	36	18.5	14.5
	M1 rectangular	48	60	45.2	23+12.8n	36	36	18.5	14.5
	M2 square	64	64	45.2	26.5+12.8n	48	48	110	14.5
	M2 rectangular	64	80	45.2	26.5+12.8n	48	48	110	14.5
LW26-32	M2 square	64	64	58	29.2+12.8n	48	48	110	14.5
	M2 rectangular	64	80	58	29.2+12.8n	48	48	110	14.5
LW26-32F	M1 square	48	48	48	23+14n	36	36	18.5	14.5
	M1 rectangular	48	60	48	23+14n	36	36	18.5	14.5
	M2 square	64	64	48	24.5+14n	48	48	110	14.5
	M2 rectangular	64	80	48	24.5+14n	48	48	110	14.5
LW26-63	M2 square	64	64	66	29.2+21.5n	48	48	110	14.5
	M2 rectangular	64	80	66	29.2+21.5n	48	48	110	14.5
	M3 square	88	88	66	29.2+21.5n	68	68	110	14.5
	M3 rectangular	88	107	66	29.2+21.5n	68	68	110	14.5
LW26-125	M3 square	88	88	84	35+26.5n	68	68	f13	f6
	M3 rectangular	88	107	84	35+26.5n	68	68	f13	f6
LW26-160	M3 square	88	88	88	35+32.5n	68	68	f13	f6
	M3 rectangular	88	107	88	35+32.5n	68	68	f13	f6

Re: n for number of layers.

Single hole installation

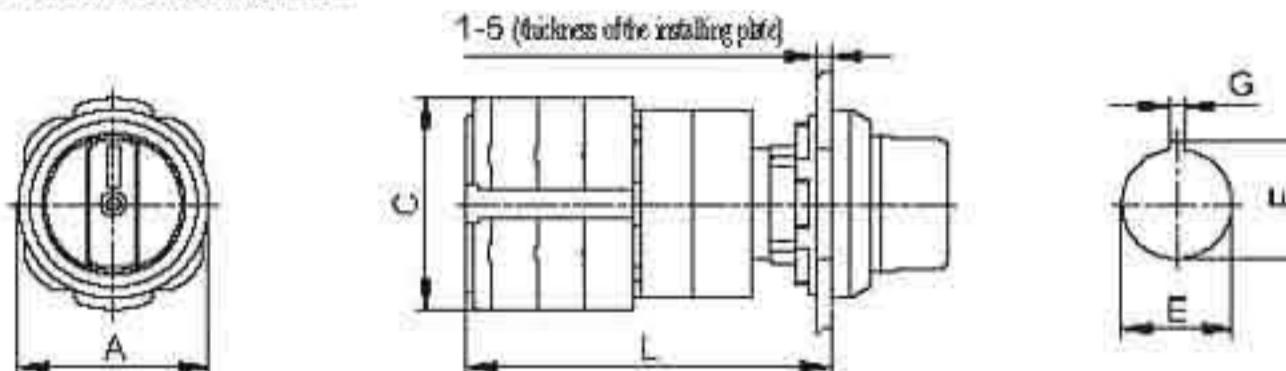

Double hole installation

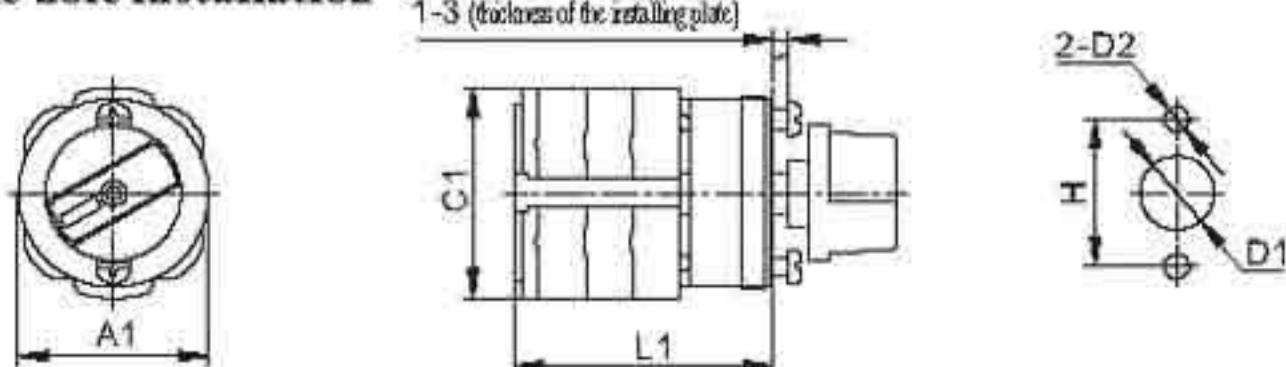

Description	Dimensions (mm)						Installation (mm)					
	A	C	L	A1	C1	L1	E	F	G	H	D1	D2
LW26-10	129	28	35+8n				116.2	18	1.9			
LW26X-10	129	28	39+12n				116.2	18	1.9			
LW26-20	139	43	35+9.6n				130.5	33	4.8			
LW26-20	139	43	42+9.6n	139	43	24+9.6n	122.3	24.1	3.2	30	115	15
LW26X-20	139	46	42+14n	139	46	25+14n	122.3	24.1	3.2	30	115	15
LW26-25	139	45.2	42+12.8n	139	45.2	25+12.8n	122.3	24.1	3.2	30	115	15
LW26-32F	139	48	42+14n	139	48	25+14n	122.3	24.1	3.2	30	115	15

◆ Special type and optional extras

Type	Description				
LW26-10 LW26X-10 LW26X-20	LW26-10 Product with angled terminals				
		LW26-10 □→ A10I	LW26X-10 □→ A10I		
LW26X-20			LW26X-20 □→ A31I		
32A Fringer prove					
LW26-32F					
	LW26-32F □→ A11I	LW26-32F □→ C55I	LW26-32F □→ C51S1		
Single hole installation					
LW26-10 LW26X-10 LW26-20 LW26X-20 LW26-25 LW26-32F	   	LW26X-10 □→ C10I	LW26-25 □→ C55I	LW26-20 □→ C11B	LW26-32F □→ C11I
Double hole installation		Parallel installation			
LW26-20 LW26X-20 LW26-25 LW26-32F					
	LW26-25 □→ G88B	LW26-20 □→ D11R			
Spring return with limited movement			Put out type		
					
	LW26-20 □→ A11R	LW26-20 □→ A11R	LW26-20 □→ A32P1		

Type	Description		
LW26-20 LW26X-20 LW26-25	Single lock 	B Type handle  LW26-25 [] • A11DS	 LW26-20 [] • C55B
LW26-20 LW26X-20 LW26-25 LW26-32F	Indicating light 	Indicating light with keylock 	LW26-25 [] • A66S1
LW26-20 LW26-25 LW26-32 LW26-63	Rectangle plate    	LW26-20 [] • A21R LW26-20 [] • A41I	LW26-32 [] • A22R LW26-63 [] • A42I
LW26-20 LW26-25 LW26-32 LW26-63	Protective box     	LW26-20 [] • E31I LW26-20 [] • E31GS LW26-20 [] • E11S1 LW26-20 [] • E11DS LW26-32 [] • E12R	
LW26-20 LW26-25 LW26-32 LW26-63 LW26-125 LW26-160	Rear installation 	Specital type for DC circuits Re:For LW26-25 only 	Protective cover Re:For LW26-20, 25, 32F only 
	LW26-25 [] • B11R	LW26-25 [] • A11R2	LW26-20 [] • F11R

LW26GS-25/04



LW26GS-32/04



LW26GS-63/04



LW26GS-125/04



LW26GS Series Pak-lock type switches

◆ Introduction

LW26GS series Pad-lock type switches are derivatives of LW26 series rotary switches. Installed in equipment where it requires a pad-lock to lock the switch in certain position. For instance, to fix the switch in ON position, to avoid the unauthorized personnel from operating the switch.

LW26GS series Pad-lock type switch complies with the GB 14048.3 and IEC 60947.3.

◆ Classification

(1)the LW26GS switch has 6 current ratings: 20A, 25A, 32A, 63A, 125A and 160A. For 20A and 25A is able to install M1 or M2 plate, and for 32A and 63A is able to install M2 or M3 plate, for 125A and 160A is able to install M3 plate. The M1 plate is able to put 2 lockers, M2 and M3 is able to put 3 lockers.

(2)the LW 26GS switch has two types:

Normal type, black plate black handle

Quick stop type, has quick stop mark, yellow plate and red handle.

Technical parameters

Description		LW26GS-20	LWGS26-25	LWGS26-32	LWGS26-63	LWGS26-125	LWGS26-160
Rated working voltage Ue	V	440	440	440	440	440	440
Rated thermal current Ith	A	20	25	32	63	125	160
Rated working current Ie							
AC-21A	A	20	25	32	63	100	150
AC-22A	A	20	25	32	63	100	150
AC-23A	A	15	22	30	57	90	135
Power P							
AC-23A	KW	7.5	11	15	30	45	75
Operation							
Non-load		8500	8500	8500	8500	8500	8500
Load		1500	1500	1500	1500	1500	1500
Total		10 000	10 000	10 000	10 000	10 000	10 000

LW26GS-20/04-1 M1



LW26GS-20/04-2 M2



LW26GS-63/04-2 M3




LW26GS-160/04




Dimension and installation

LW26GS-□/□-1

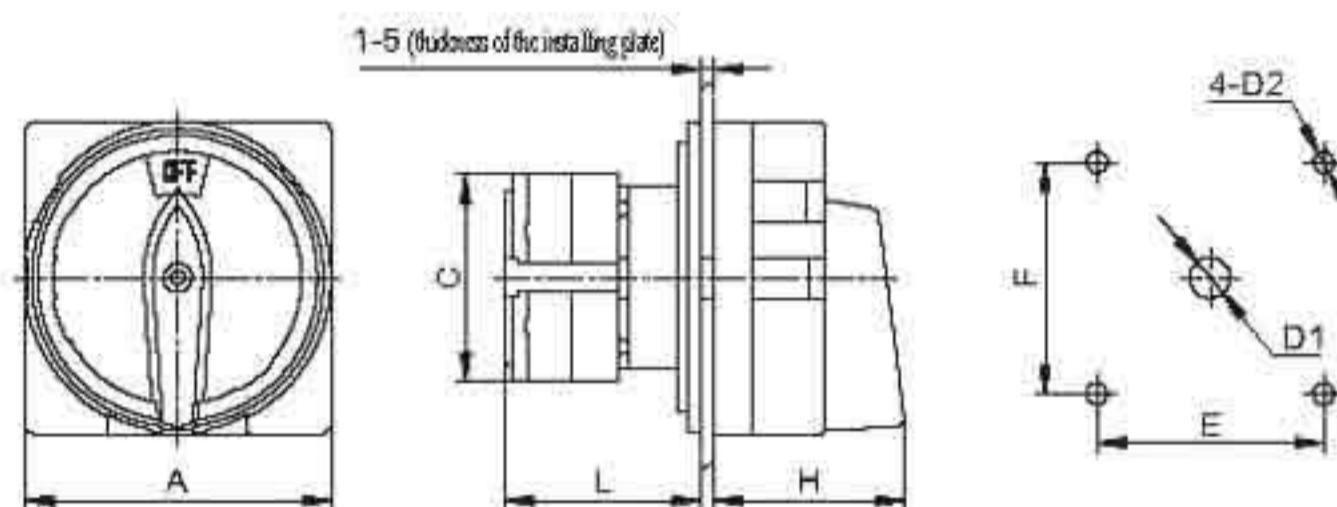

Description	Escutcheon plate	Dimensions (mm)				Installation (mm)			
		A	C	L	H	E	F	D1	D2
LW26GS-20	M1	□48	43	42	33	36	36	f8.5	f4.5
LW26GS-20	M2	□64	43	43	42	48	48	f8.5	f4.5
LW26GS-25	M1	□48	45.2	50	33	36	36	f8.5	f4.5
LW26GS-25	M2	□64	45.2	51	42	48	48	f8.5	f4.5
LW26GS-32	M2	□64	58	55	42	48	48	f10	f4.5
LW26GS-32	M3	□88	58	55	52	68	68	f13	f6
LW26GS-63	M2	□64	66	72.5	42	48	48	f10	f4.5
LW26GS-63	M3	□88	66	72.5	52	68	68	f13	f6
LW26GS-125	M3	□88	84	88	52	68	68	f13	f6
LW26GS-160	M3	□88	88	100	52	68	68	f13	f6

LW26GS-□/□-2

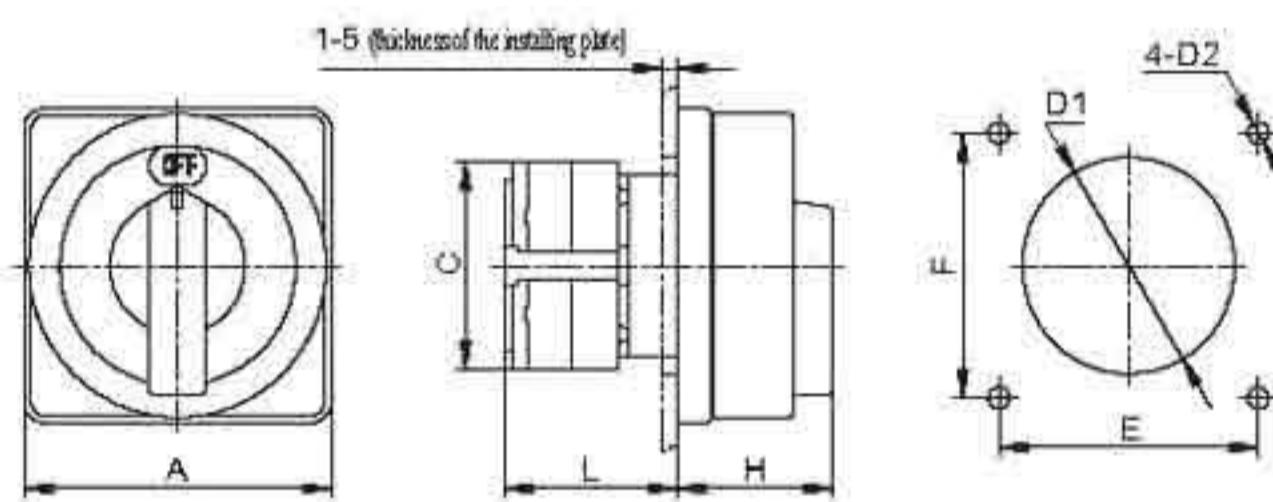

Description	Dimensions (mm)				Installation (mm)			
	A	C	L	H	E	F	D1	D2
LW26GS-20	□64	43	37.5	34	55	55	f45	f4.5
LW26GS-25	□64	45.2	45	34	55	55	f47	f4.5

LW26S Key-lock type switch

◆ Introduction

LW26S Key-lock type switches are derivatives of LW26 rotary switches. Installed in equipments, which requires a key to lock the switch. It prevents the mis-operation of the equipments from the unauthorised personnel.

LW26S Key-lock type switches comply with the GB 14048.3 and IEC 60947-3.


Technical parameter

Description	LW26S-10	LW26S-20	LW26S-25	LW26S-32	LW26S-63
Rated working voltage Ue	V	440	440	440	440
Rated thermal current ith	A	10	20	25	32
Rated working current le					
AC-21A	A	10	20	25	32
AC-22A	A	10	20	25	32
AC-23A	A	7	15	22	30
Power P					
AC-23A	kW	3	7.5	11	15
					30




Dimensions and installation

LW26S S1 Type switch

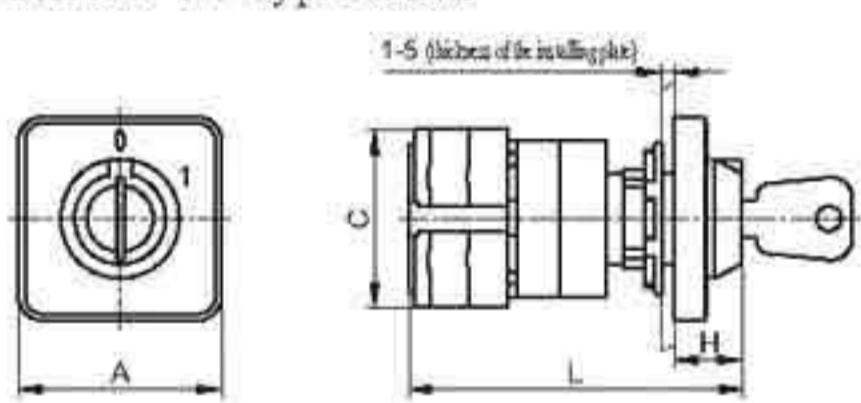


Description	Dimension (mm)					Installation (mm)		
	A	C	H	L	E	F	G	
LW26S-10	□30	28	8.5	71.5	16.2	18	1.9	
LW26S-20	□48	43	15.6	76.5	22.3	24.1	3.2	
LW26S-25	□64	43	15.6	76.5	22.3	24.1	3.2	
LW26S-25	□48	45.2	15.6	83	22.3	24.1	3.2	
LW26S-32	□64	45.2	15.6	83	22.3	24.1	3.2	
LW26S-32F	□48	48	15.6	86.5	22.3	24.1	3.2	
LW26S-63	□64	48	15.6	86.5	22.3	24.1	3.2	

LW26S S2 Type switch

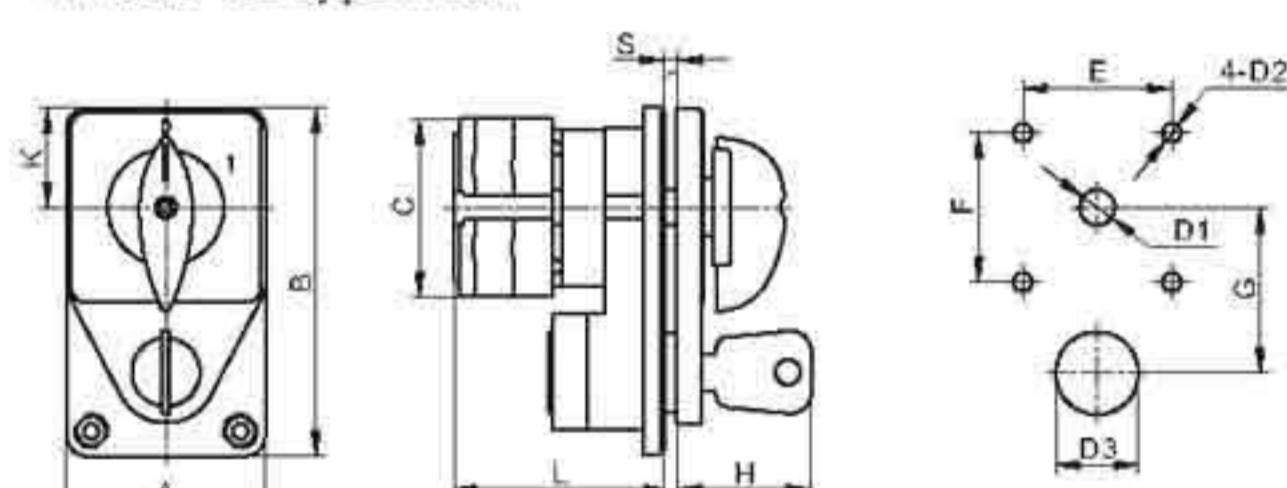

Description	Dimension (mm)						Installation (mm)					
	A	B	K	C	L	H	E	F	G	D1	D2	D3
LW26S-20	48	84	24	43	51.5	32.5	1~4	36	36	40	18.5	14.5
LW26S-25	48	84	24	45.2	58	32.5	1~4	36	36	40	18.5	14.5
LW26S-32	64	112	32	58	72	34	1~6	48	48	48	110	14.5
LW26S-32F	48	84	24	48	61.5	32.5	1~4	36	36	40	18.5	14.5
LW26S-63	64	112	32	66	79	34	1~6	48	48	48	110	14.5

LW26S S3 Type switch

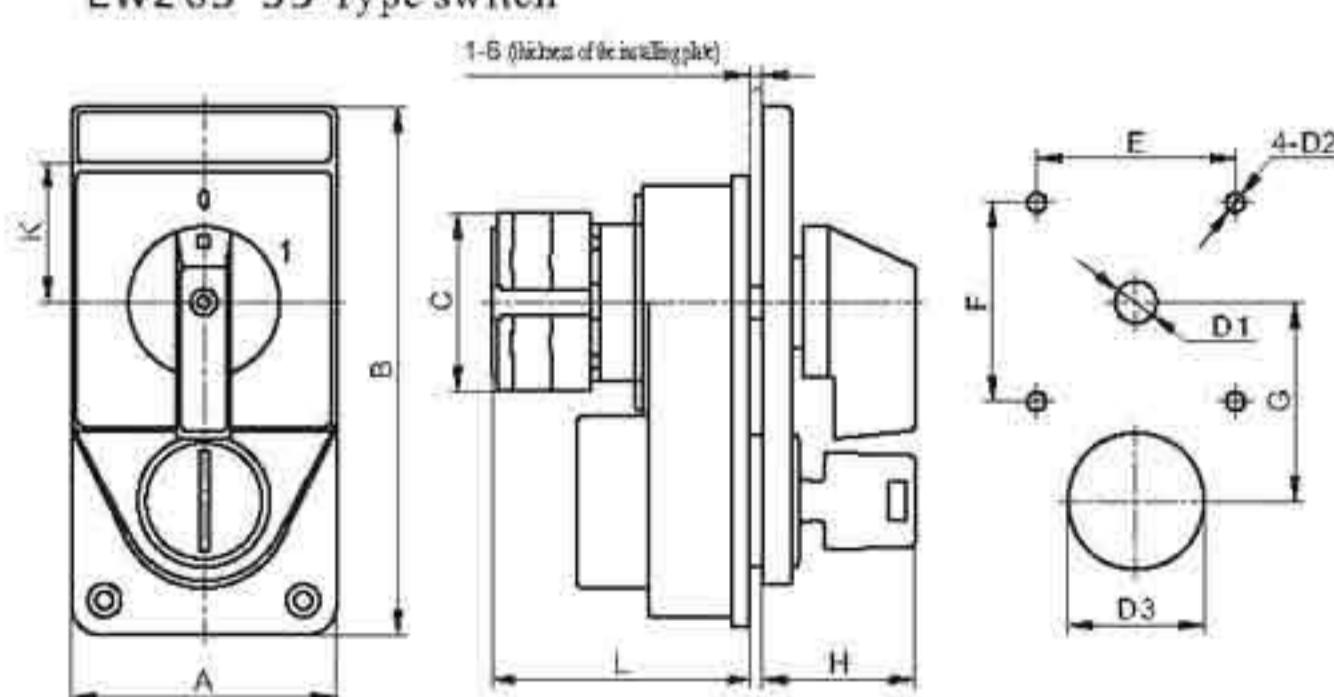

Description	Dimension (mm)						Installation (mm)					
	A	B	K	C	L	H	E	F	G	D1	D2	D3
LW26S-20	64	126.5	32	43	51.5	34	48	48	48	110	14.5	134
LW26S-25	64	126.5	32	45.2	58	34	48	48	48	110	14.5	134
LW26S-32	64	126.5	32	58	72	34	48	48	48	110	14.5	134
LW26S-32F	64	126.5	32	48	61.5	34	48	48	48	110	14.5	134
LW26S-63	64	126.5	32	66	79	34	48	48	48	110	14.5	134

◆ Selection of typical contact diagrams

Function	Usage code or character code	Marks of plate	Contact diagrams																																																															
Start and run of motor	Q		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>1</td> <td>○○</td> <td>×</td> <td></td> </tr> <tr> <td>3</td> <td>○○</td> <td>×</td> <td>×</td> </tr> <tr> <td>5</td> <td>○○</td> <td>×</td> <td></td> </tr> <tr> <td>6</td> <td>○○</td> <td>×</td> <td>×</td> </tr> </table>		Position Contact	OFF	ON	1	○○	×		3	○○	×	×	5	○○	×		6	○○	×	×																																											
	Position Contact	OFF	ON																																																															
1	○○	×																																																																
3	○○	×	×																																																															
5	○○	×																																																																
6	○○	×	×																																																															
	D60306		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>1</td> <td>0</td> <td>2</td> </tr> <tr> <td>1</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>○○</td> <td></td> <td>×</td> <td></td> </tr> <tr> <td>5</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>○○</td> <td></td> <td></td> <td>×</td> </tr> <tr> <td>9</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>11</td> <td>○○</td> <td>×</td> <td></td> <td>×</td> </tr> </table>		Position Contact	1	0	2	1	○○	×			3	○○		×		5	○○	×			7	○○			×	9	○○	×			11	○○	×		×																												
	Position Contact	1	0	2																																																														
1	○○	×																																																																
3	○○		×																																																															
5	○○	×																																																																
7	○○			×																																																														
9	○○	×																																																																
11	○○	×		×																																																														
Two speed motor start and run of motor	S		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>1</td> <td>0</td> <td>2</td> </tr> <tr> <td>1</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>○○</td> <td></td> <td>×</td> <td></td> </tr> <tr> <td>5</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>9</td> <td>○○</td> <td>○</td> <td></td> <td></td> </tr> <tr> <td>11</td> <td>○○</td> <td></td> <td></td> <td>×</td> </tr> <tr> <td>13</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>15</td> <td>○○</td> <td>×</td> <td></td> <td>×</td> </tr> <tr> <td>16</td> <td>○○</td> <td></td> <td></td> <td>×</td> </tr> </table>		Position Contact	1	0	2	1	○○	×			3	○○		×		5	○○	×			7	○○	×			9	○○	○			11	○○			×	13	○○	×			15	○○	×		×	16	○○			×													
	Position Contact	1	0	2																																																														
1	○○	×																																																																
3	○○		×																																																															
5	○○	×																																																																
7	○○	×																																																																
9	○○	○																																																																
11	○○			×																																																														
13	○○	×																																																																
15	○○	×		×																																																														
16	○○			×																																																														
	D60411		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>O</td> <td>Y</td> <td>Δ</td> </tr> <tr> <td>U1</td> <td>1 ○○ 2 L1</td> <td>×</td> <td>—</td> <td>—</td> </tr> <tr> <td>3</td> <td>3 ○○ 4</td> <td></td> <td>×</td> <td></td> </tr> <tr> <td>U2</td> <td>5 ○○ 6 V1</td> <td></td> <td></td> <td>×</td> </tr> <tr> <td>7</td> <td>7 ○○ 8</td> <td></td> <td>×</td> <td></td> </tr> <tr> <td>L2</td> <td>9 ○○ 10 V2</td> <td></td> <td>—</td> <td>—</td> </tr> <tr> <td>11</td> <td>11 ○○ 12</td> <td></td> <td>×</td> <td></td> </tr> <tr> <td>W1</td> <td>13 ○○ 14 L3</td> <td></td> <td>—</td> <td>—</td> </tr> <tr> <td>15</td> <td>15 ○○ 16</td> <td></td> <td>—</td> <td>—</td> </tr> </table>		Position Contact	O	Y	Δ	U1	1 ○○ 2 L1	×	—	—	3	3 ○○ 4		×		U2	5 ○○ 6 V1			×	7	7 ○○ 8		×		L2	9 ○○ 10 V2		—	—	11	11 ○○ 12		×		W1	13 ○○ 14 L3		—	—	15	15 ○○ 16		—	—																		
	Position Contact	O	Y	Δ																																																														
U1	1 ○○ 2 L1	×	—	—																																																														
3	3 ○○ 4		×																																																															
U2	5 ○○ 6 V1			×																																																														
7	7 ○○ 8		×																																																															
L2	9 ○○ 10 V2		—	—																																																														
11	11 ○○ 12		×																																																															
W1	13 ○○ 14 L3		—	—																																																														
15	15 ○○ 16		—	—																																																														
7 position with 0 position	H5881/3		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>0</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> </tr> <tr> <td>1</td> <td>○○</td> <td>2</td> <td>×</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>○○</td> <td></td> <td>×</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>5</td> <td>○○</td> <td>6</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>○○</td> <td>8</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>9</td> <td>○○</td> <td>10</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>11</td> <td>○○</td> <td>12</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>×</td> </tr> </table>		Position Contact	0	1	2	3	4	5	6	1	○○	2	×						3	○○		×						5	○○	6							7	○○	8							9	○○	10							11	○○	12						×
	Position Contact	0	1	2	3	4	5	6																																																										
1	○○	2	×																																																															
3	○○		×																																																															
5	○○	6																																																																
7	○○	8																																																																
9	○○	10																																																																
11	○○	12						×																																																										
Start and run and reversing of motor	N		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>1</td> <td>0</td> <td>2</td> </tr> <tr> <td>1</td> <td>○○</td> <td></td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>5</td> <td>○○</td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>○○</td> <td>○</td> <td></td> <td></td> </tr> <tr> <td>9</td> <td>○○</td> <td></td> <td></td> <td>×</td> </tr> </table>		Position Contact	1	0	2	1	○○				3	○○	×			5	○○	×			7	○○	○			9	○○			×																																	
	Position Contact	1	0	2																																																														
1	○○																																																																	
3	○○	×																																																																
5	○○	×																																																																
7	○○	○																																																																
9	○○			×																																																														
3 phase Voltmeter with 0 position	YH5/3		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>TR</td> <td>ST</td> <td>RS</td> <td>O</td> <td>RN</td> <td>SN</td> <td>TN</td> </tr> <tr> <td>1</td> <td>○○</td> <td>2</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>×</td> </tr> <tr> <td>3</td> <td>○○</td> <td>4</td> <td>×</td> <td>×</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>5</td> <td>○○</td> <td>6</td> <td></td> <td>×</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>7</td> <td>○○</td> <td>8</td> <td></td> <td></td> <td>×</td> <td></td> <td></td> <td></td> </tr> <tr> <td>9</td> <td>○○</td> <td>10</td> <td></td> <td></td> <td></td> <td>×</td> <td></td> <td></td> </tr> <tr> <td>11</td> <td>○○</td> <td>12</td> <td></td> <td></td> <td></td> <td></td> <td>×</td> <td>—</td> </tr> </table>		Position Contact	TR	ST	RS	O	RN	SN	TN	1	○○	2						×	3	○○	4	×	×					5	○○	6		×					7	○○	8			×				9	○○	10				×			11	○○	12					×	—
	Position Contact	TR	ST	RS	O	RN	SN	TN																																																										
1	○○	2						×																																																										
3	○○	4	×	×																																																														
5	○○	6		×																																																														
7	○○	8			×																																																													
9	○○	10				×																																																												
11	○○	12					×	—																																																										
Three phase Ammeter with 0 position	LH3/3		<table border="1"> <tr> <td></td> <td>Position Contact</td> <td>0</td> <td>R</td> <td>S</td> <td>T</td> </tr> <tr> <td>1</td> <td>○○</td> <td>2</td> <td>×</td> <td>—</td> <td>—</td> </tr> <tr> <td>3</td> <td>○○</td> <td></td> <td>—</td> <td>—</td> <td>—</td> </tr> <tr> <td>5</td> <td>○○</td> <td>4</td> <td>—</td> <td>—</td> <td>—</td> </tr> <tr> <td>7</td> <td>○○</td> <td>6</td> <td>—</td> <td>—</td> <td>—</td> </tr> <tr> <td>9</td> <td>○○</td> <td>8</td> <td>—</td> <td>—</td> <td>—</td> </tr> <tr> <td>11</td> <td>○○</td> <td>10</td> <td>—</td> <td>—</td> <td>—</td> </tr> <tr> <td>12</td> <td>○○</td> <td>12</td> <td>—</td> <td>—</td> <td>—</td> </tr> </table>		Position Contact	0	R	S	T	1	○○	2	×	—	—	3	○○		—	—	—	5	○○	4	—	—	—	7	○○	6	—	—	—	9	○○	8	—	—	—	11	○○	10	—	—	—	12	○○	12	—	—	—															
	Position Contact	0	R	S	T																																																													
1	○○	2	×	—	—																																																													
3	○○		—	—	—																																																													
5	○○	4	—	—	—																																																													
7	○○	6	—	—	—																																																													
9	○○	8	—	—	—																																																													
11	○○	10	—	—	—																																																													
12	○○	12	—	—	—																																																													