


FUNCTION SETTING:



- Инструкция за монтаж и експлоатация
- Instruction for installation and use
- Instrucțiune de instalare și utilizare
- Uputstvo za ugradnju i upotrebu
- Uputstvo za ugradnju i upotrebu
- Uputstvo za ugradnju i upotrebu
- Szerelési és kezelési utasítás
- Navodilo za vgradnjo in uporabo
- Οδηγισ για την εγκατασταση και τη χρηση
- Упатство за вградување и употреба
- Návod na montáž a používanie
- Instrukcja instalacji i użytkowania
- Instrução para instalação e uso
- Istruzioni per l'installazione e l'uso

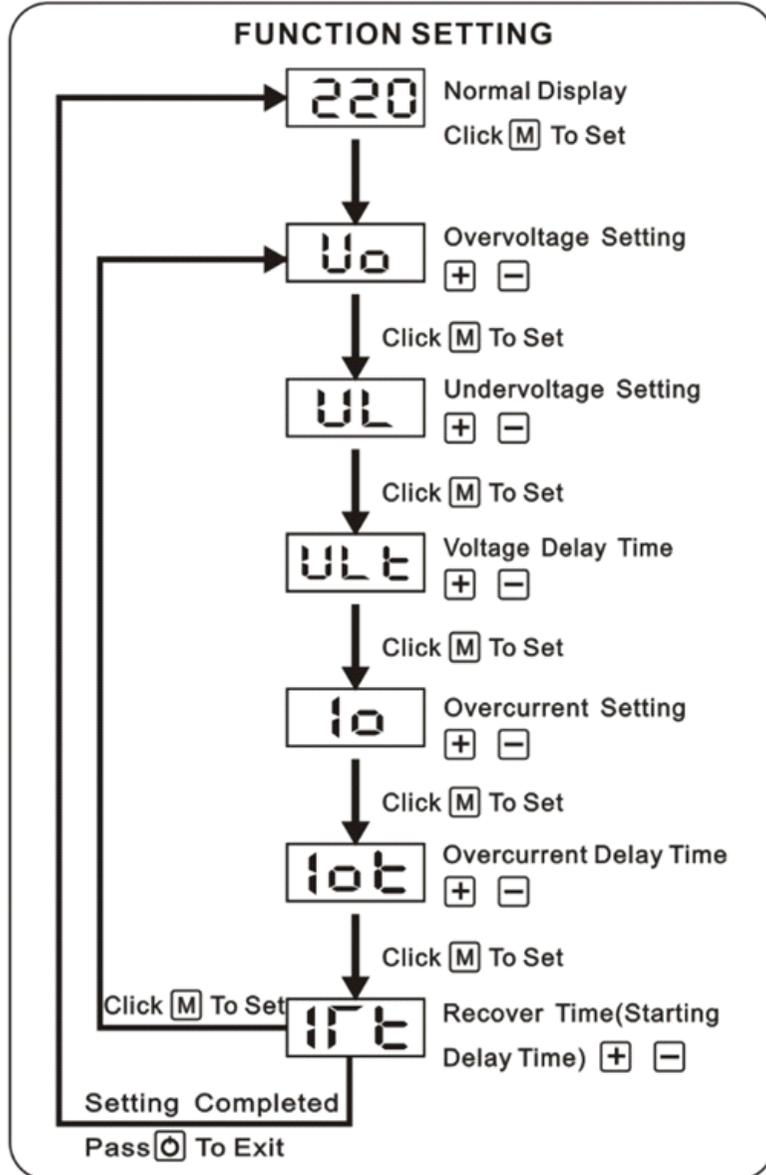

- Напрежен ов изключвател MN4
- Voltage circuit-breaker MN4
- Comutator de tensiune combinat MN4
- Prekidač napona MN4
- Prekidač napona MN4
- Prekidač napona MN4
- Feszültség megszakító MN4
- FID stikalo MN4
- Διακόπτης συνδυασμένης τάσης MN4
- Прекинувач MN4
- FID stikalo MN4
- Łączony wyłącznik napięciowy MN4
- Disjuntor de tensão combinada MN4
- Interruttore automatico di tensione combinato MN4



FUNCTIONS:

Under-voltage protection
Over-voltage protection
Over-current protection


TECHNICAL CHARACTERISTICS:

Operated voltage range	80-400V AC; 50/60Hz (Single-phase)
Rated current	63A
Over-voltage protection value	230-300V AC
Under-voltage protection value	140-230VAC
Over-current protection value	1-63A
Voltage power off time	0-400s
Current power off time	0-30s
Power consumption	≤ 1.5W
Mechanical life	100 000
Relative humidity	45-90% Rh, 40C
Altitude	up to 2000 m
Pollution level	2 class
Mounting	on DIN rail

FACTORY SETTING:


Technical parameter	Step	Factory settings
Over-voltage trip value	1V	270V
Under-voltage trip value	1V	170V
Over-current trip value	1A	63A
Voltage power off time	1s	2s
Starting delay time	1s	2s
Current power off time	1s	2s

DIMENSIONS:

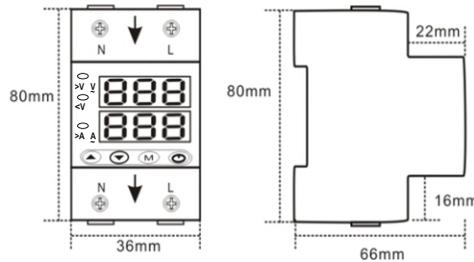

BG - В интерес на вашата безопасност, монтажът и настройването да се извършват само от специалист! **EN** - For your safety, installation and tuning are performed only by a specialist! **BIH** - Za vašu sigurnost, ugradnju i tuning vrši samo stručnjak! **GR** - Για την ασφάλειά σας, η εγκατάσταση και η τοποθέτηση γίνονται μόνο από ειδικούς! **D** - Zu Ihrer Sicherheit werden Installation und Wartung nur von einem Fachmann durchgeführt! **RO** - Pentru siguranța dvs., instalarea și reglarea sunt efectuate numai de către un specialist! **SK** - Pre vašu bezpečnosť, inštalácia a ladenie vykonáva iba špecialista! **SLO** - Za vašo varnost, namestitve in nastavitve opravlja samo strokovnjak! **SRB** - Za vašu sigurnost, instalacija i podешavanje izvode samo specijalista! **HU** - Az Ön biztonságá érdekében a telepítést és a hangolást csak szakember végezheti! **HR** - Za vašu sigurnost, instalacije i ugađanje izvodi samo stručna osoba! **MK** - Za vašu bezbednost, instalacija i podешavanje se izvedu samo od specijalista! **PL** - Ze względów bezpieczeństwa instalację i strojenie wykonuje tylko specjalista! **P** - Para sua segurança, a instalação e o ajuste são realizados apenas por um especialista! **IT** - Per la tua sicurezza, l'installazione e la messa a punto vengono eseguite solo da uno specialista!

WIRING DIAGRAM:

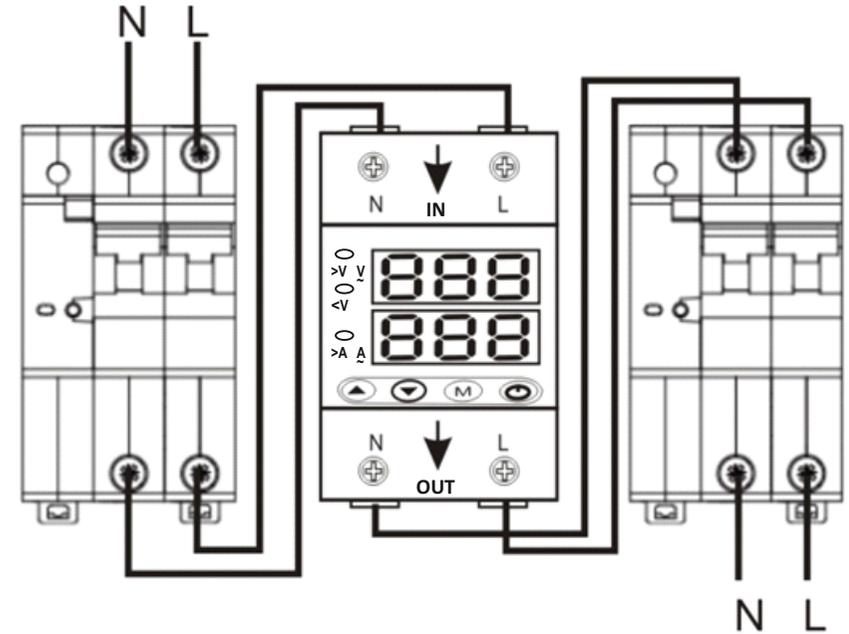

DESCRIPTION:

