



Smoke Detector

User Manual

Ideal for All Areas

SMK-500 (Wireless)
SMK-500D (Independent)



Introduction

Our photoelectric smoke detector is designed to sense smoke that comes into the detector chamber. It does not sense gas, heat, or flame. This smoke detector is designed to give early warning of developing fires by giving off the alarm sound from its built-in alarm horn. It can provide precious time for you and your family to escape before fire spreads. However, the smoke detector makes such pre-warning of fire accident possible, only if the detector is located, installed, and maintained properly as described in this User Manual.

WARNING: This smoke detector is designed for use in a single residential unit only, which means that it should be used inside a single family home or apartment. It is not meant to be used in lobbies, hallways, basements, or another apartment in multi-family buildings, unless there are already working detectors in each family unit. Smoke detectors, placed in common areas outside the individual living unit, such as on porches or in hallways, may not provide early warning to residents. In multi-family buildings, each family living unit should set up its own detectors.

WARNING: This detector is not meant to be used in non-residential buildings, warehouses, industrial or commercial buildings, and special purpose non-residential buildings that require special fire detection and alarm systems. This detector alone is not a suitable substitute for complete fire detection systems for places where many people live or work, such as hotels or motels. The same is true of dormitories, hospitals, nursing homes or group homes of any kind, even if they were once single family homes. Please refer NFPA 101, the Life Safety Code, NFPA71, 72A, 72B, 72C, 72D, and 72E for smoke detector requirements for fire protection in buildings not defined as "households".

Locations to Install Your Smoke Detectors

Smoke detectors should be installed in accordance with the NFPA Standard 74 (National Fire Protection Association, Battery march Park, Quincy, MA 02169). For complete coverage in residential units, smoke detectors should be installed in all rooms, halls, storage areas, basements, and attics in each family living unit. Minimum coverage is one detector on each floor and one in each sleeping area, plus one in attics and in each living room.

Here, we have useful tips for you:

- Install a smoke detector in the hallway outside every separate bedroom area, as shown in Figure 1. Two detectors are required in homes with two bedroom areas, as shown in Figure 2.
- Install a smoke detector on every floor of a multi-floor home or apartment, as shown in Figure 3.
- Install a minimum of two detectors in any household.
- Install a smoke detector inside every bedroom.
- Install smoke detectors at both ends of a bedroom hallway if the hallway is more than 40 feet (12 meters) long.
- Install a smoke detector inside every room where one sleeps with the door partly or completely closed, since smoke could be blocked by the closed door and a hallway alarm may not wake up the sleeper if the door is dosed.



● SMOKE DETECTORS FOR MINIMUM SECURITY
○ SMOKE DETECTORS FOR MORE SECURITY

Figure 1: Locations for placing smoke detectors for single residence with only one sleeping area

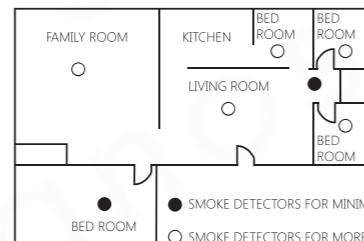


Figure 2: Locations for placing smoke detectors for single-floor residence with more than one sleeping area

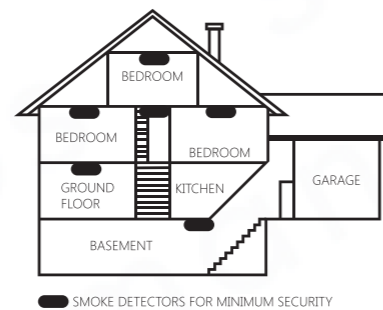


Figure 3: Locations for placing smoke detectors for a multi-floor residence

- Install basement detectors at the bottom of the basement stairwell.
- Install second-floor detectors at the top of the first-to-second floor stairwell.
- Be sure no door or other obstruction blocks the path of smoke to the detector.
- Install additional detectors in your living room, dining room, family room, attic, utility and storage rooms.
- Install smoke detectors as close to the centre of the ceiling as possible. If this is not practical, put the detector on the ceiling, no closer than 4 inches (10 cm) from any wall or corner, as shown in Figure 4.
- If ceiling mounting is not possible and wall mounting is permitted by your local and state codes, put wall-mounted detectors between 4 and 6 inches (10 ~ 15 cm) from the ceiling, also see Figure 4.
- If some of your rooms have sloped, peaked, or gabled ceilings, try to mount detectors 3 feet (0.9 meter) measured horizontally from the highest point of the ceiling as shown in Figure 5.

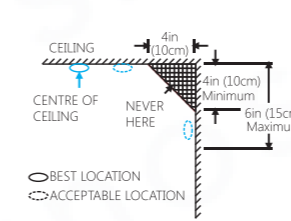


Figure 4: Recommended best and acceptable locations to mount smoke detectors

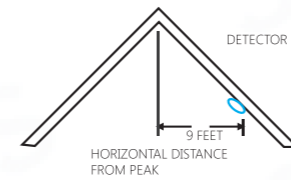


Figure 5: Recommended locations to mount smoke detectors in rooms with sloped, gabled, or peaked ceiling

CAUTION

"Early warning fire detection is best achieved by the installation of fire detection equipment in all rooms and areas of the household as follows: (1) A smoke detector installed in each separate sleeping area (in the vicinity, but outside of the bedrooms), and (2) Heat or smoke detectors in the living rooms, dining rooms, bedrooms, kitchens, hallways, attics, furnace rooms, closets, utility and, storage rooms, basements and attached garages."

Locations not to Install Your Smoke Detectors

Nuisance alarms take place when smoke detectors are installed where they will not work properly. To avoid nuisance alarms, do not install smoke detectors in the following situations:

Combustion particles are the by-products of something that is burning. Thus, in or near areas where combustion particles are present, do not install smoke detectors to avoid nuisance alarms, such as kitchens with few windows or poor ventilation, garages where there may be vehicle exhaust, near furnaces, hot water heaters, and space heaters.

Do not install smoke detectors less than 20 feet (6 meters) away from places where combustion particles are normally present, like kitchens. If a 20-foot distance is not possible, e.g. in a mobile home, try to install the detector as far away from the combustion particles as possible, preferably on the wall. To prevent nuisance alarms, provide good ventilation in such places.

IMPORTANT: For any reason, do not disable the detector to avoid nuisance alarms.

When air streams passing by kitchens, the way how a detector can sense combustion particles in normal air-flow paths is graphically shown in Figure 6, which indicates the correct and incorrect smoke detector locations concerning this problem.

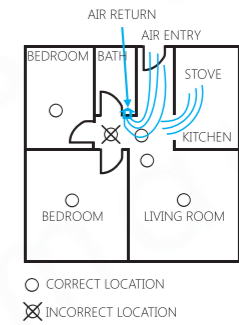


Figure 6: Recommended smoke detector locations to avoid air streams with combustion particles

In damp or very humid areas, or near bathrooms with showers. Moisture in humid air can enter the sensing chamber, then turns into droplets upon cooling, which can cause nuisance alarms. Install smoke detectors at least 10 feet (3 meters) away from bathrooms.

In very cold or very hot areas, including unheated buildings or outdoor rooms. If the temperature goes above or below the operating range of the smoke detector, it will not work properly. The operating temperature range for your smoke detector is 40°F to 100°F (4°C to 38°C).

In very dusty or dirty areas, dirt and dust can build up on the detector's sensing chamber, to make it over sensitive. Additionally, dust or dirt can block openings to the sensing chamber. Do not install the detector near fresh air vents or very draughty areas like air conditioners, heaters or fans. Fresh air vents and drafts can drive smoke away from smoke detectors.

Dead air spaces are often at the top of a peaked roof, or in the corners between ceilings and walls. Dead air may prevent smoke from reaching a detector. See Figures 4 and 5 for recommended mounting locations.

In insect-infested areas. If insects enter a detector's sensing chamber, they may cause a nuisance alarm. Where insects are a problem, get rid of them before installing a detector.

Near fluorescent lights, electrical "noise" from fluorescent lights may cause nuisance alarms. Install smoke detectors at least 5 feet (1.5 meters) away from such lights.

WARNING: Never remove batteries to stop a nuisance alarm. Open a window or fan the air around the detector to get rid of the smoke. The alarm will turn itself off when the smoke is gone. If nuisance alarms persist, attempt to clean the detector as described in this User Manual.


WARNING: Do not stand close to the detector when the alarm is sounding. The alarm is loud in order to wake you in an emergency. Too much exposure to the horn at close range may be harmful to your hearing.

Installing Your Smoke Detectors


Read "Locations to Install Your Smoke Detectors" and "Locations not to Install Your Smoke Detectors" section in the manual first, and then decide where to install the detector.

Please follow these steps to install your smoke detector:

1. At the place where you are going to install the detector, draw a horizontal line six inches long.
2. Remove the mounting bracket from your unit by rotating it counter clockwise.
3. Place the bracket so that the two longest hole slots are aligned on the line. In each of the keyhole slots, draw a mark to locate a mounting plug and screw.
4. Remove the bracket.
5. Using a 3/16-inch (5mm) drill bit, drill two holes at the marks and insert plastic wall plugs. Put the detector away from getting plaster dust on it when you drill holes for mounting.
6. Using the two screws and plastic wall plugs (all supplied); attach the bracket to the wall.
7. Line up the slot of the bracket and the detector. Push clockwise to fix it into place. Pull outward on the detector to make sure it is securely attached to the mounting bracket.

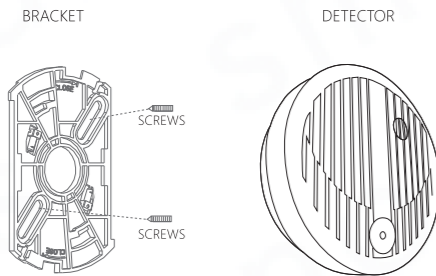


8. The steps to open the battery cover and to install the battery are listed as follows:
 - (1) To power the smoke detector requires a battery.
 - (2) Match terminals on the end(s) of the battery with opposite terminal connections on the detector. Be sure to insert the zinc-manganese dry battery in the position shown on the detector.
 - (3) When terminals are properly matched, push battery firmly in until it snaps into place and cannot be shaken loose.

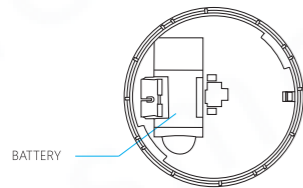

CAUTION: This smoke detector comes with cover latches that will prevent the smoke detector cover from closing if the battery is not installed. This tells you that the smoke detector will not work until a new battery is properly installed. **The battery is purposely positioned WRONGLY in the factory to keep it fresh until installation. It must be re-positioned correctly to provide DC power.**

NOTE: When the detector battery first makes contact with the detector, its LED indicator flashes once. This is normal and indicates that the battery is positioned properly. Close cover, then press and hold the test button for about 5 seconds until the horn sounds. The horn should sound a loud, pulsating alarm. This means the unit is working properly.

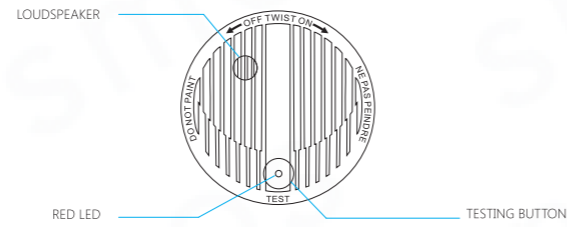

Connect with Alarm Control Panel

SMK-500 can not only work as a single station, but also with an alarm control panel to form an alarm system when a wireless module is added to the smoke detector.

- 1) Make sure the control panel is in learning state.
- 2) Press and hold the testing button on the smoke detector for 3 seconds, three beeps are heard. Simultaneously, one beep is heard from the control panel. The detector has been connected successfully with the control panel.

Testing:

Press and hold the testing button on the smoke detector for 3 seconds, the control panel will alarm immediately.

Red LED Indicator

A red LED, as the ALARM indicator, is featured on the detector. It can be seen through the test button on the cover of the detector. When the red LED flashes once 32 seconds, it indicates the detector is in normal operation. When the smoke detector senses smoke and simultaneously sounds an audible alarm, the red LED will flash frequently, once 0.67 seconds.

Testing Your Smoke Detector

Test the detector weekly by pushing the test button firmly until the horn sounds. Testing may take up to 5 seconds to sound the alarm horn. This is the only way to ensure that the detector is working properly. If the detector fails to test properly, have it repaired or replaced immediately.

WARNING: Never use an open flame to test your detector. You may set fire and damage the detector, as well as your home. The built-in test switch accurately tests all detector functions, as required by Underwriters' Laboratories. This is the only correct way to test the unit.

WARNING: When you are not testing the unit and the alarm horn sounds a loud continuous sound, this means the detector has sensed smoke or combustion particles in the air. Be sure that the alarm horn is a warning of a possible serious situation, which requires your immediate attention.

The alarm could be caused by a nuisance situation. Cooking smoke or a dusty furnace, sometimes called "friendly fires", can cause the alarm to sound. If this happens, open a window or fan the air to remove the smoke or dust. The alarm will turn off as soon as the air is completely clear.

NOTE: Do not disconnect the battery from the detector. This will remove your protection from fires.

Using the Silence Feature

The silence feature can temporarily quiet an unwanted alarm for up to 8 minutes. To use the feature, press the "TEST" button. In silence mode, the LED will flash once every 8 seconds (for up to 8 minutes) to remind you the alarm has been stopped. The flashing LED will stop when the unit returns to normal operation.

WARNING: The silence feature does not disable the unit. It is temporarily less sensitive to smoke. For your safety, if smoke around the unit is dense enough to suggest a potentially dangerous situation, it will stay in alarm, or may re-alarm quickly. If you do not know the source of the smoke, do not assume it is a false alarm. Not responding to an alarm can result in property loss, injury or death.

NOTE: Do not disconnect the battery from the detector. This will remove your protection from fires.

If a beep or chirp virtually sounds simultaneously with an LED flash once a minute, this means the detector's battery is weak. Replace new battery immediately.

If a beep or chirp occurs halfway of an LED flash once a minute, this means that the detector is faulty and must be repaired or replaced immediately.

Taking Care of Your Smoke Detector

To keep your detector in good working condition, you must test the detector weekly, as referred to in section "TESTING YOUR SMOKE DETECTOR". Replace the detector battery when the low battery "beep" signal sounds once a minute. The low battery "beep" should last at least 30 days.

NOTE: For replacement battery, use Gold Peak 1604P 1604S, 1604G, 1604A; Eveready 522, 216; Duracel Mn1604; Premisafe G6F22; Ultralife U9VL-; EVE CR9V

WARNING: Do not use any other kind of battery. This detector may not operate properly with other batteries.

Open the cover and vacuum the dust off the detector's sensing chamber at least once a year. This can be done when you open the detector to change the battery. Remove the battery before cleaning. To clean the detector, use soft brush attachment with your vacuum cleaner. Carefully remove any dust on the detector components, especially on the openings of the sensing chamber. Replace the battery after cleaning. Test the detector to make sure that the battery works correctly. Check to make sure there is no obstruction inside the test button. If there is any dust in the test button, insert a toothpick from the back to the front.

NOTE: If nuisance alarms keep coming from the detector, you should check whether the detector's location is adequate. Refer to section "WHERE TO INSTALL SMOKE DETECTORS". Move your detector if it is not located properly. Clean the detector as described above.

Clean the detector cover when it gets dirty. First open the cover and remove battery. Wipe the cover with a cloth dampened with clean water. Dry it with a lint-free cloth. Do not get any water on the detector components. Replace the battery, and close cover. Test the detector to make sure that the battery works correctly.

Technical Specifications

Power Supply:

DC 9V 6F22 battery x 1

Standby Current:

< 5uA

Alarm Current:

<15mA

LED Frequency in Working State:

Once every 32 sec.

LED Frequency in Alarm State:

Once every 0.62 sec.

Low Battery State:

Beep once with a LED flash per 60s (lasts for 30 days)

Operation Condition

Temperature: -10°C ~ +55°C

Relative humidity: <95% (not condensing)

Monitoring Area:

20m²

Alarm Decibel:

85dB/3m

Radio Frequency:

315 MHz, 433.92 MHz or 868 MHz

Transmitting Distance:

<80m in open area (SMK-500)

Housing Material:

ABS plastic

Dimensions (L x W x H):

102x102x31mm